


1987 System Wiring Diagrams Ford - Taurus

PAVLIN


Fig. 1: Cooling Fan Circuit
1987 Ford Taurus LX

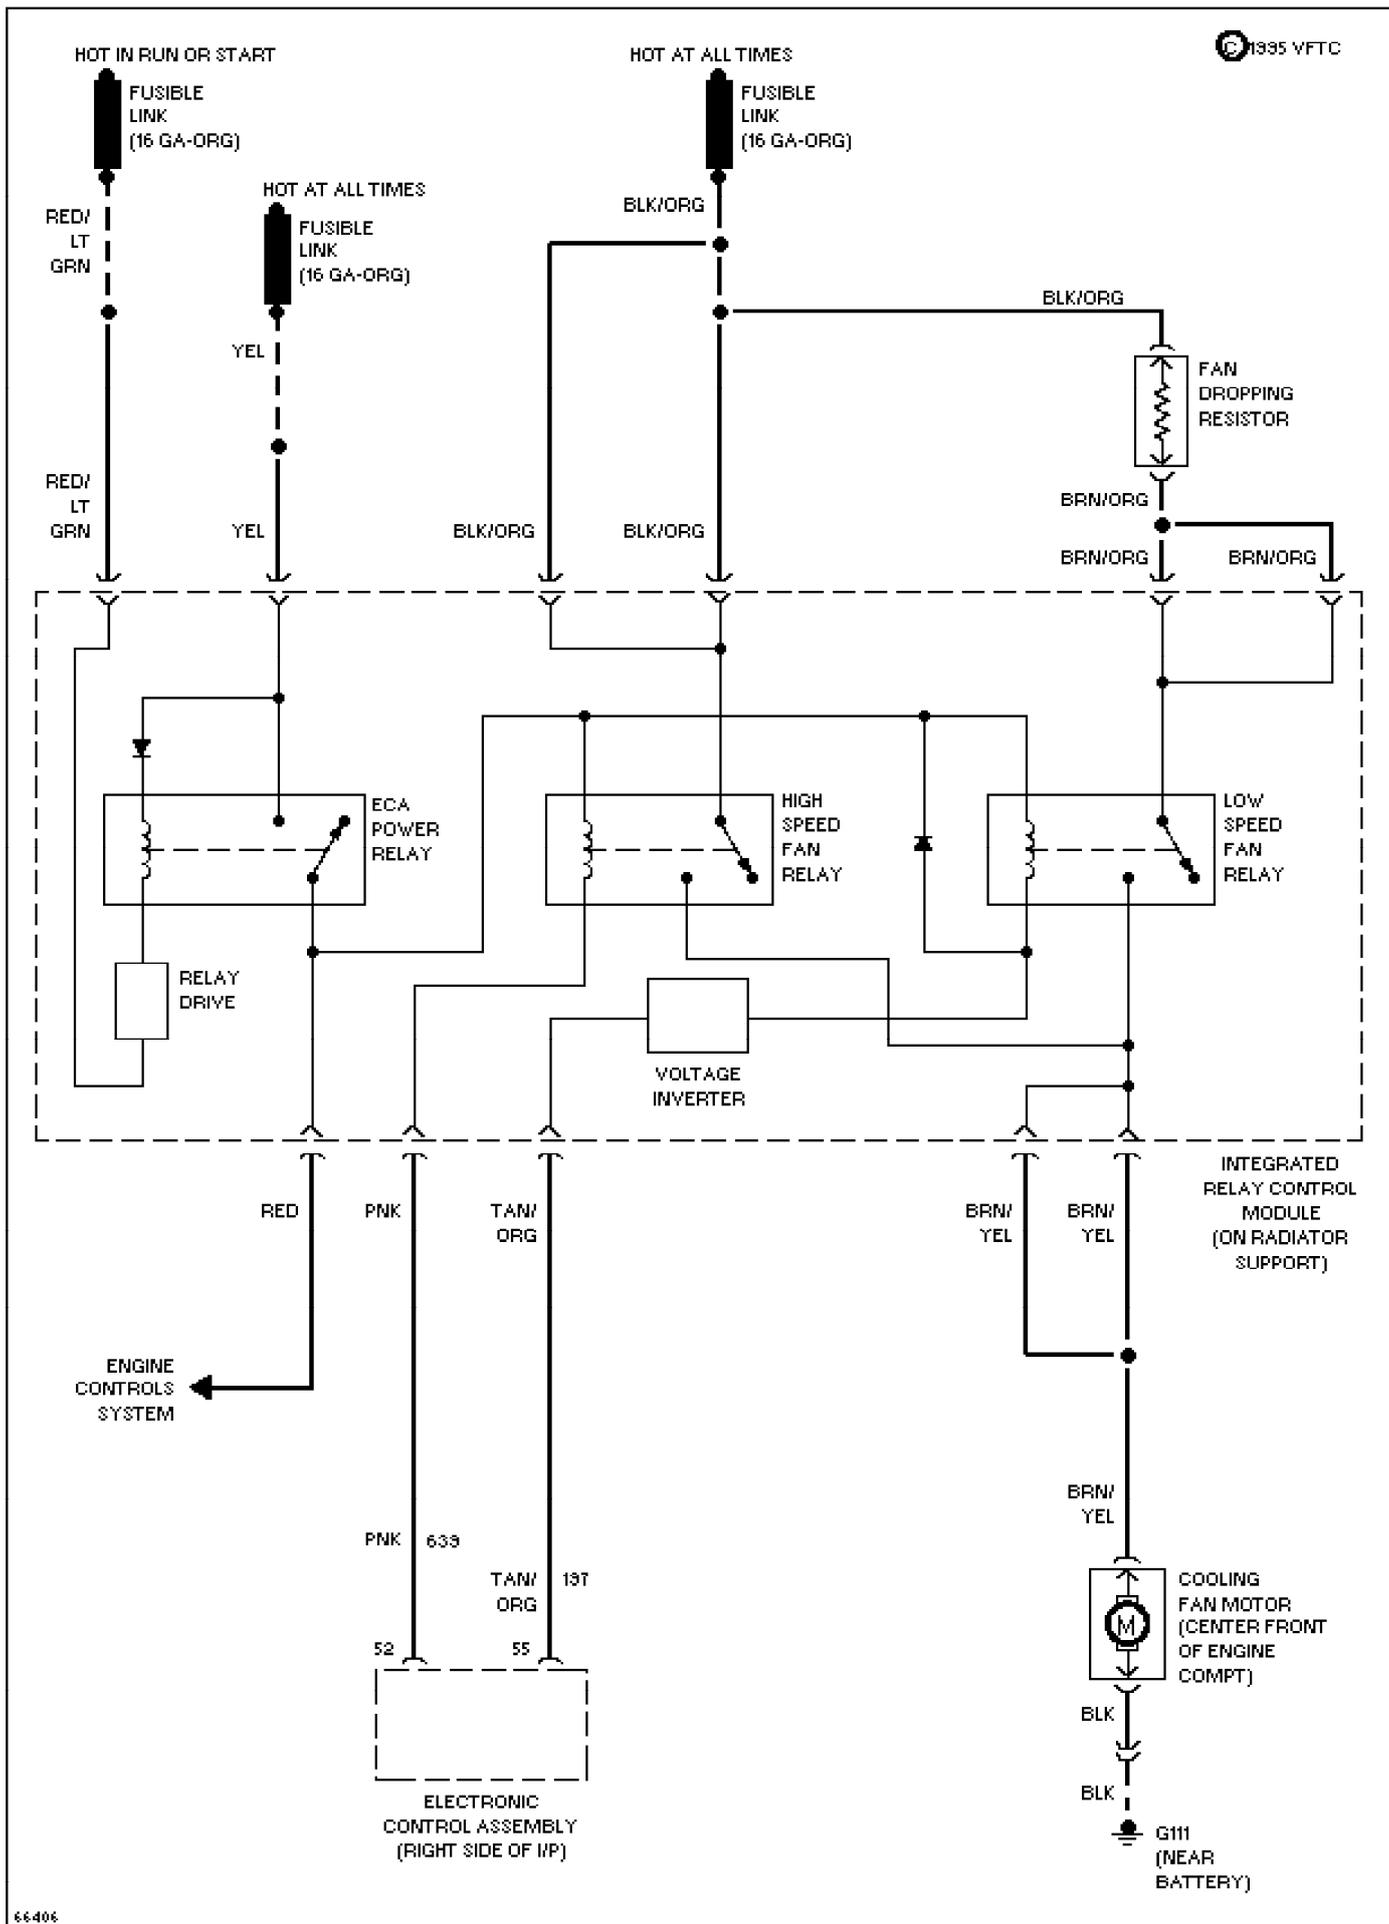

PAVLIN

Fig. 2: Defogger Circuit
1987 Ford Taurus LX

© 1985 VFTC

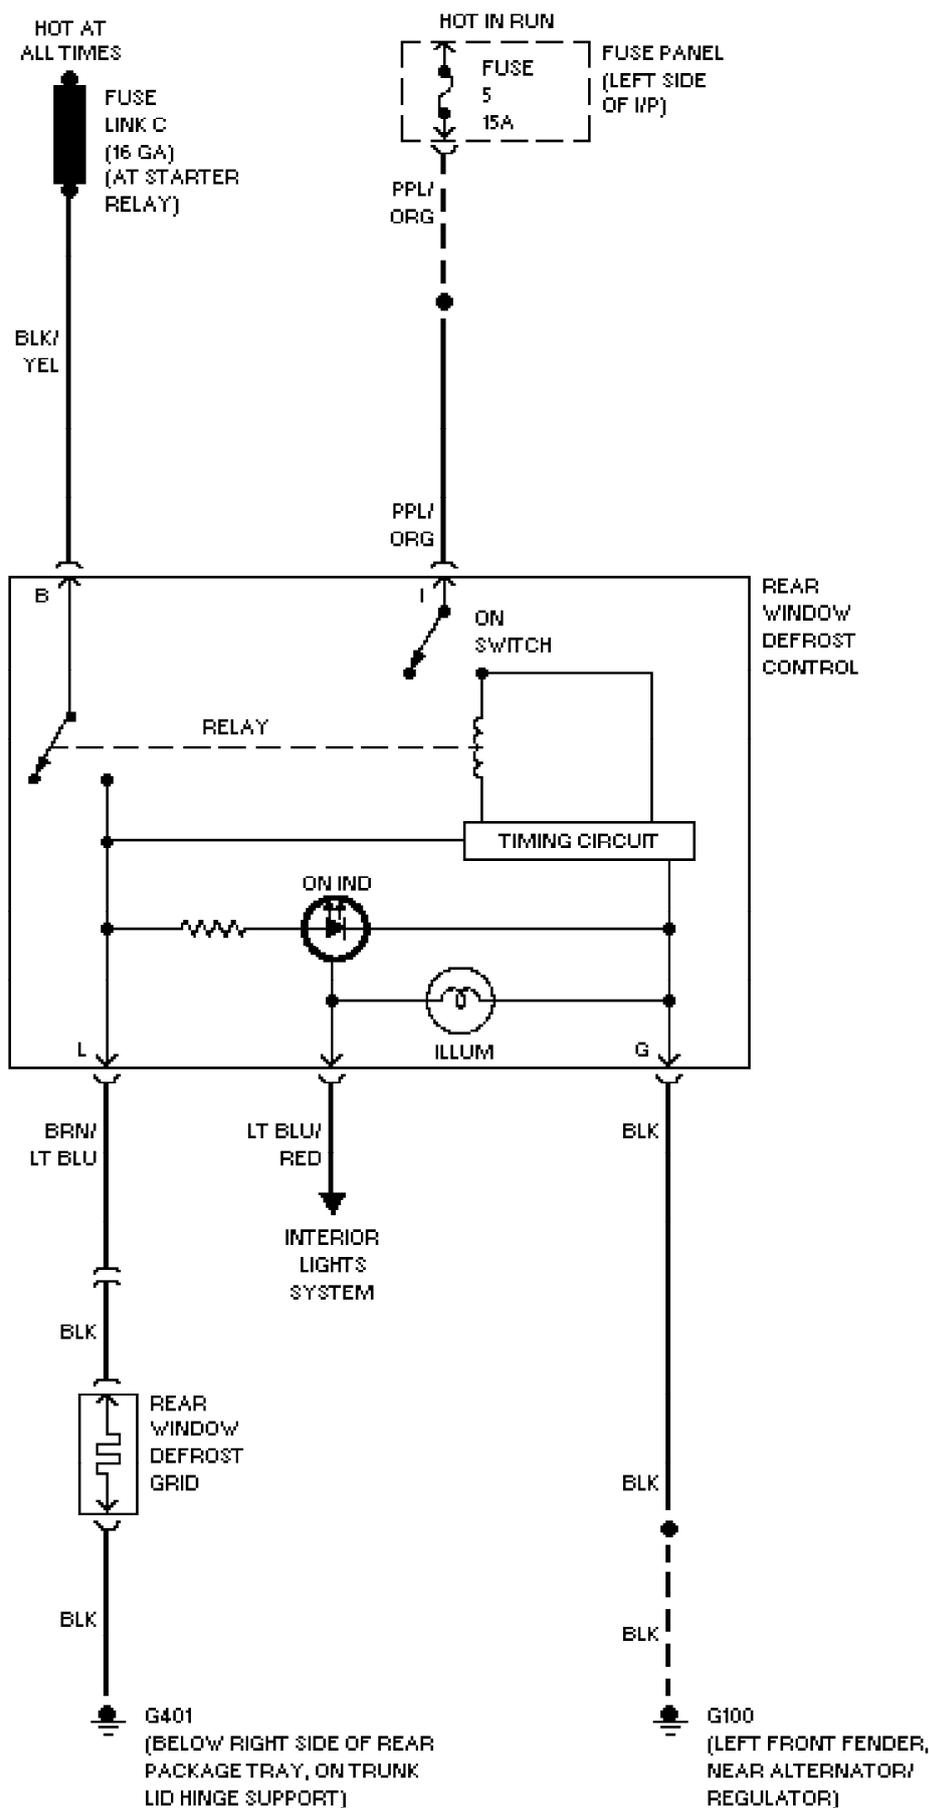


69630

PAVLIN

Fig. 3: Horn Circuit
1987 Ford Taurus LX

© 1994 VFTC

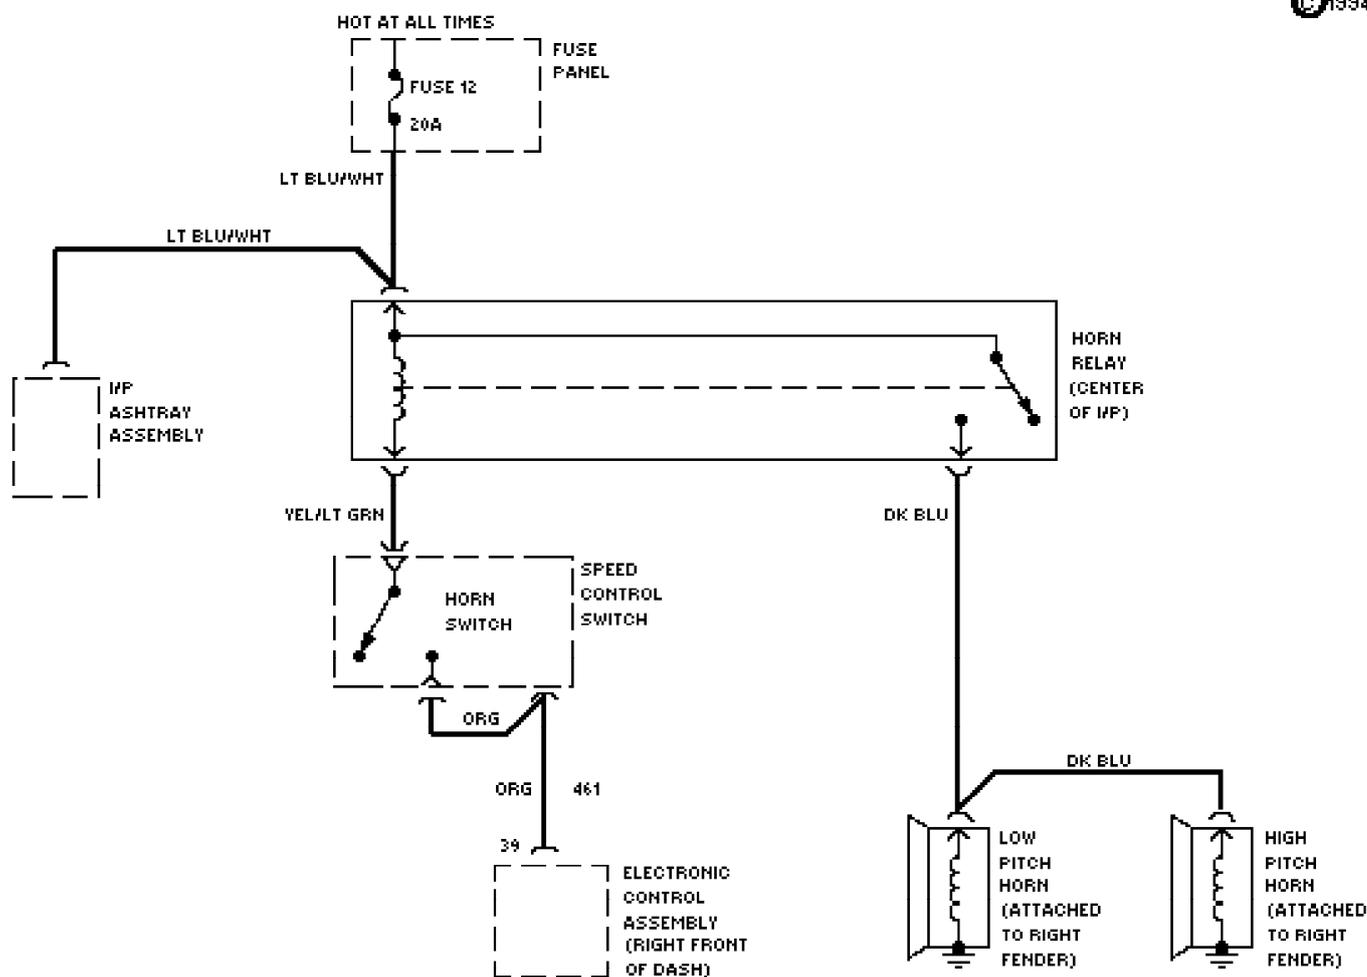


59584

1987 System Wiring Diagrams
Ford - Taurus

PAVLIN

Fig. 4: Power Antenna Circuit
1987 Ford Taurus LX

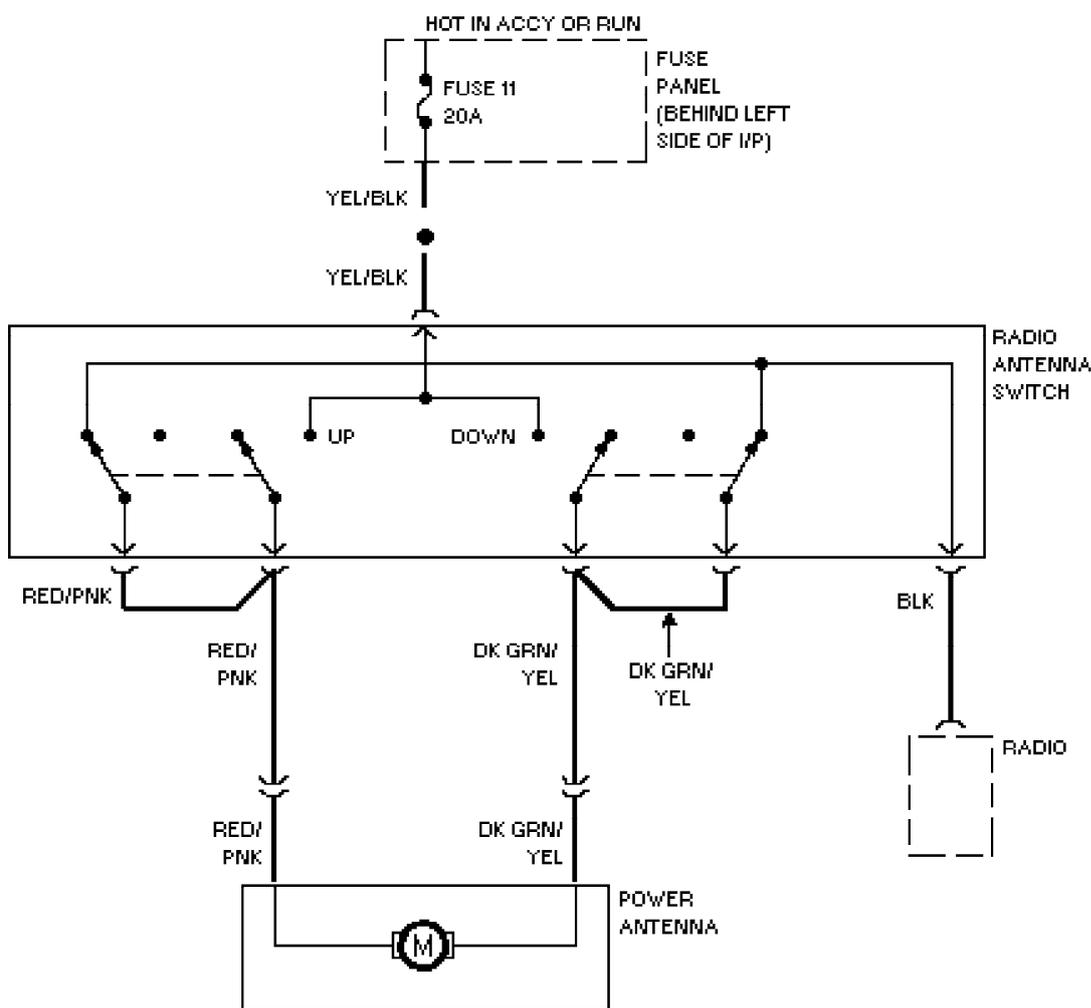


67748

1987 System Wiring Diagrams
Ford - Taurus


PAVLIN

Fig. 6: Power Mirror Circuit
1987 Ford Taurus LX

© 1995 VFTC

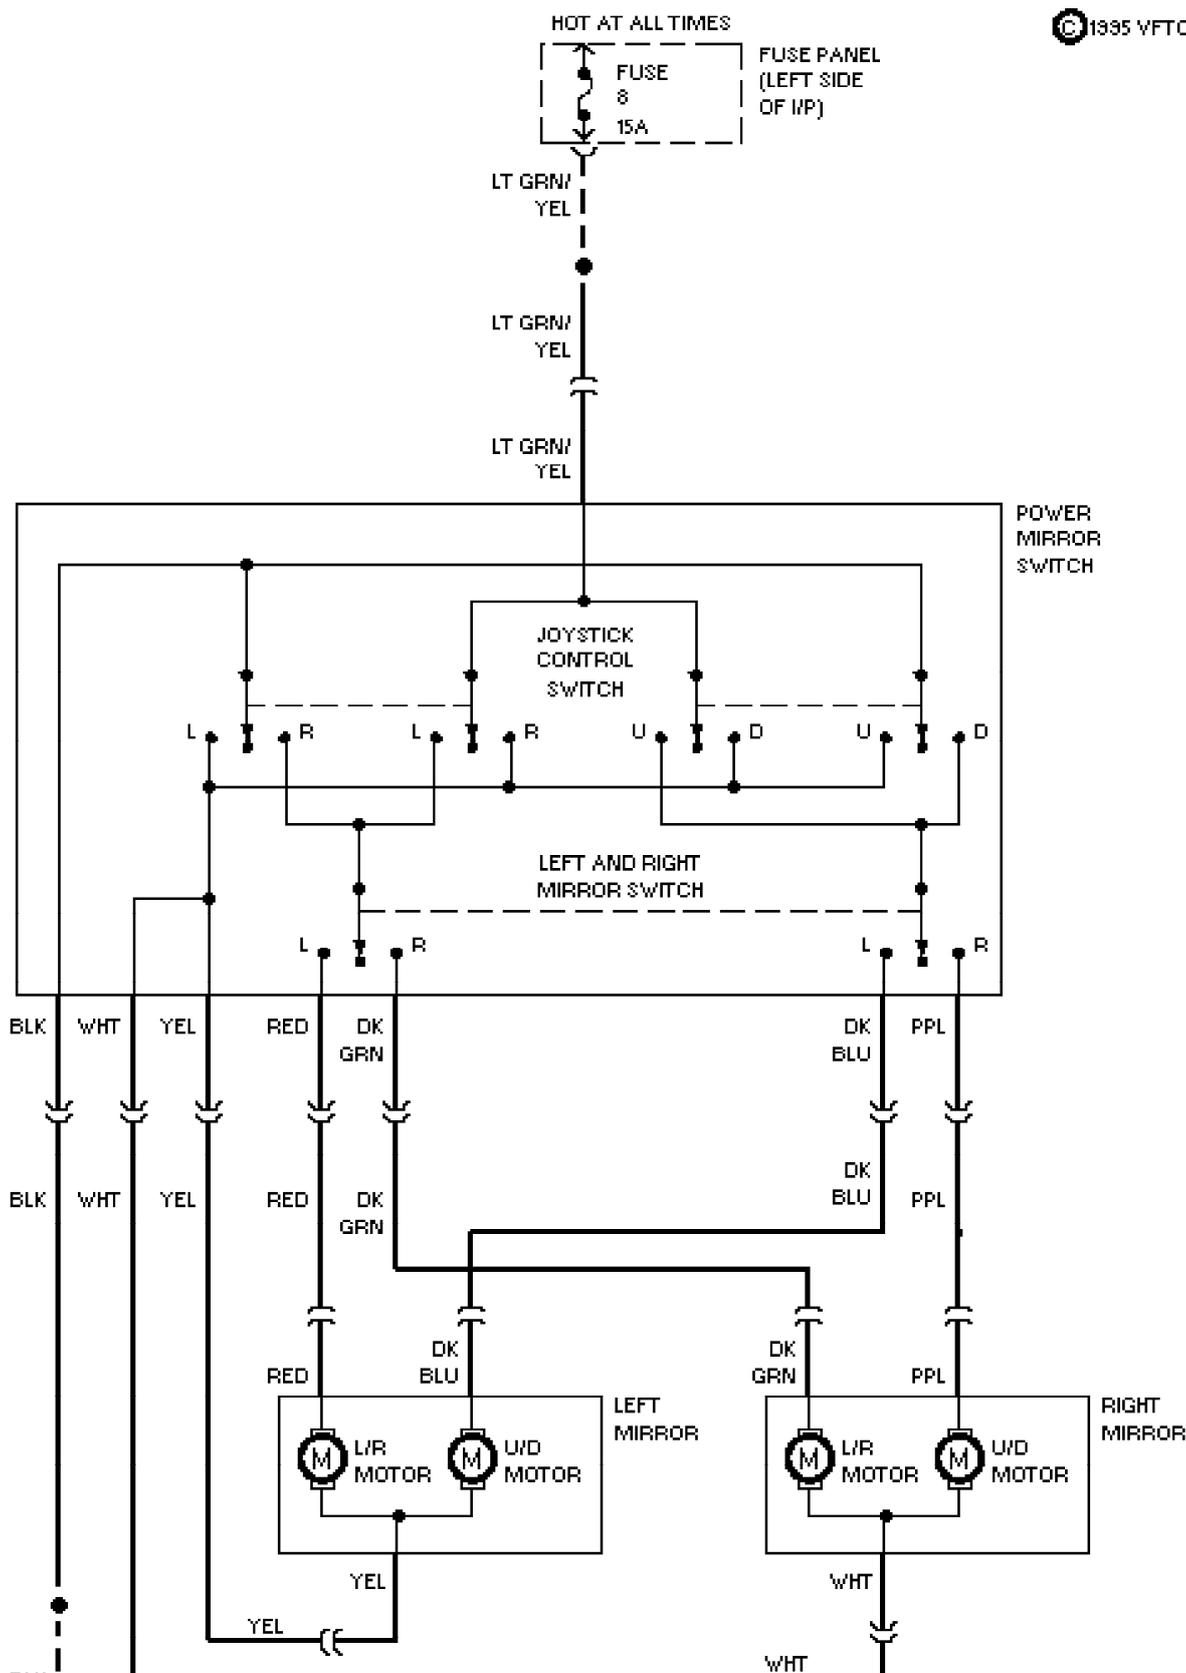

(1986, 1987) G301 (UNDER PASSENGER'S SEAT)
G309 (1988) (AT LEFT FRONT DOOR SILL)

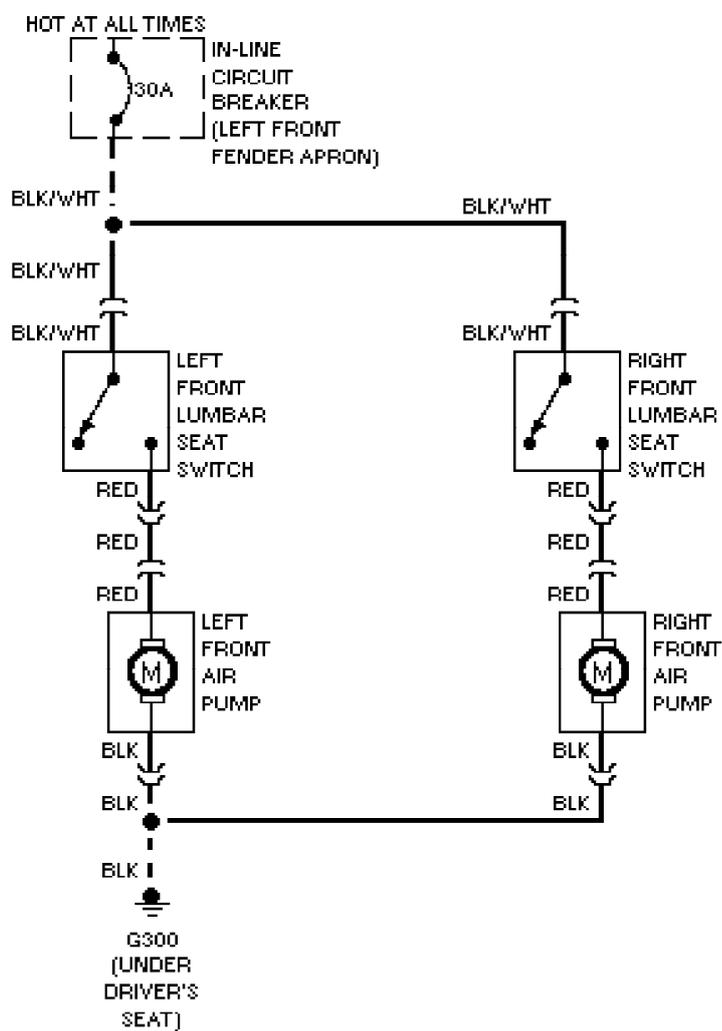


© 1995 VFTC

66511

PAVLIN

Fig. 8: Power Seat Circuit
1987 Ford Taurus LX

© 1995 VFTC

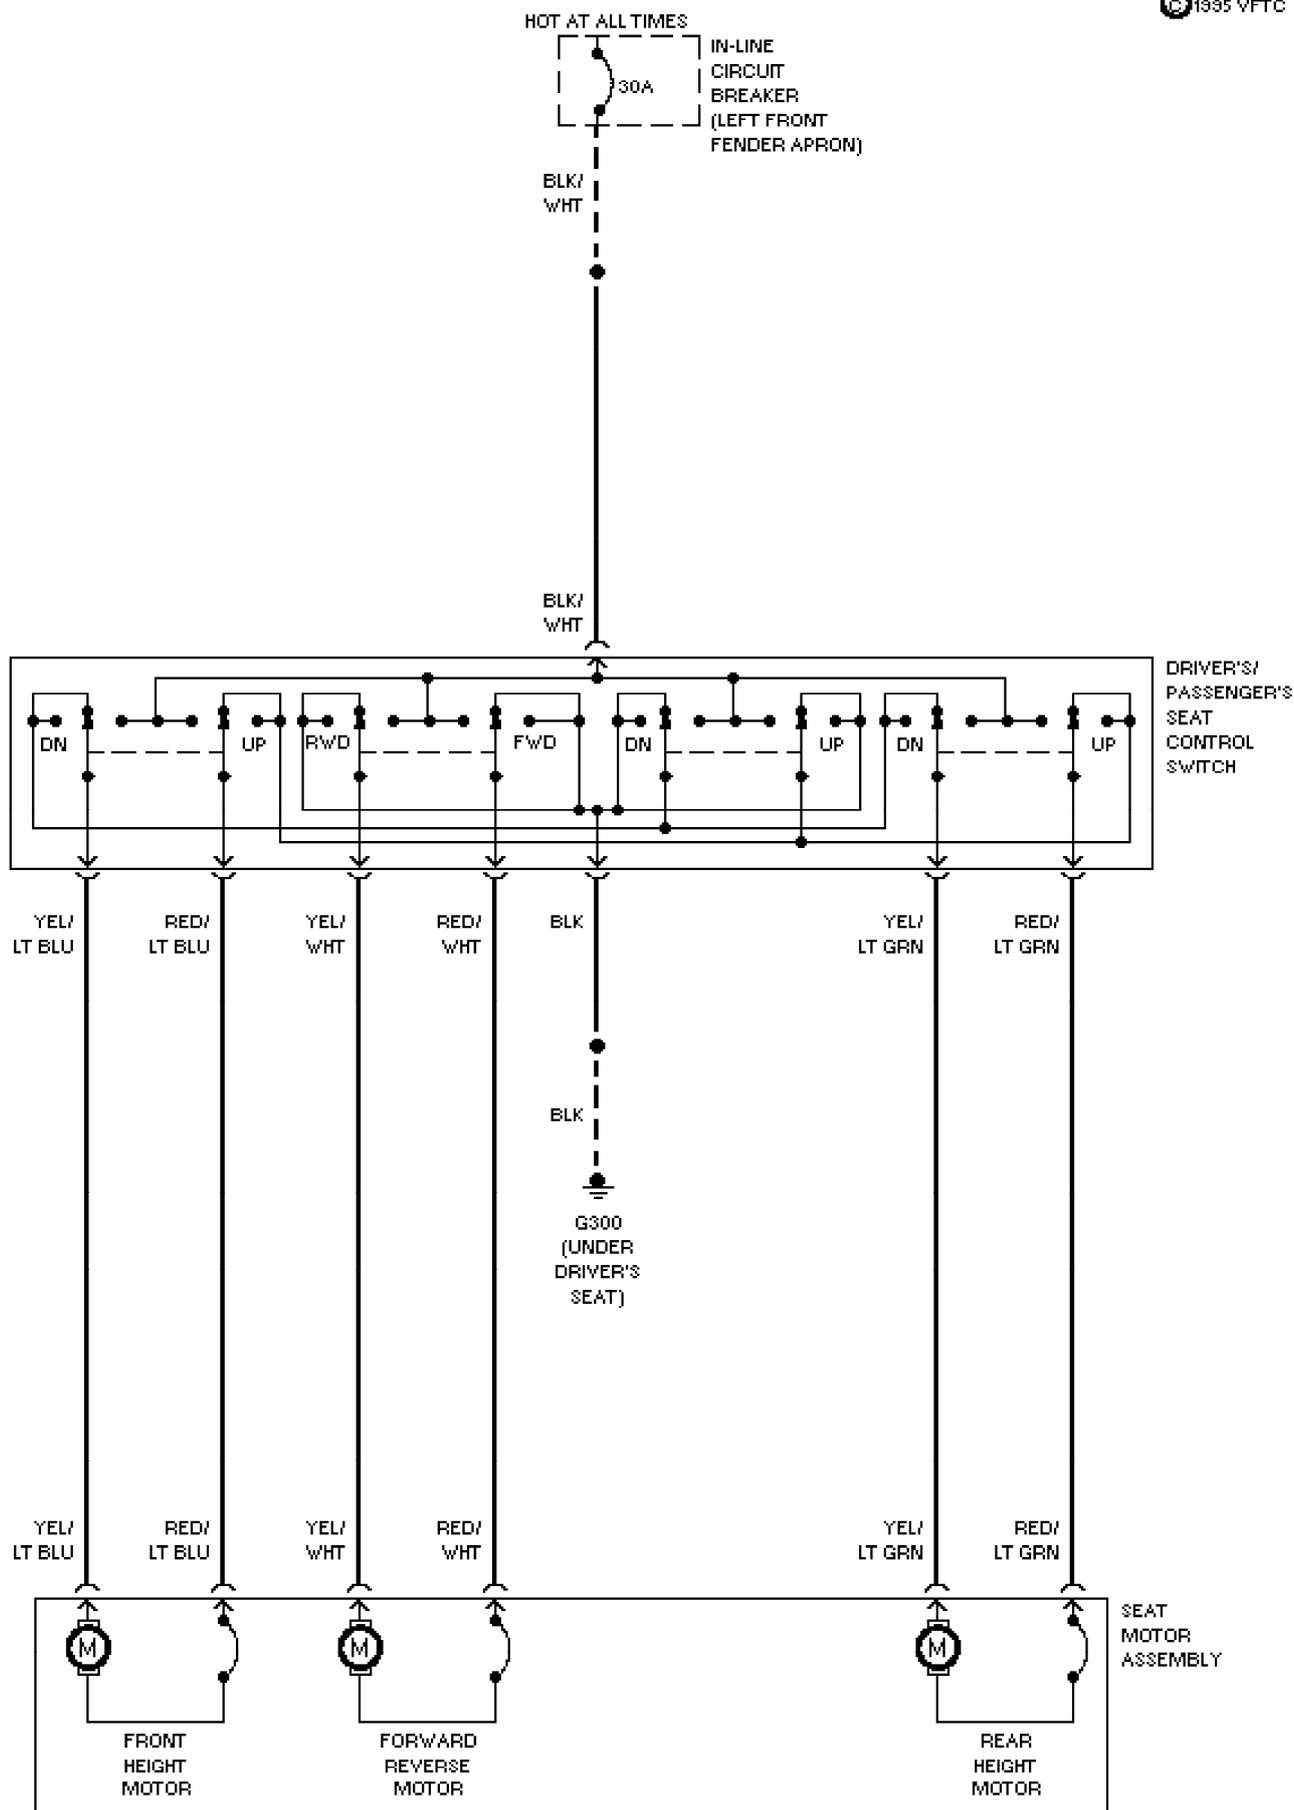


66512

1987 System Wiring Diagrams Ford - Taurus

PAVLIN

Fig. 9: Power Window Circuit
1987 Ford Taurus LX

© 1985 VFTC

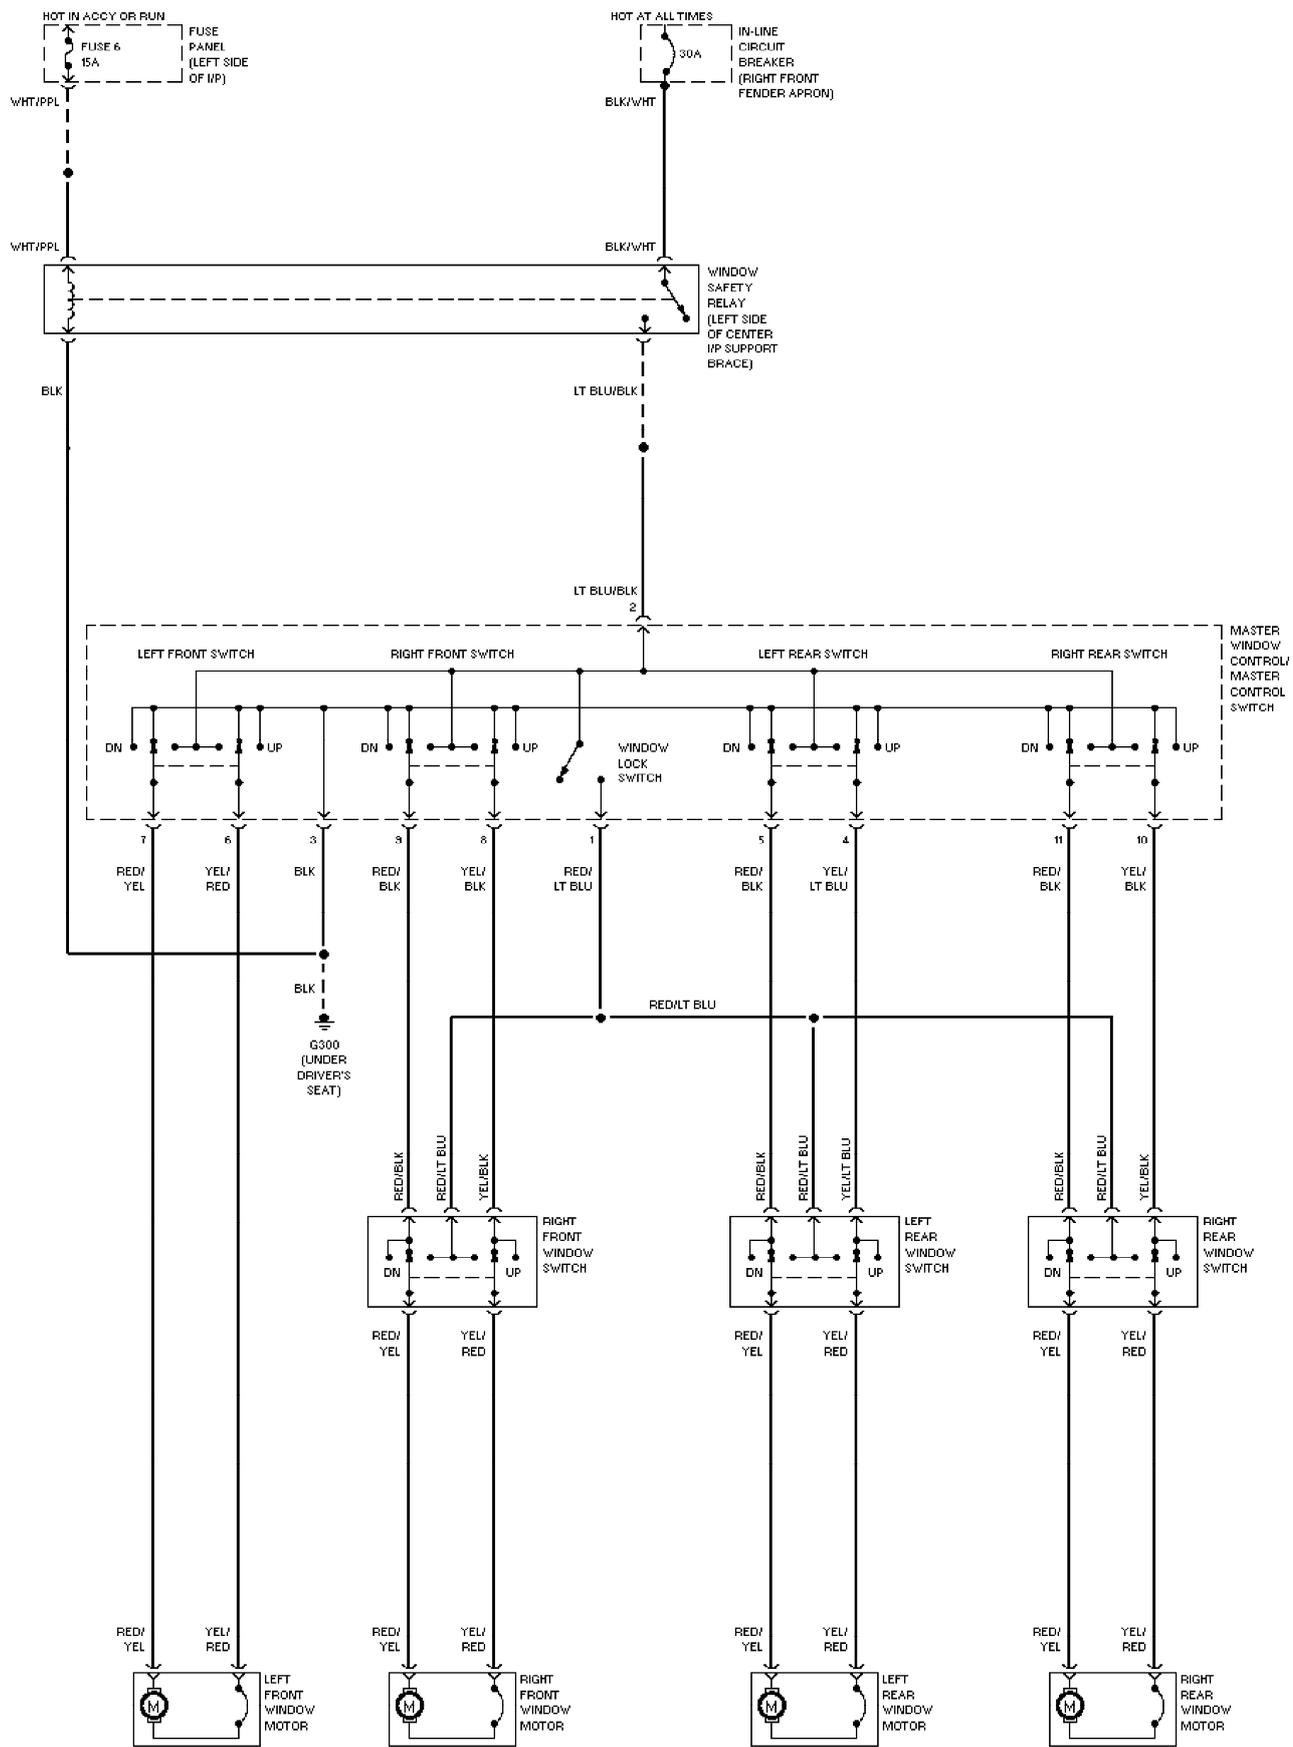


66212

1987 System Wiring Diagrams Ford - Taurus


PAVLIN

Fig. 10: Radio Circuits
1987 Ford Taurus LX

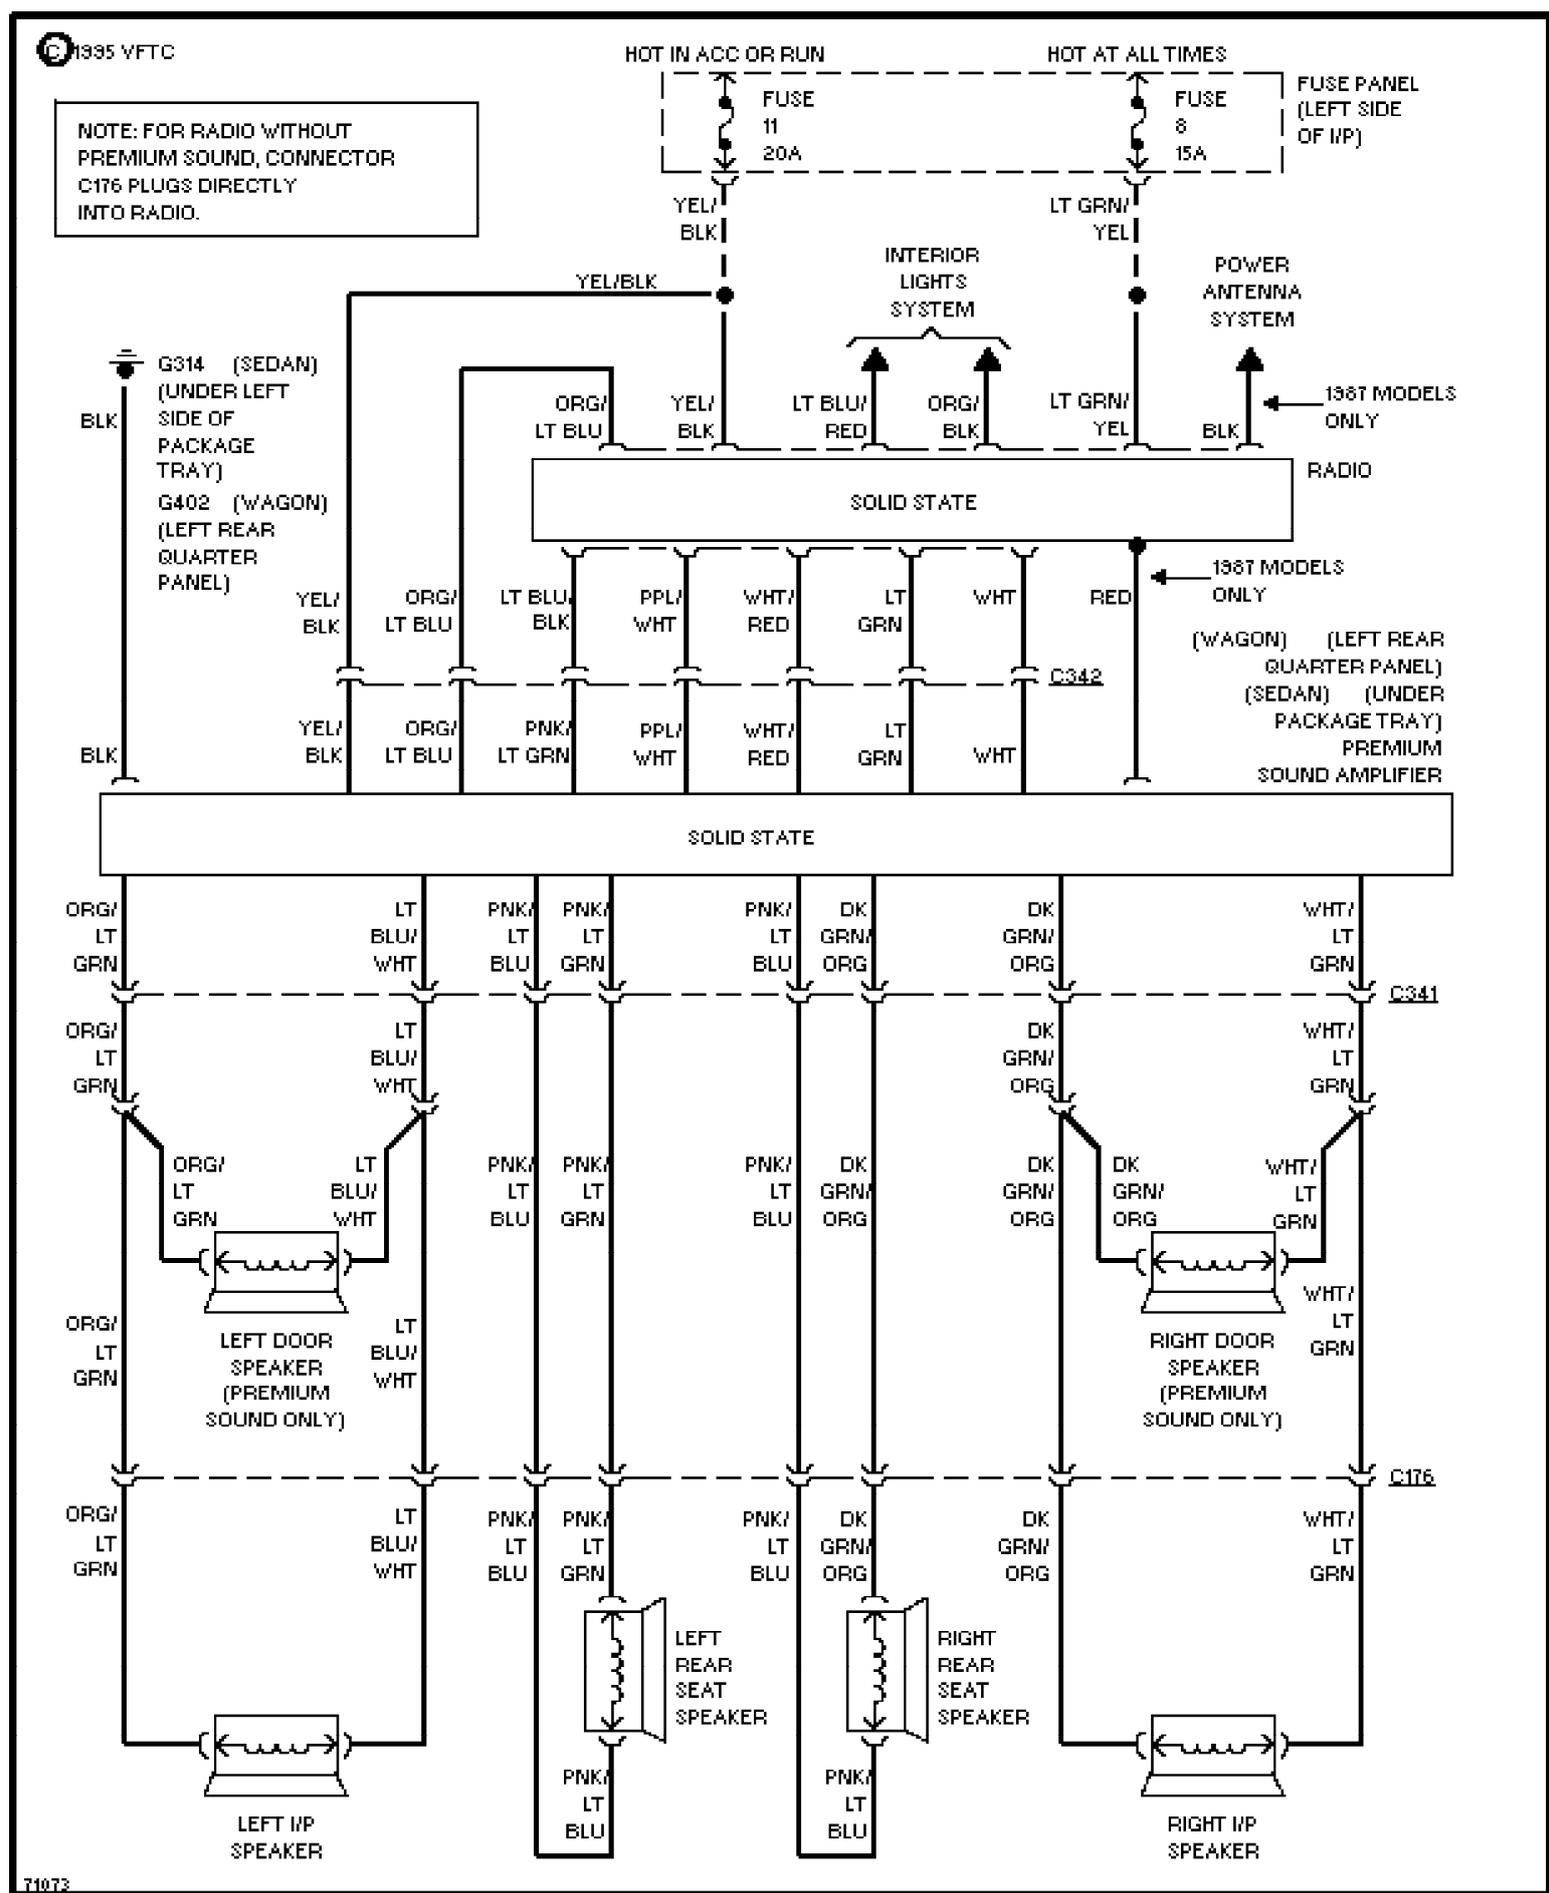

PAVLIN


Fig. 11: 2.5L, Charging Circuit
1987 Ford Taurus LX

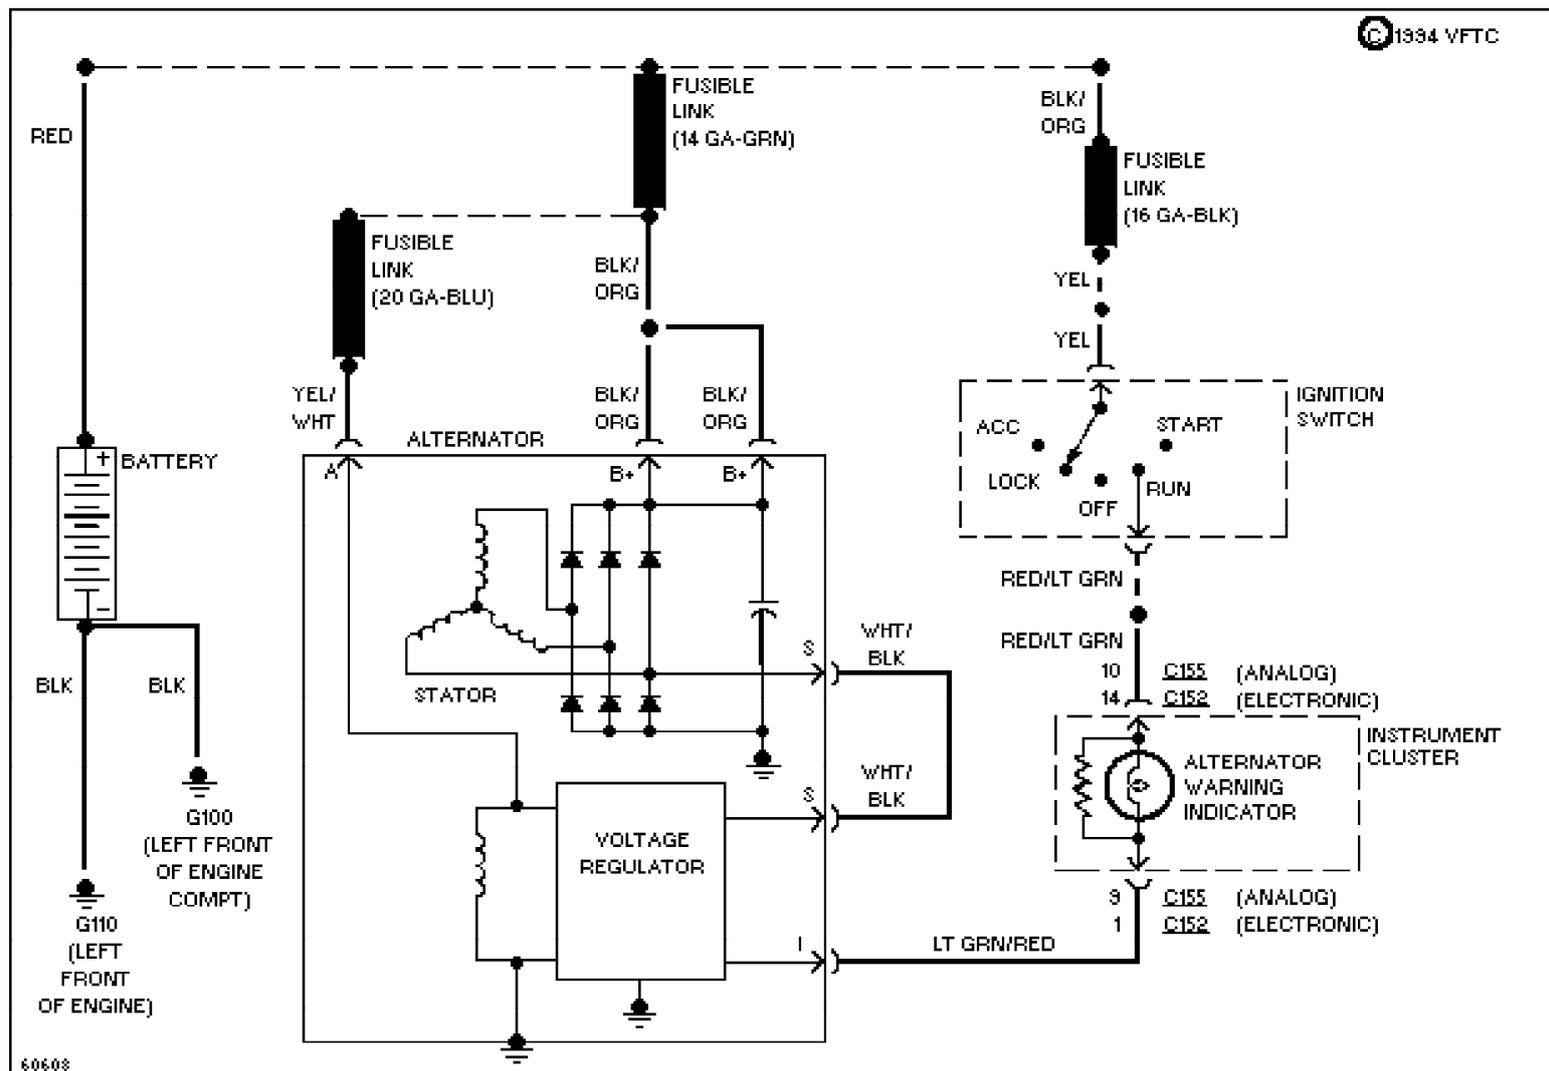

1987 System Wiring Diagrams
Ford - Taurus

PAVLIN

Fig. 12: Starting Circuit
1987 Ford Taurus LX

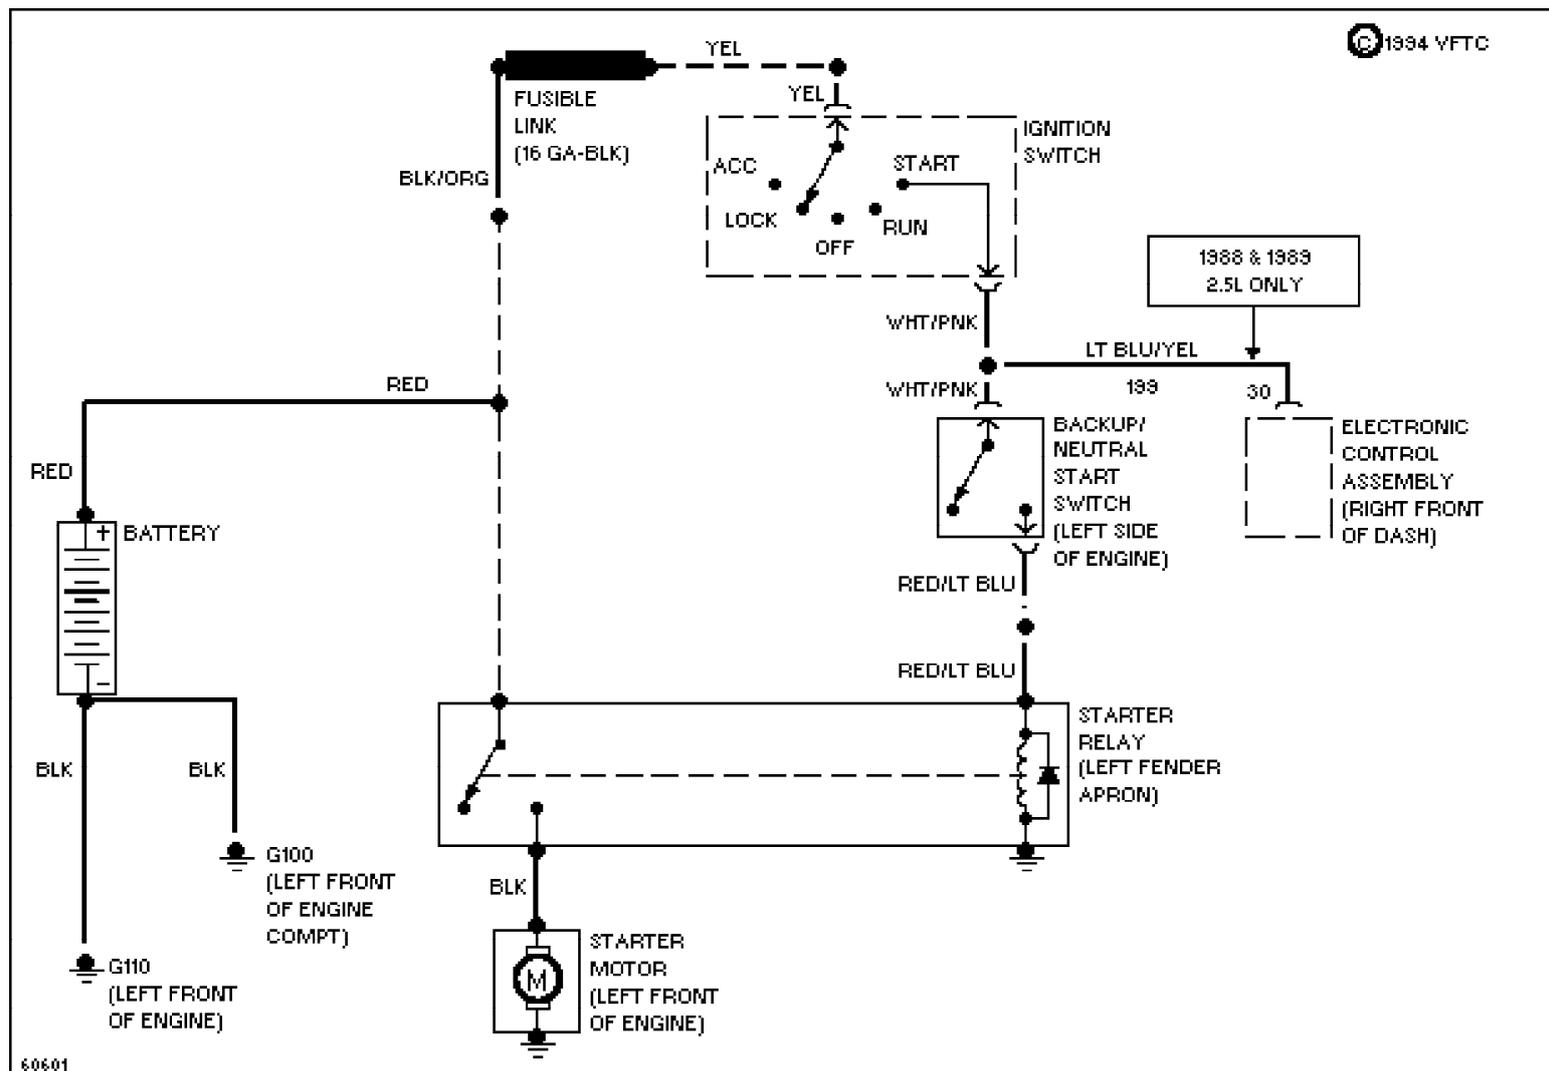


60601

© 1994 YFTC

1987 System Wiring Diagrams Ford - Taurus

PAVLIN


Fig. 13: 3.0L, Charging Circuit, W/ Heated Windshield
1987 Ford Taurus LX

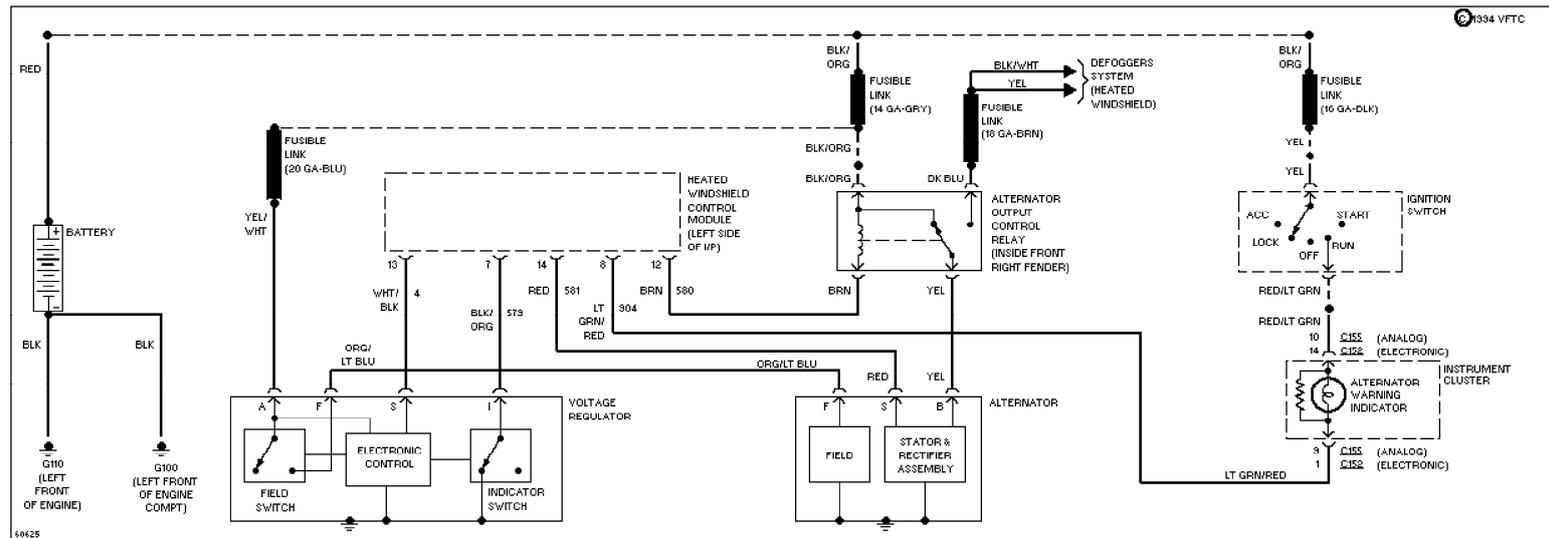

1987 System Wiring Diagrams Ford - Taurus

PAVLIN


Fig. 14: 3.0L, Charging Circuit, W/O Heated Windshield
1987 Ford Taurus LX

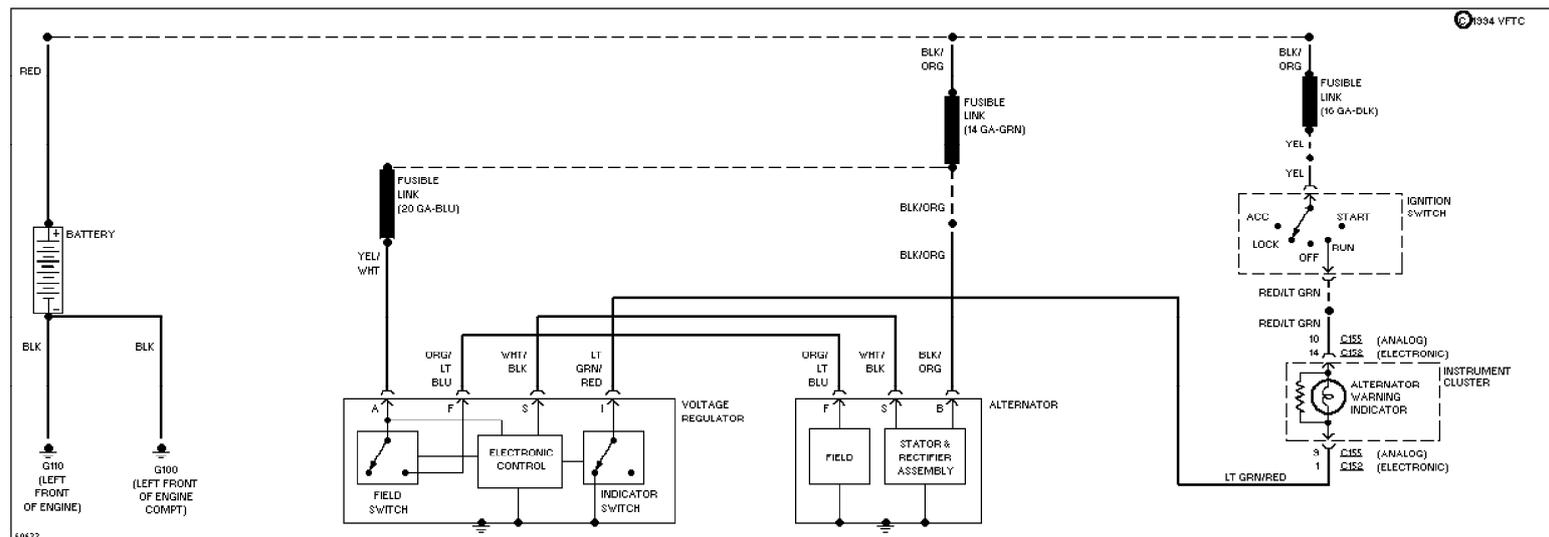

1987 System Wiring Diagrams
Ford - Taurus

PAVLIN


Fig. 15: Starting Circuit
1987 Ford Taurus LX

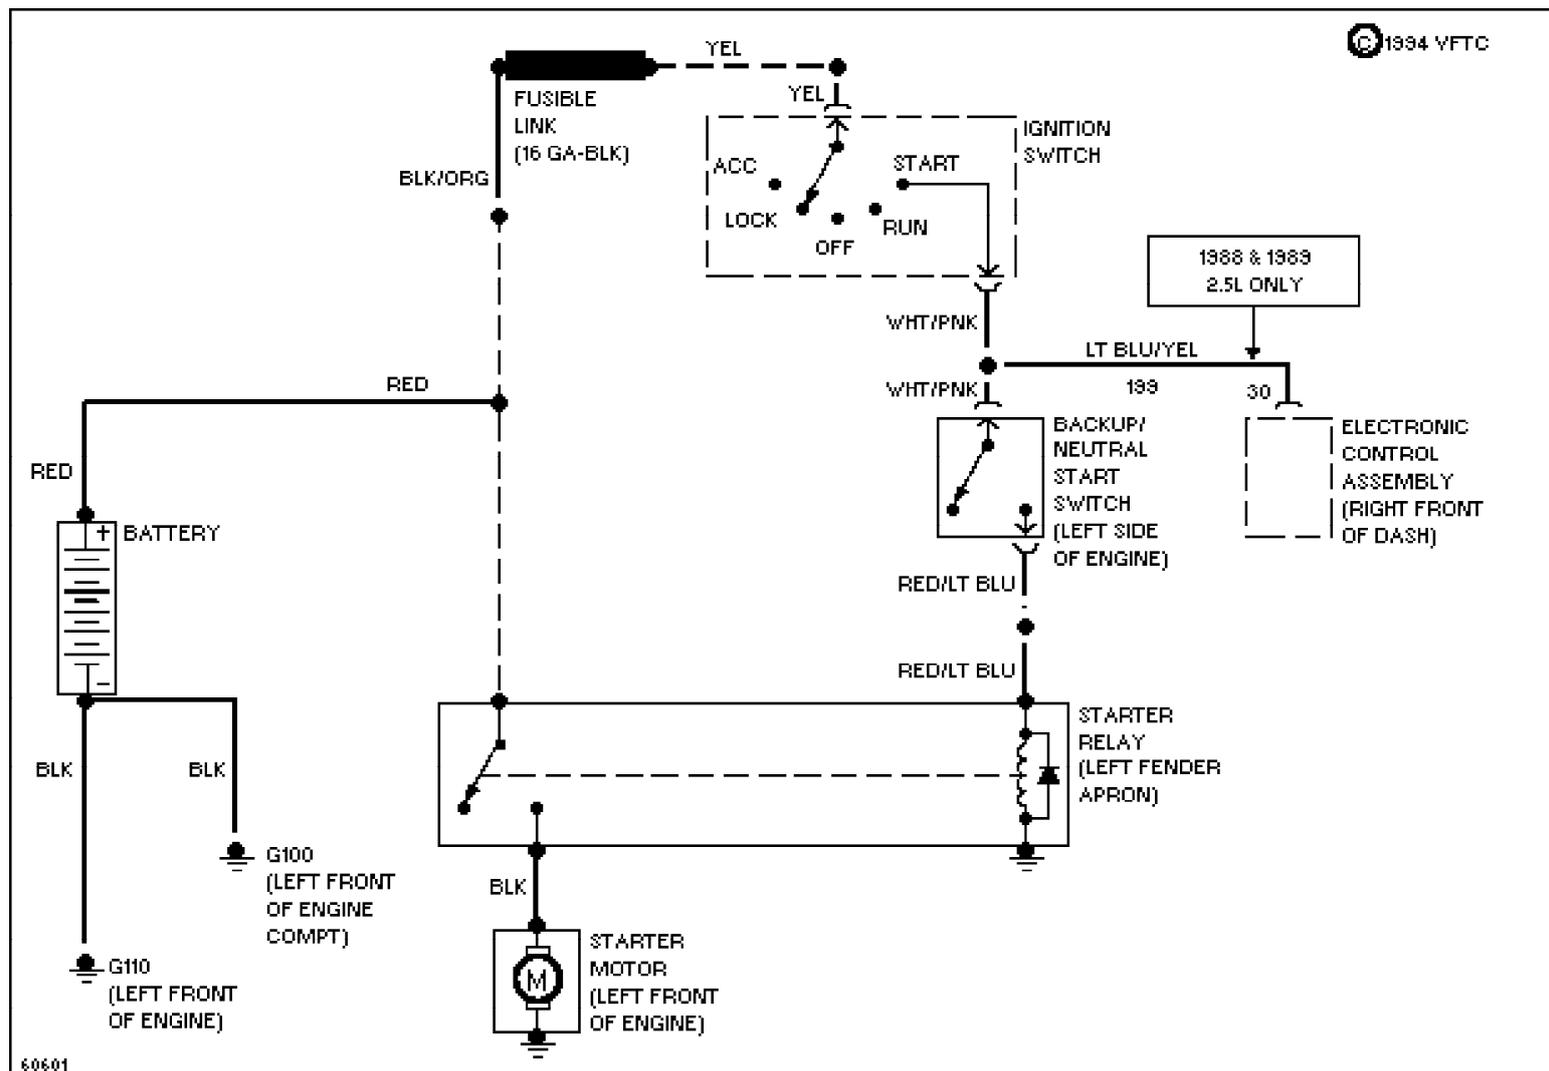

1987 System Wiring Diagrams Ford - Taurus

PAVLIN


Fig. 16: 2-Speed Wiper/Washer Circuit
1987 Ford Taurus LX

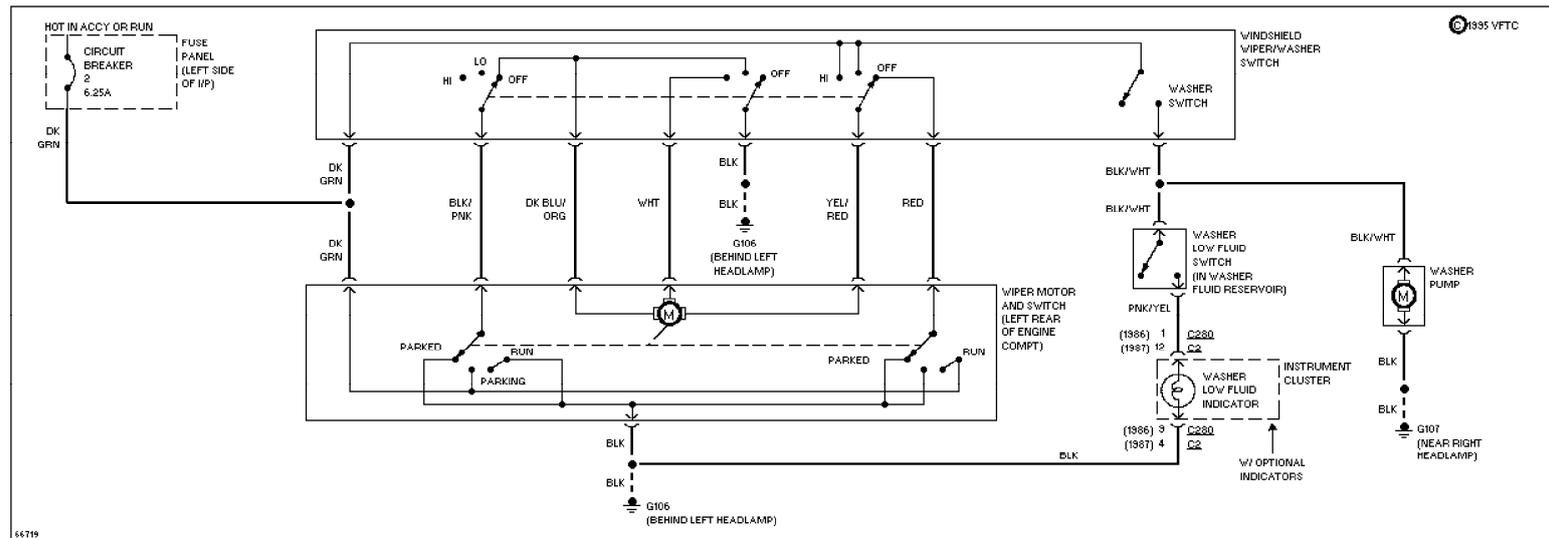

1987 System Wiring Diagrams Ford - Taurus


PAVLIN

Fig. 17: Interval Wiper/Washer Circuit
1987 Ford Taurus LX

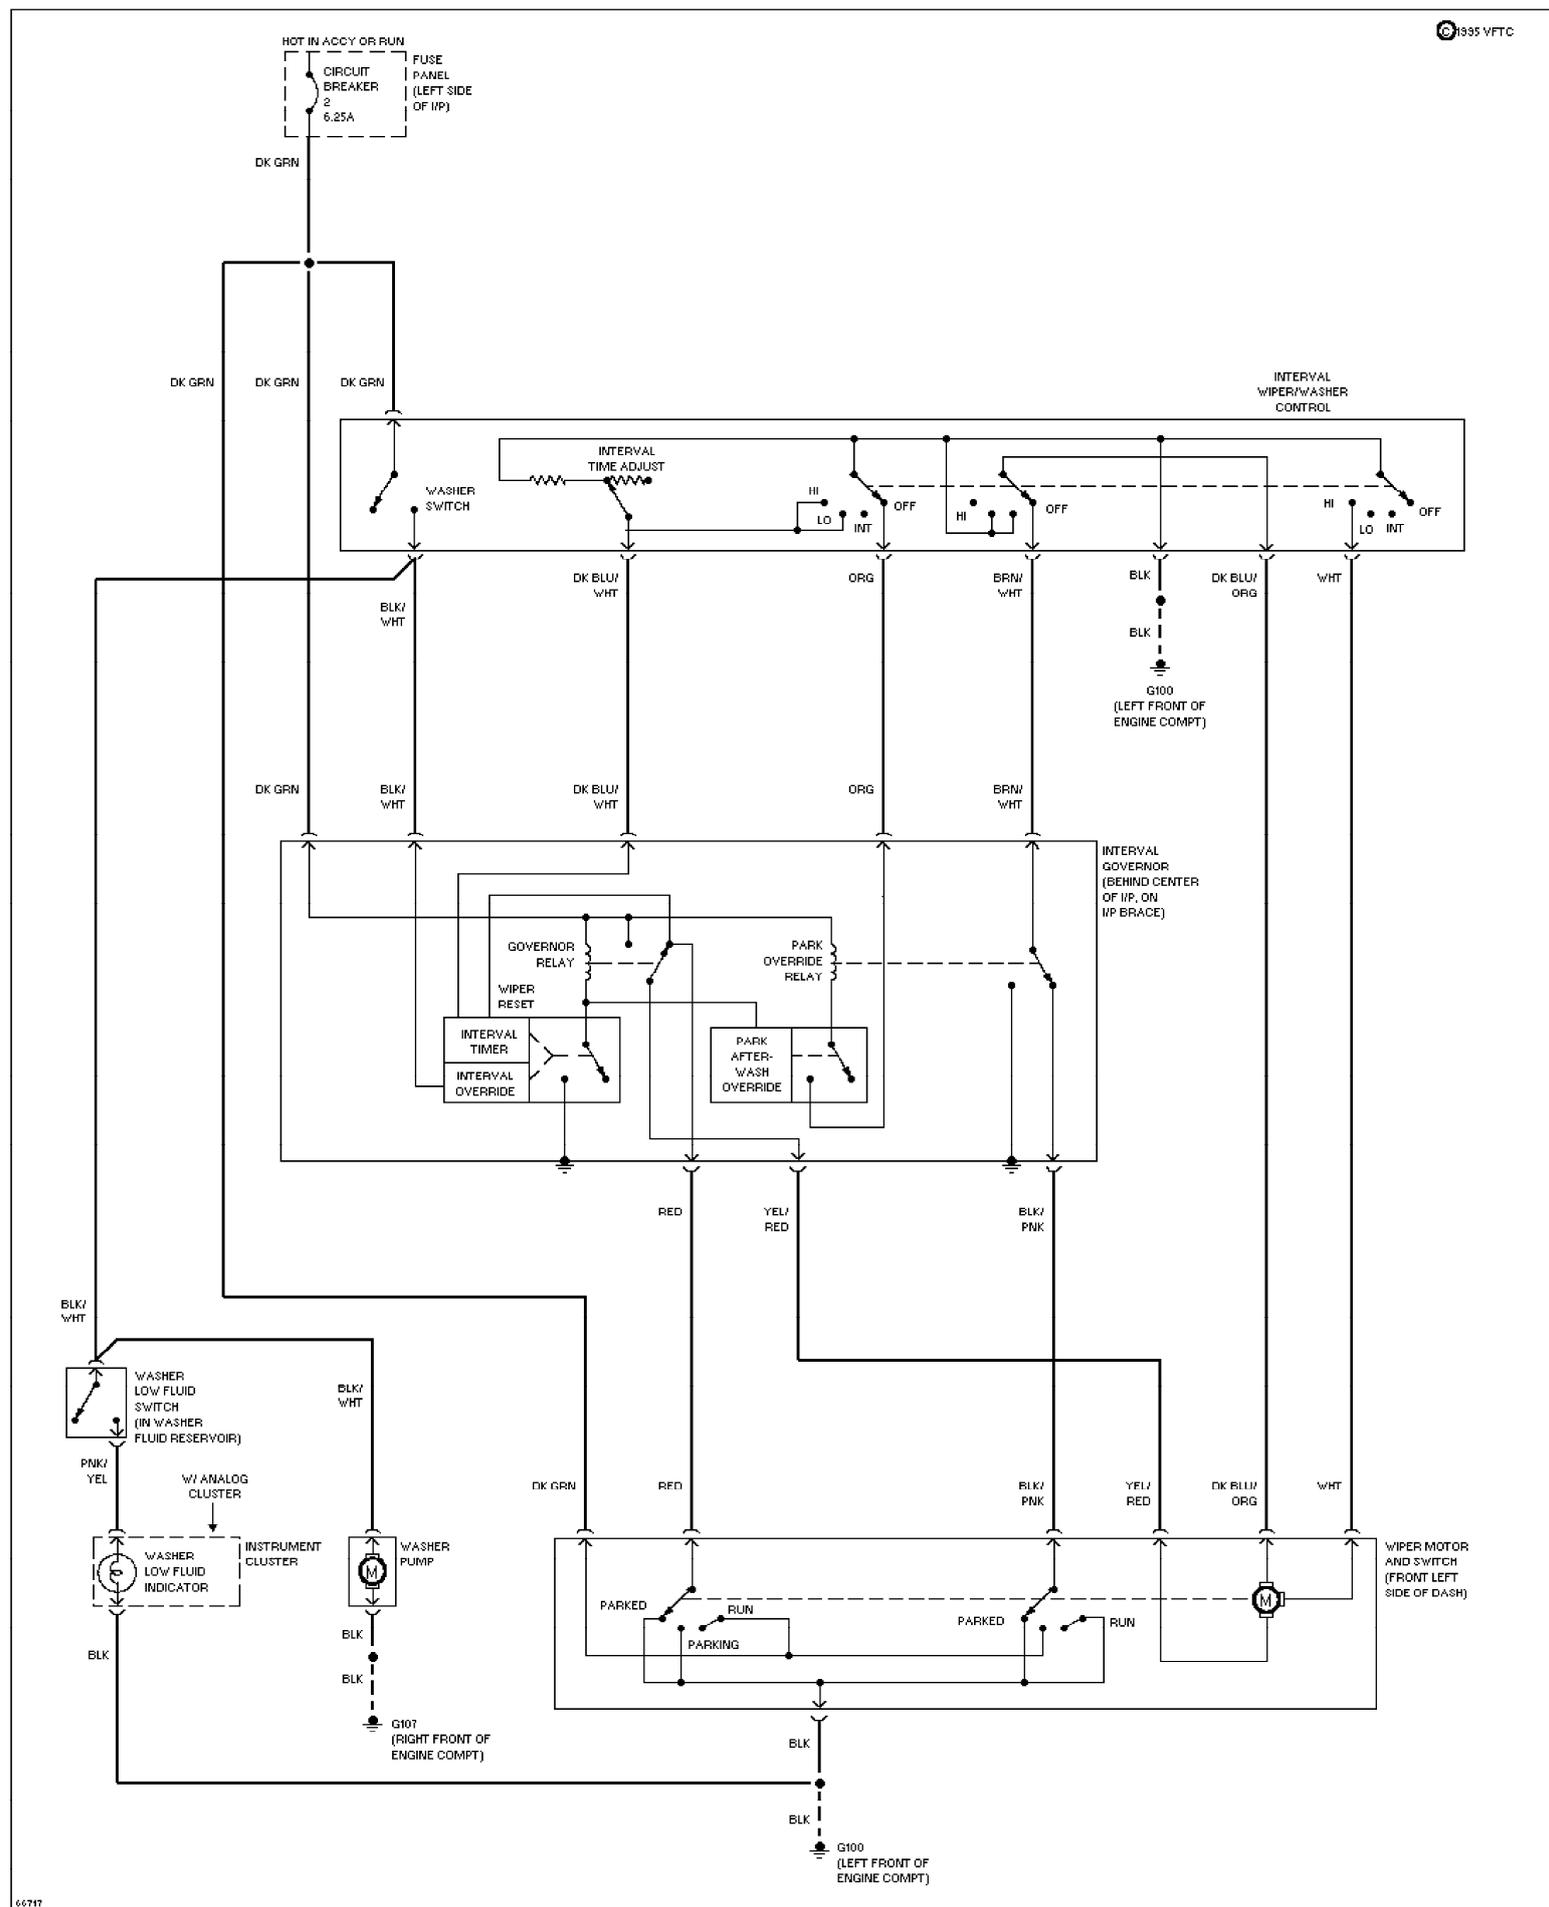

PAVLIN

Fig. 18: Rear Wiper/Washer Circuit
1987 Ford Taurus LX

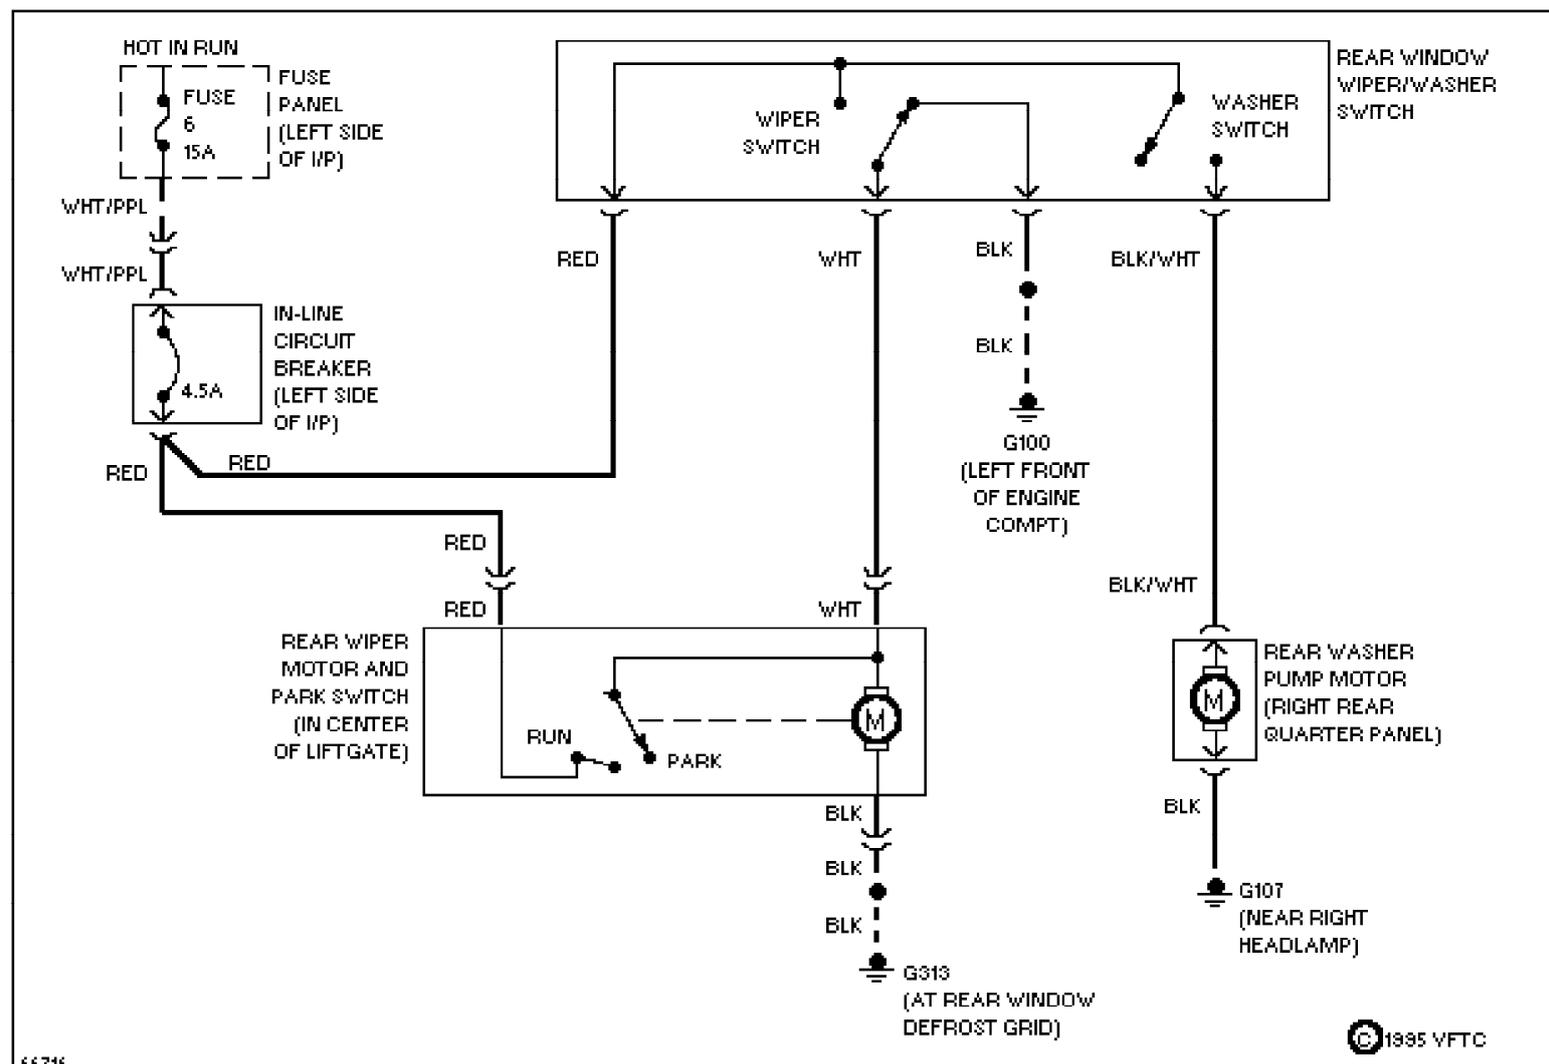

66716

© 1985 VFTC

WIRING DIAGRAMS


1987 Wiring Diagrams Ford Motor Co.

PAVLIN

Fig. 1: Engine Compartment
1987 Ford Taurus LX

COMPONENT LOCATOR:

- A/C CLUTCH CYCLE C 29, B 30
- PRES SW B 4, B 9
- A/C COMP CLUTCH B 4, B 9
- A/C SEL SW (MANUAL) B 28
- ALTERNATOR D 4, F 4
- ALT OUTPUT CTRL RLY F 3
- AUTO LAMP RLYS B-C 23
- AUTO LAMP TIME CTRL SW A-B 28
- BACK-UP LTS D 48
- BATTERY A 2
- BLOWER MTR A 32
- CIG LTR D 26, A 33
- CLOCK A 33
- COURTESY/DOME LTS A-C 43-45
- CRUISE CTRL SERVO A 14
- CRUISE CTRL SWS B 33
- DEFOGGER SWITCH C-D 33
- DIAG WARN MOD A 19, C 19, E 19
- DOOR AJAR SWS A-B 48
- DOOR SWITCHES A 42-44
- DUAL BRAKE WARN SW B 18
- EATC CTRL HEAD A 30-32
- ELECT CTRL ASSY (2.5L) A-E 8-9
- ELECT CTRL ASSY (3.0L) A-E 13
- ELECT FLASHER D 16
- ENG COMPT LT F 2
- FRONT DOOR CTSY LTS C 43
- FUEL PUMP E 5, E 10
- FUSE BLOCK C 16
- GLOVE COMPT LT D 46
- GEAR SEL SWITCH B 18
- HEATED W/SHIELD CTRL MODULE E-F 27
- HEATER SEL SW A 28-29
- HI-LEVEL STOP LTS E-F 48
- HORN RLY D 17
- IGN COIL C 4
- IGN KEY WARN SW F 14, F 17
- IGN MODULE B 4
- IGN SWITCH A 16-18
- ILLUM ENTRY TIMER A-B 46
- INST CLUSTERS A-F 34-37
- INST ILLUM LT B-D 25-27
- INST PNL DIMMER SW A 26
- INTEGRATED CTRLLR MODULE B-E 5, B-E 9
- INTERVAL GOVERNOR F 29-30
- KEYLESS ENTRY MOD E-F 42-43
- LCD DIMMING RLY C 23
- LEFT FRNT DOOR SW A 43
- LICENSE LTS D 48
- LIGHT SWITCH A 25
- LT SENSOR AMP A 27
- LOW OIL LEVEL RLY D 14
- LOW WSHR FLUID SW D 34, C 36
- LUMBAR SEATS A 41
- MOON ROOF A-C 42
- MULTI-FUNCTION SW D 32
- O₂ SENSOR F 6, F 11
- PARK BRAKE SW B 18
- PWR ANTENNA SW B 40-41
- PWR DOOR LOCKS D-F 38-39
- PWR MIRROR SW B-C 38
- PWR SEAT SW A-B 38-39
- PWR WDOOS D-E 40-42
- RADIO D 23
- RADIO NOISE CAP C 3
- REAR WIPER CIRC BRKR F 40
- SEAT BELT SW F 15, F 16
- SPEED SENSOR A 7-A 12
- STARTER CIRC BRKR A 3
- STARTER FUS LINKS A-B 2-3
- STARTER RLY A 3
- STOP LT SW E 31, F 31, F 32
- UPSHIFT DIMMER RLY E 14
- VOLT REGULATOR E 4
- WARN BUZZER F 14
- WARN CHIME F 15
- WARN MTR D 2
- WDO SAFETY RLY A 40-41
- WIPER MTR C 2
- WIPER/WASHER SW E 29, F 29

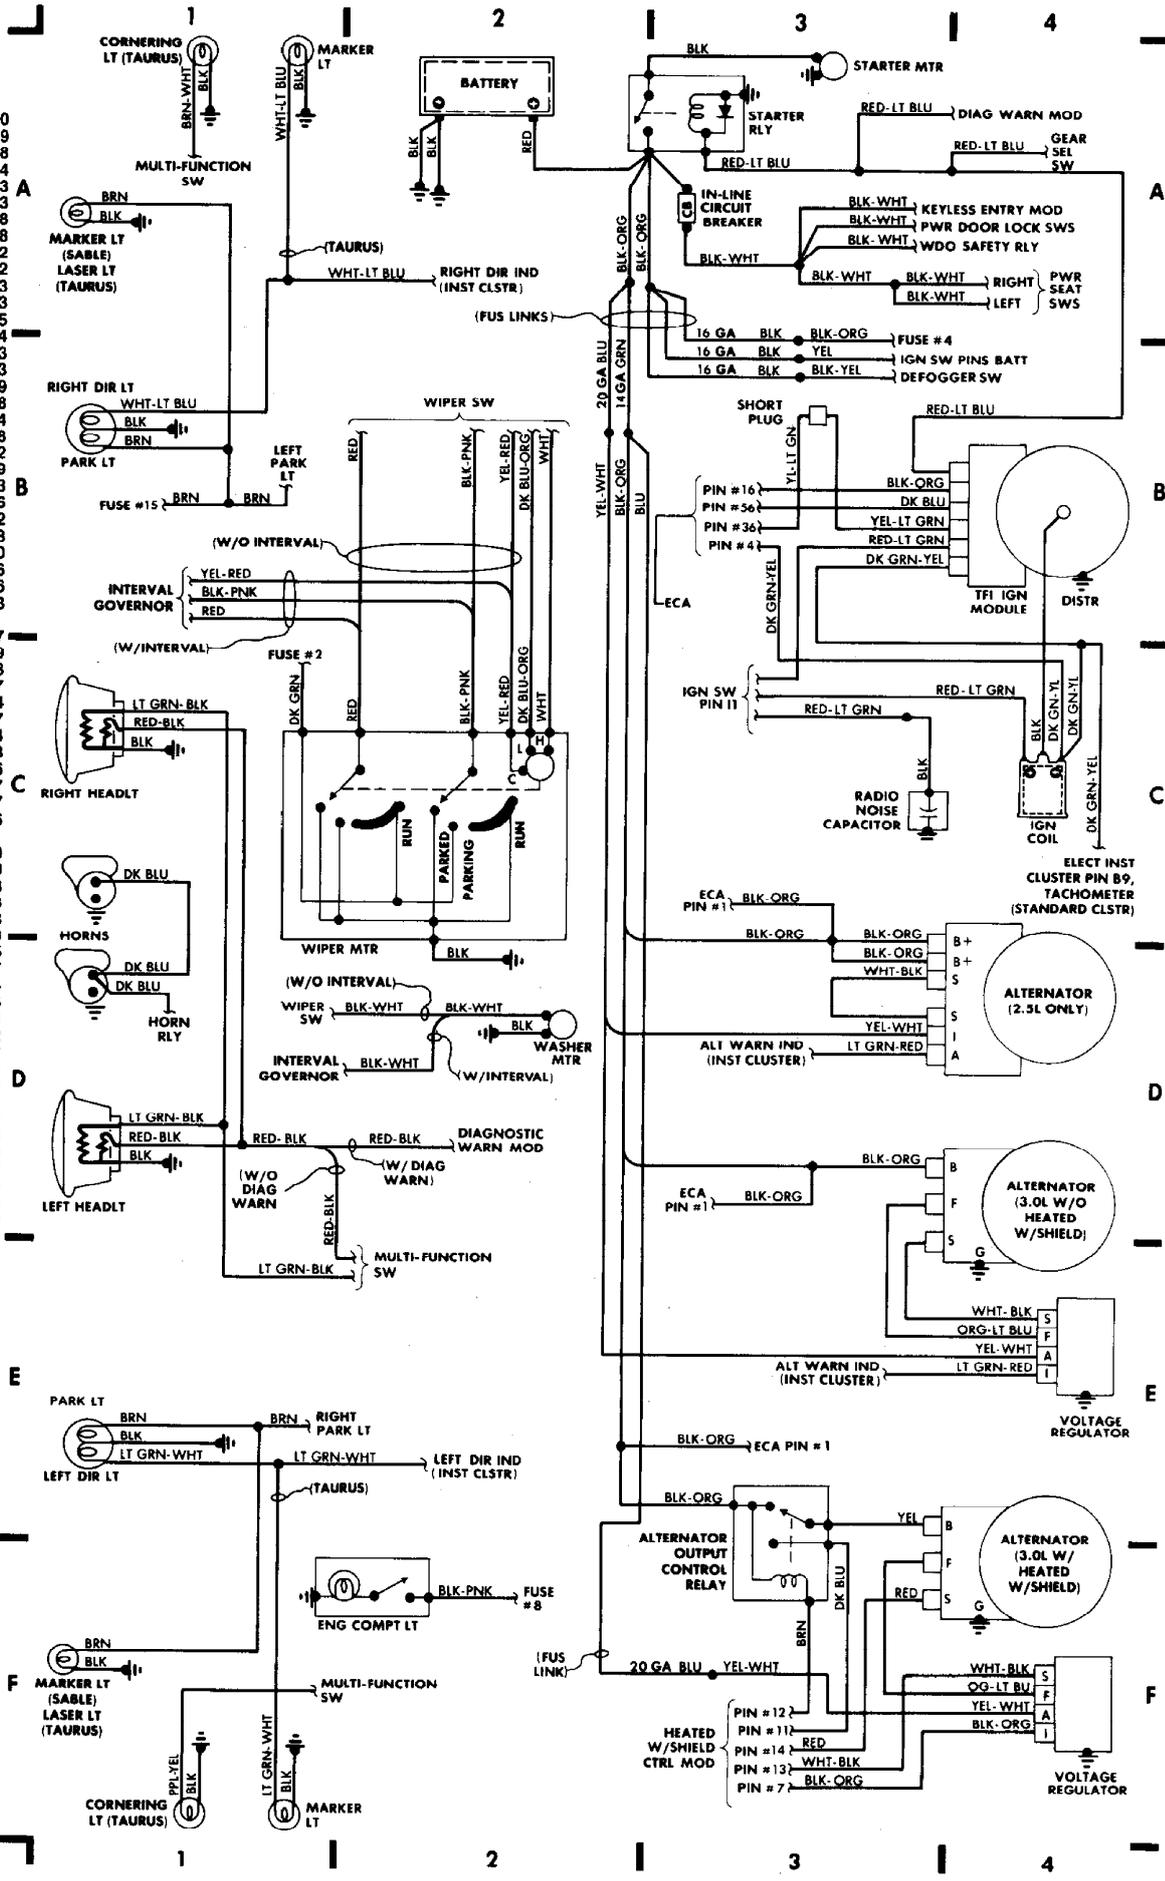


97968

WIRING DIAGRAMS

1987 Wiring Diagrams Ford Motor Co.

PAVLIN

Fig. 2: Engine Compartment (Cont.)
1987 Ford Taurus LX

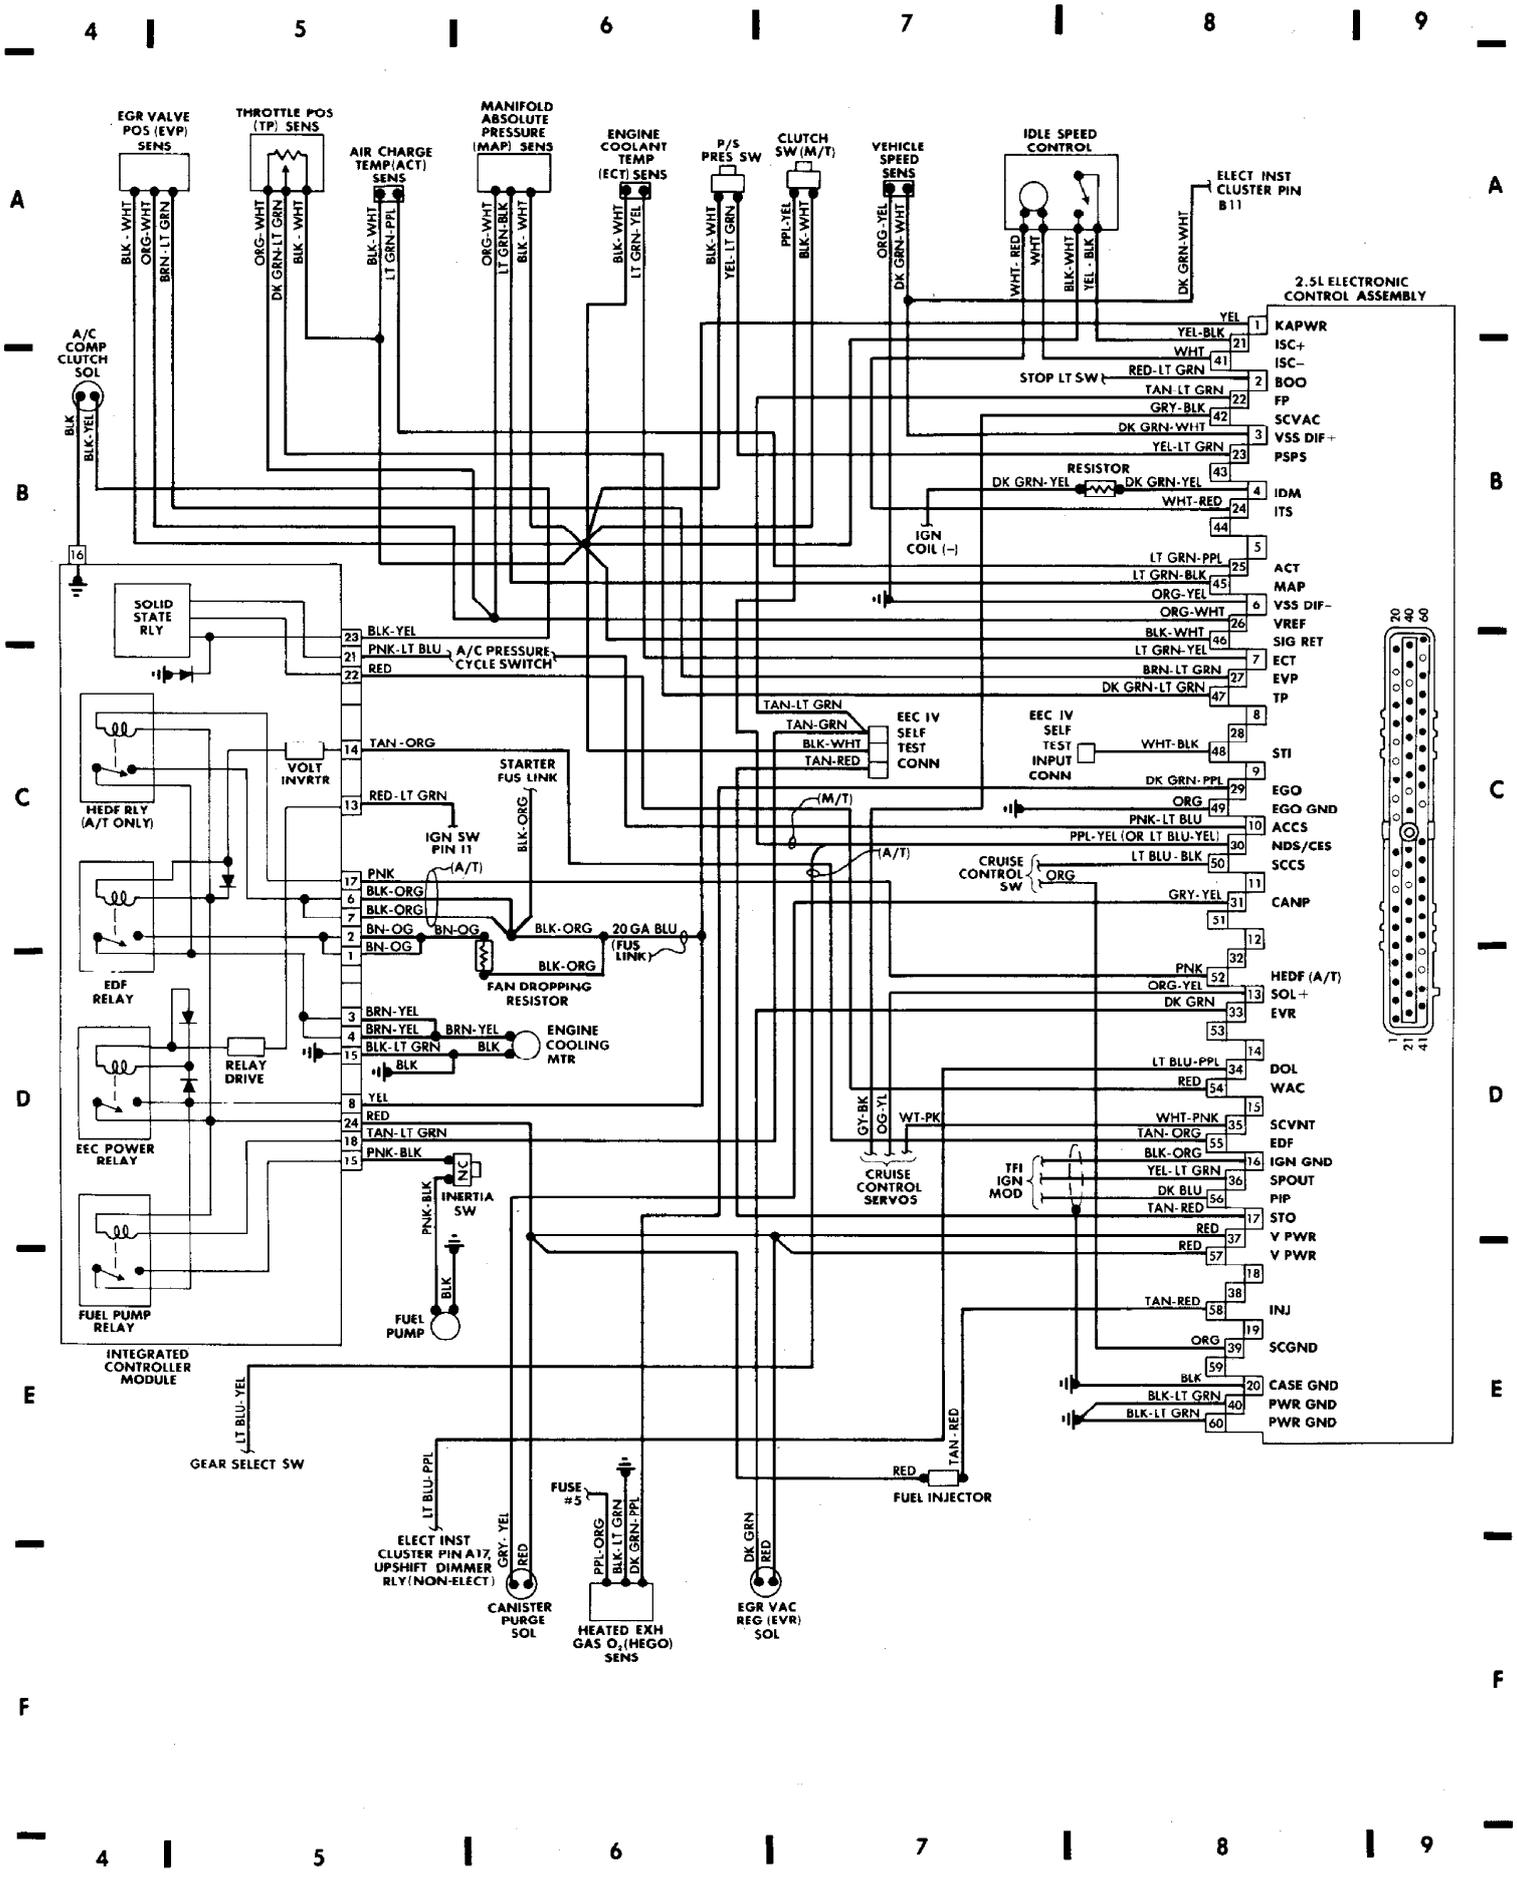


ENGINE COMPARTMENT

97969

WIRING DIAGRAMS
1987 Wiring Diagrams Ford Motor Co.

PAVLIN

Fig. 3: Engine Compartment (Cont.)
 1987 Ford Taurus LX

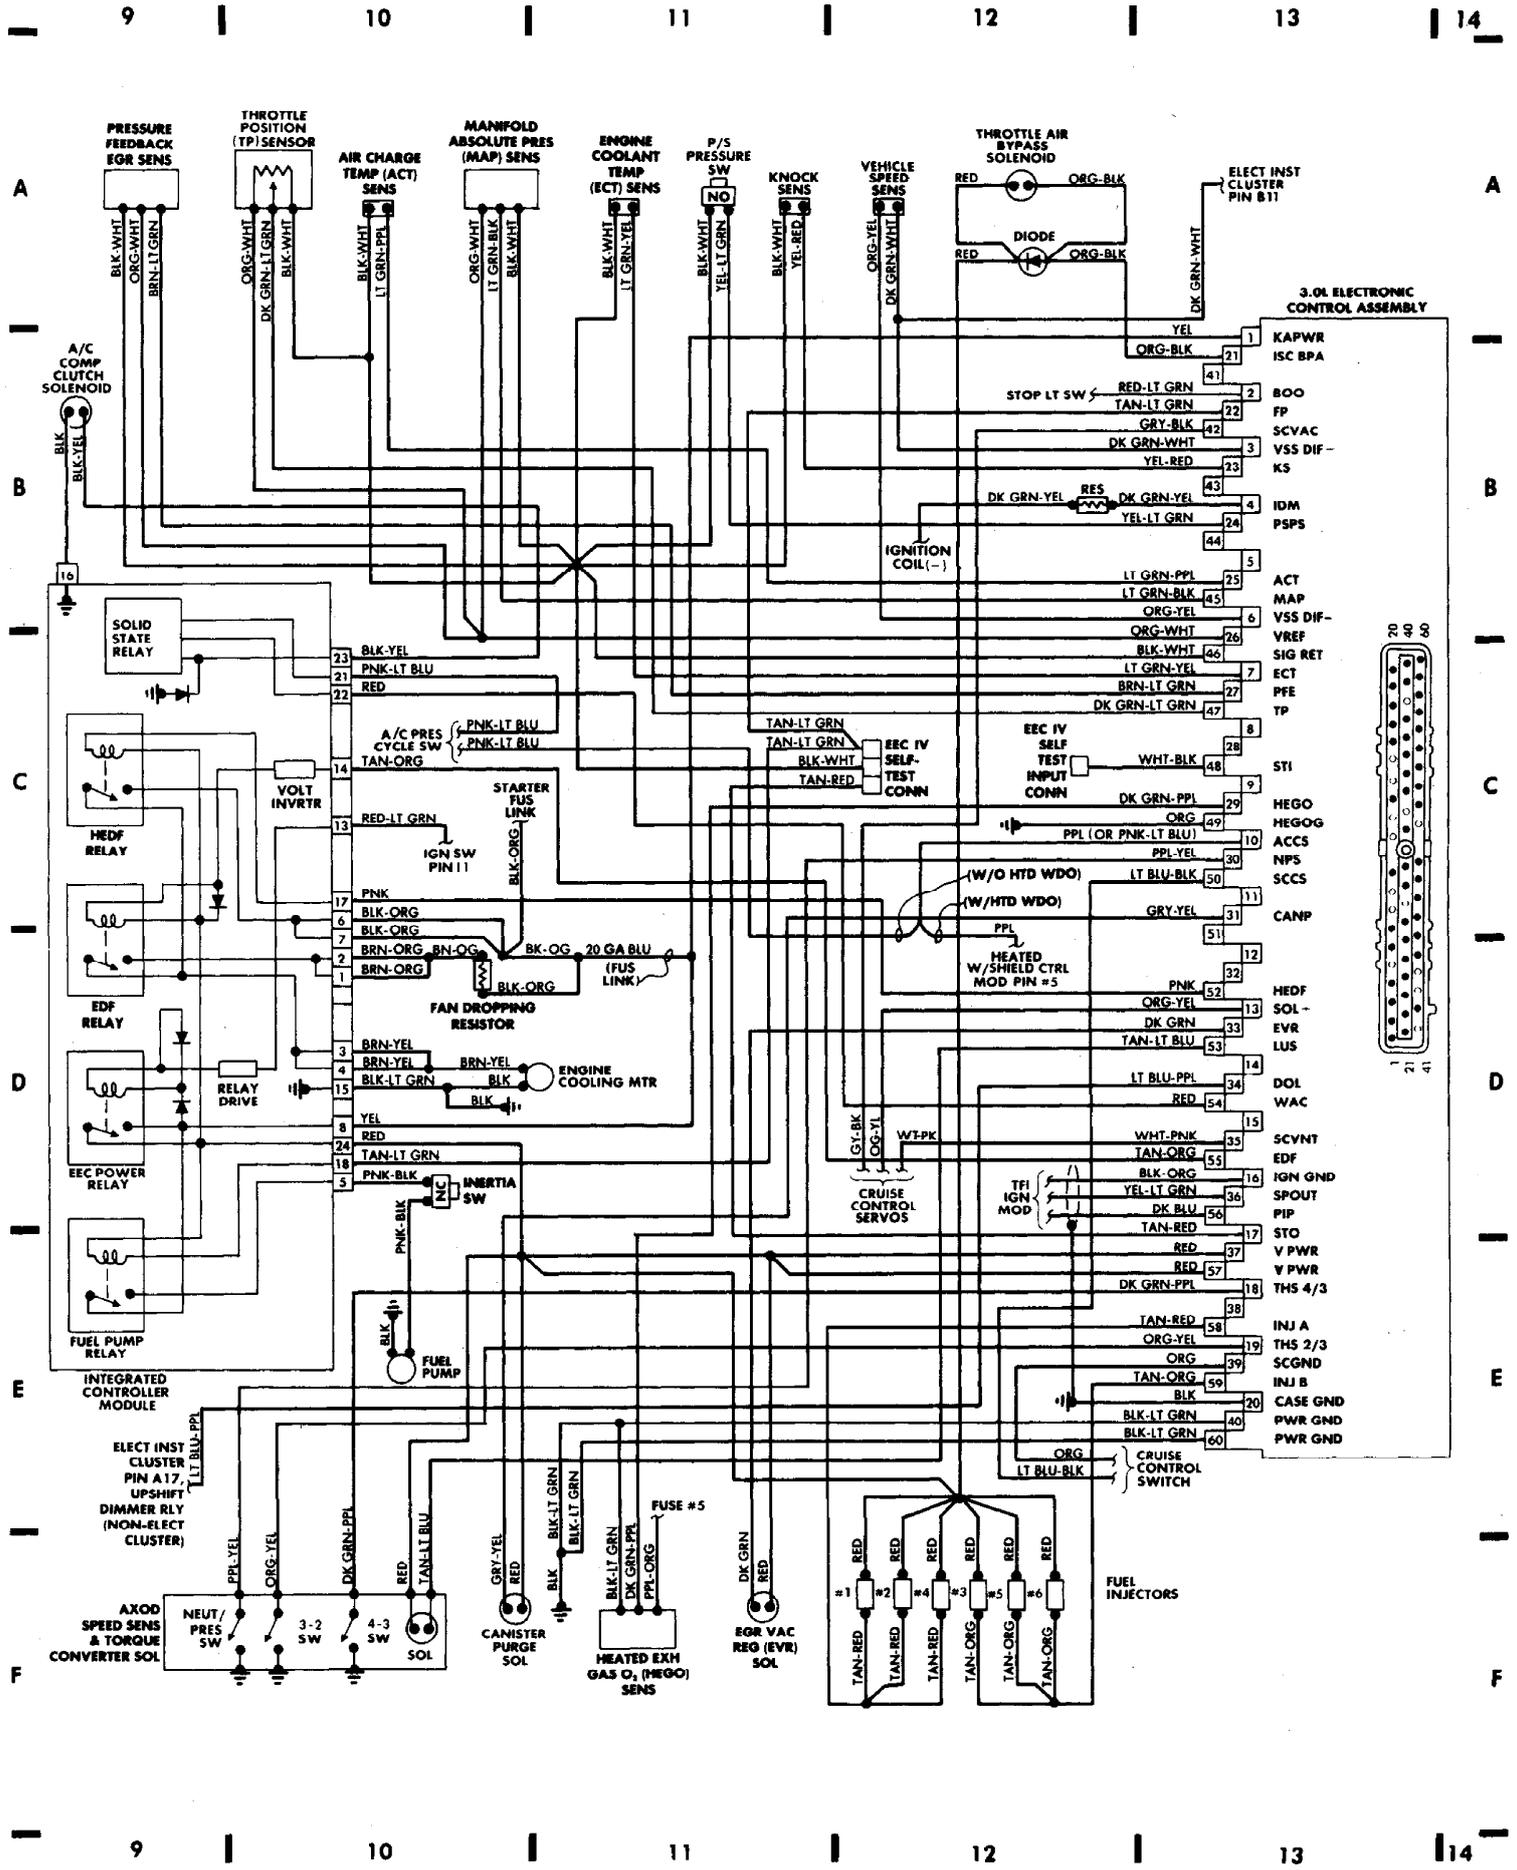

ENGINE COMPARTMENT


97970

WIRING DIAGRAMS

1987 Wiring Diagrams Ford Motor Co.

PAVLIN

Fig. 4: Fuse Block & Underdash
1987 Ford Taurus LX

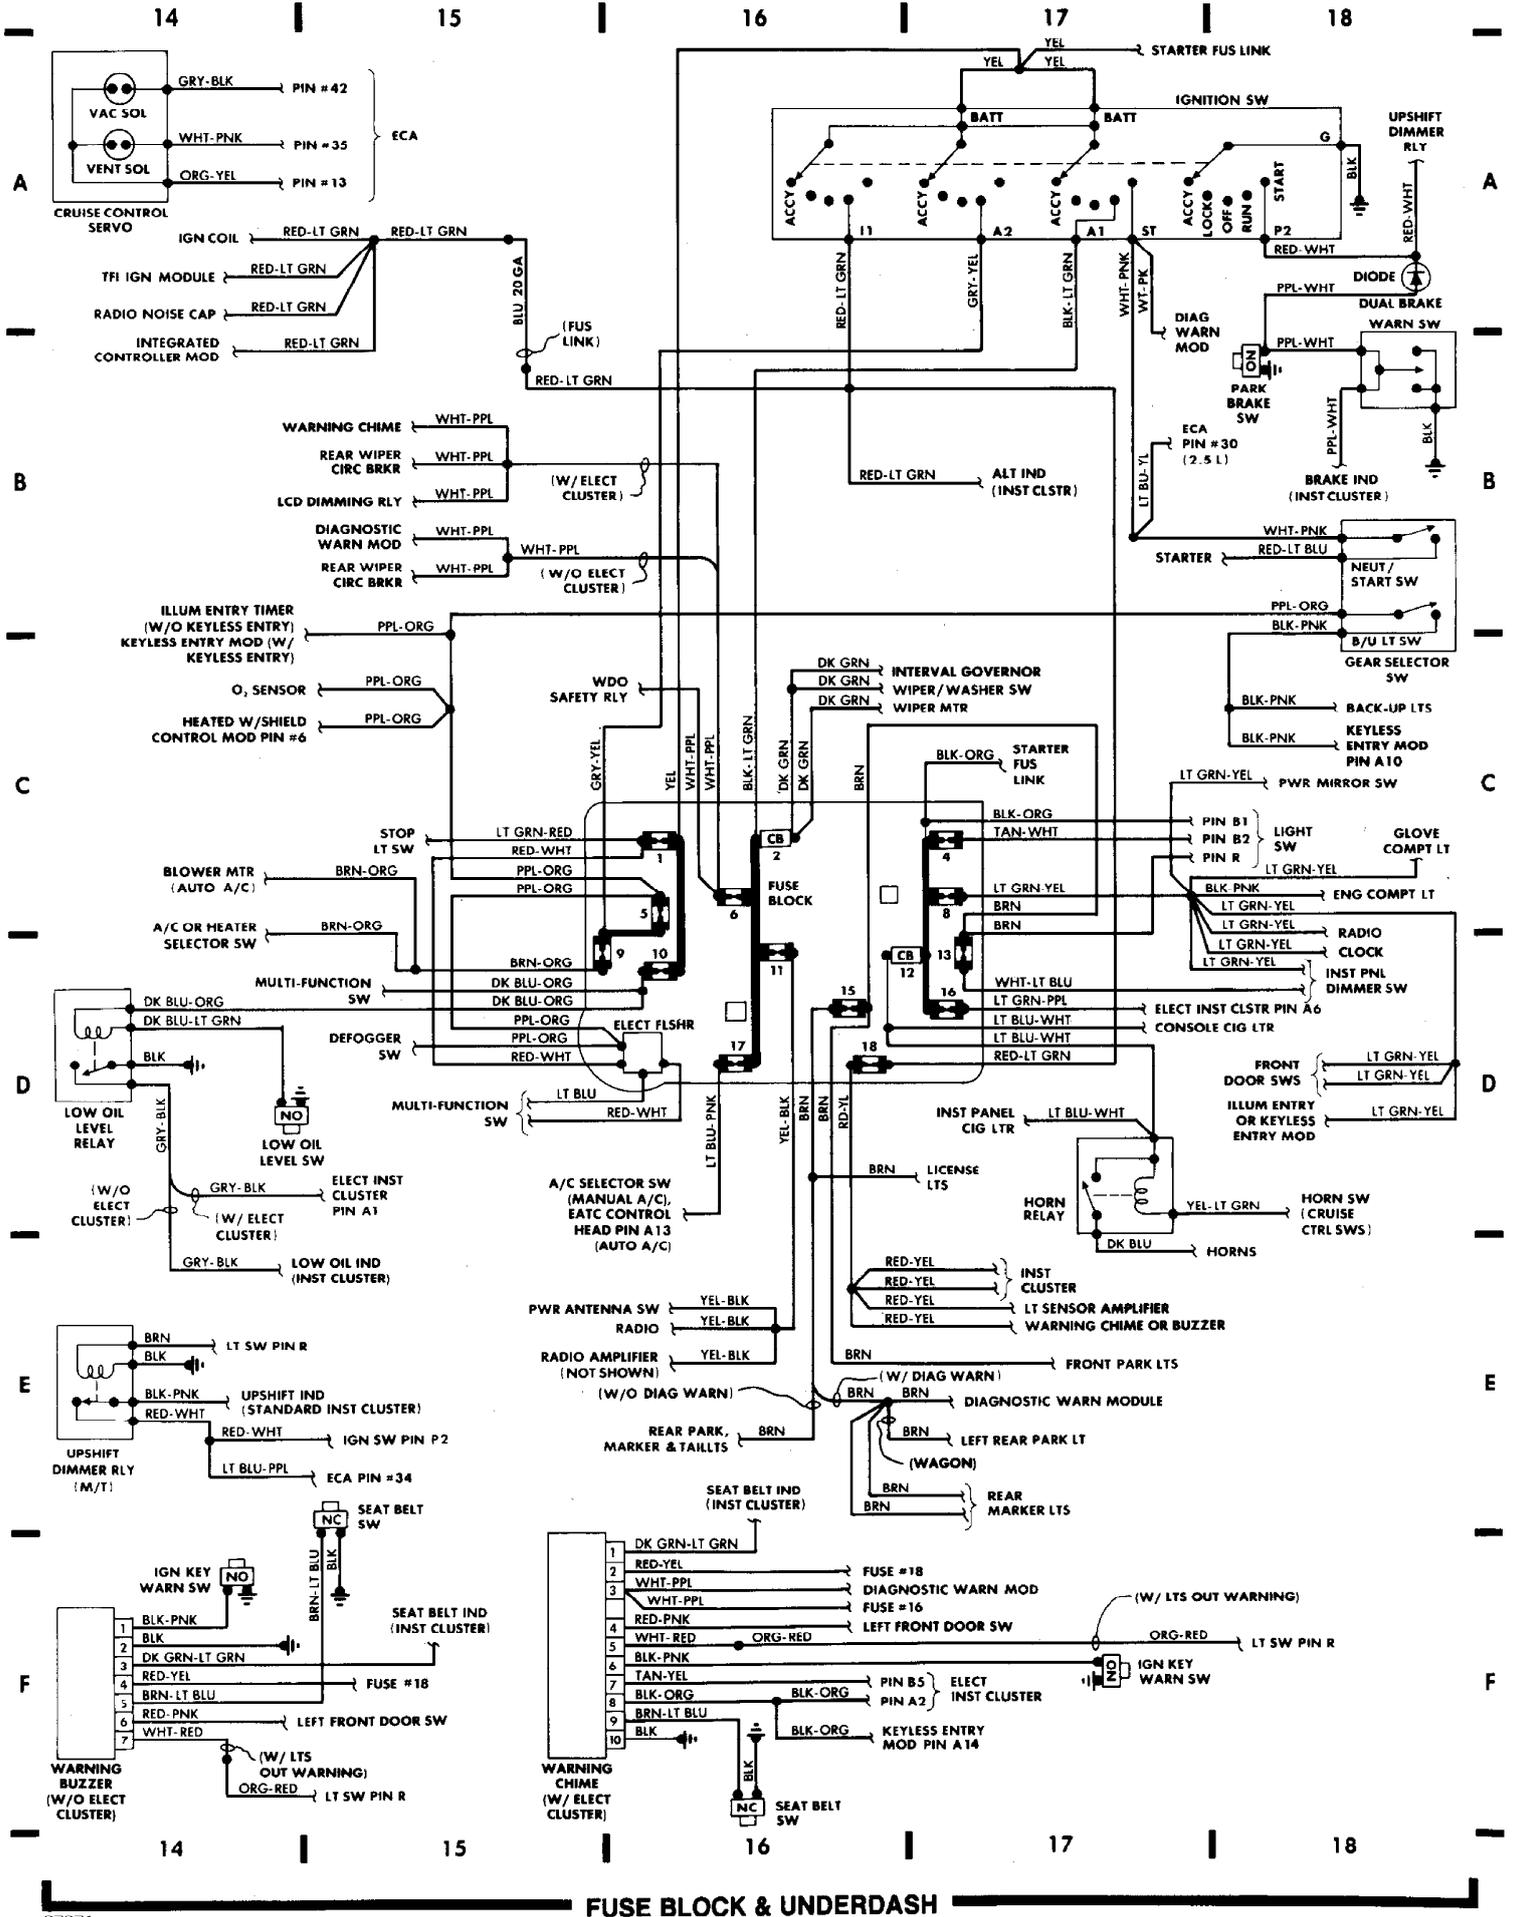

97971


FUSE BLOCK & UNDERDASH

WIRING DIAGRAMS

1987 Wiring Diagrams Ford Motor Co.

PAVLIN

Fig. 5: Underdash (Cont.)
1987 Ford Taurus LX

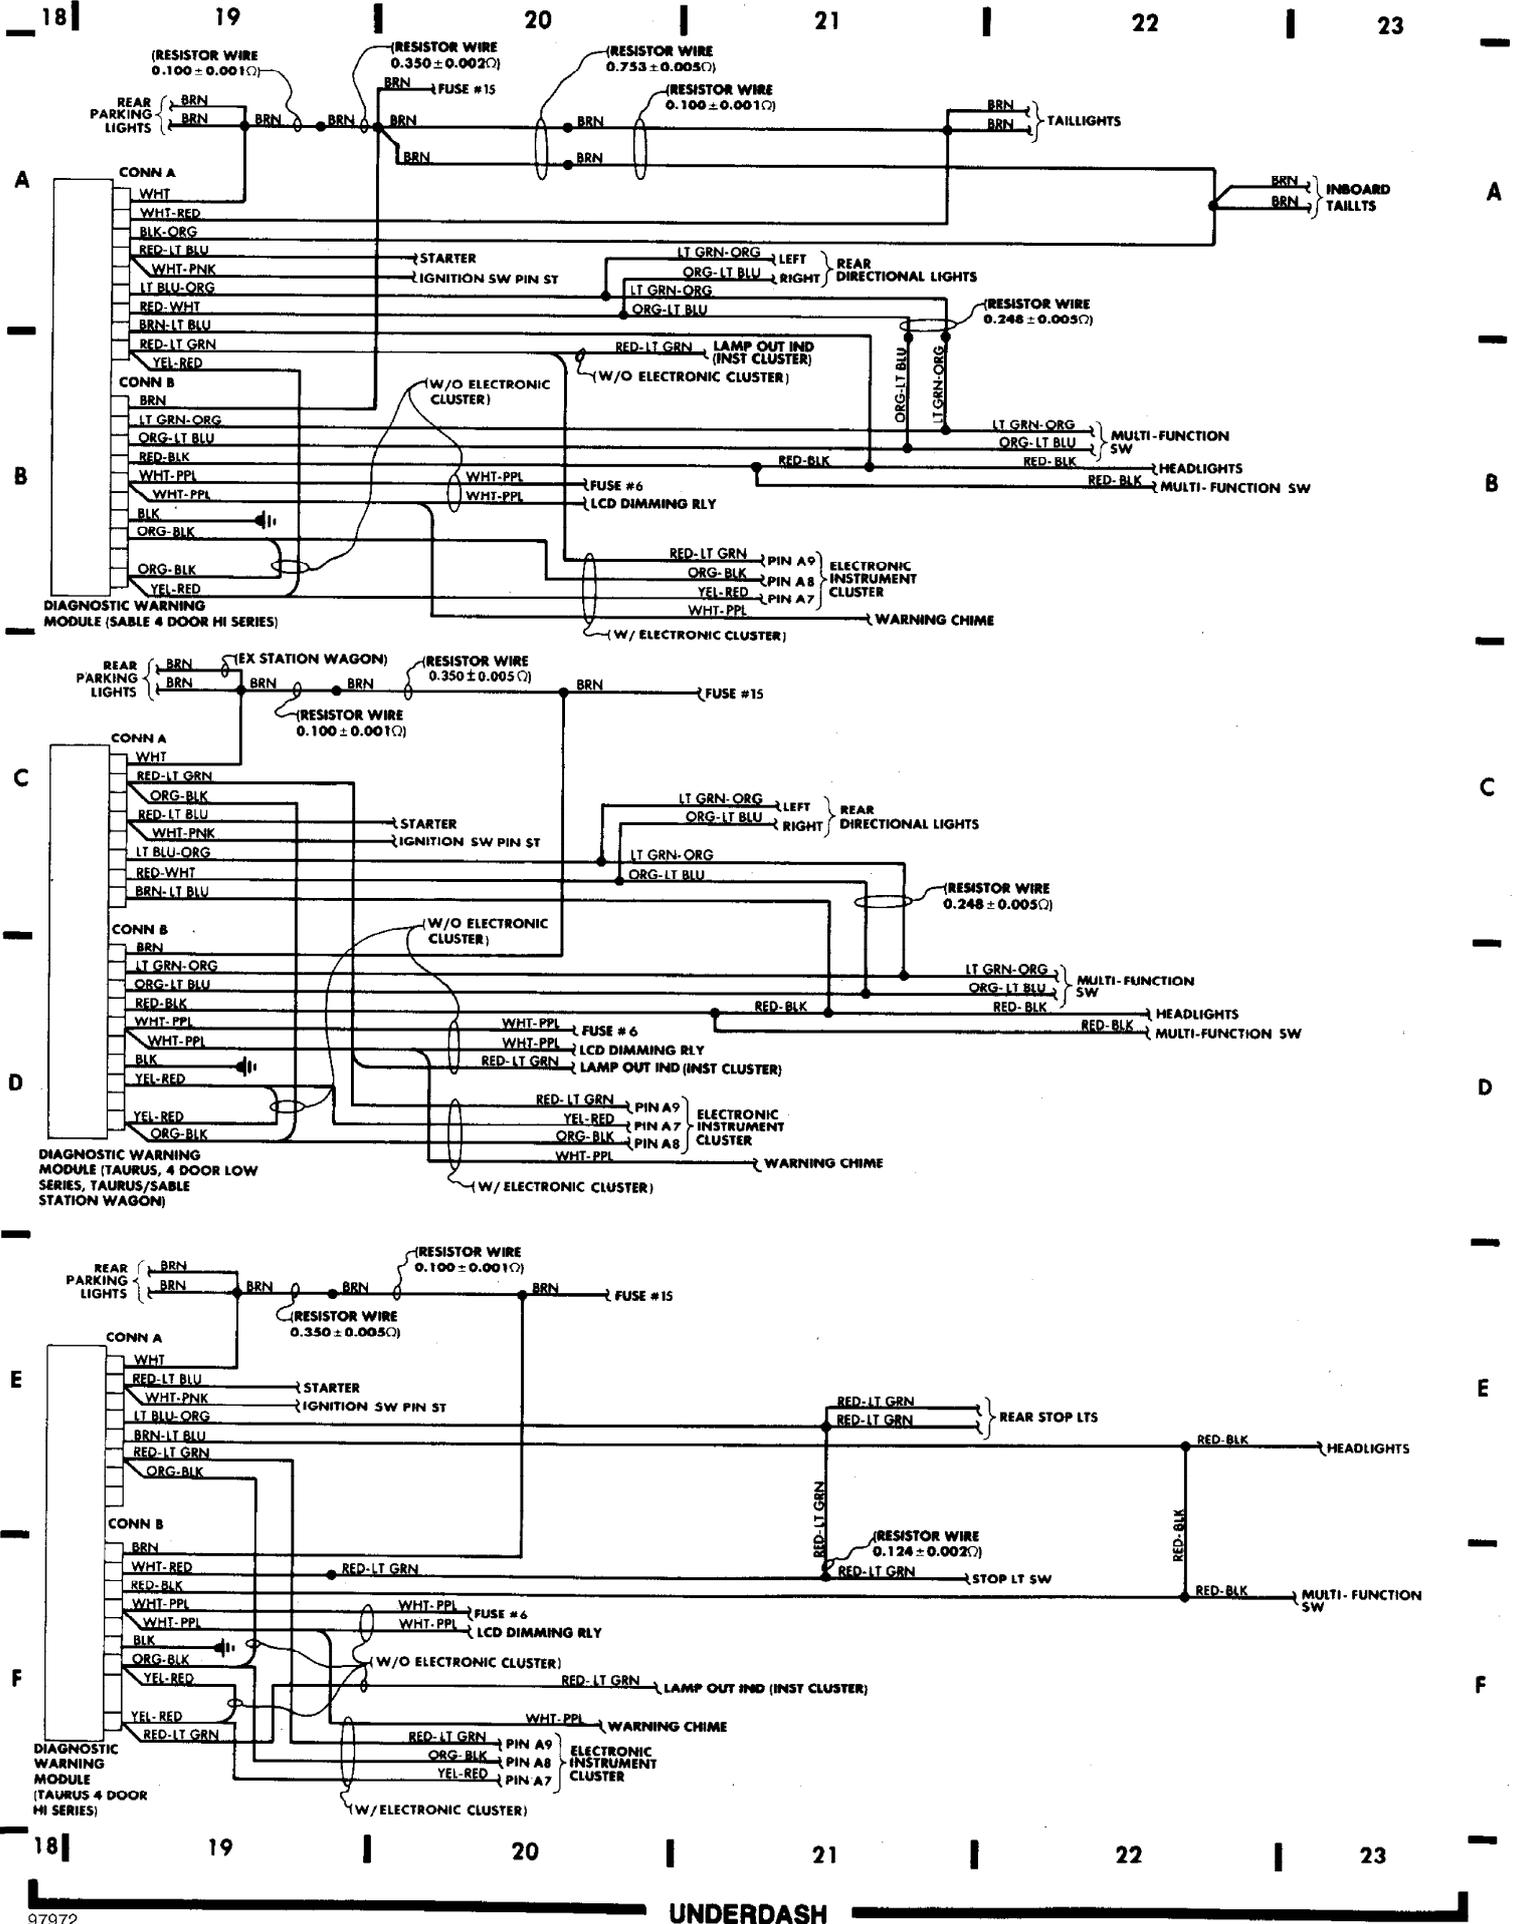


UNDERDASH

WIRING DIAGRAMS

1987 Wiring Diagrams Ford Motor Co.

PAVLIN

Fig. 6: Underdash (Cont.) & Instrument Panel
1987 Ford Taurus LX

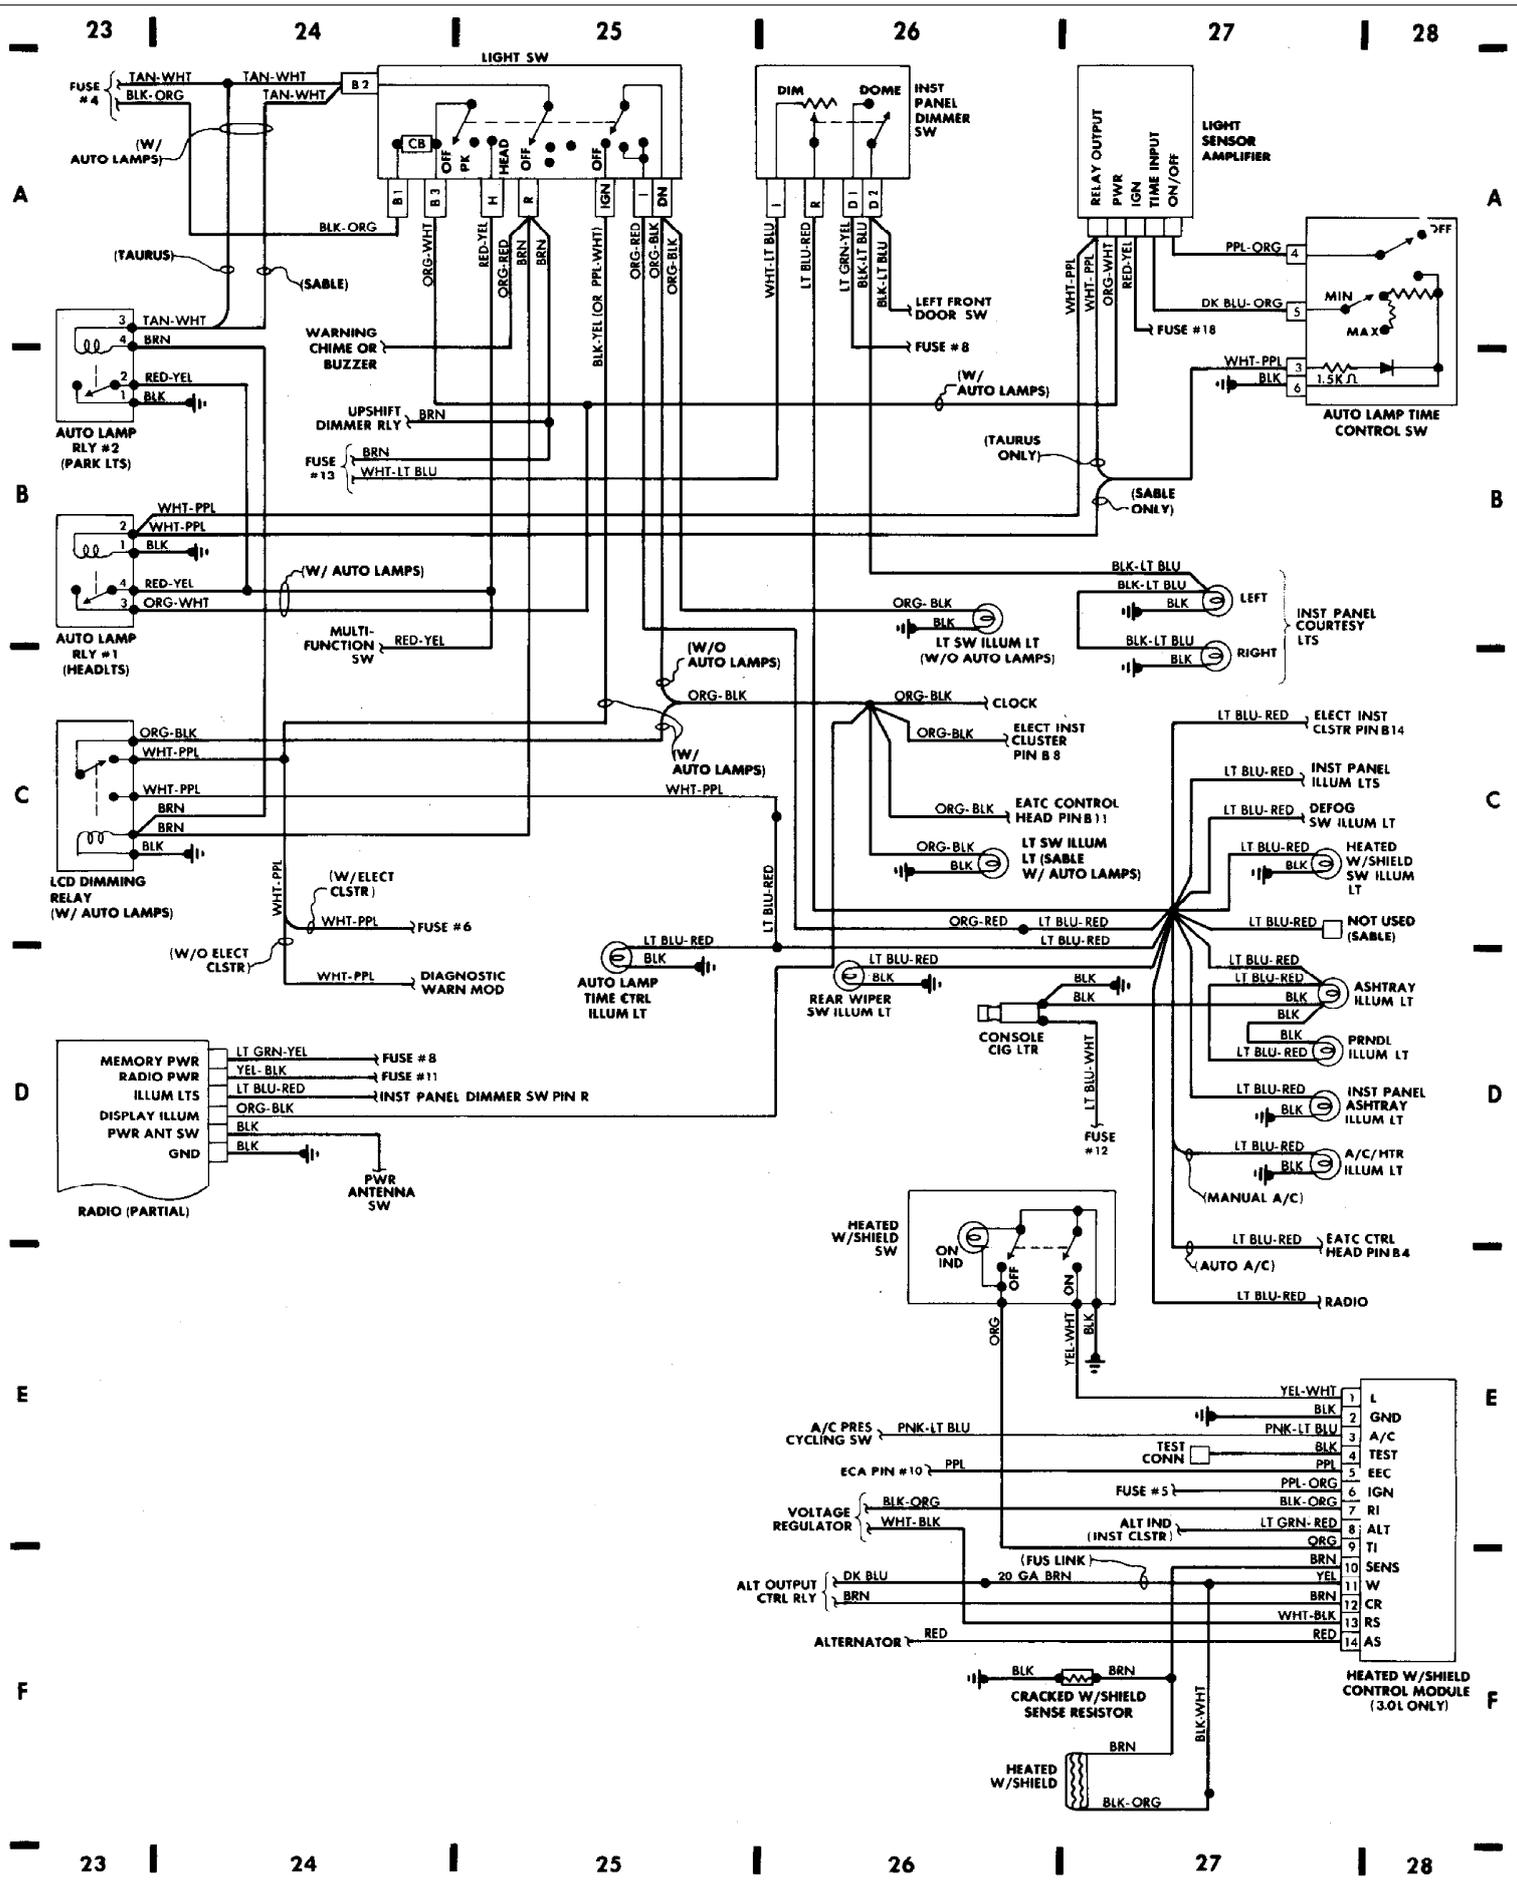

INSTRUMENT PANEL & UNDERDASH


97973

WIRING DIAGRAMS

1987 Wiring Diagrams Ford Motor Co.

PAVLIN

Fig. 7: Instrument Panel (Cont.)
1987 Ford Taurus LX

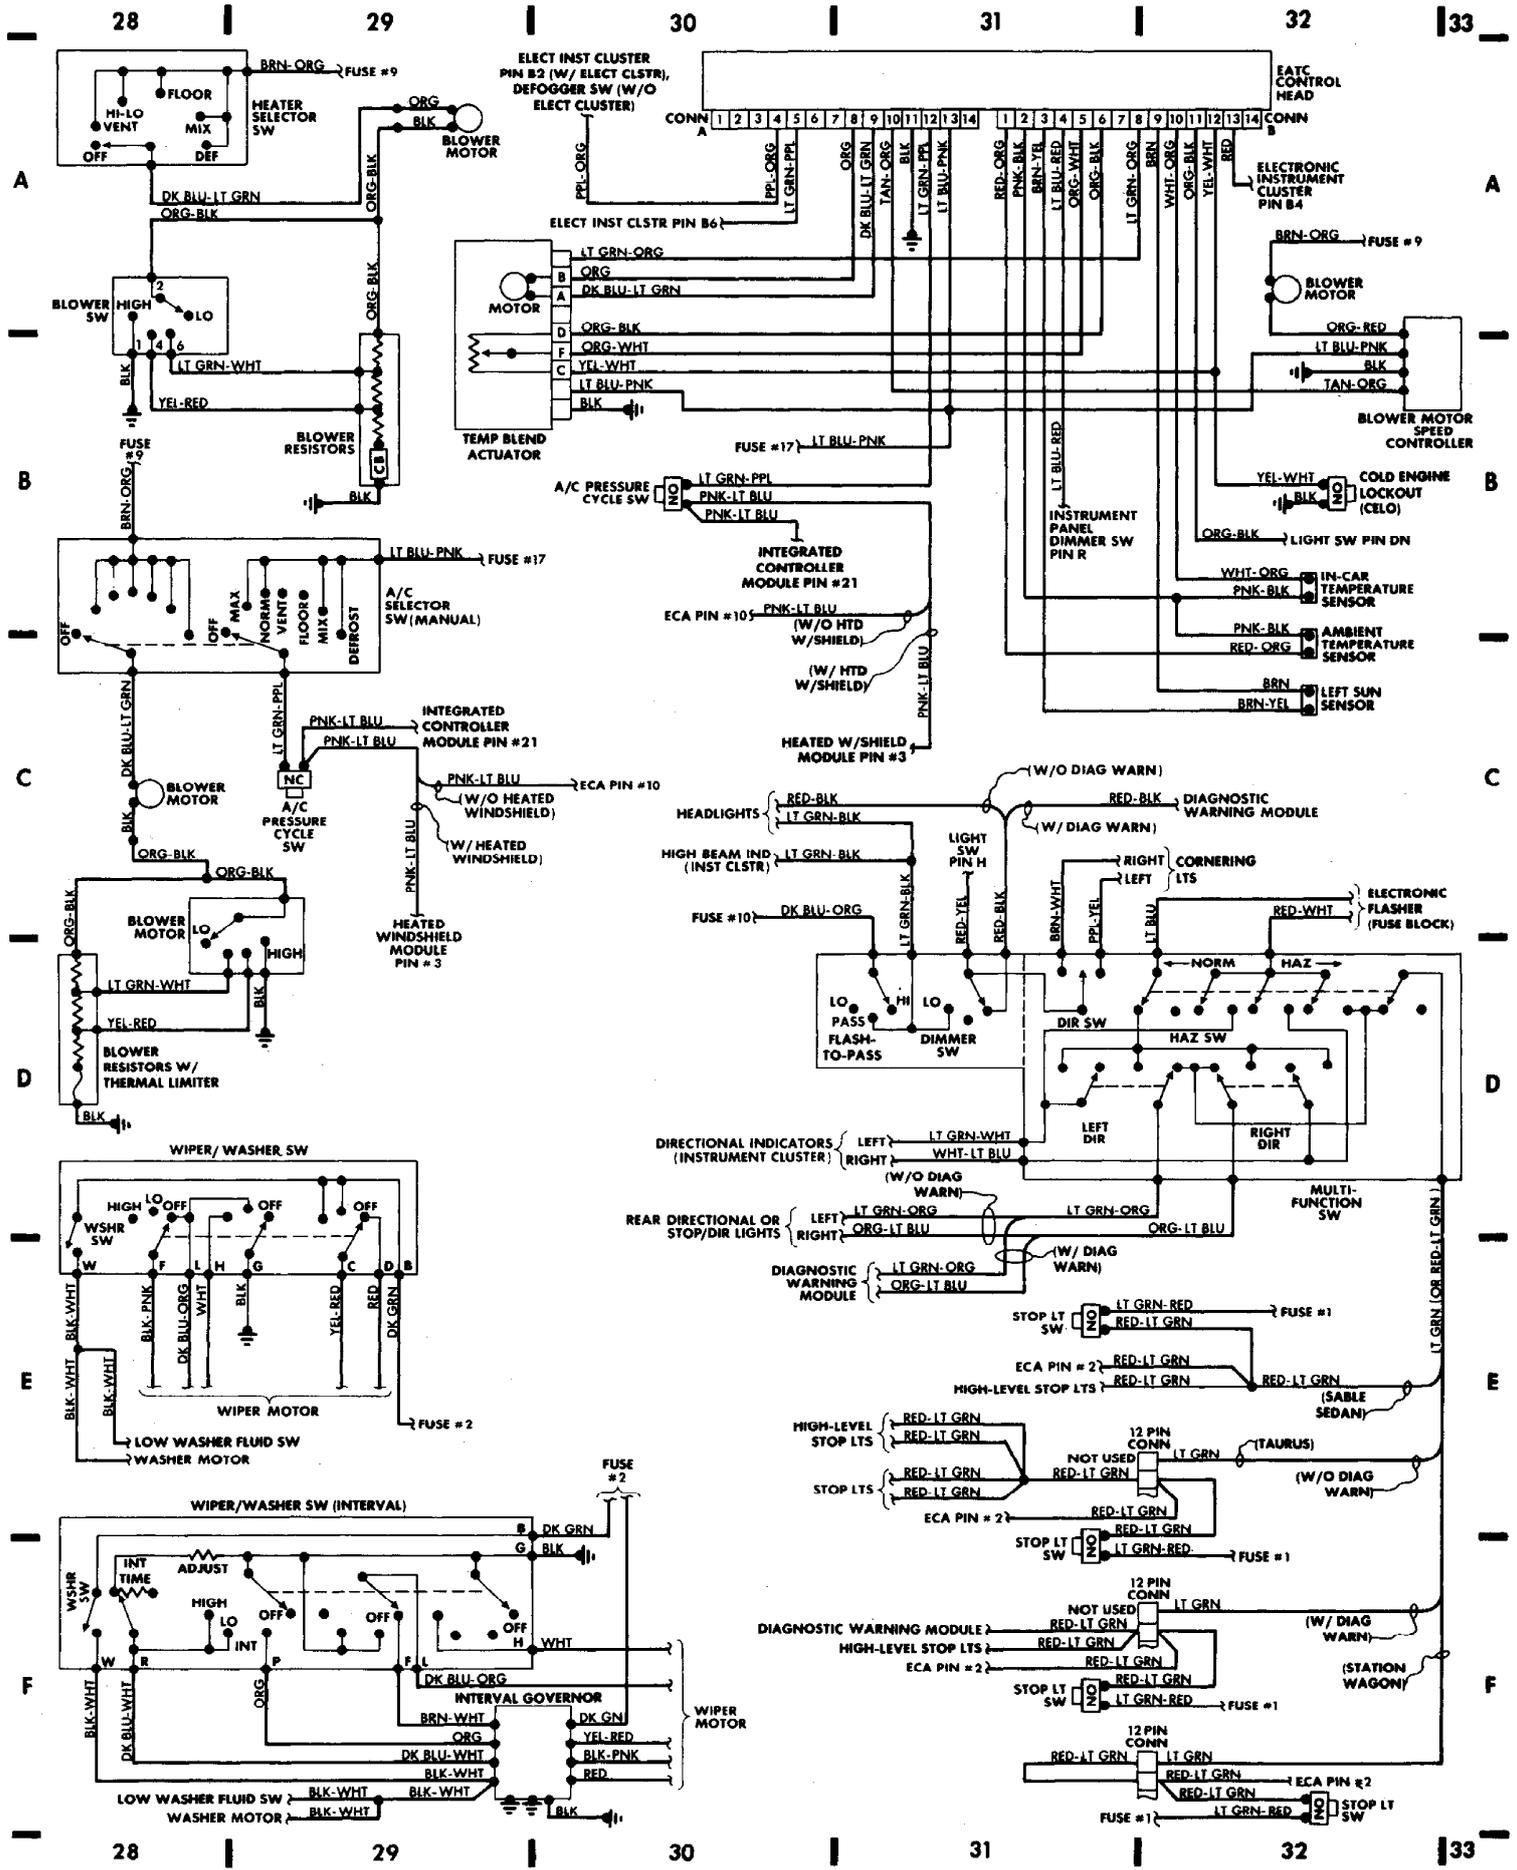

INSTRUMENT PANEL


97974

WIRING DIAGRAMS

1987 Wiring Diagrams Ford Motor Co.

PAVLIN

Fig. 8: Instrument Panel (Cont.)
1987 Ford Taurus LX

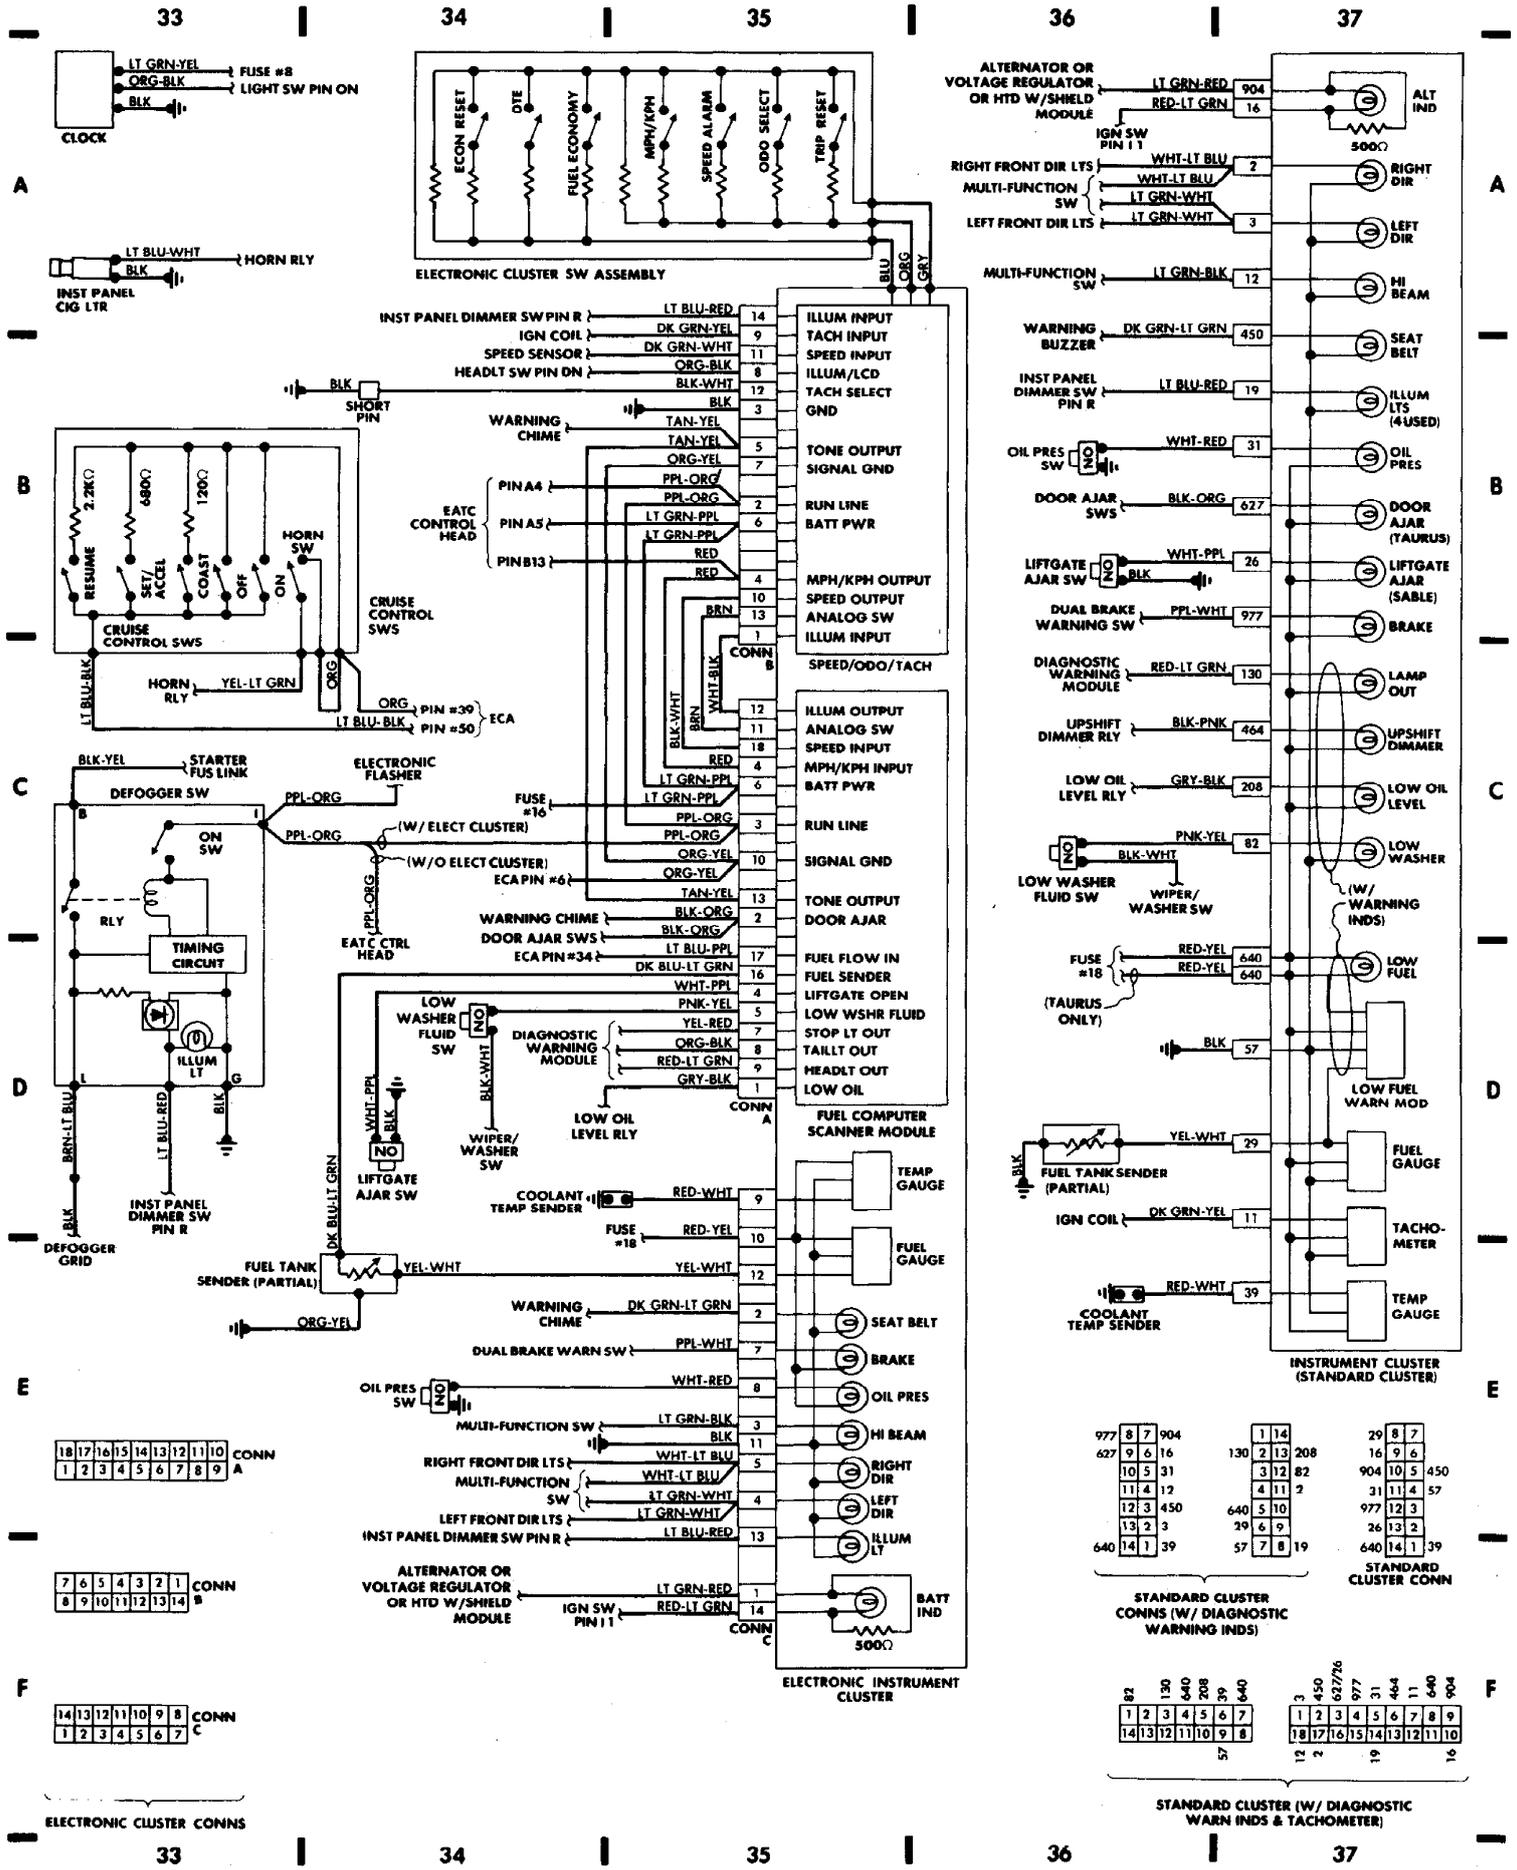


INSTRUMENT PANEL

97975

PAVLIN

Fig. 9: Rear Compartment & Accessories
1987 Ford Taurus LX

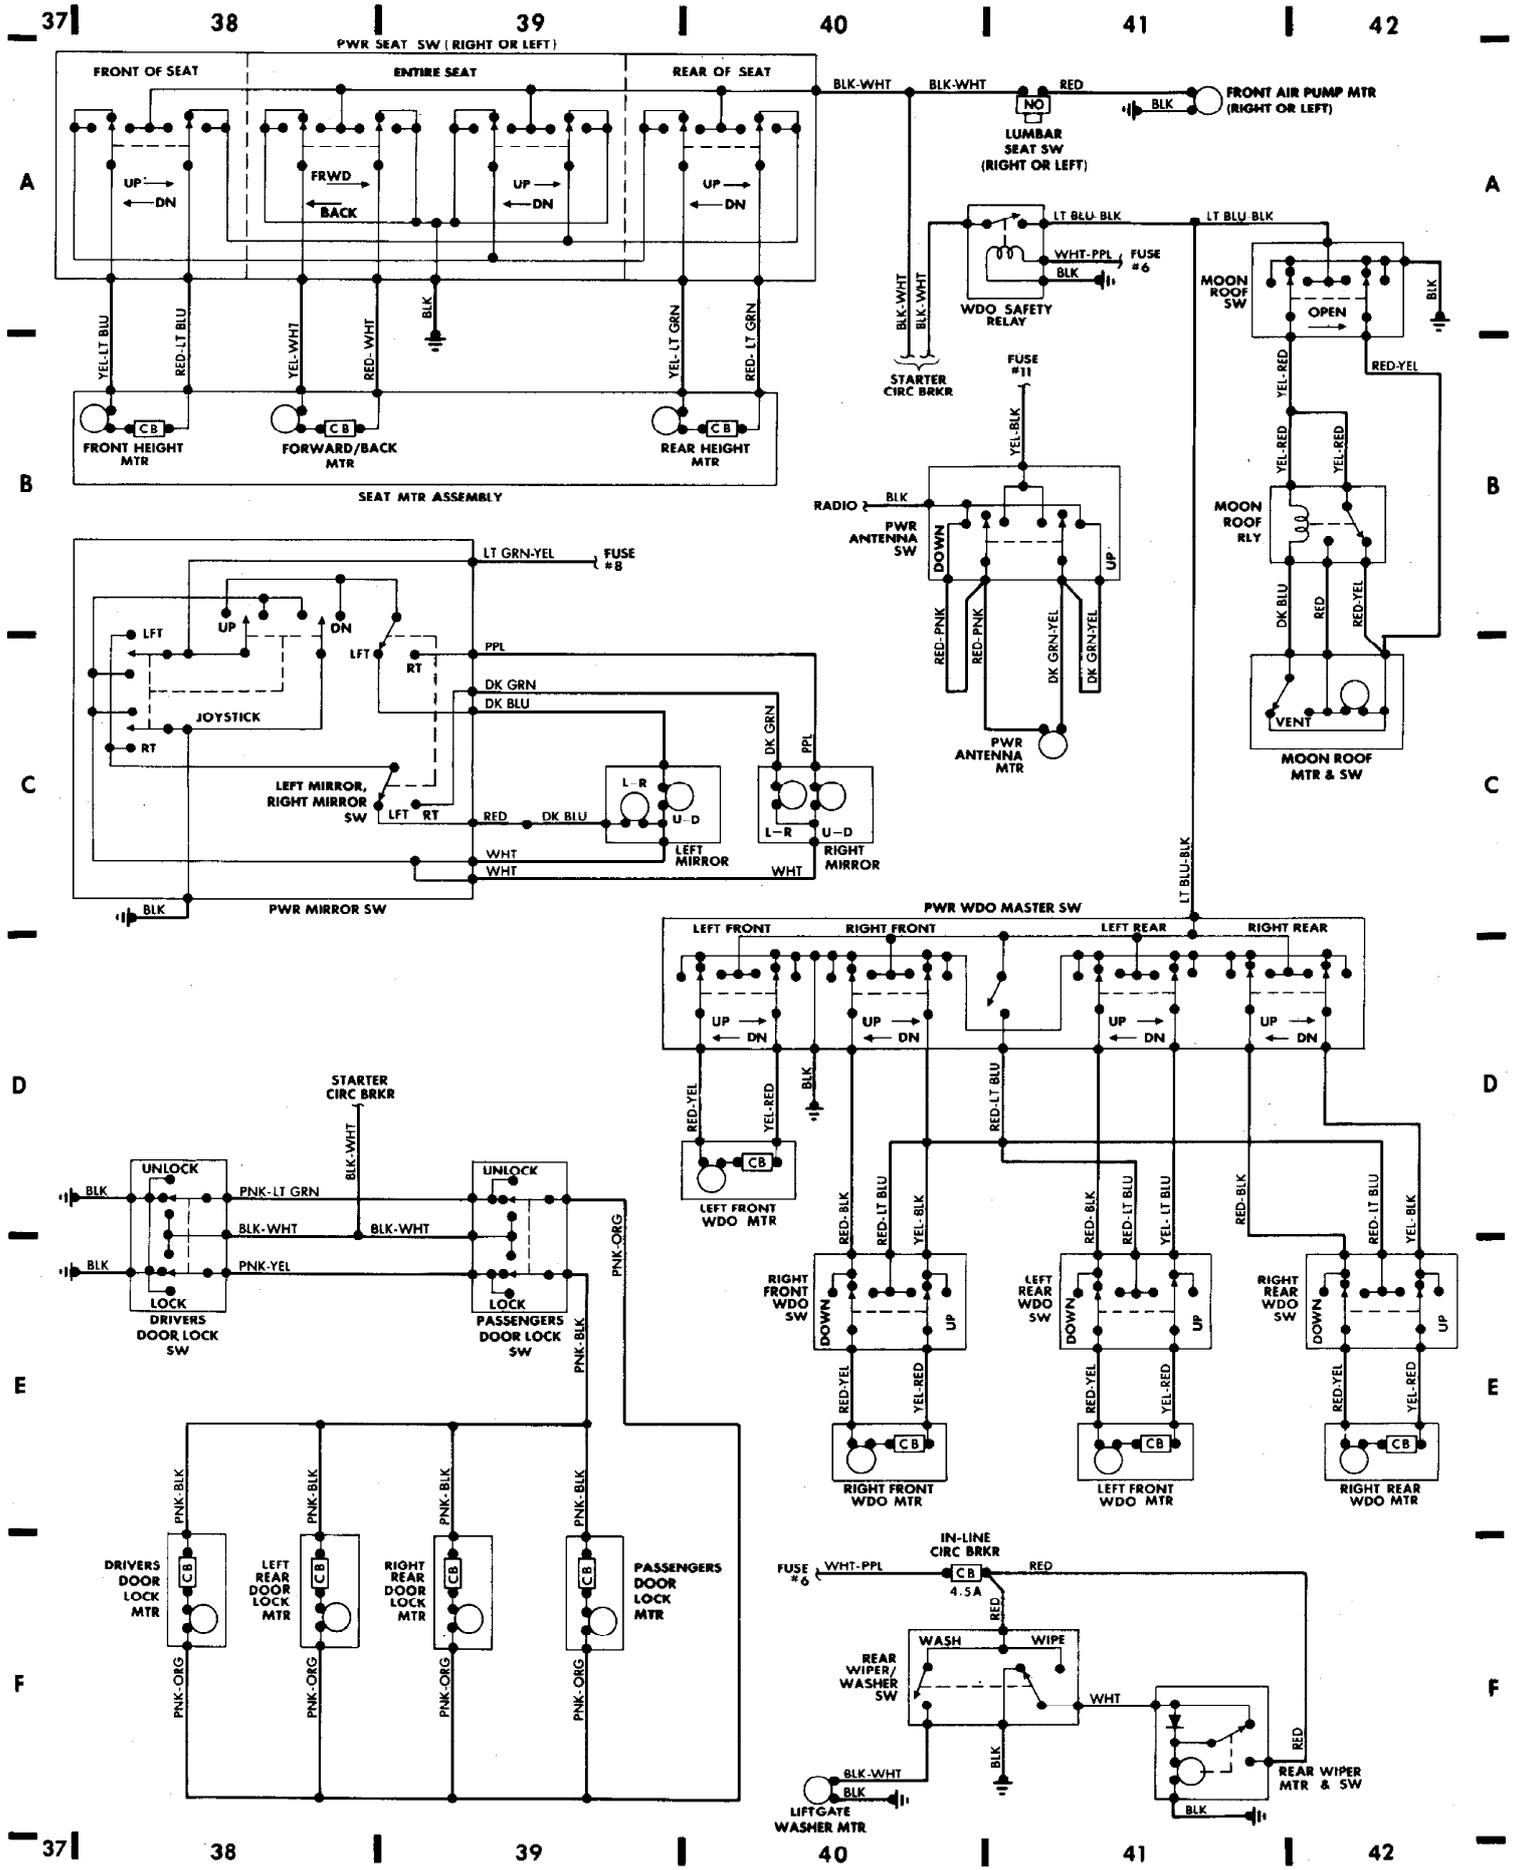

REAR COMPARTMENT & ACCESSORIES


97976

WIRING DIAGRAMS

1987 Wiring Diagrams Ford Motor Co.

PAVLIN

Fig. 10: Rear Compartment & Accessories (Cont.)
1987 Ford Taurus LX

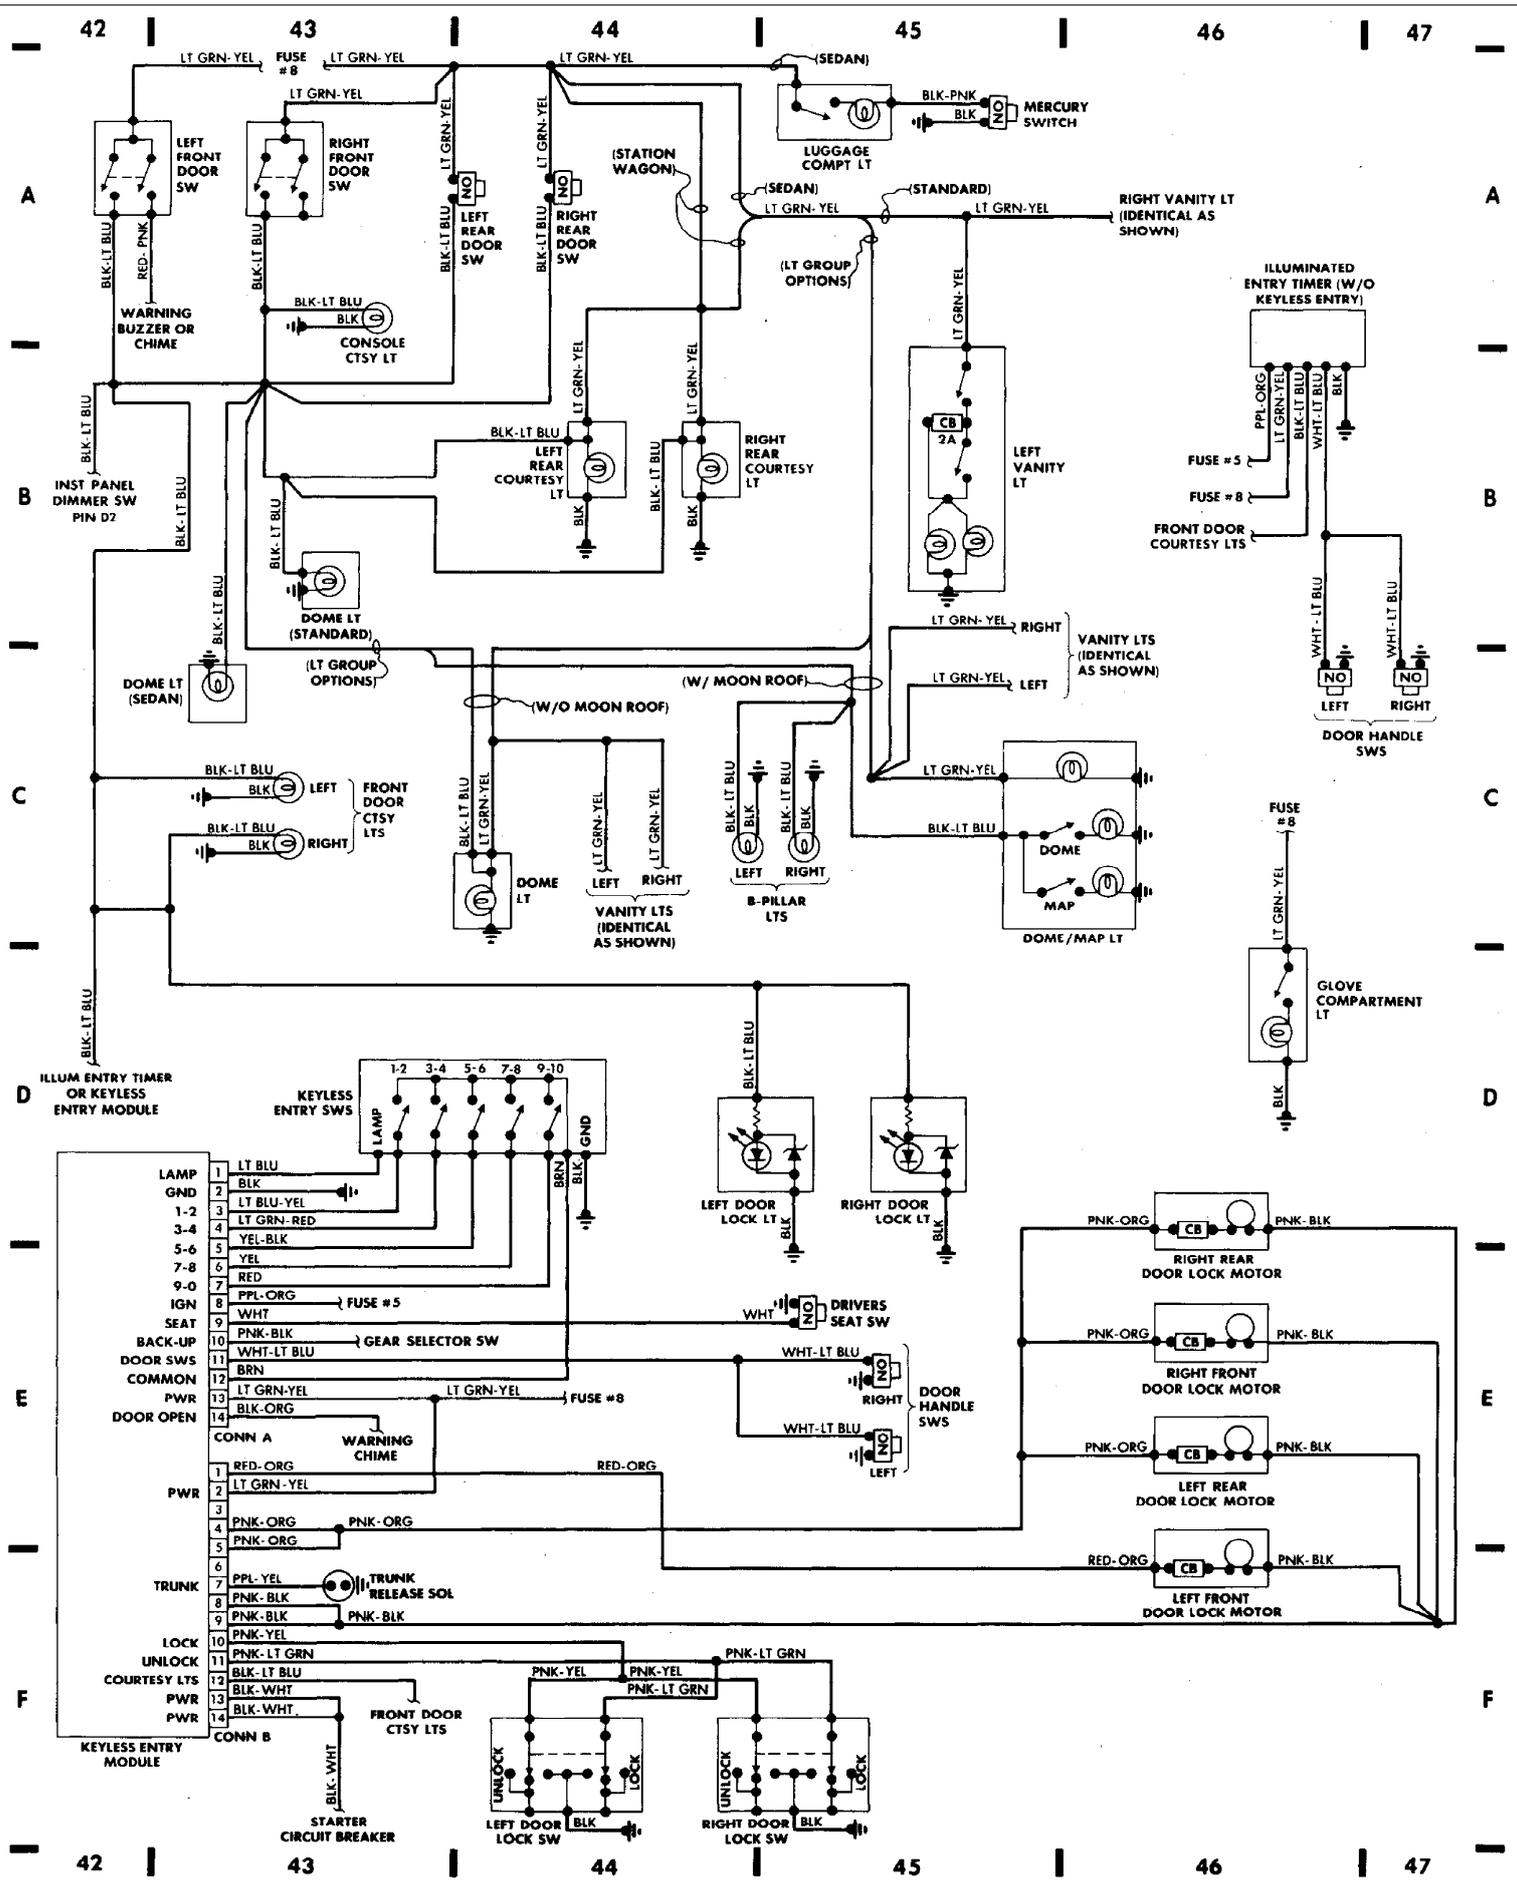

REAR COMPARTMENT & ACCESSORIES


97977

WIRING DIAGRAMS

1987 Wiring Diagrams Ford Motor Co.

PAVLIN

Fig. 11: Rear Compartment & Accessories (Cont.)
1987 Ford Taurus LX

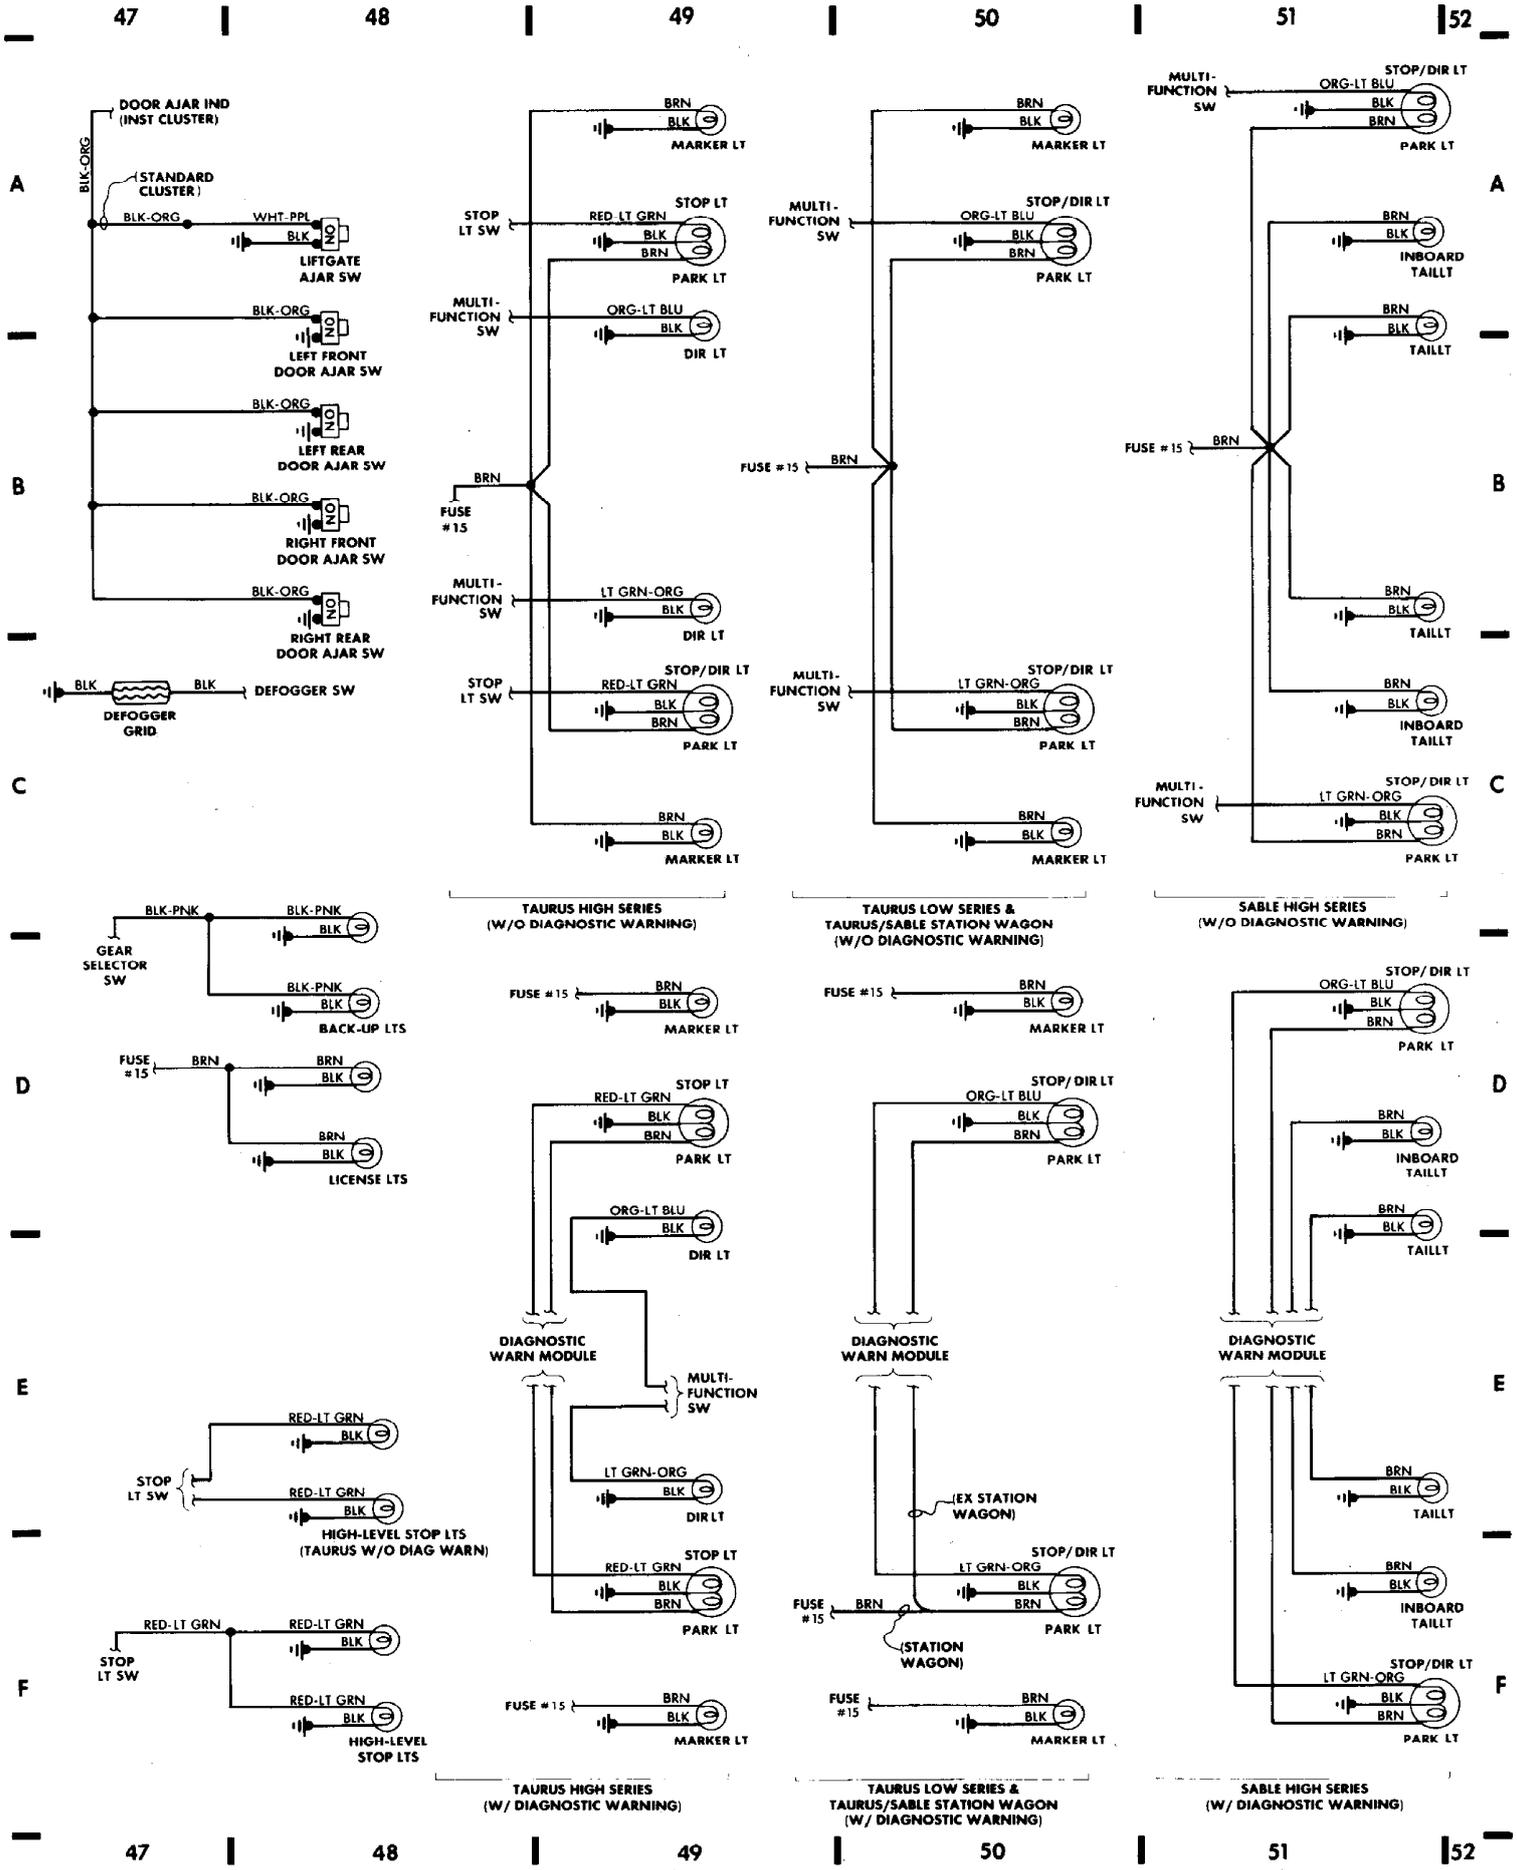

REAR COMPARTMENT & ACCESSORIES

97978