


1993 System Wiring Diagrams
Ford - Taurus

PAVLIN


Fig. 1: 3.0L SHO, Cooling Fan Circuit
1993 Ford Taurus LX

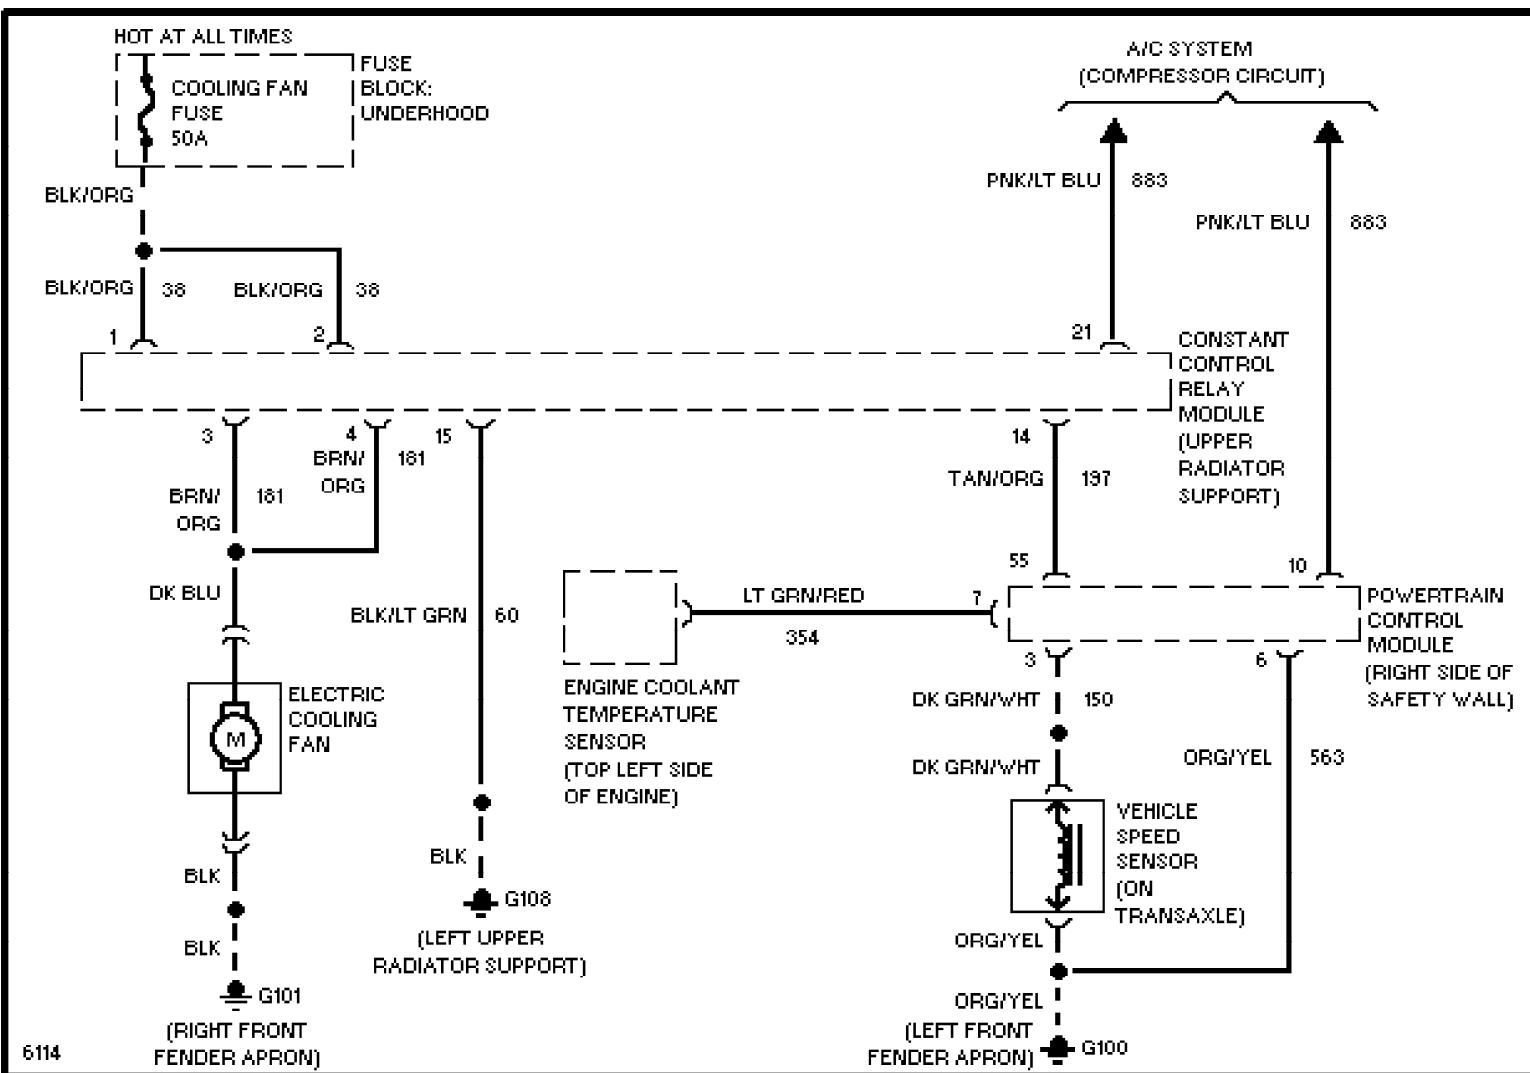

1993 System Wiring Diagrams
Ford - Taurus

PAVLIN


Fig. 2: 3.0L, Cooling Fan Circuit
1993 Ford Taurus LX

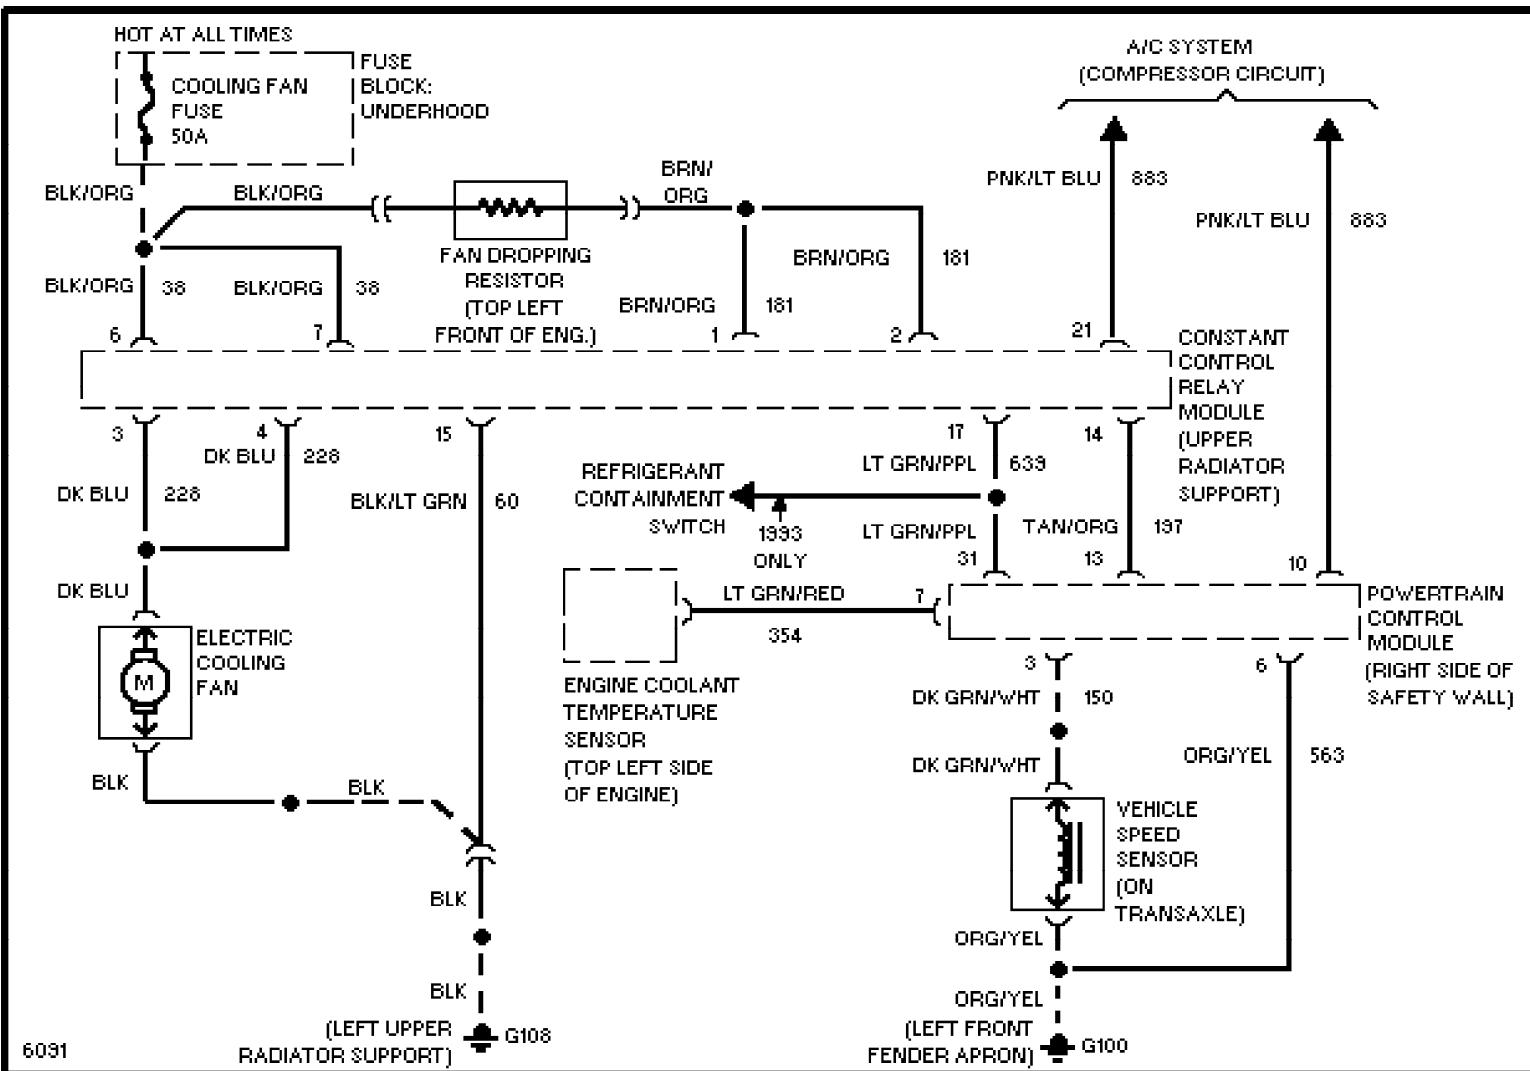

1993 System Wiring Diagrams
Ford - Taurus

PAVLIN


Fig. 3: 3.2L SHO, Cooling Fan Circuit
1993 Ford Taurus LX

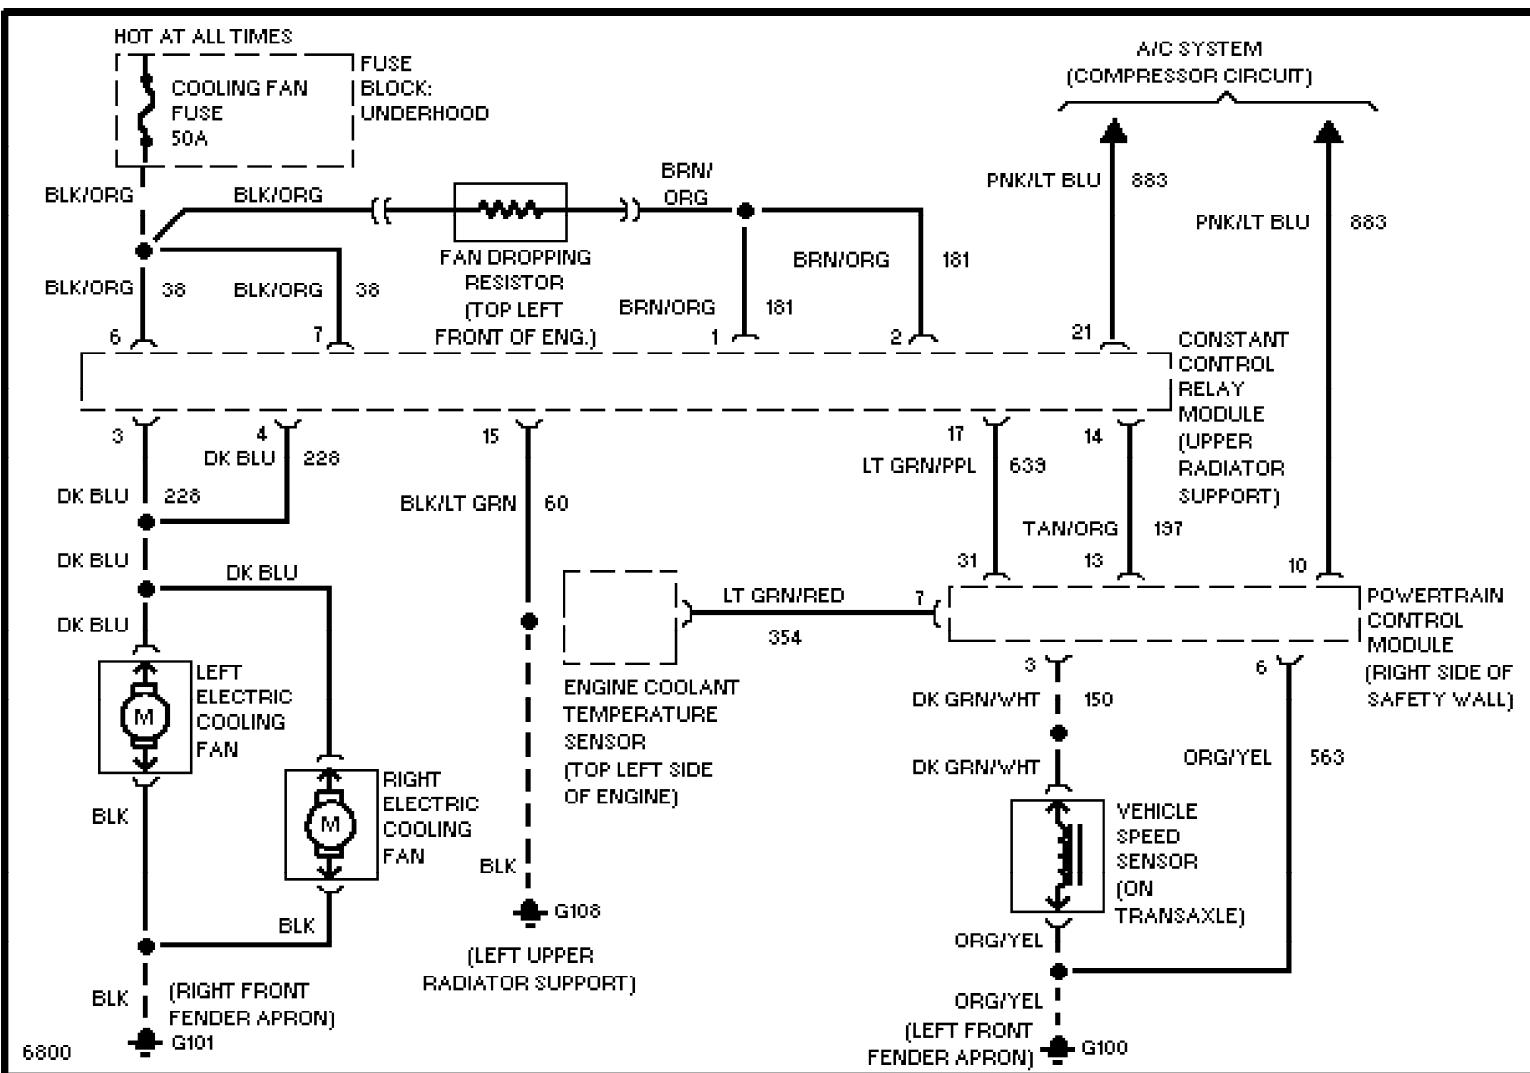

1993 System Wiring Diagrams
Ford - Taurus

PAVLIN


Fig. 4: 3.8L, Cooling Fan Circuit
1993 Ford Taurus LX

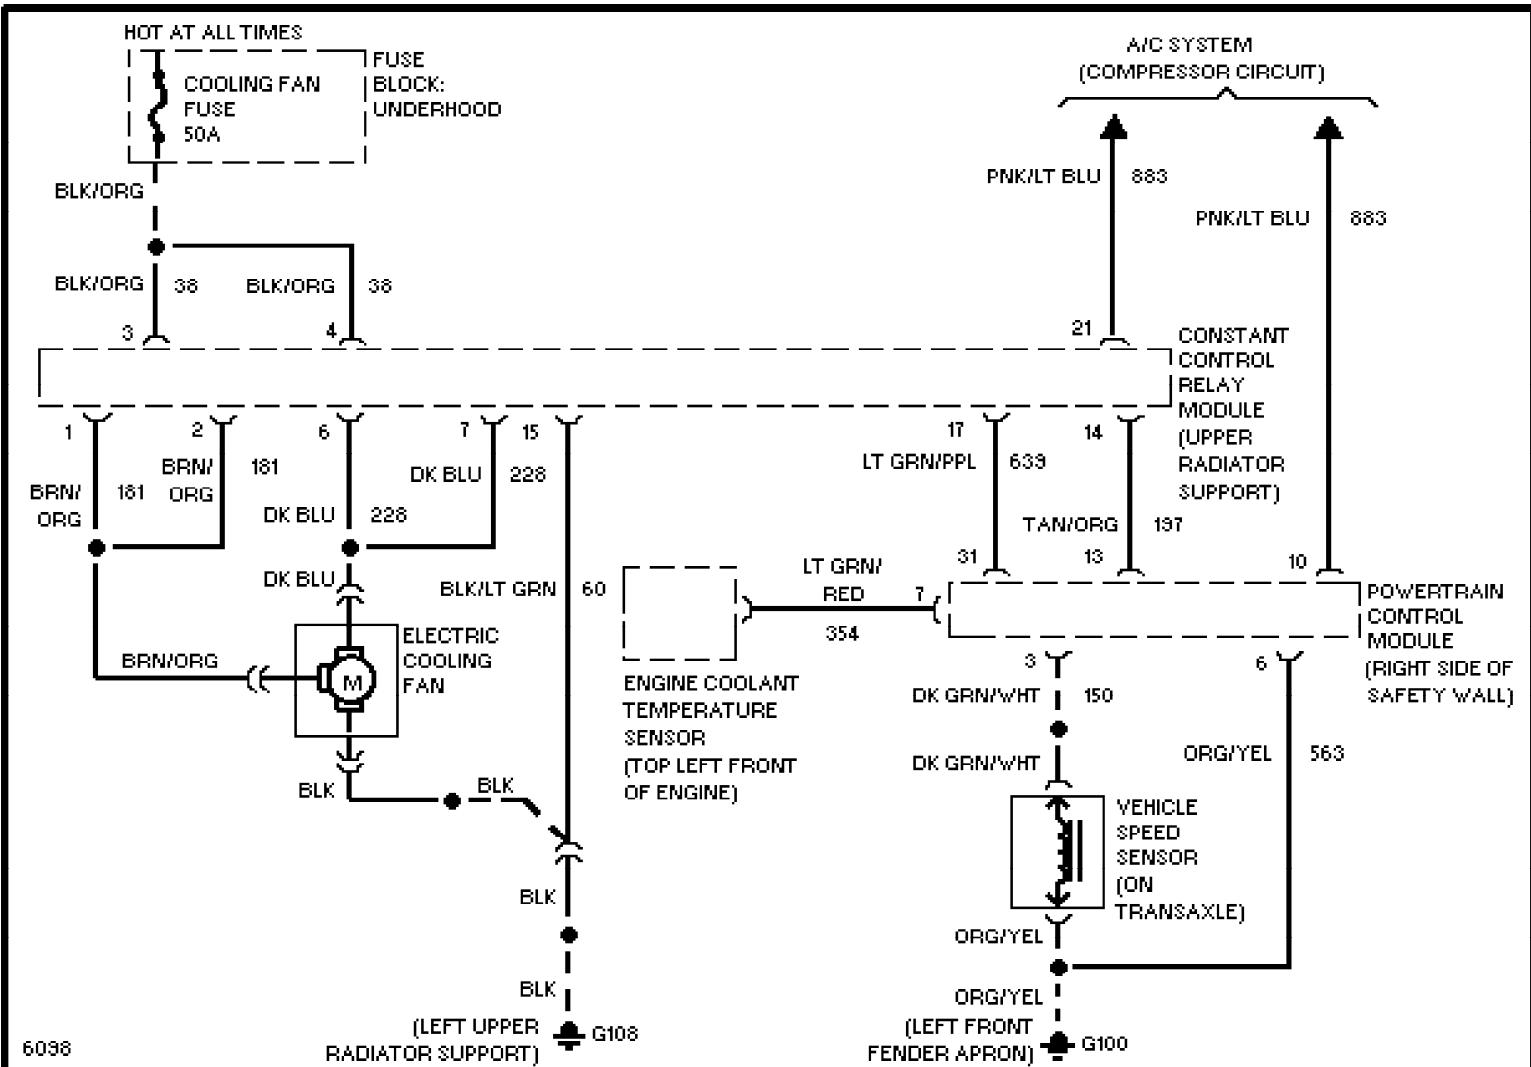

**1993 System Wiring Diagrams
Ford - Taurus**

PAVLIN


Fig. 5: Defogger Circuit
1993 Ford Taurus LX

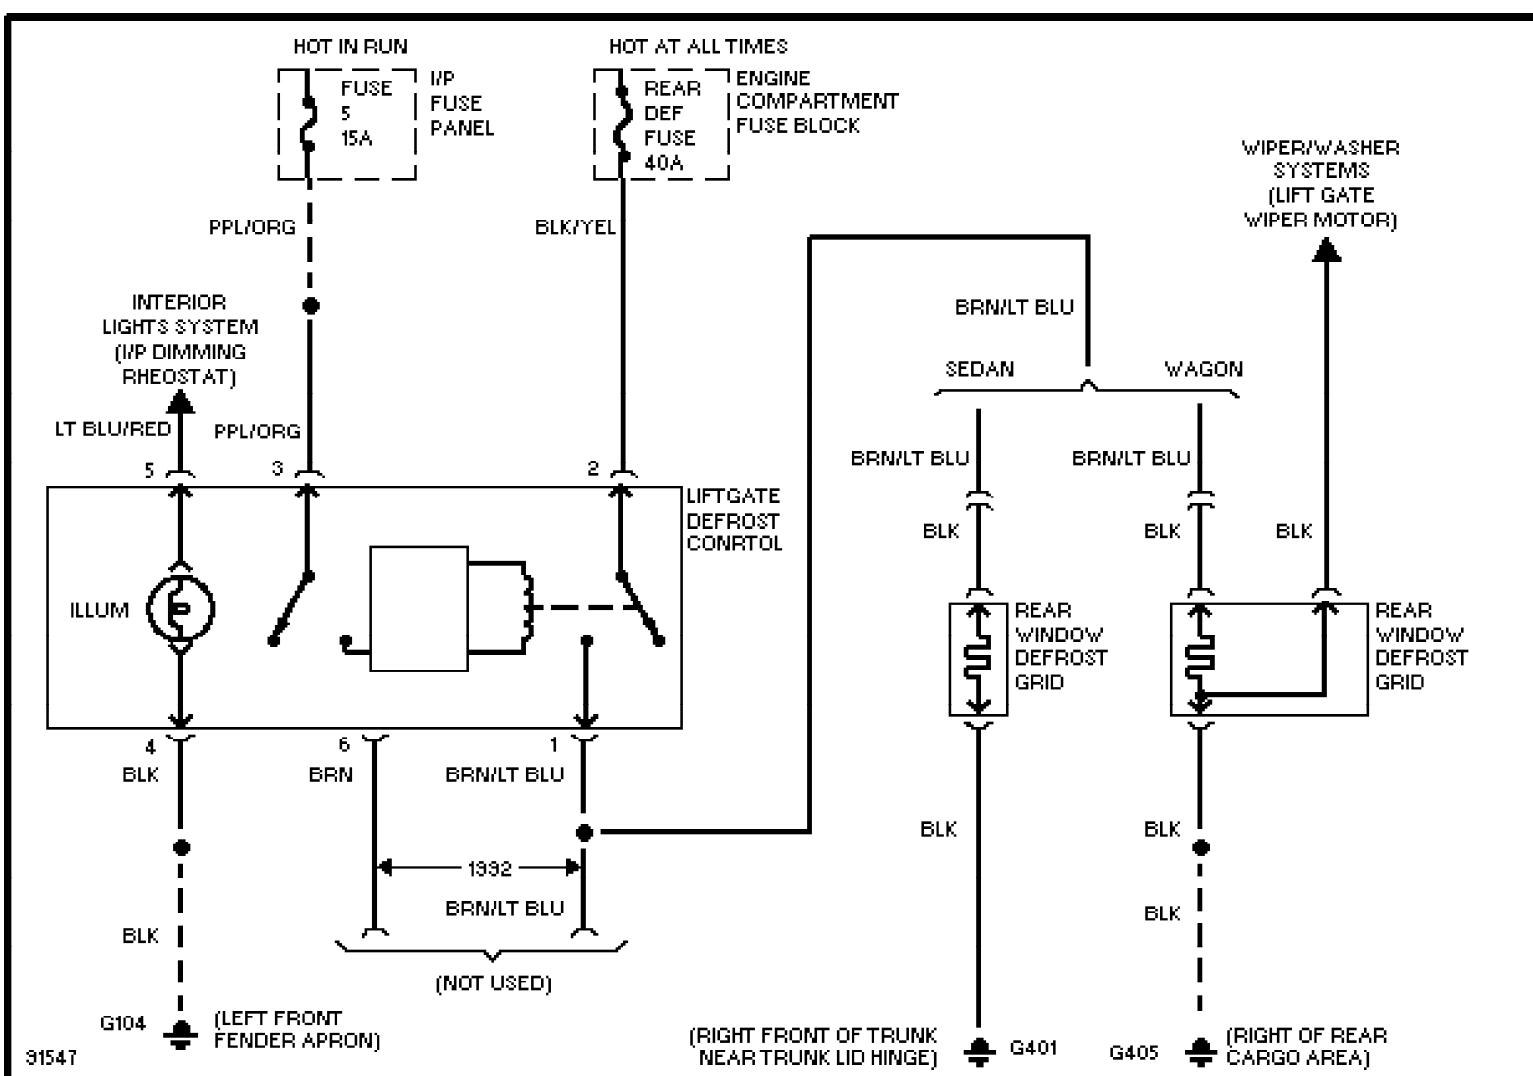

1993 System Wiring Diagrams
Ford - Taurus

PAVLIN

Fig. 6: Horn Circuit
1993 Ford Taurus LX

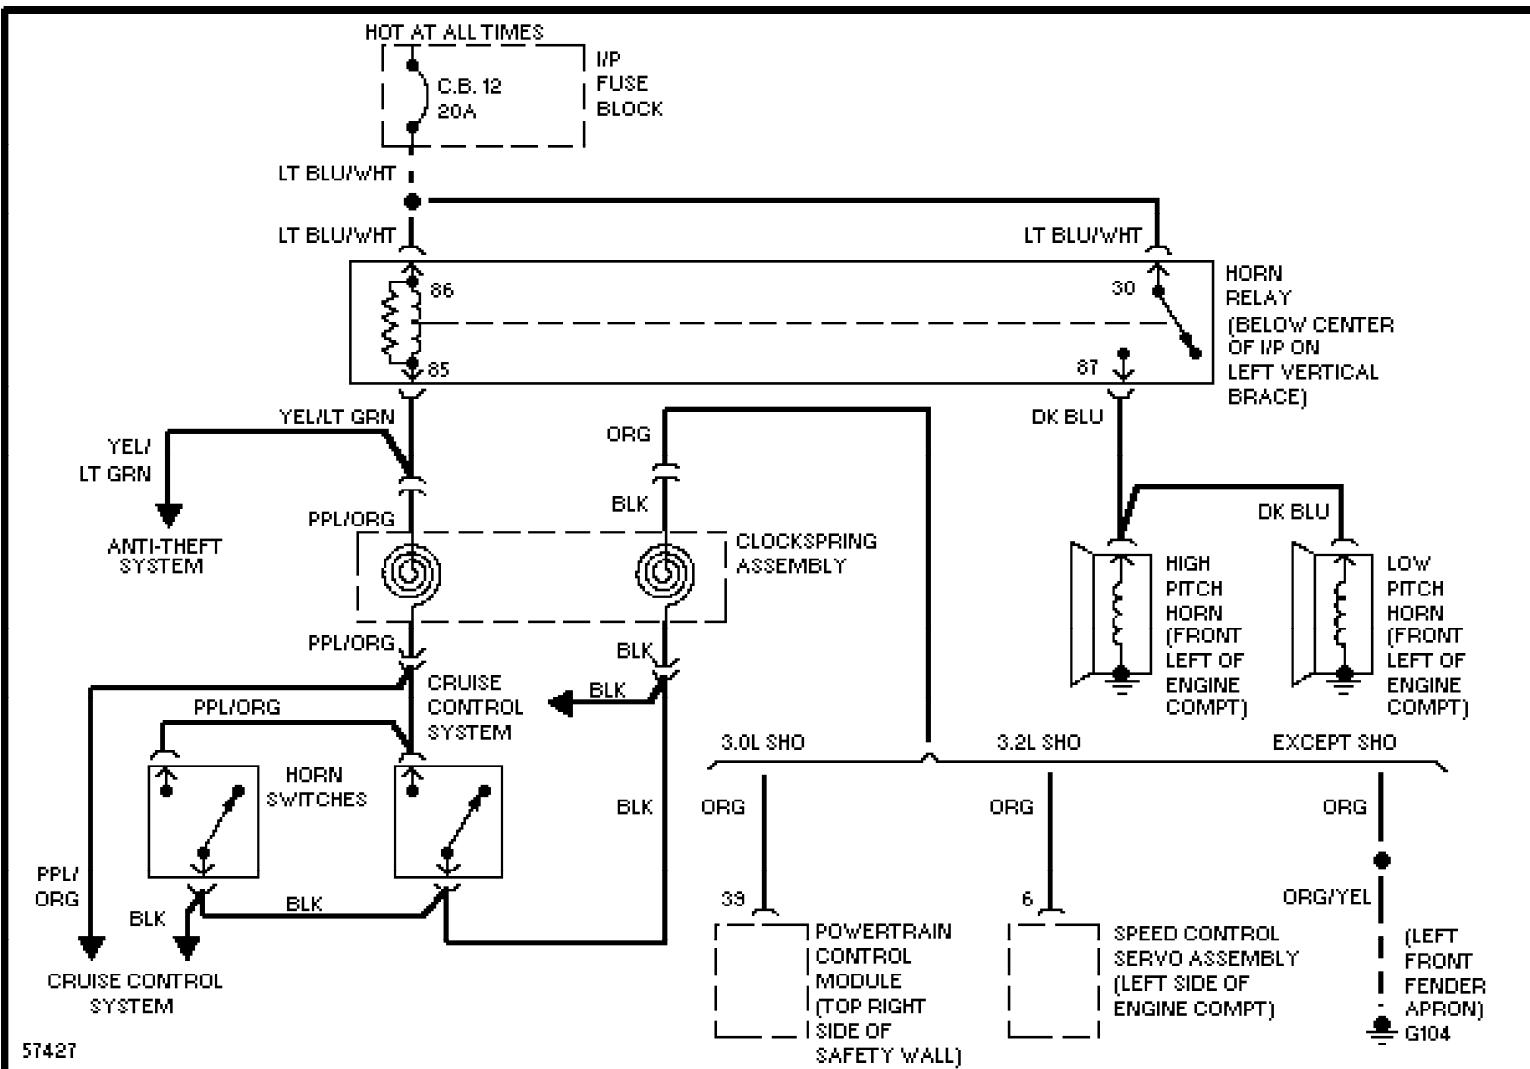


1993 System Wiring Diagrams

Ford - Taurus

PAVLIN

Fig. 7: Courtesy Lamp Circuit, Sedan W/ Remote/Keyless Entry

1993 Ford Taurus LX

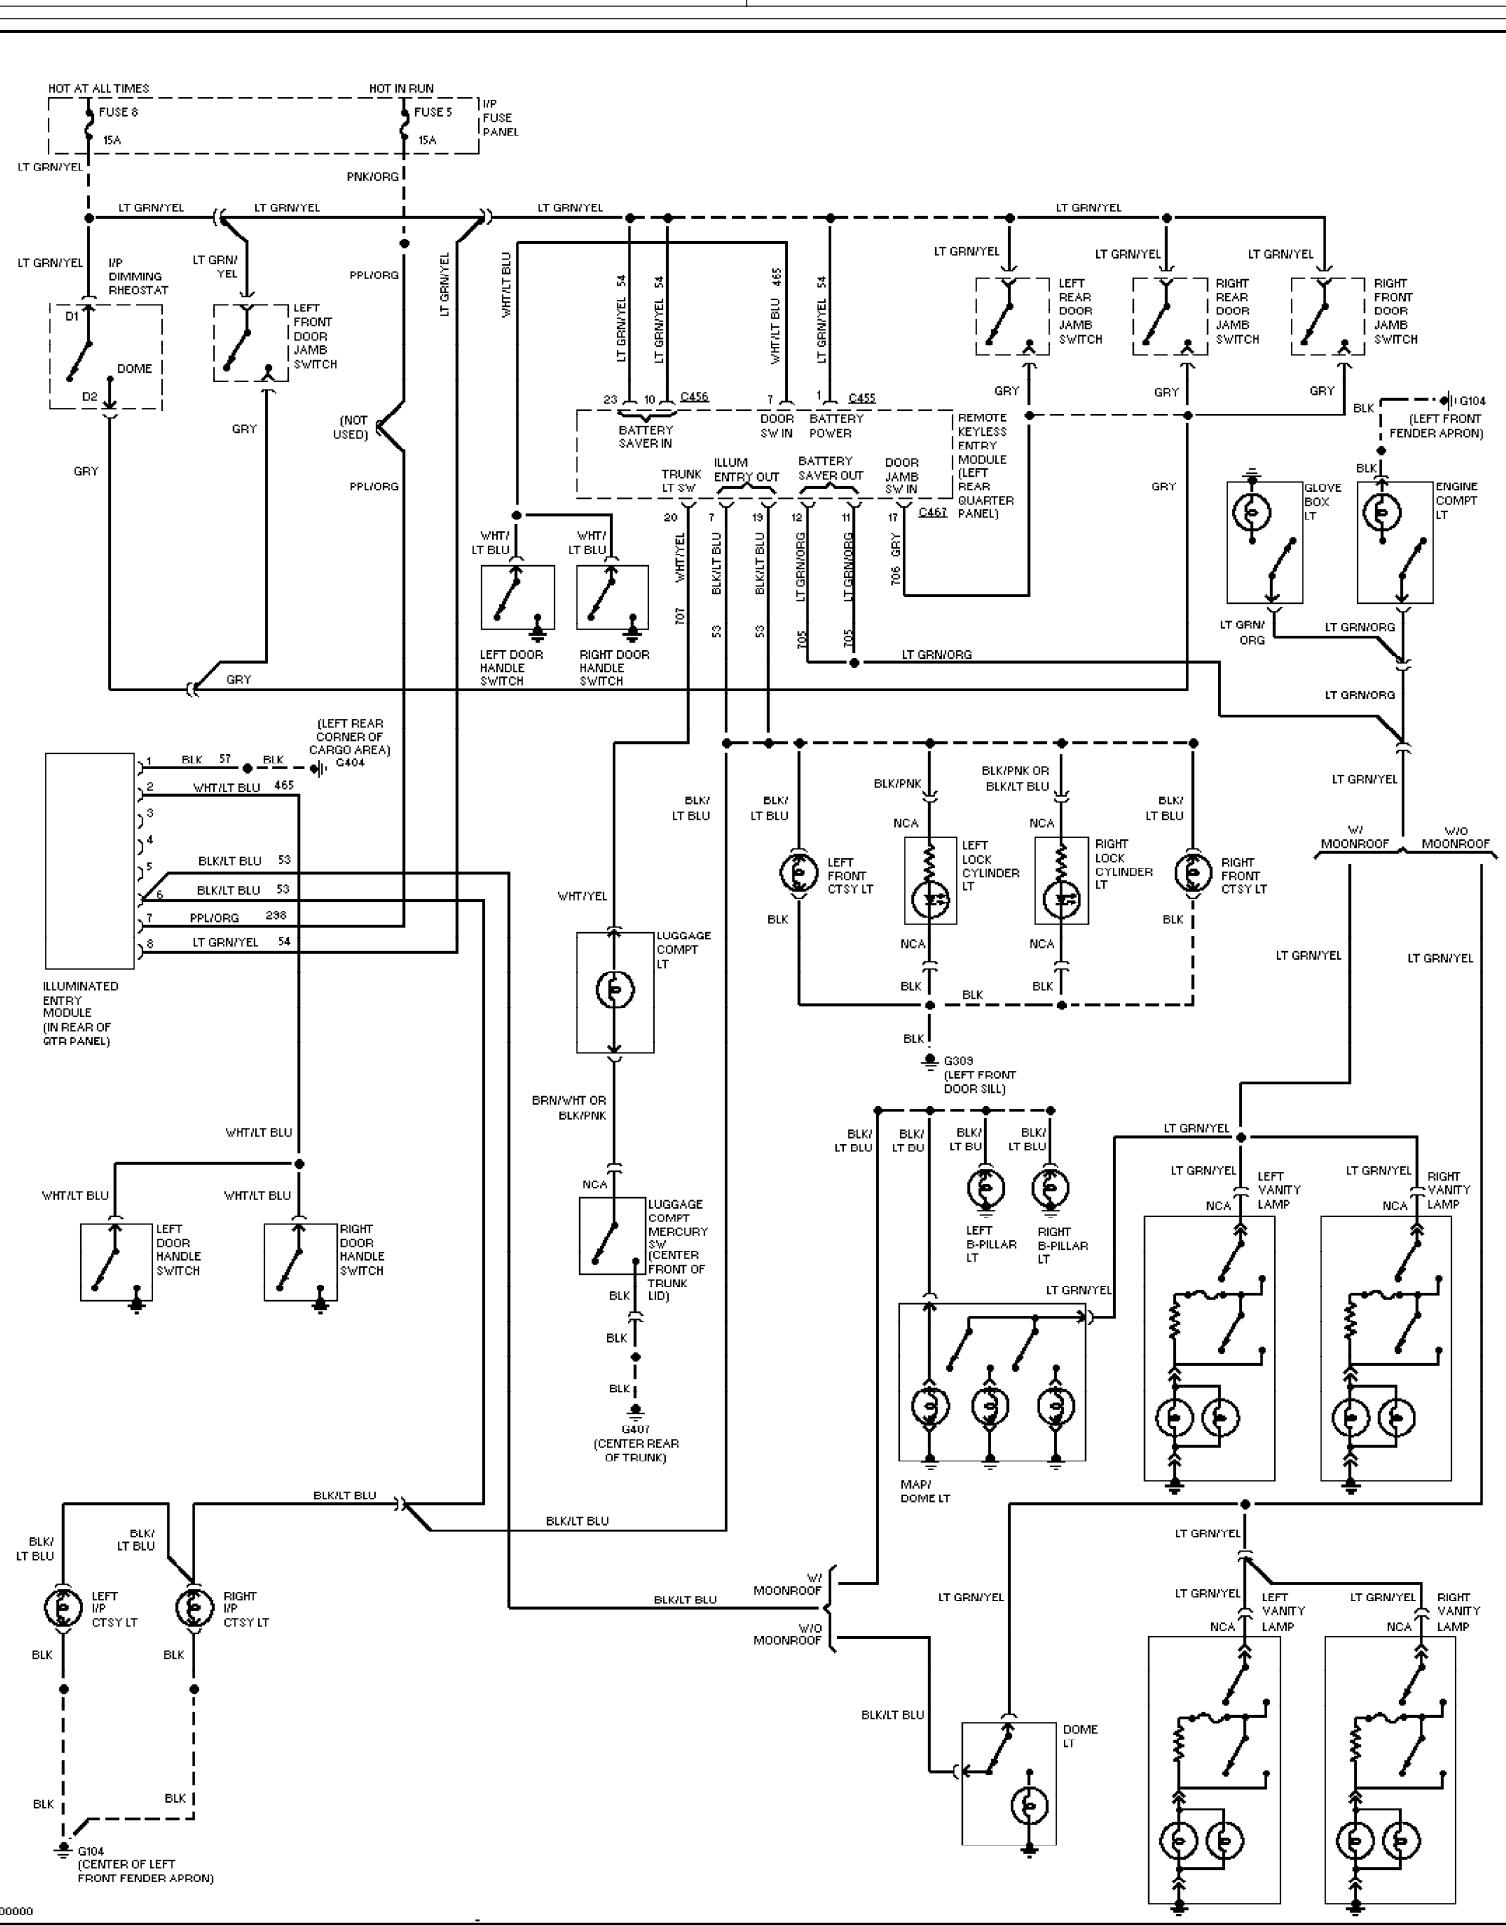


1993 System Wiring Diagrams

Ford - Taurus

PAVLIN

**Fig. 8: Courtesy Lamp Circuit, Sedan W/O Remote/Keyless Entry
1993 Ford Taurus LX**

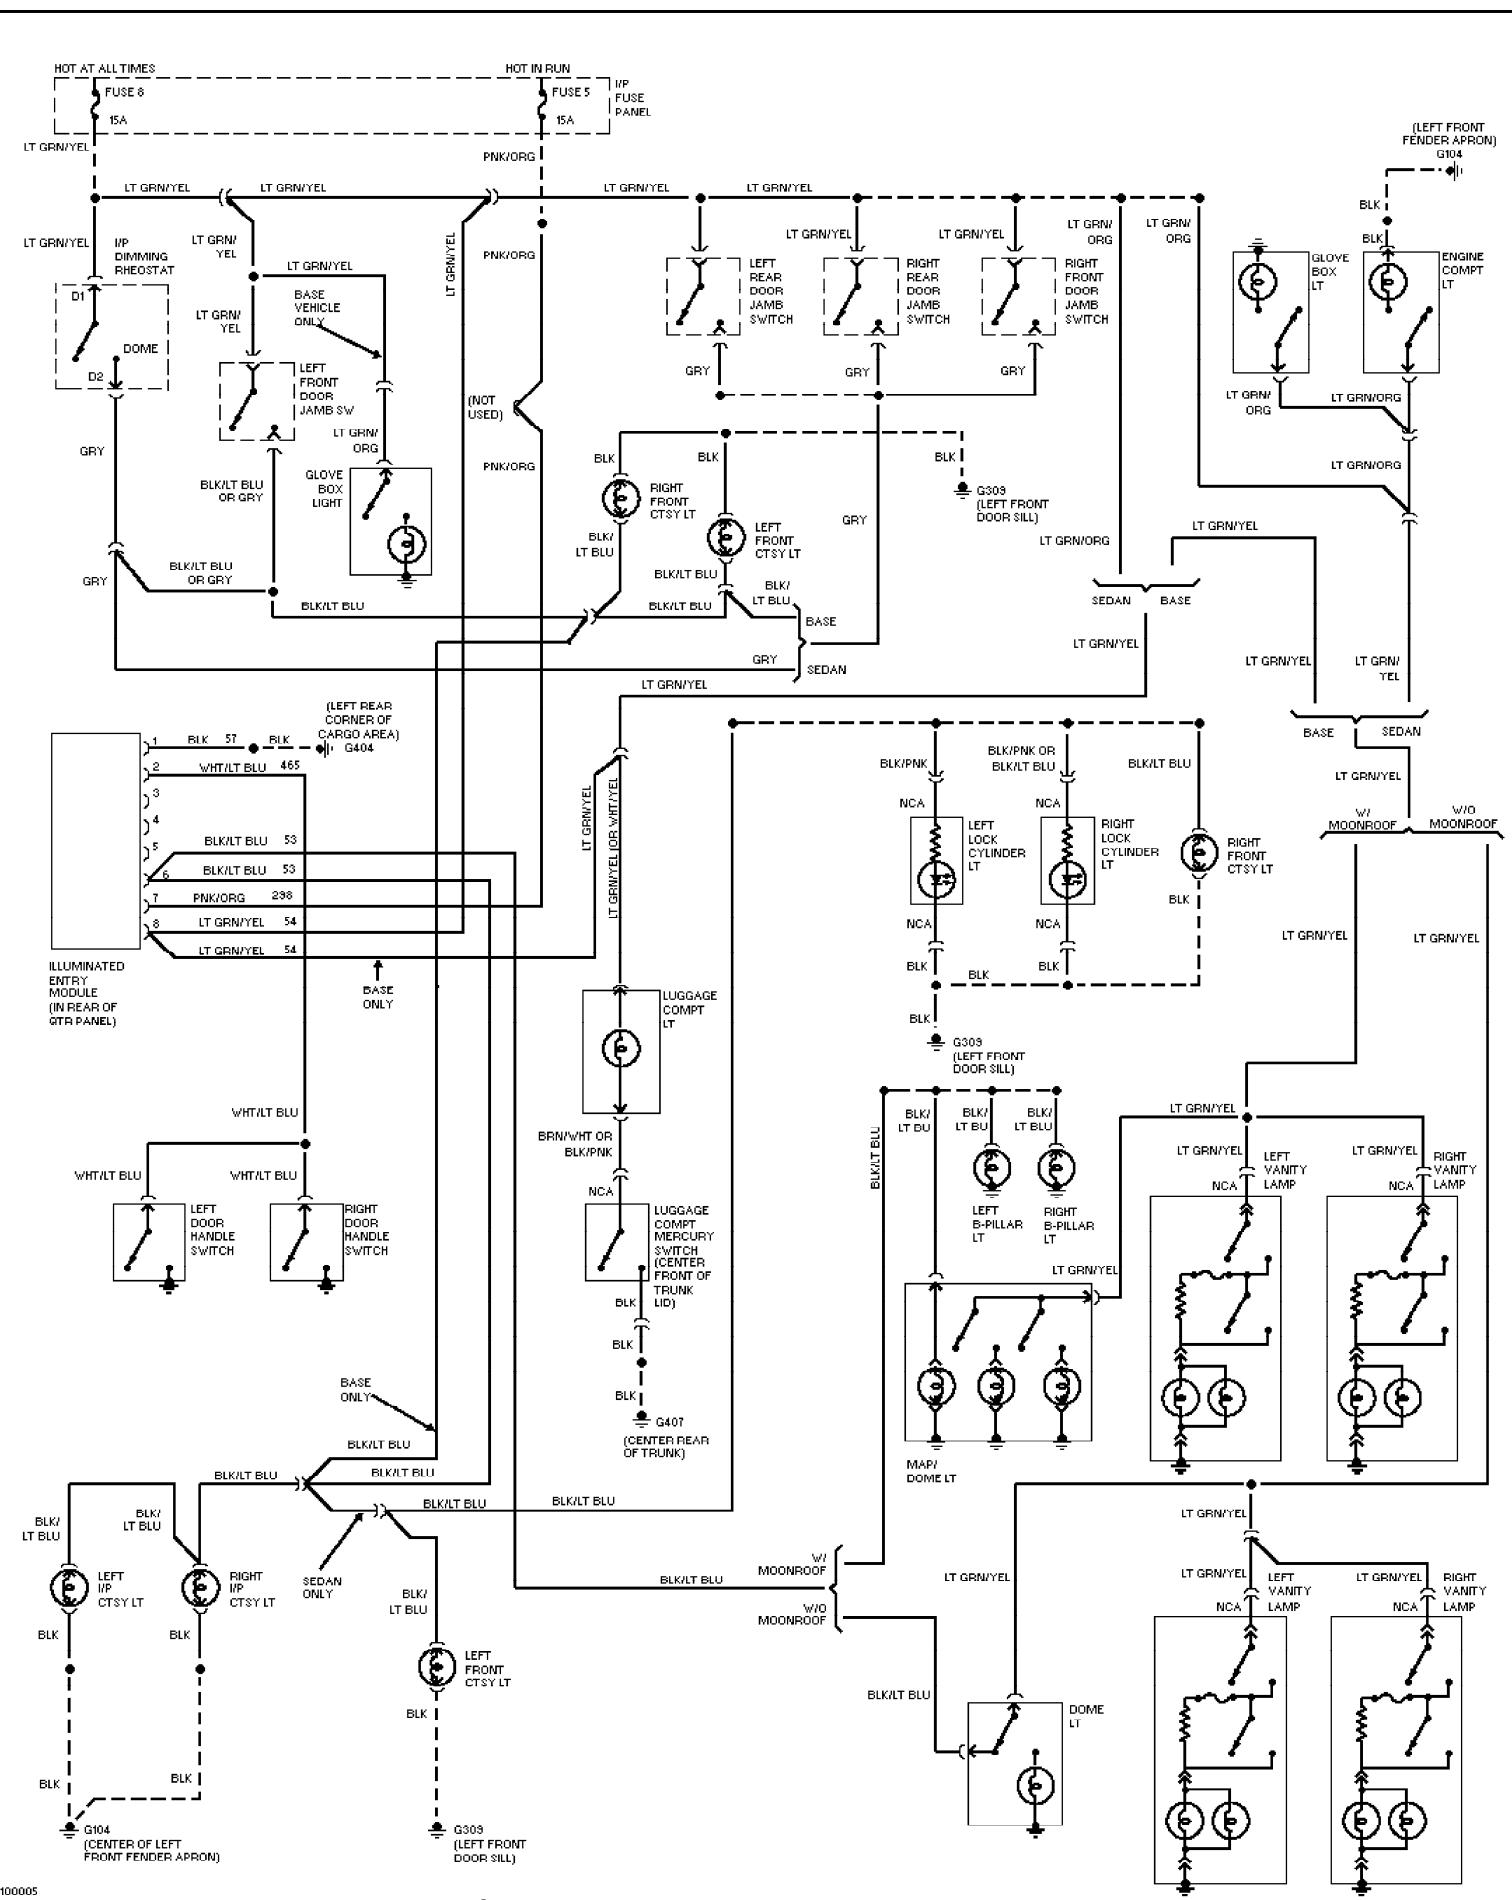


1993 System Wiring Diagrams

Ford - Taurus

PAVLIN

**Fig. 9: Courtesy Lamp Circuit, Wagon
1993 Ford Taurus LX**

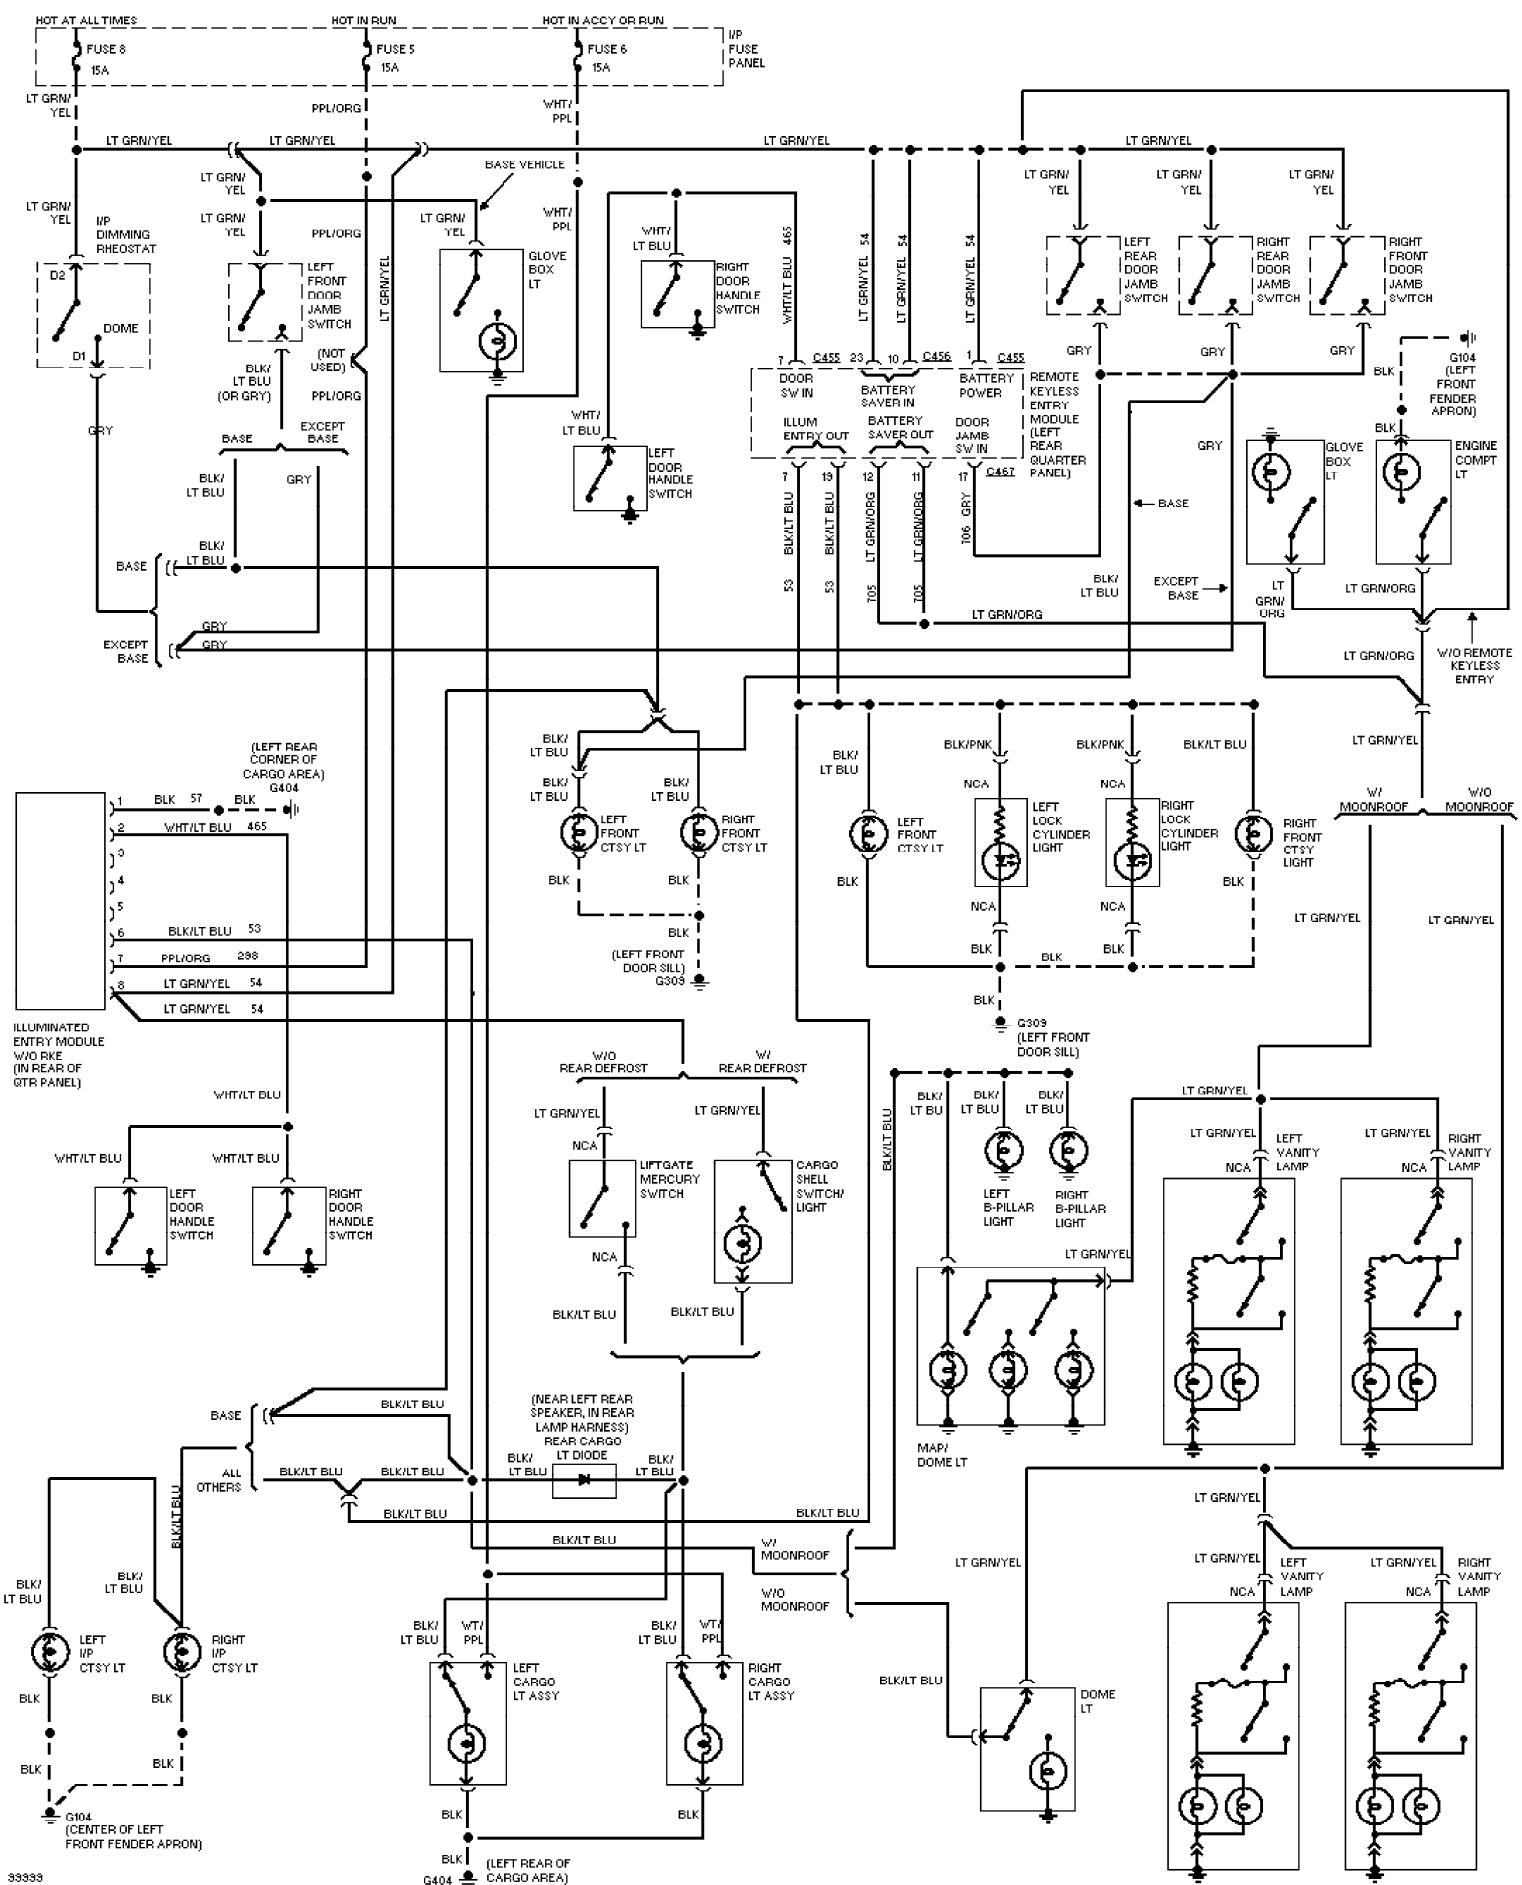


1993 System Wiring Diagrams

Ford - Taurus

PAVLIN


Fig. 10: Instrument Illumination Circuit
1993 Ford Taurus LX

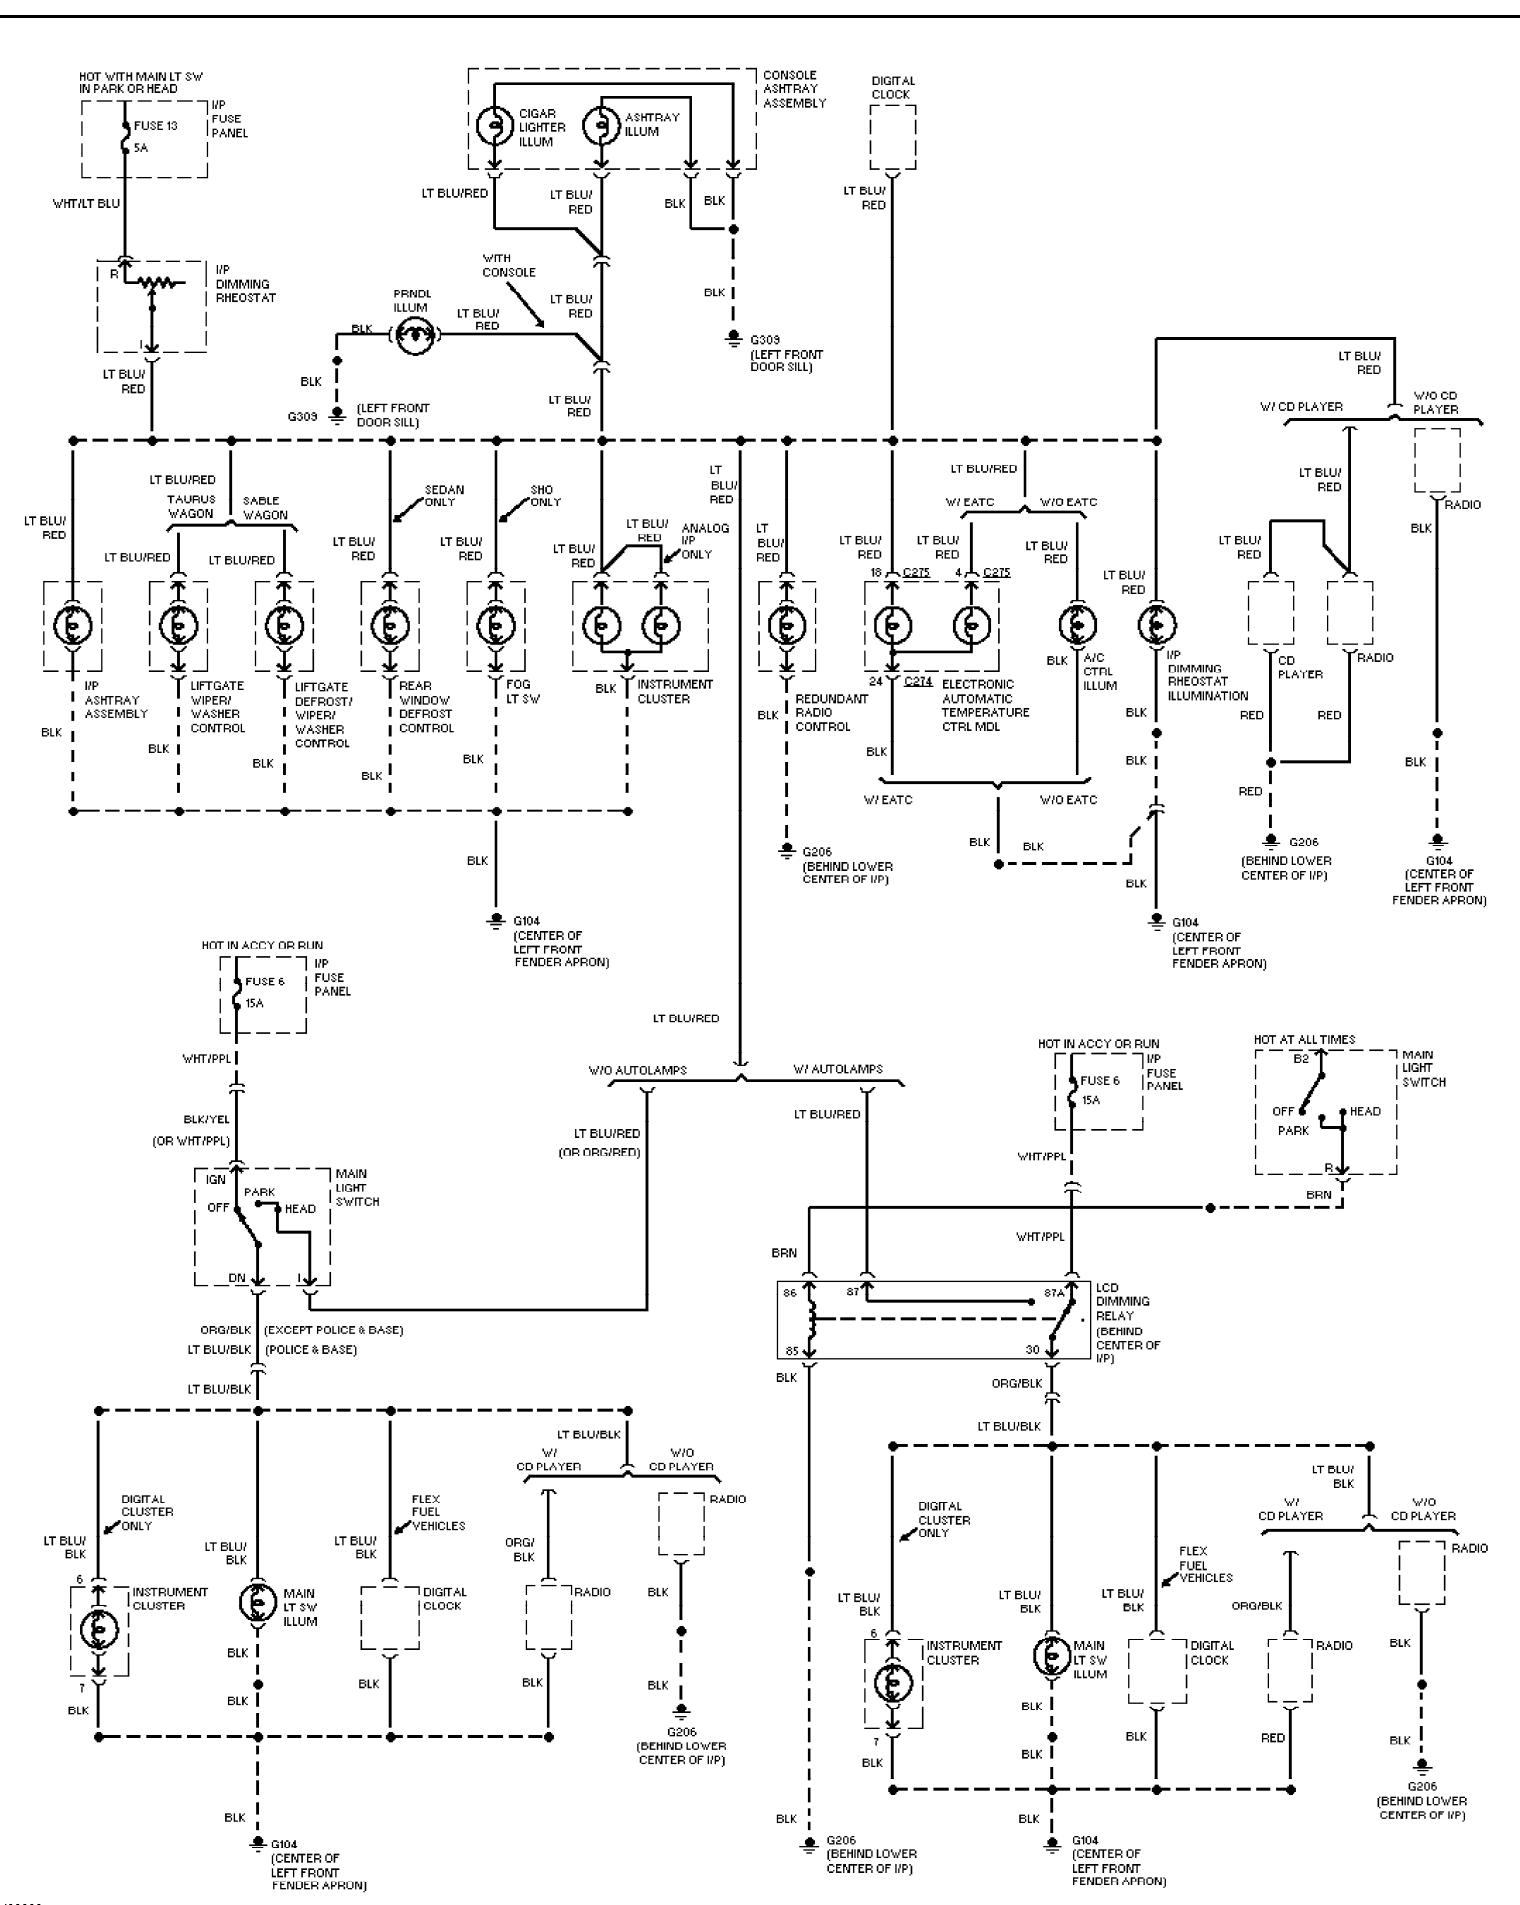

1993 System Wiring Diagrams
Ford - Taurus

PAVLIN


Fig. 11: Power Antenna Circuit
1993 Ford Taurus LX

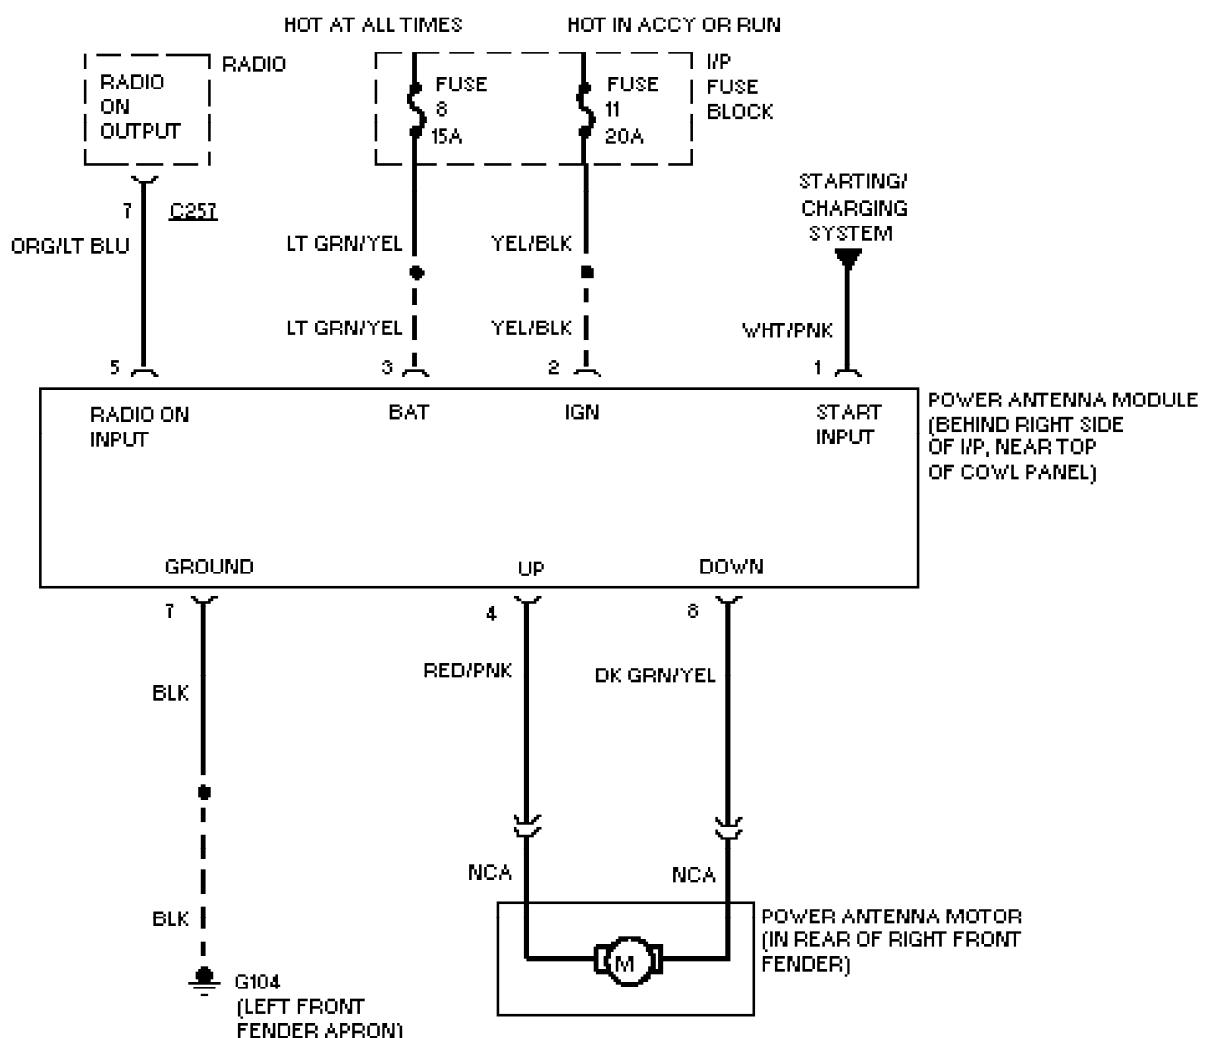

1993 System Wiring Diagrams
Ford - Taurus

PAVLIN


Fig. 12: Door Lock Circuit, W/ Power Windows
1993 Ford Taurus LX

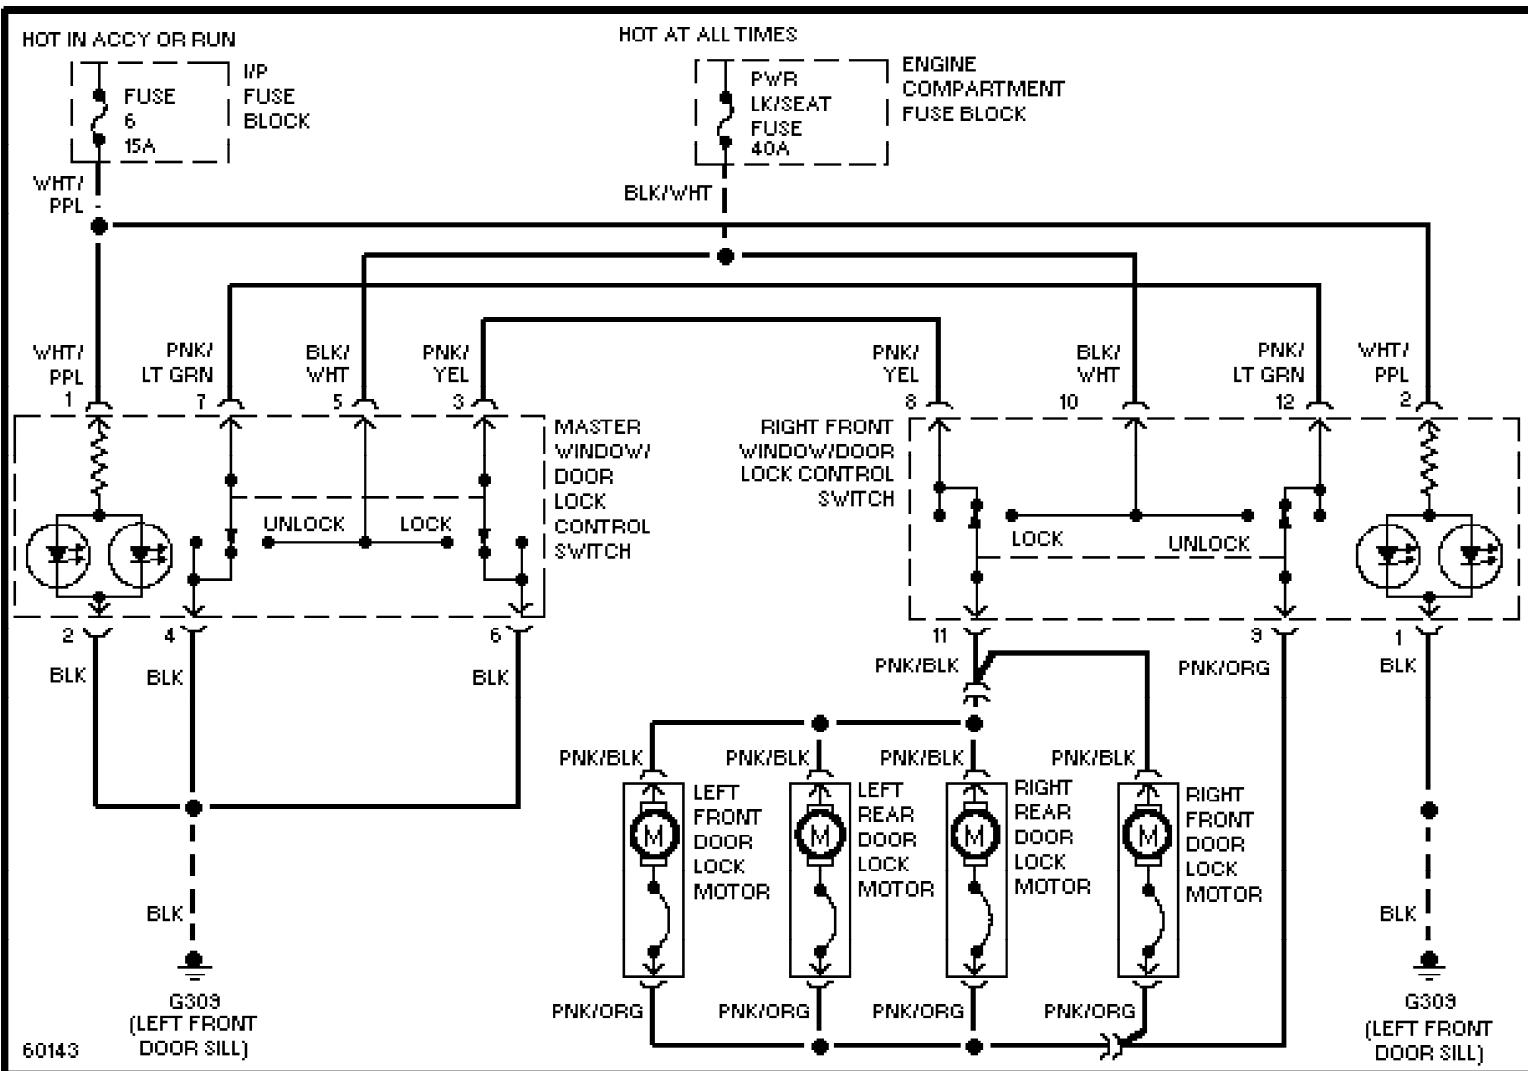

1993 System Wiring Diagrams
Ford - Taurus

PAVLIN

Fig. 13: Door Lock Circuit, W/O Power Windows
1993 Ford Taurus LX

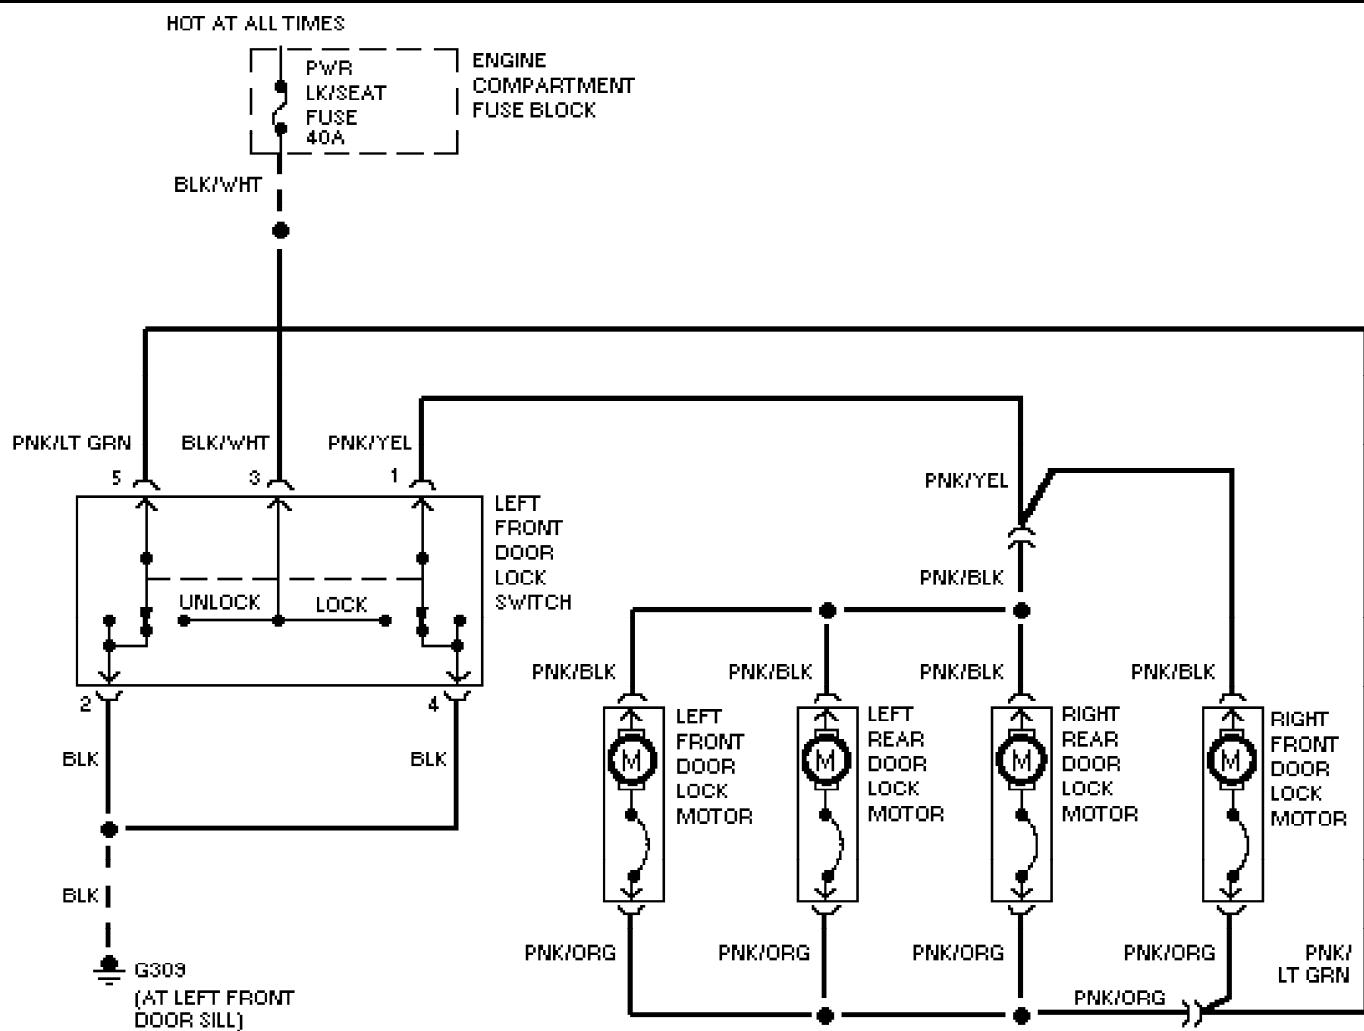


1993 System Wiring Diagrams

Ford - Taurus

PAVLIN


Fig. 14: Keyless Entry Circuit
1993 Ford Taurus LX

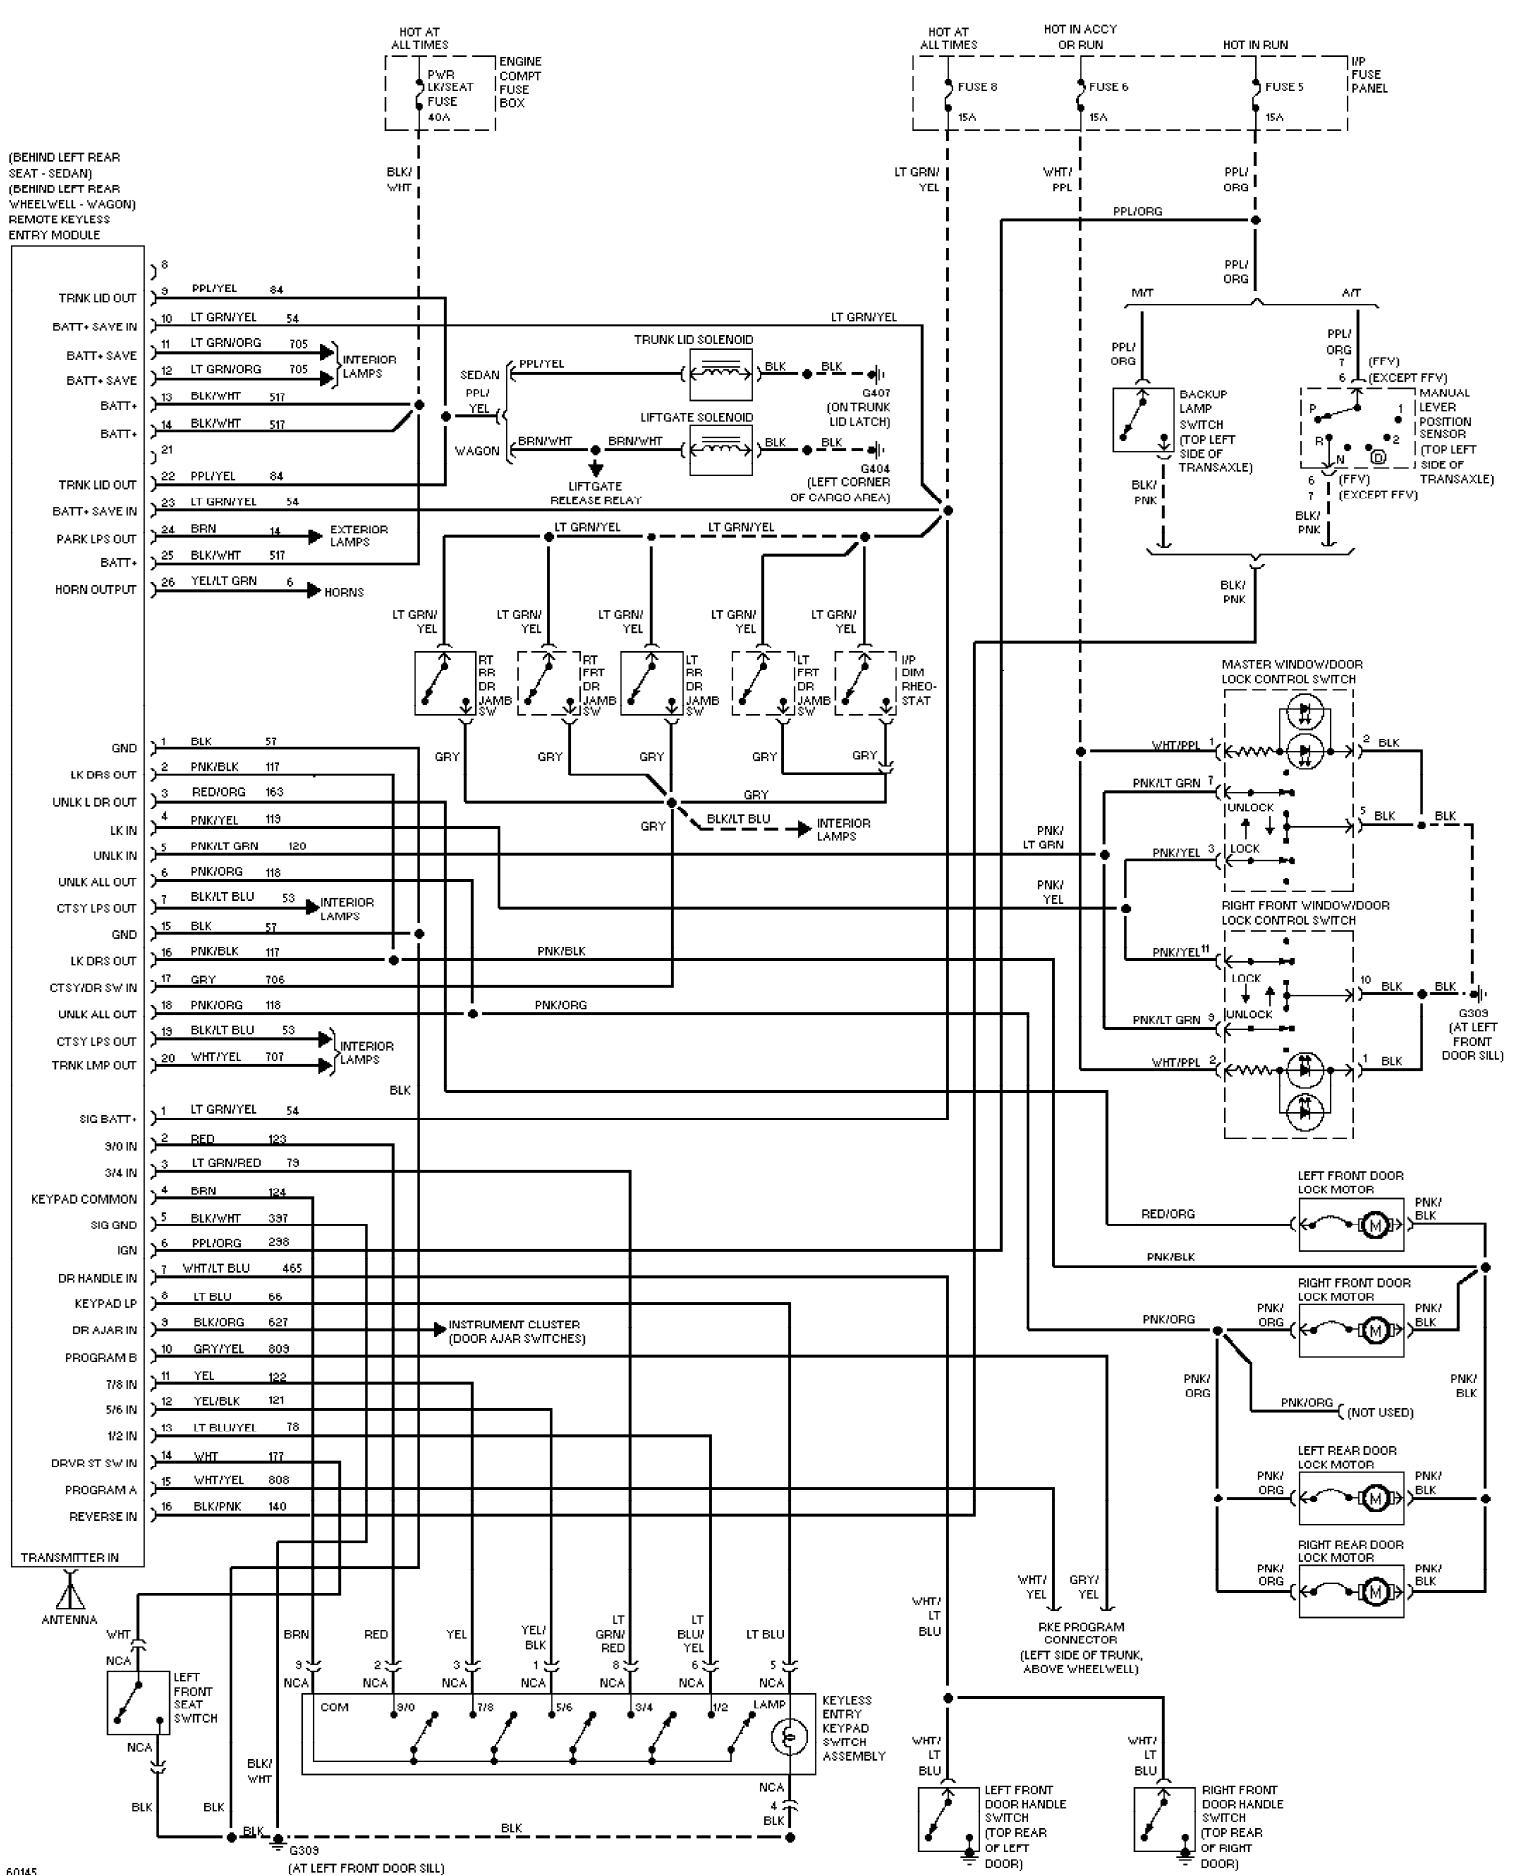

1993 System Wiring Diagrams
Ford - Taurus

PAVLIN


Fig. 15: Power Door Lock Circuit, W/ Power Windows
1993 Ford Taurus LX

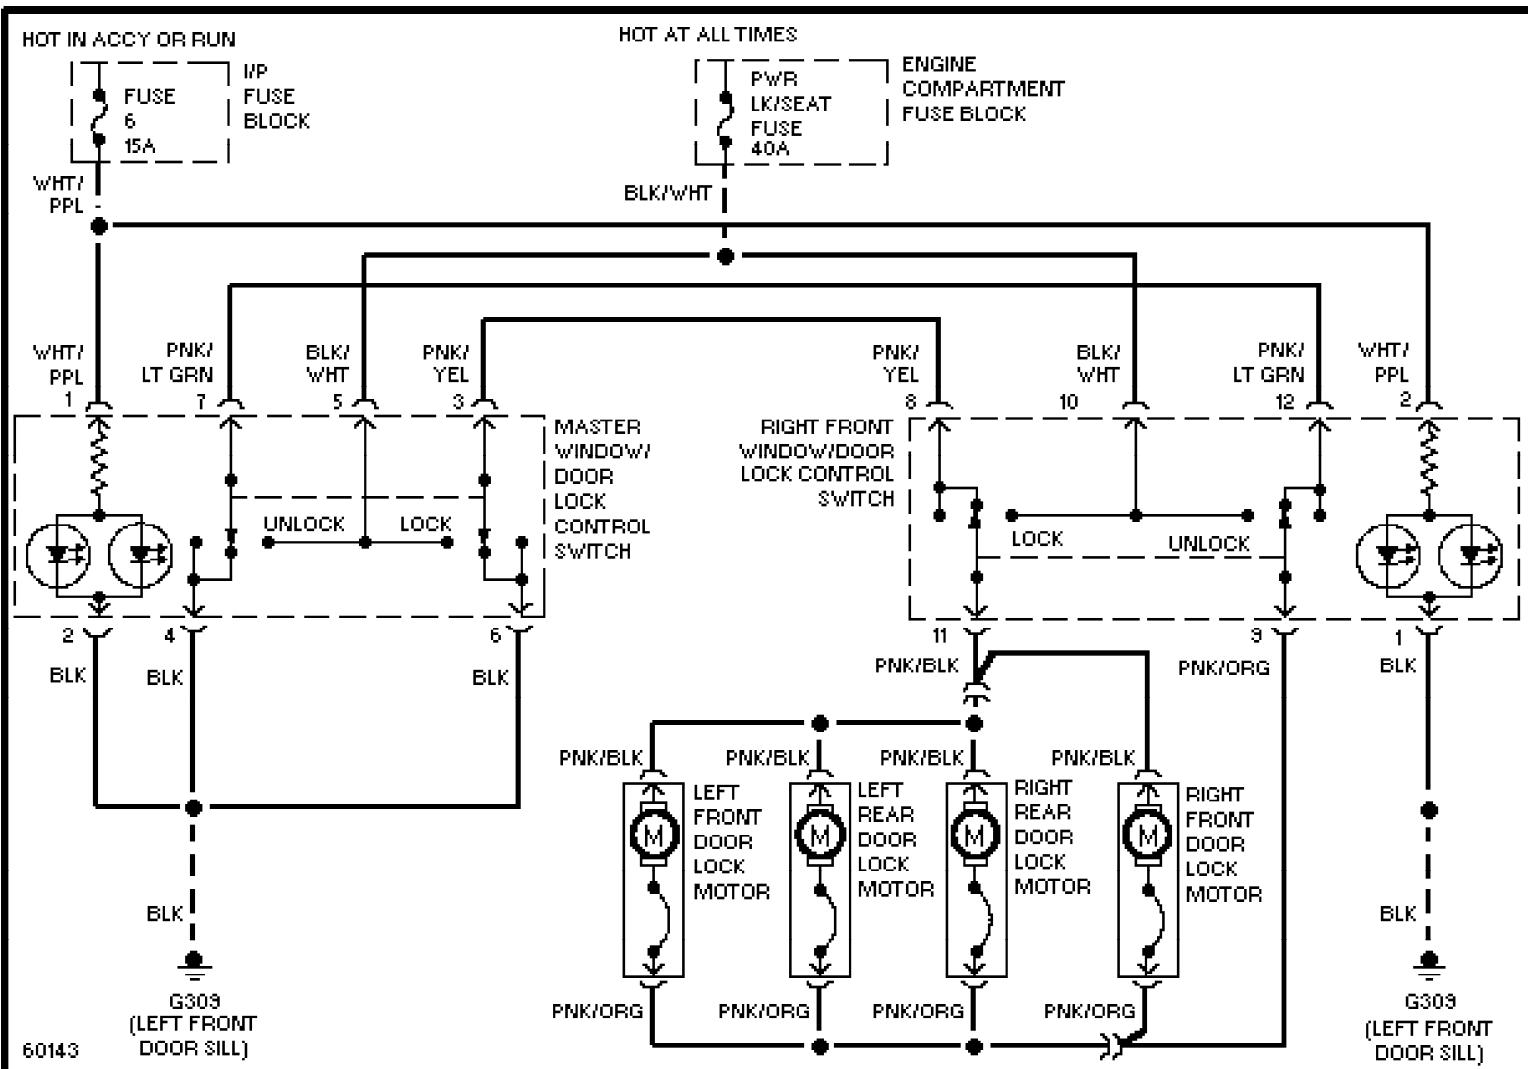

1993 System Wiring Diagrams
Ford - Taurus

PAVLIN


Fig. 16: Power Door Lock Circuit, W/O Power Windows
1993 Ford Taurus LX

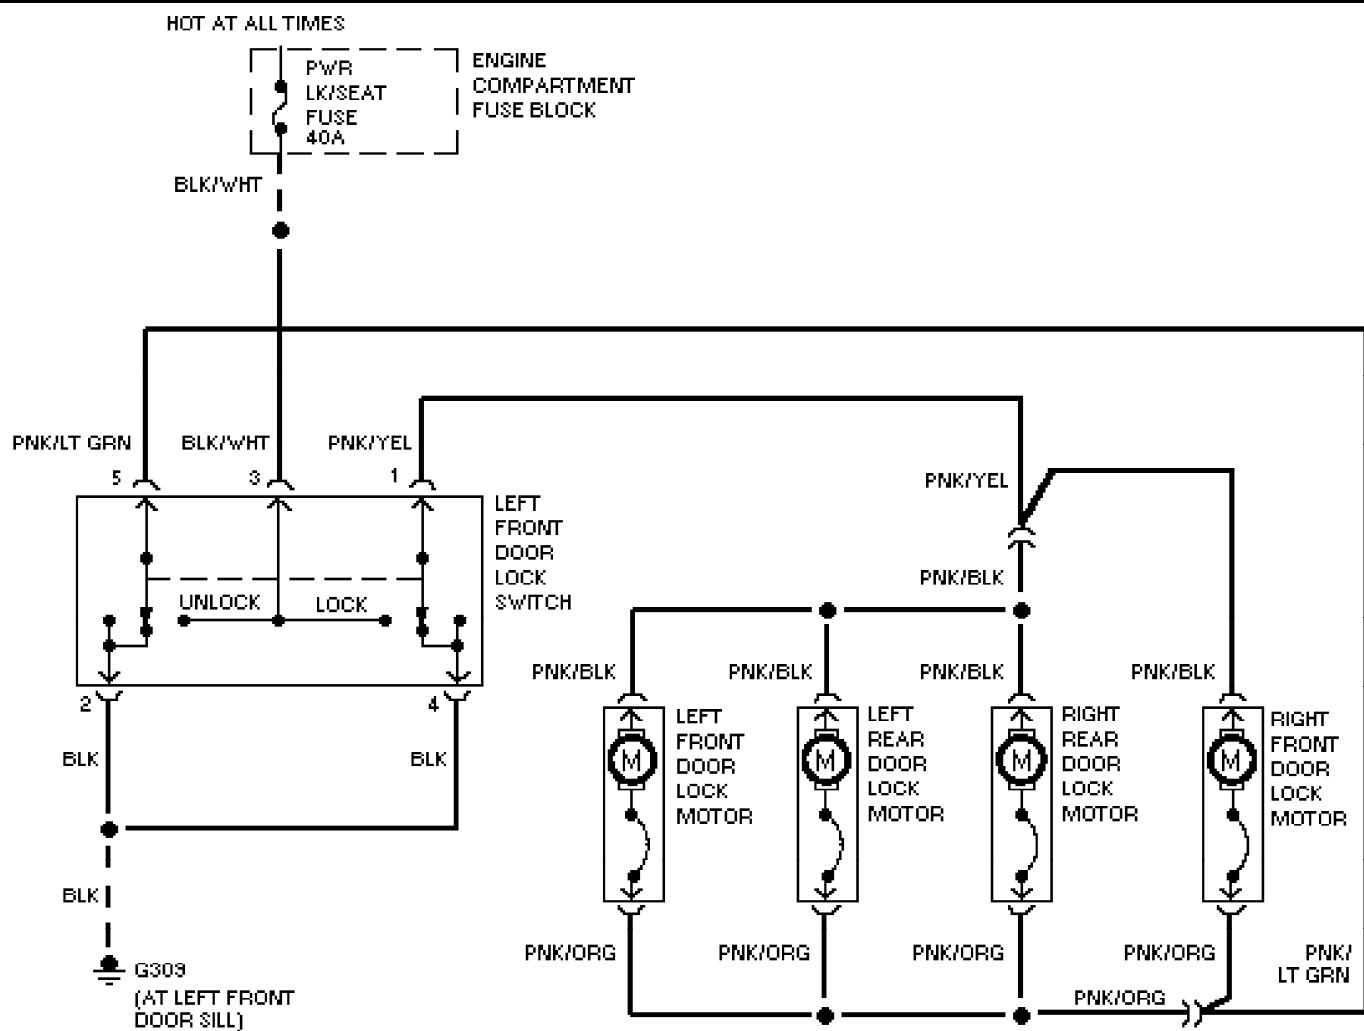

1993 System Wiring Diagrams
Ford - Taurus

PAVLIN


Fig. 17: Power Mirror Circuit
 1993 Ford Taurus LX

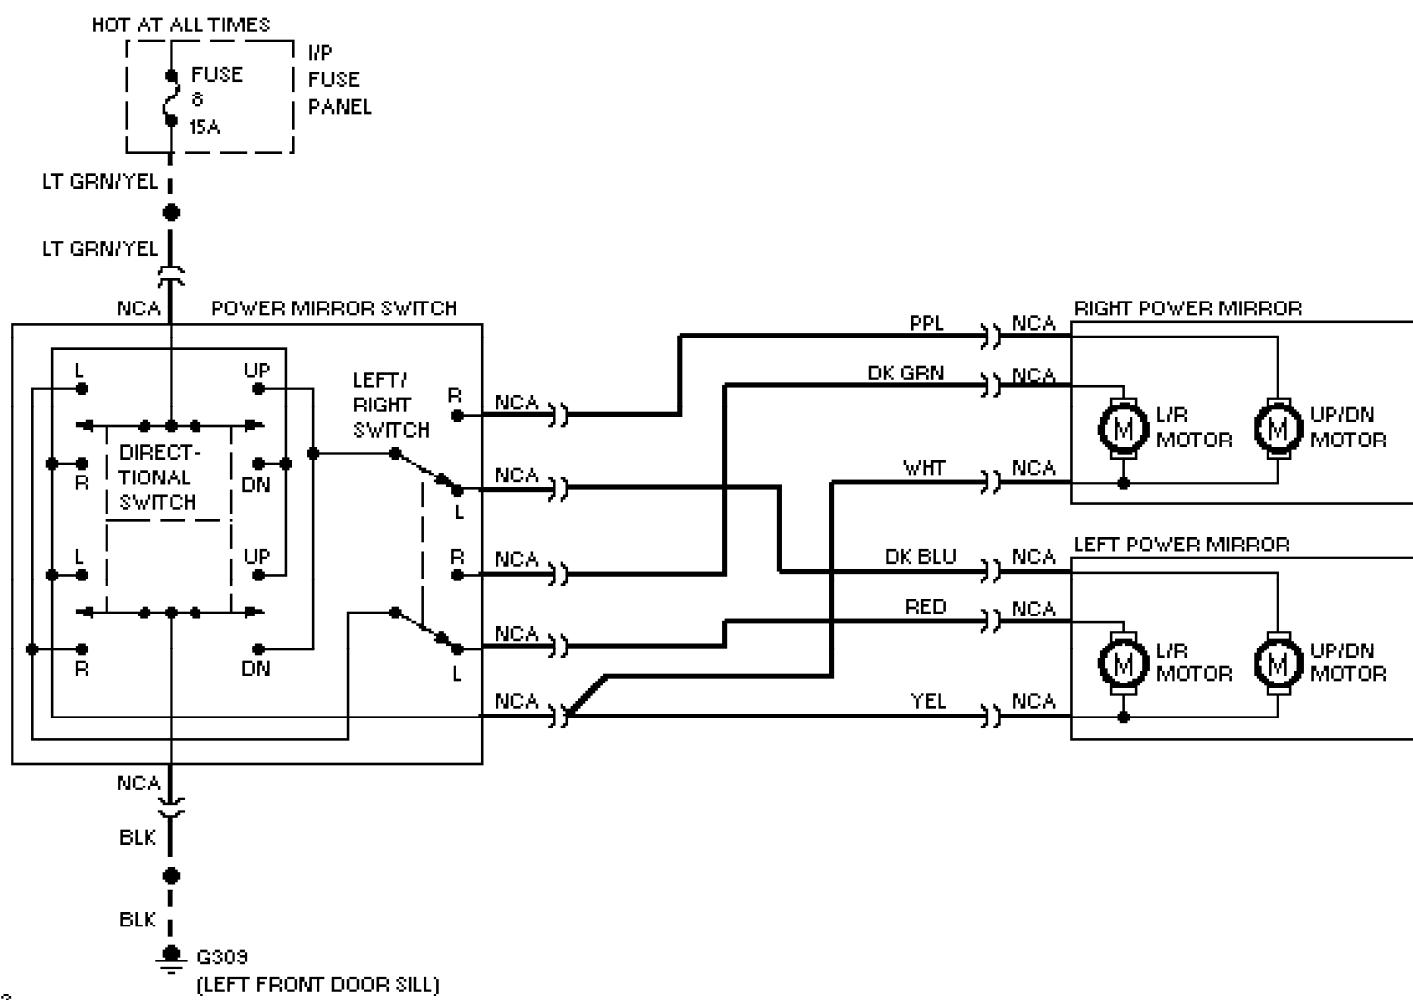

1993 System Wiring Diagrams
Ford - Taurus

PAVLIN



Fig. 18: Lumbar Circuit
1993 Ford Taurus LX

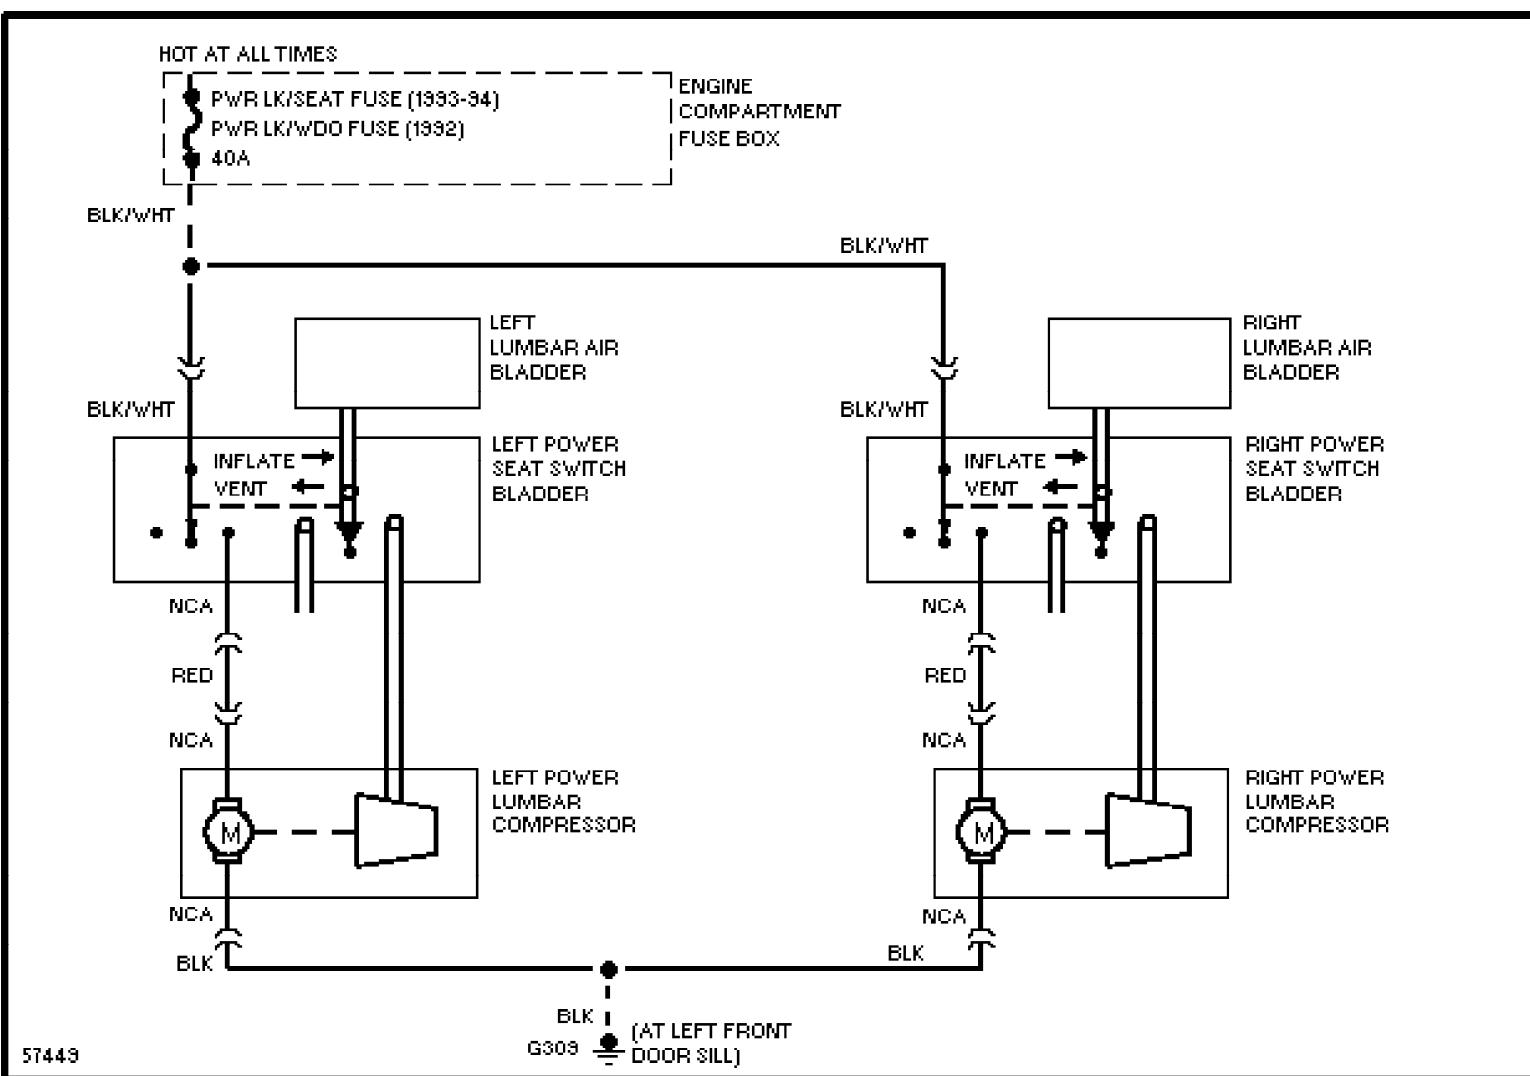

1993 System Wiring Diagrams
Ford - Taurus

PAVLIN

Fig. 19: Power Seat Circuit
1993 Ford Taurus LX

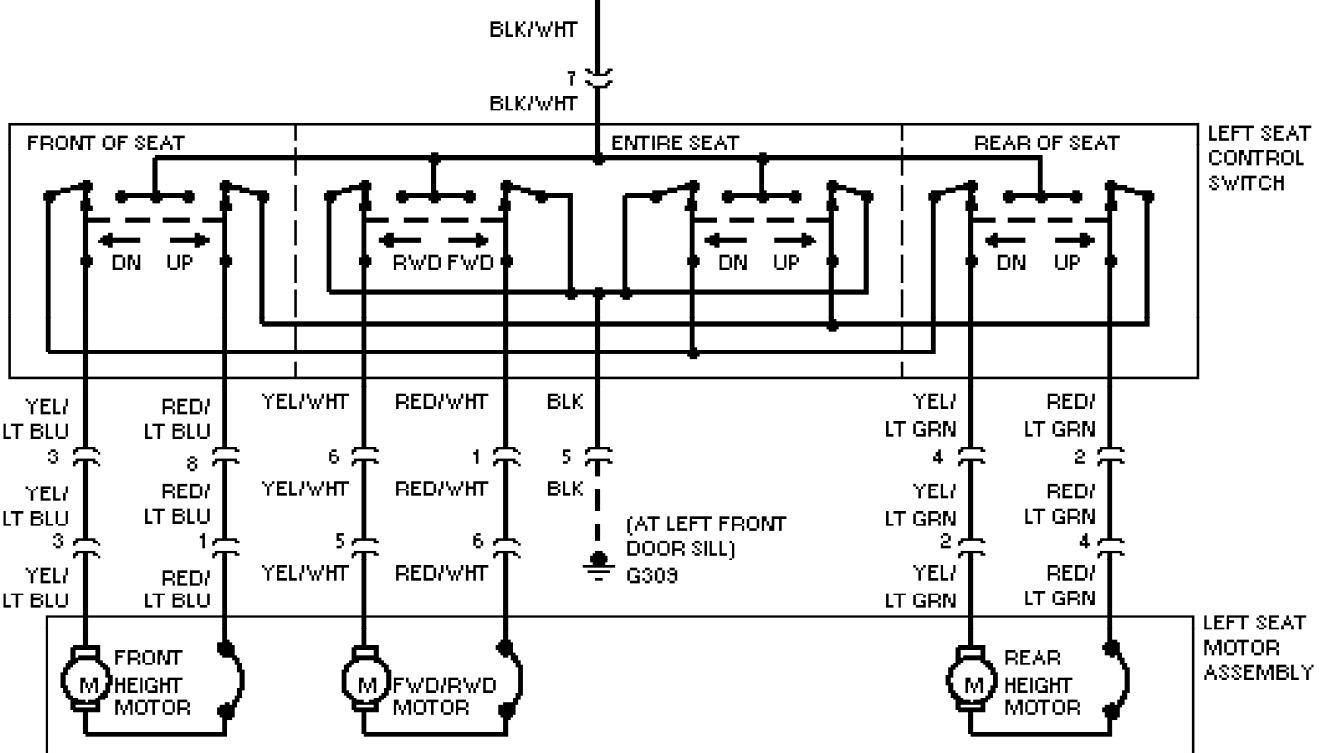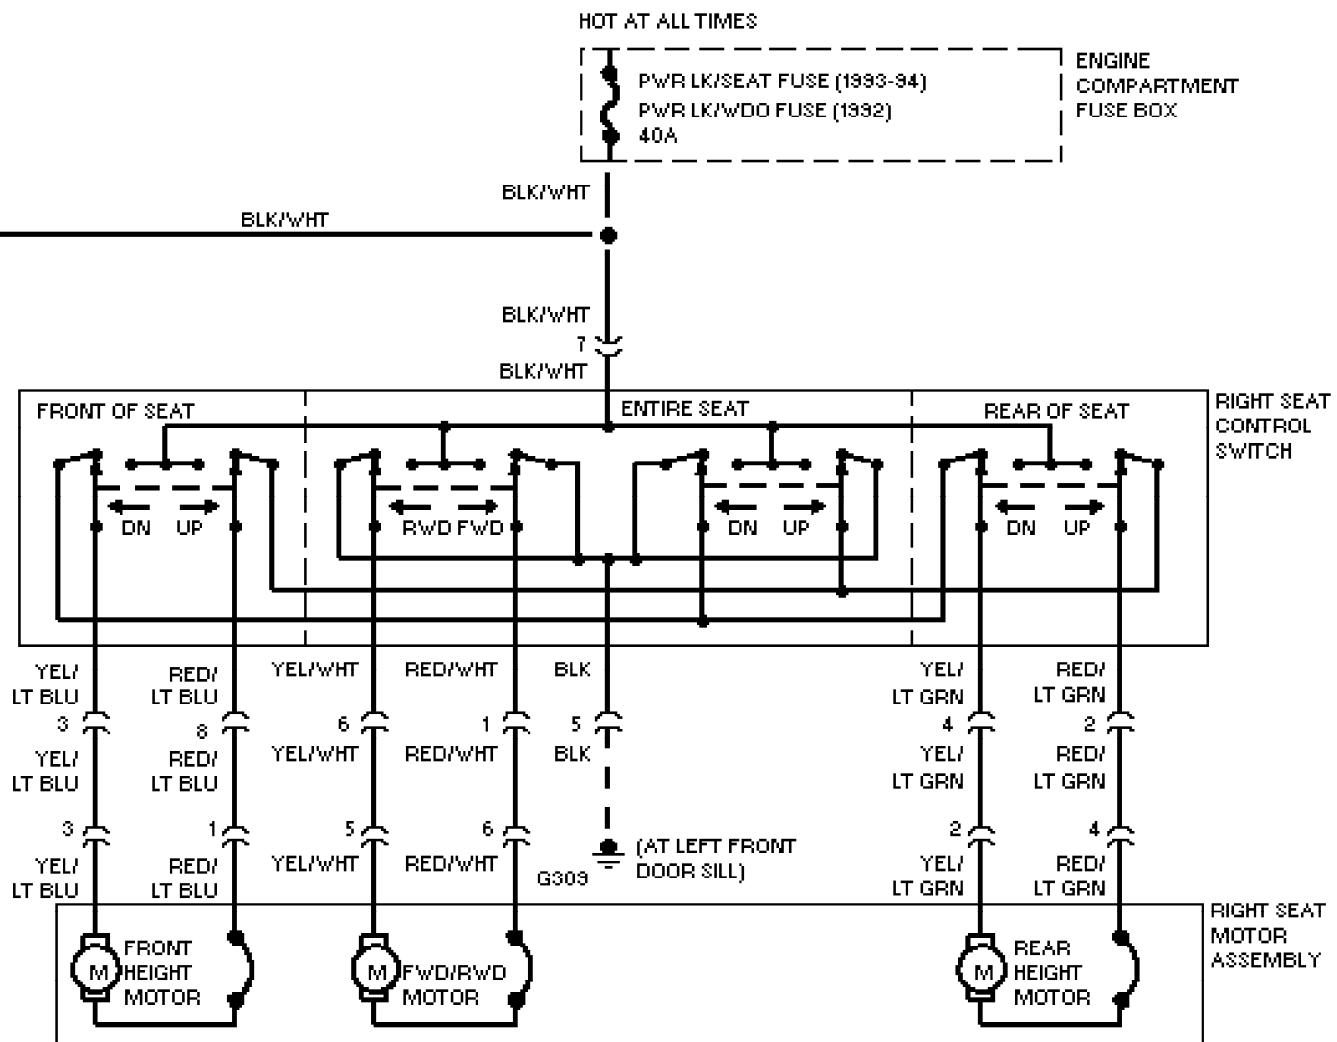


1993 System Wiring Diagrams

Ford - Taurus

PAVLIN


Fig. 20: Power Window Circuit
1993 Ford Taurus LX

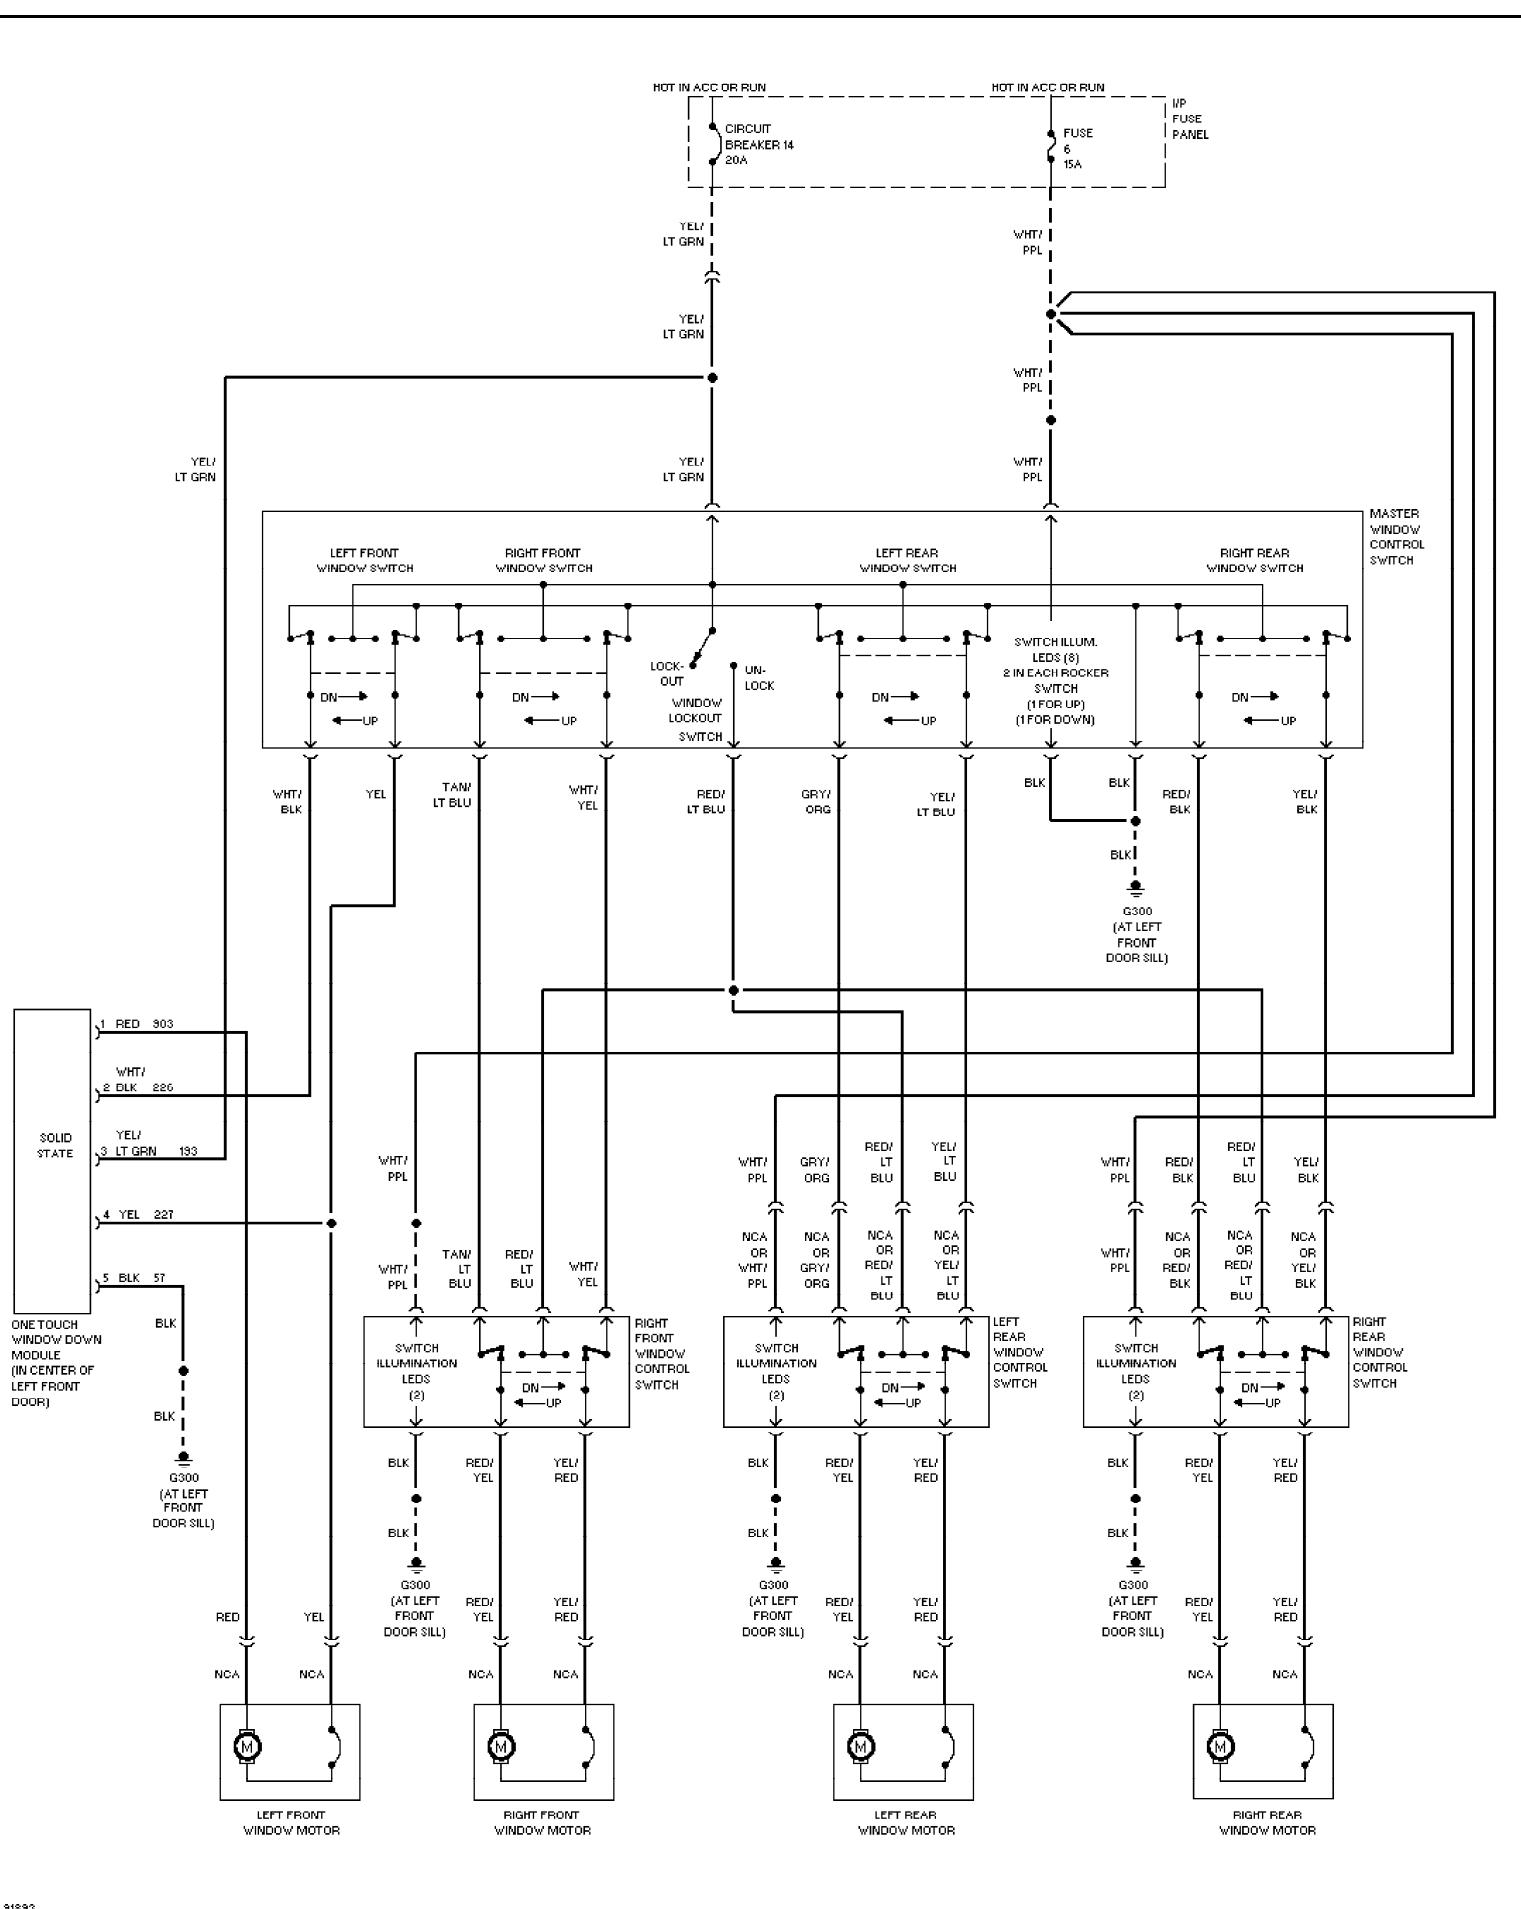

1993 System Wiring Diagrams
Ford - Taurus

PAVLIN

Fig. 21: Radio Circuits, Base Radio W/ Cassette Deck
1993 Ford Taurus LX

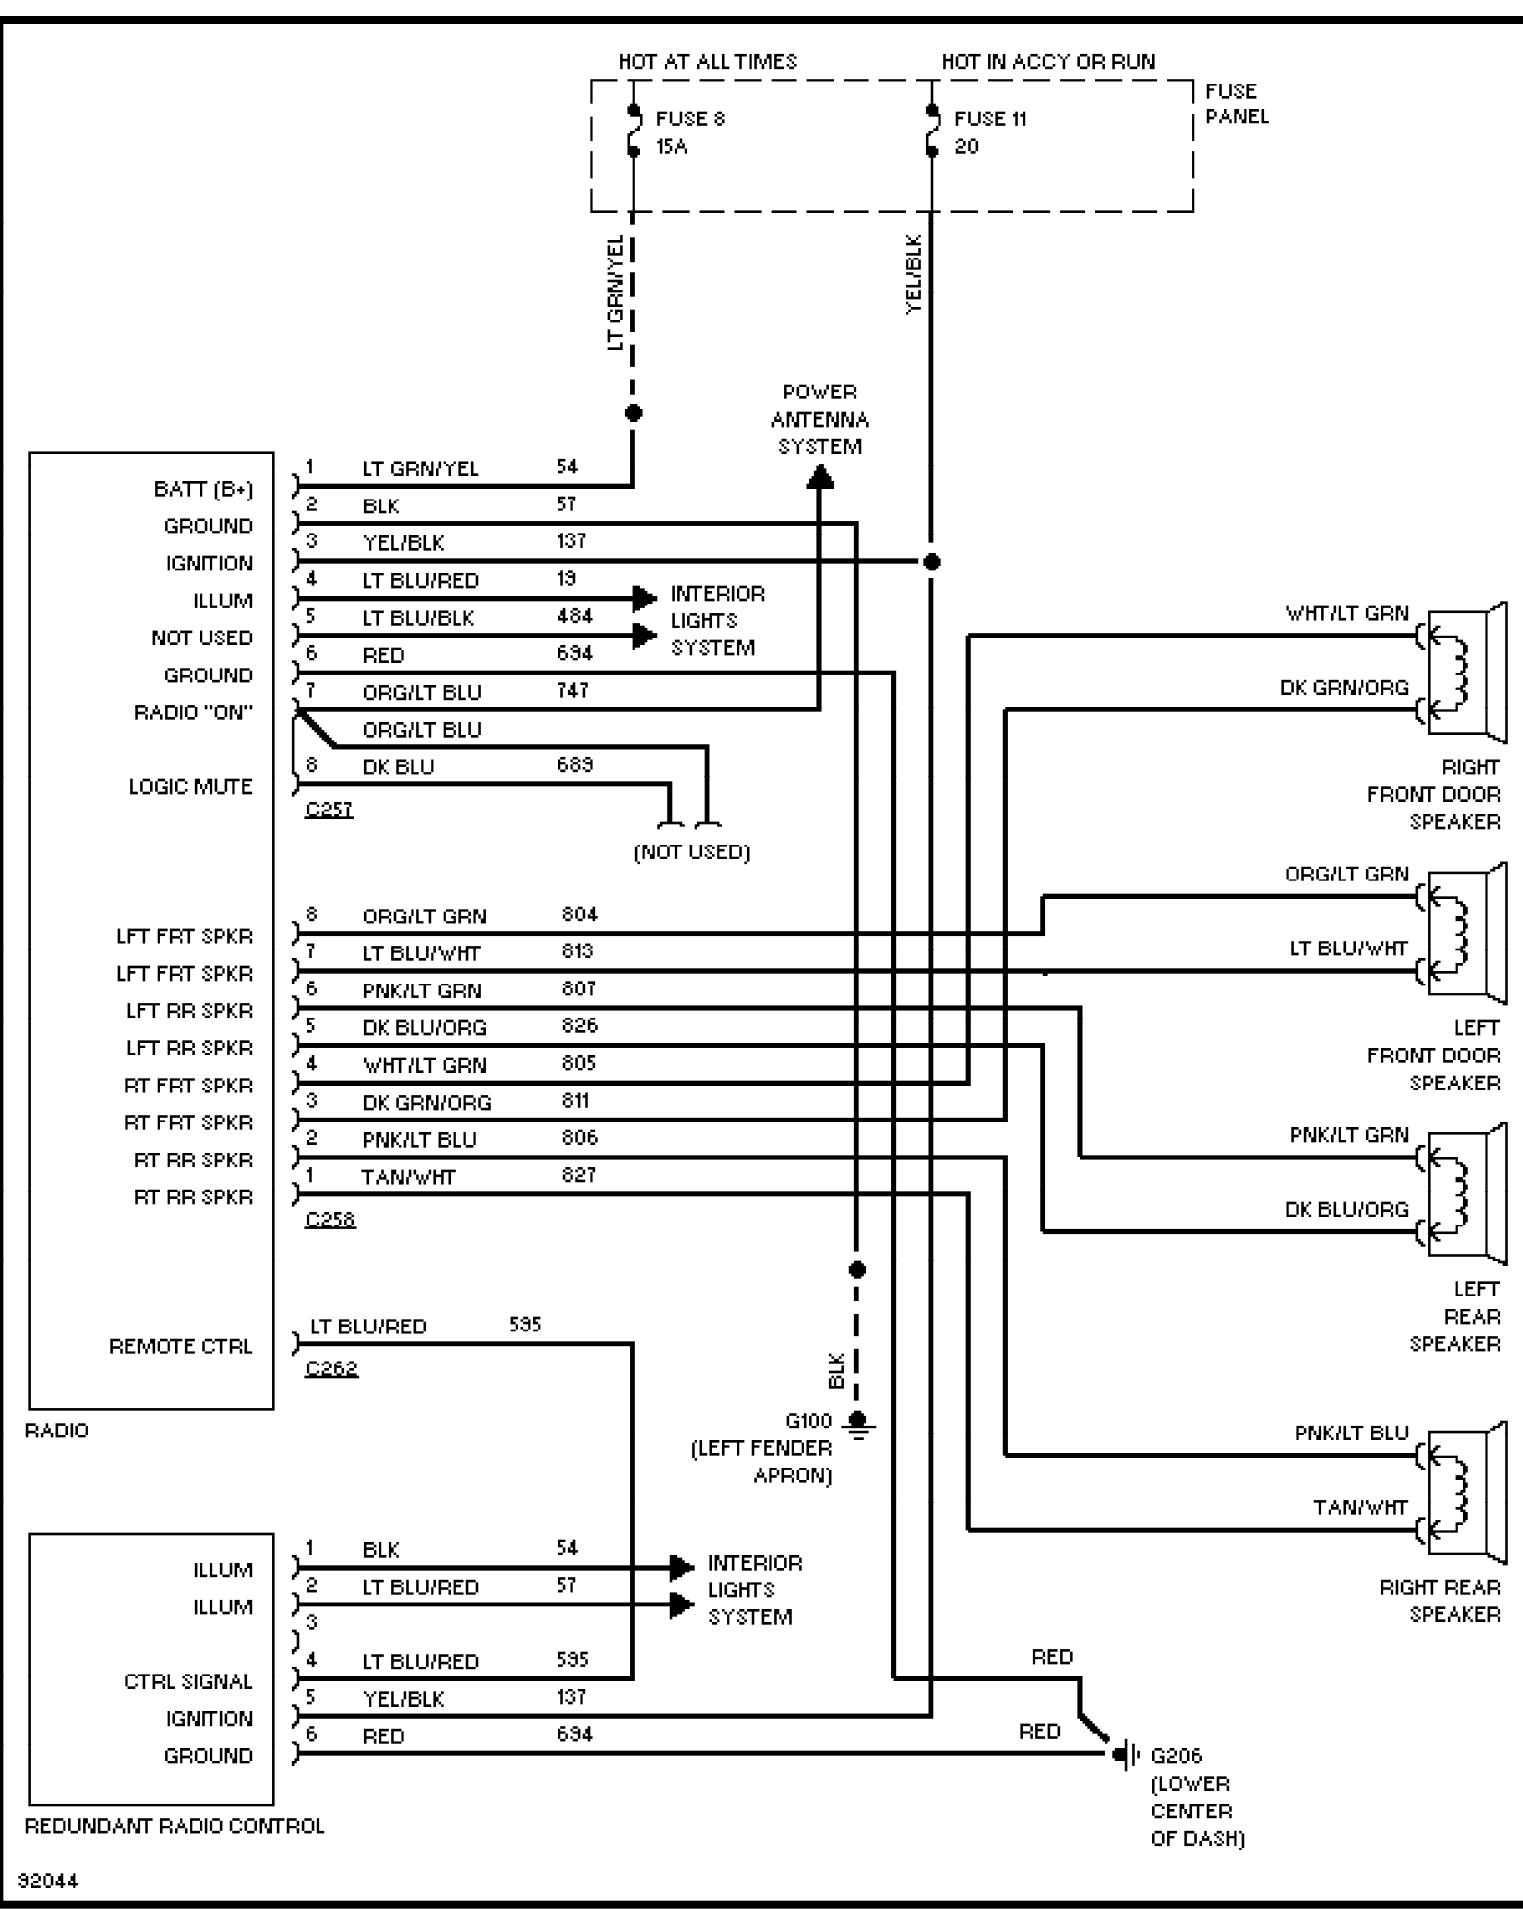


1993 System Wiring Diagrams

Ford - Taurus

PAVLIN

Fig. 22: Radio Circuits, W/ Cellular Telephone
1993 Ford Taurus LX

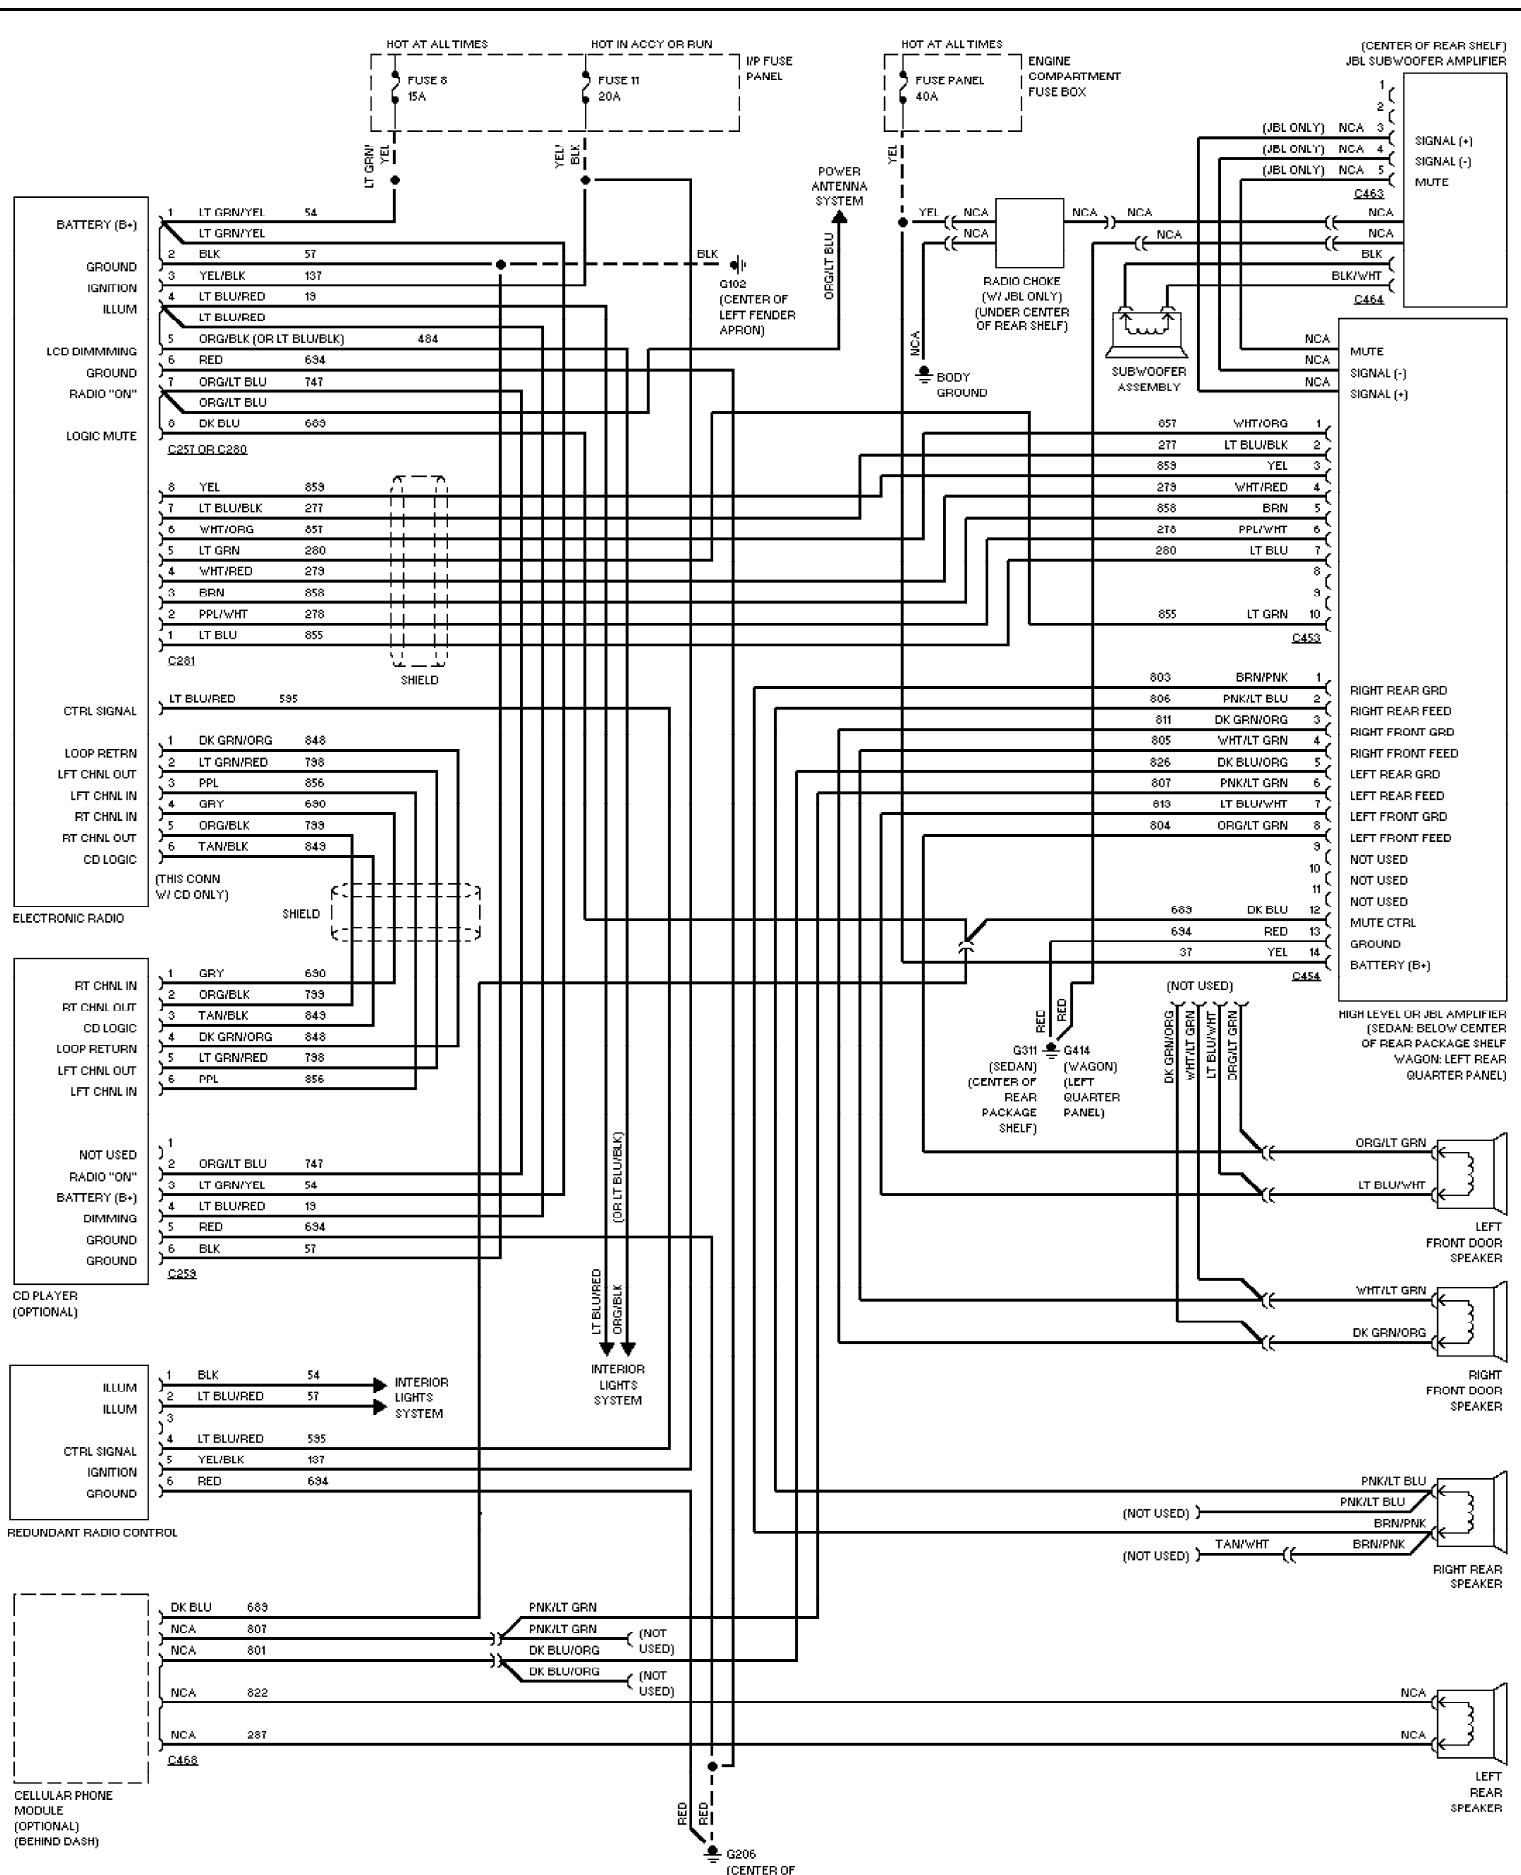


1993 System Wiring Diagrams

Ford - Taurus

PAVLIN


Fig. 23: Radio Circuits, W/O Cellular Telephone
1993 Ford Taurus LX

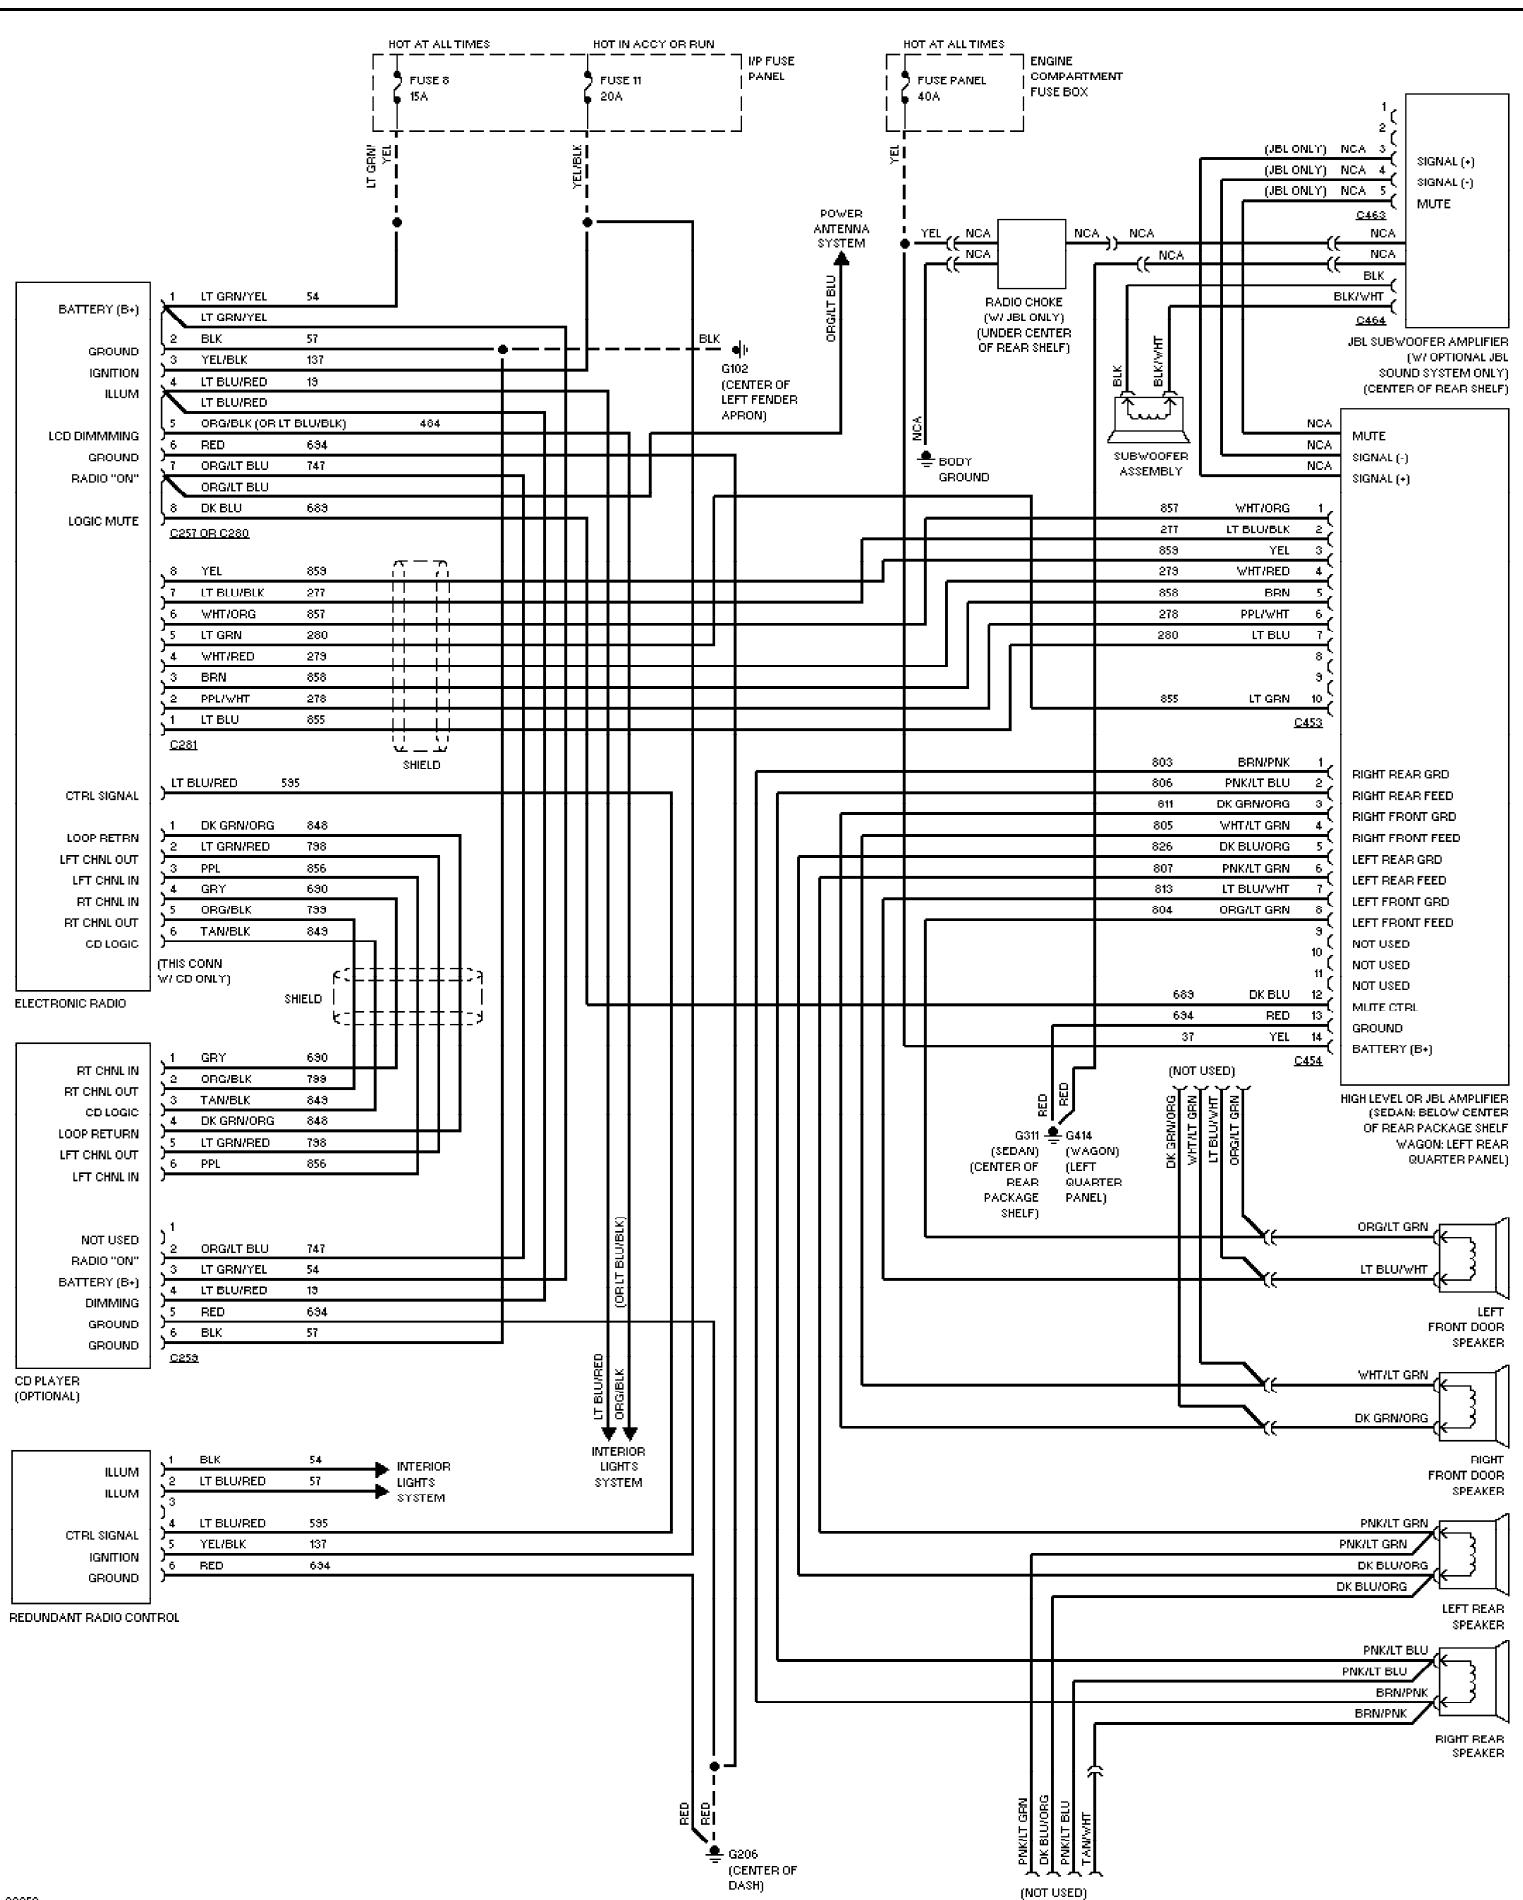

1993 System Wiring Diagrams
Ford - Taurus

PAVLIN


Fig. 24: Charging Circuit
1993 Ford Taurus LX

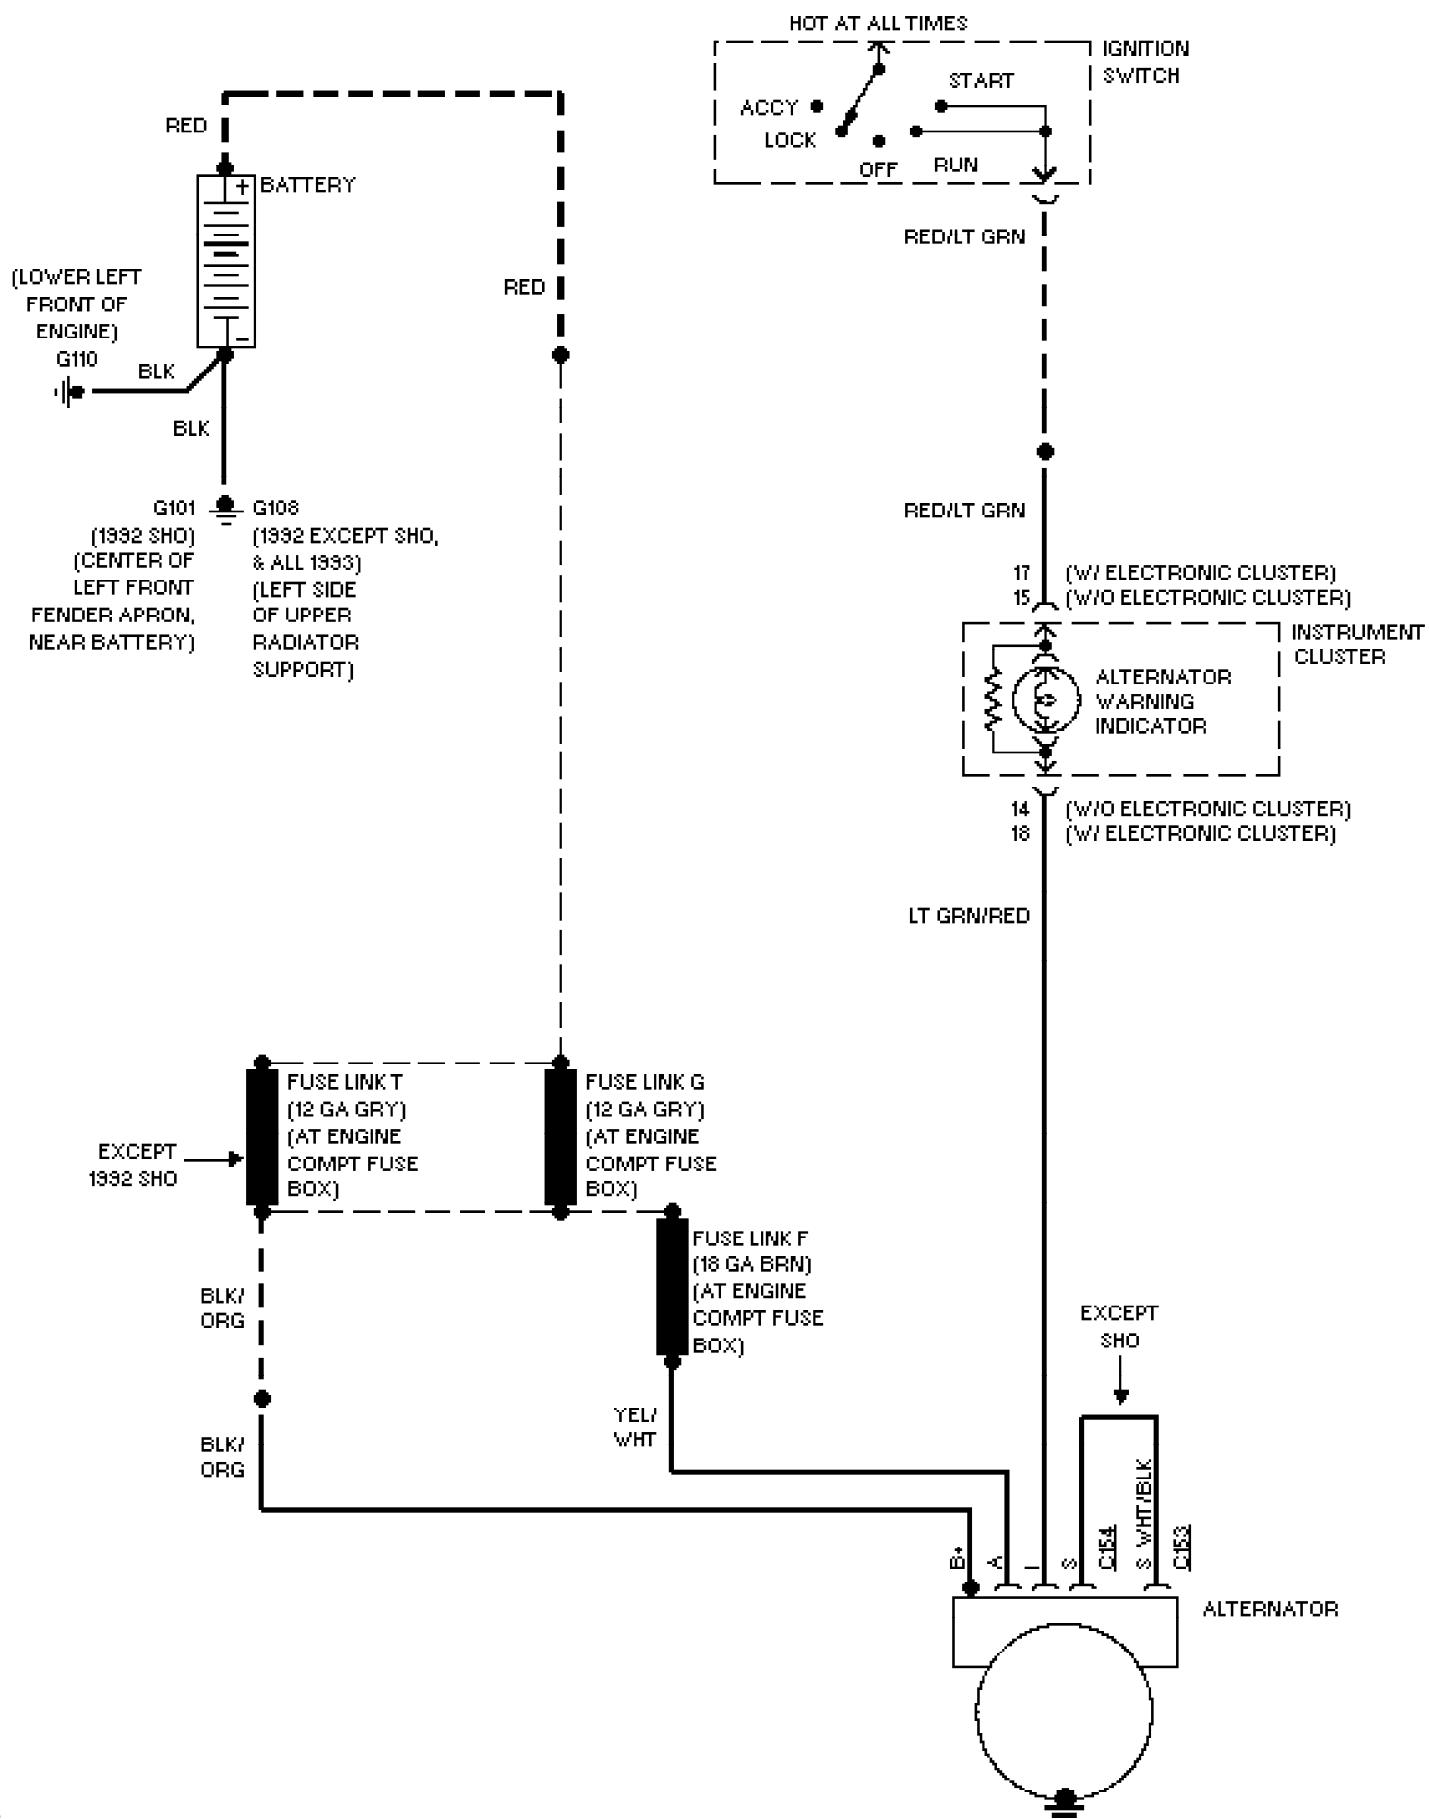

1993 System Wiring Diagrams
Ford - Taurus

PAVLIN

Fig. 25: Starting Circuit
1993 Ford Taurus LX

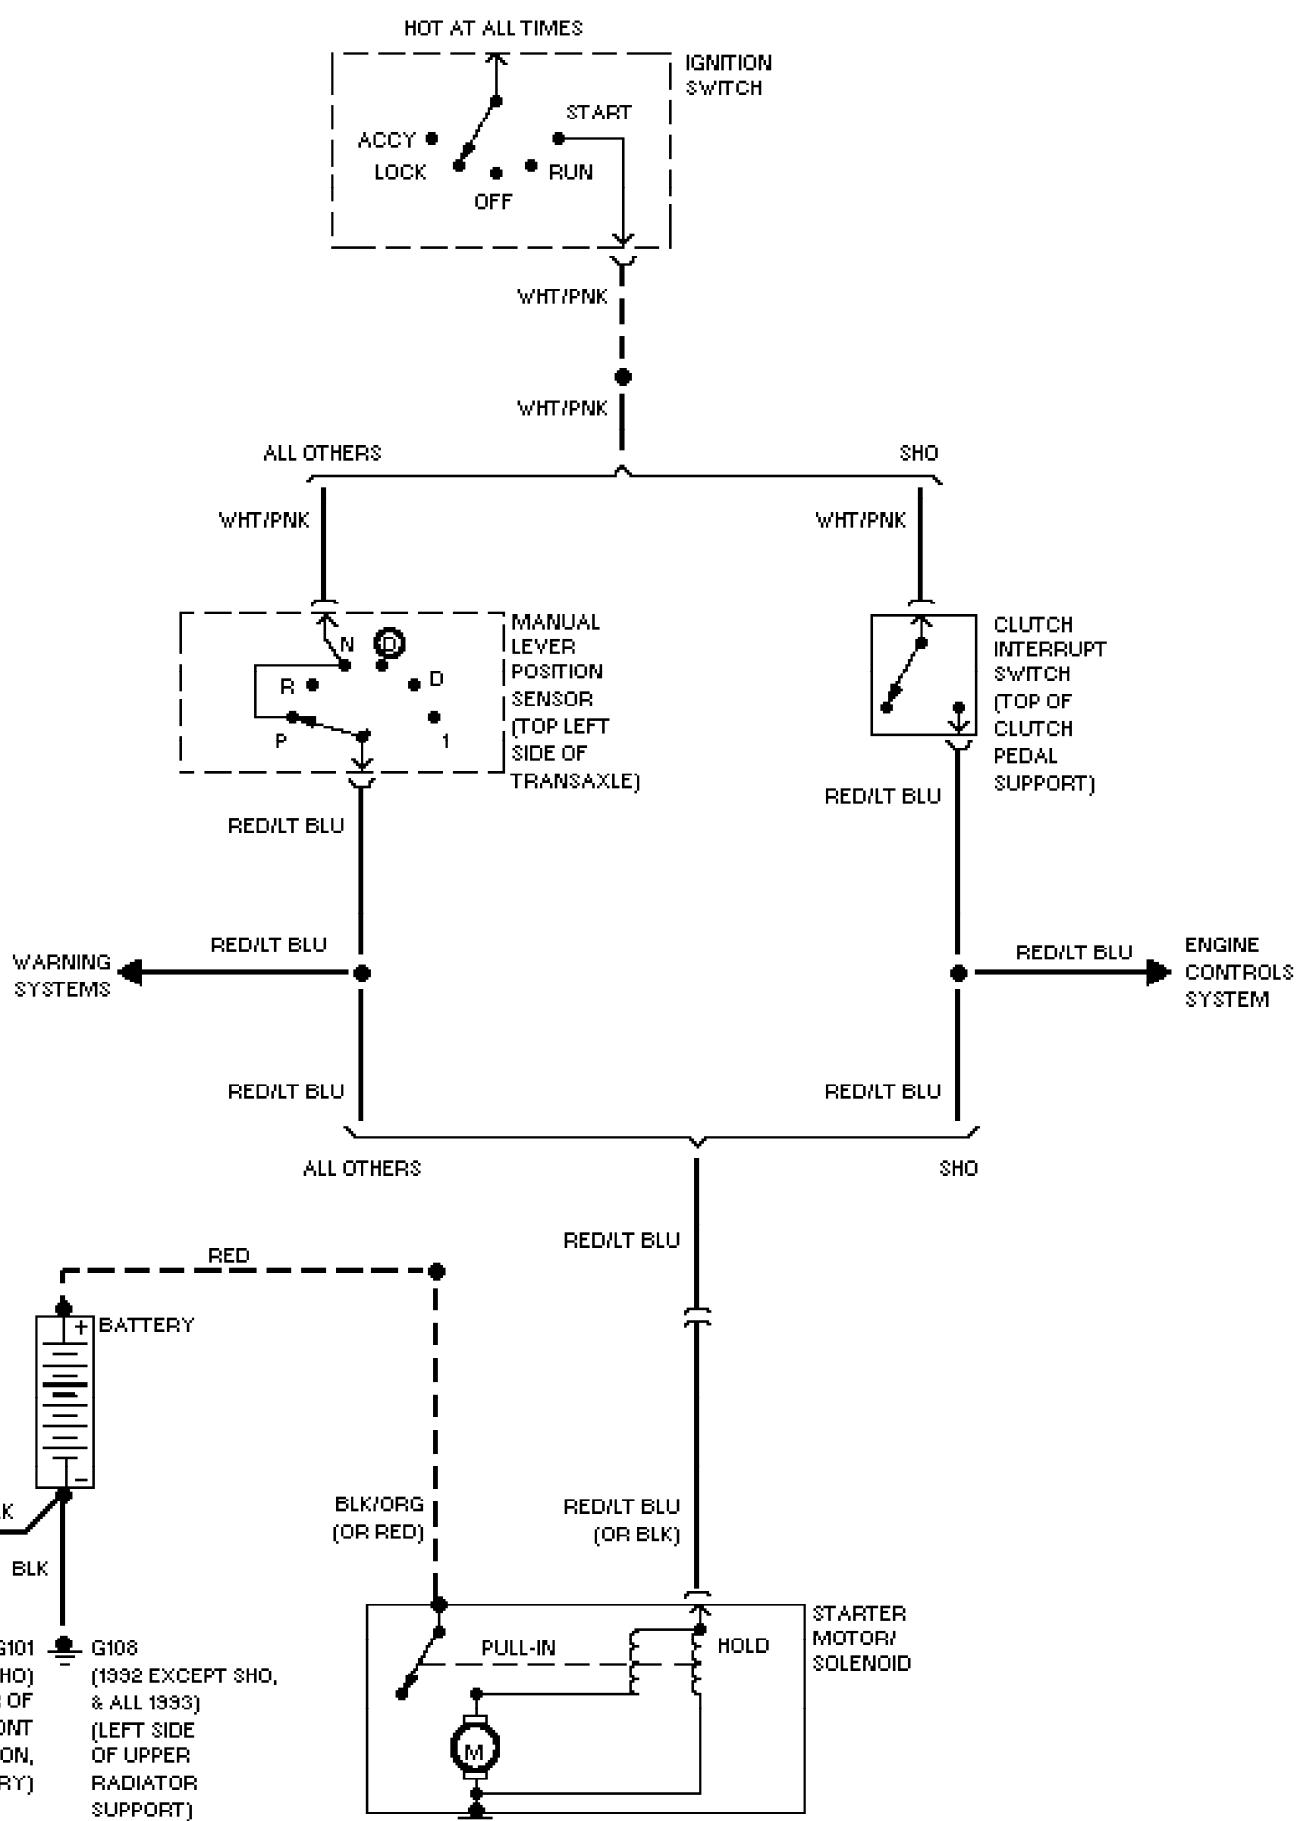


1993 System Wiring Diagrams

Ford - Taurus

PAVLIN


Fig. 26: Transmission Circuit
1993 Ford Taurus LX

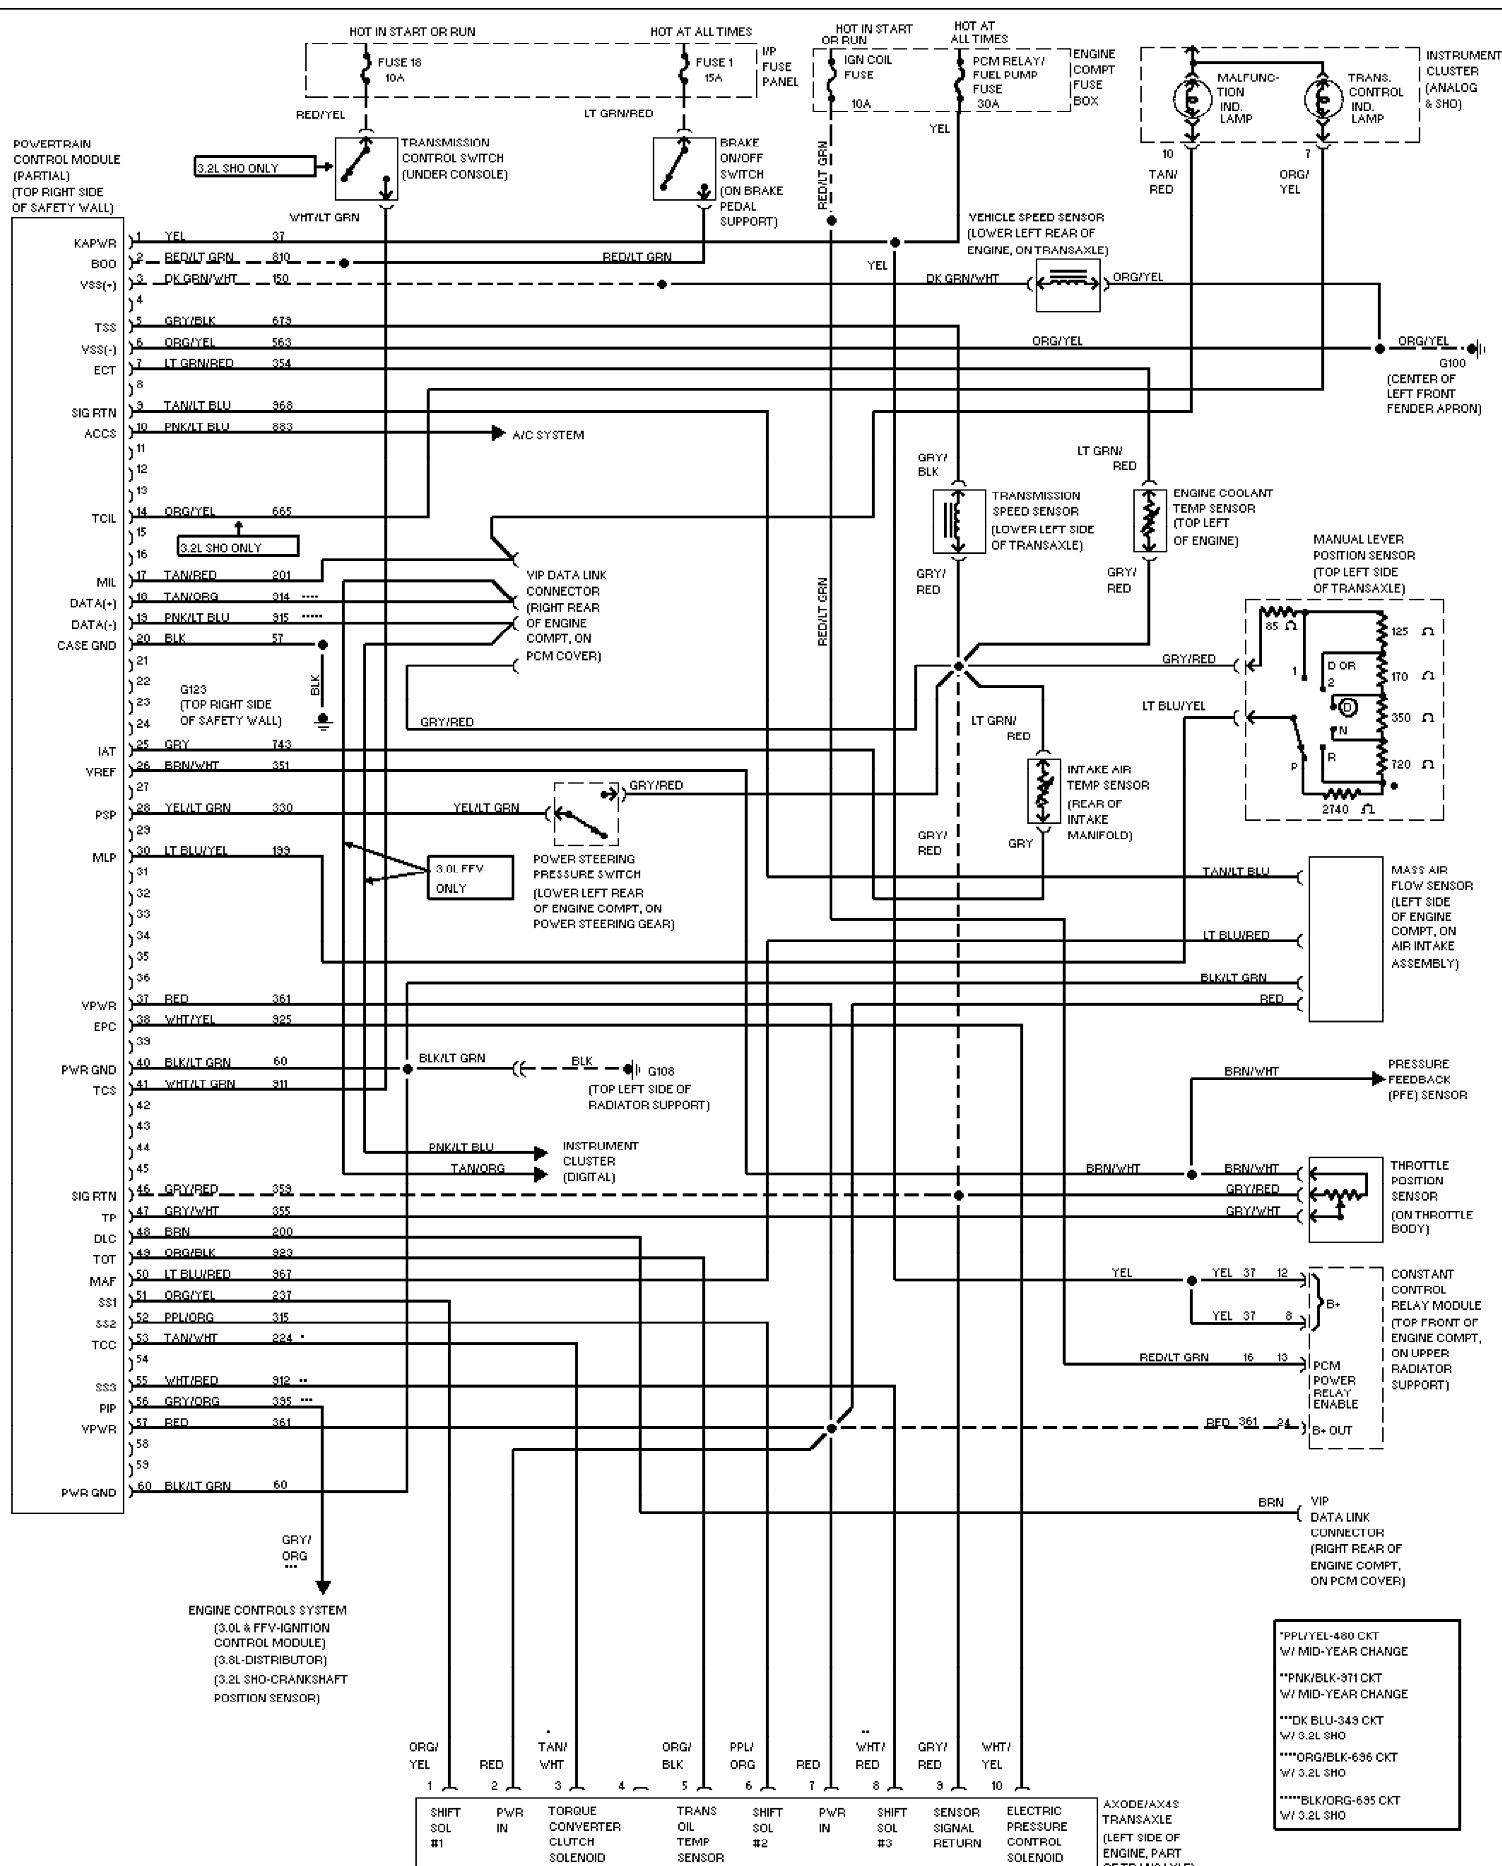

**1993 System Wiring Diagrams
Ford - Taurus**

PAVLIN


**Fig. 27: Tailgate Release Circuit
1993 Ford Taurus LX**

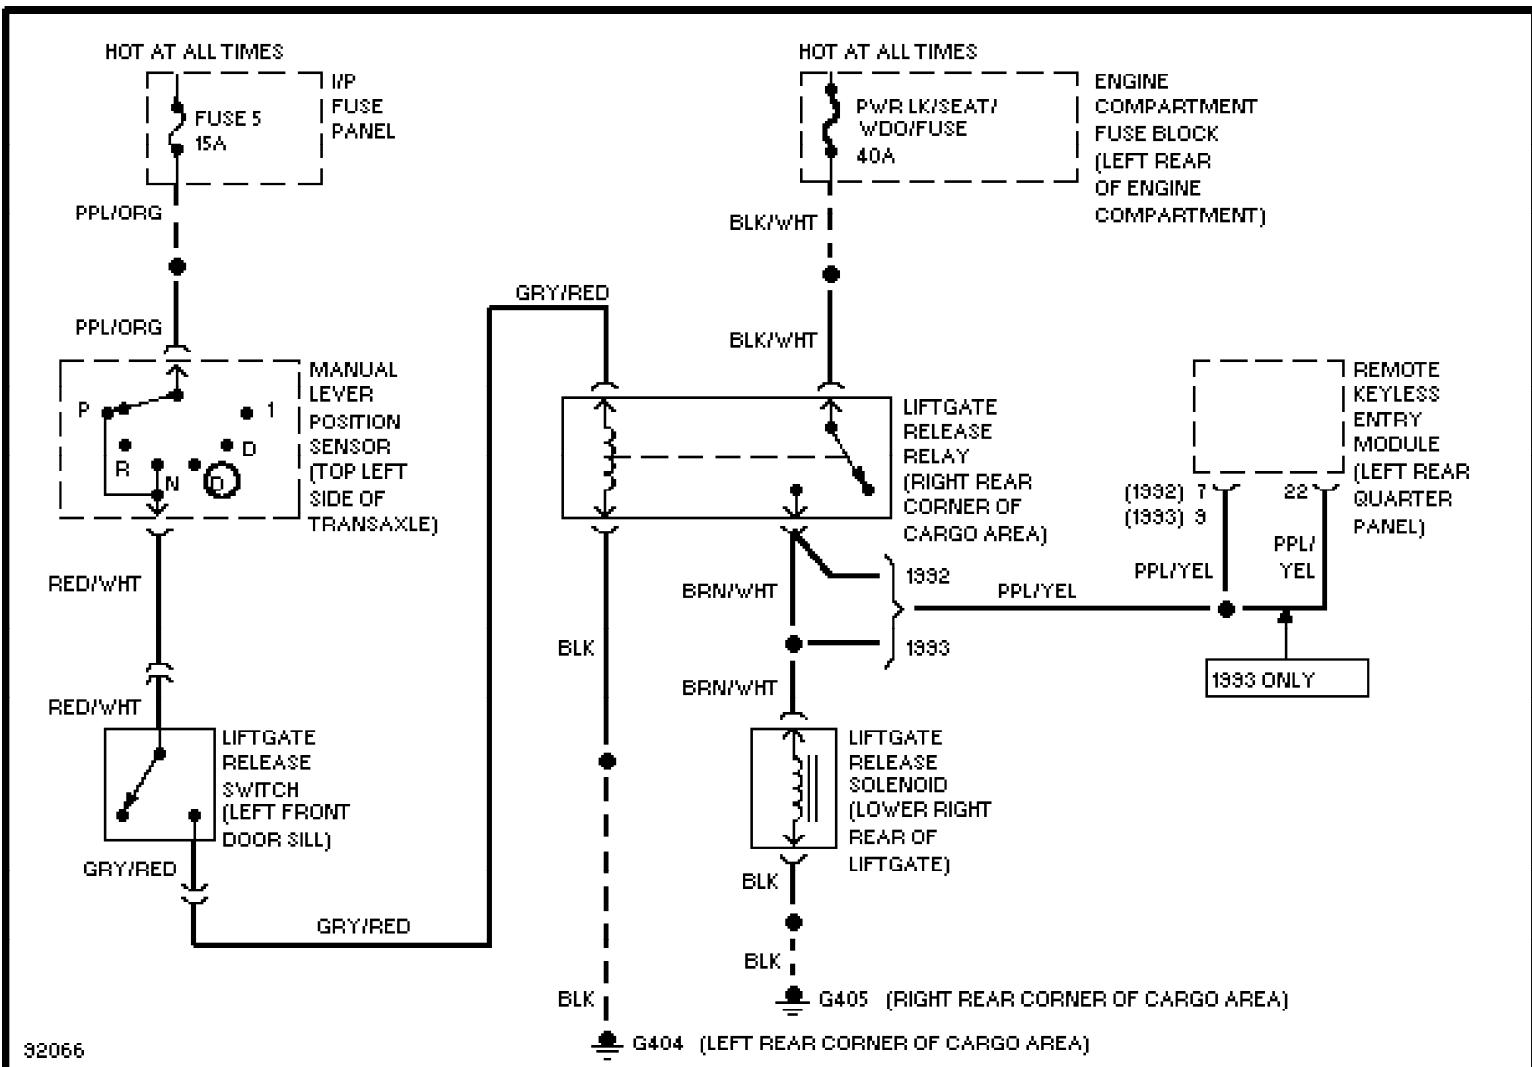

1993 System Wiring Diagrams Ford - Taurus

PAVLIN

Fig. 28: Trunk Release Circuit
1993 Ford Taurus LX

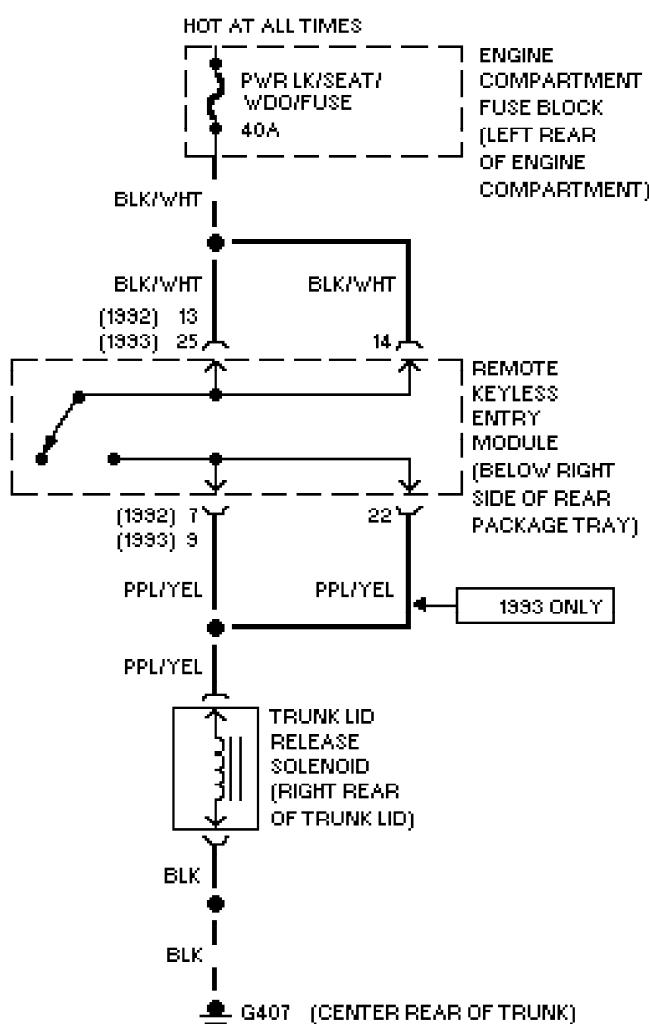


32065

1993 System Wiring Diagrams

Ford - Taurus

PAVLIN


Fig. 29: Interval Wiper/Washer Circuit
1993 Ford Taurus LX

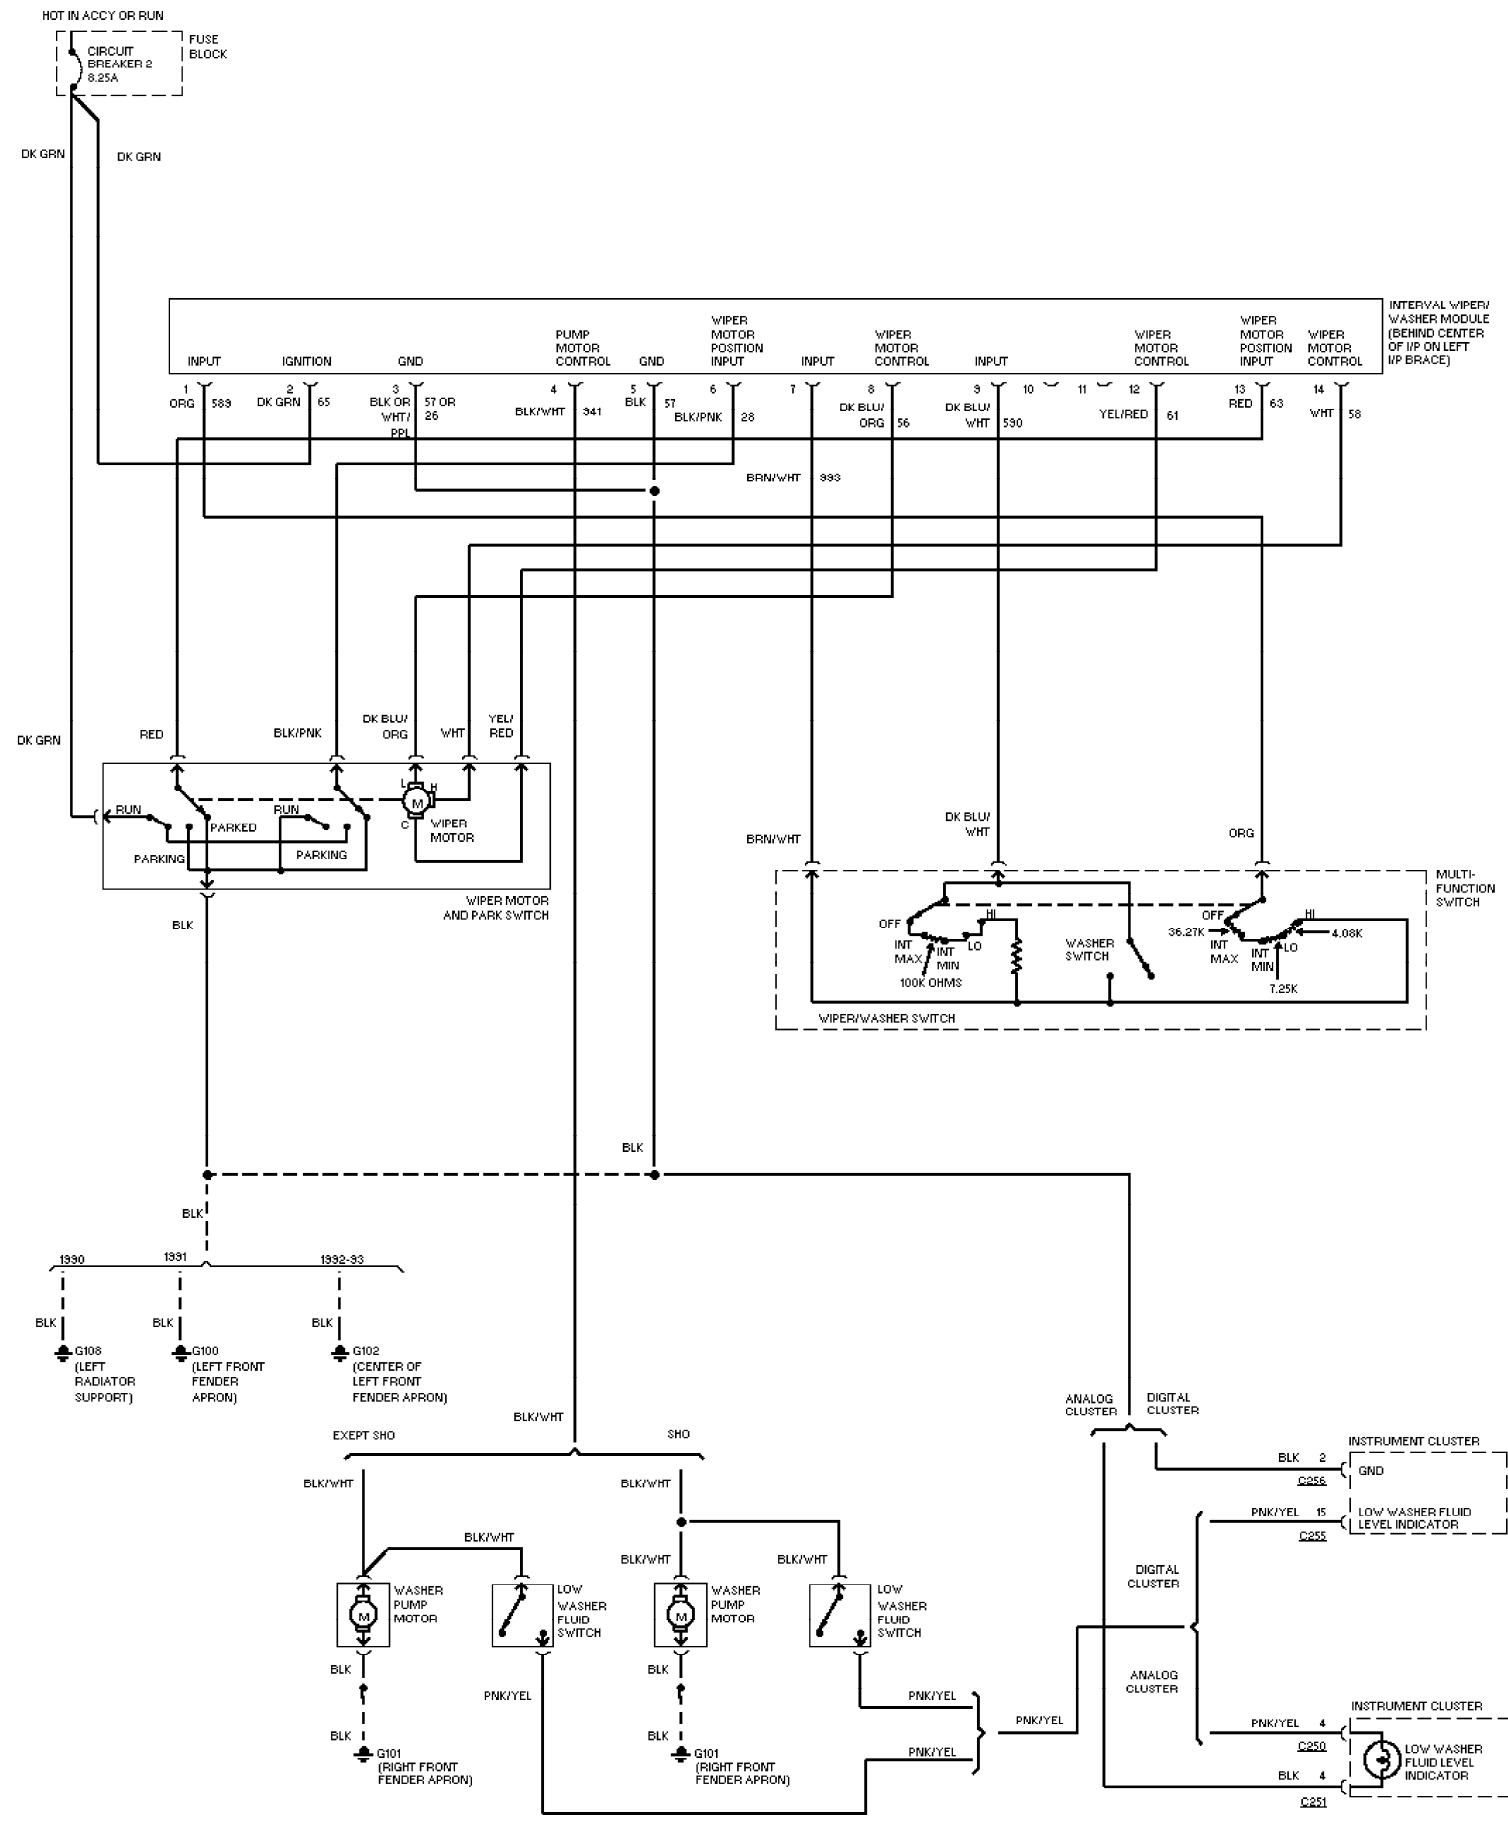

**1993 System Wiring Diagrams
Ford - Taurus**

PAVLIN


Fig. 30: Rear Wiper/Washer Circuit
1993 Ford Taurus LX

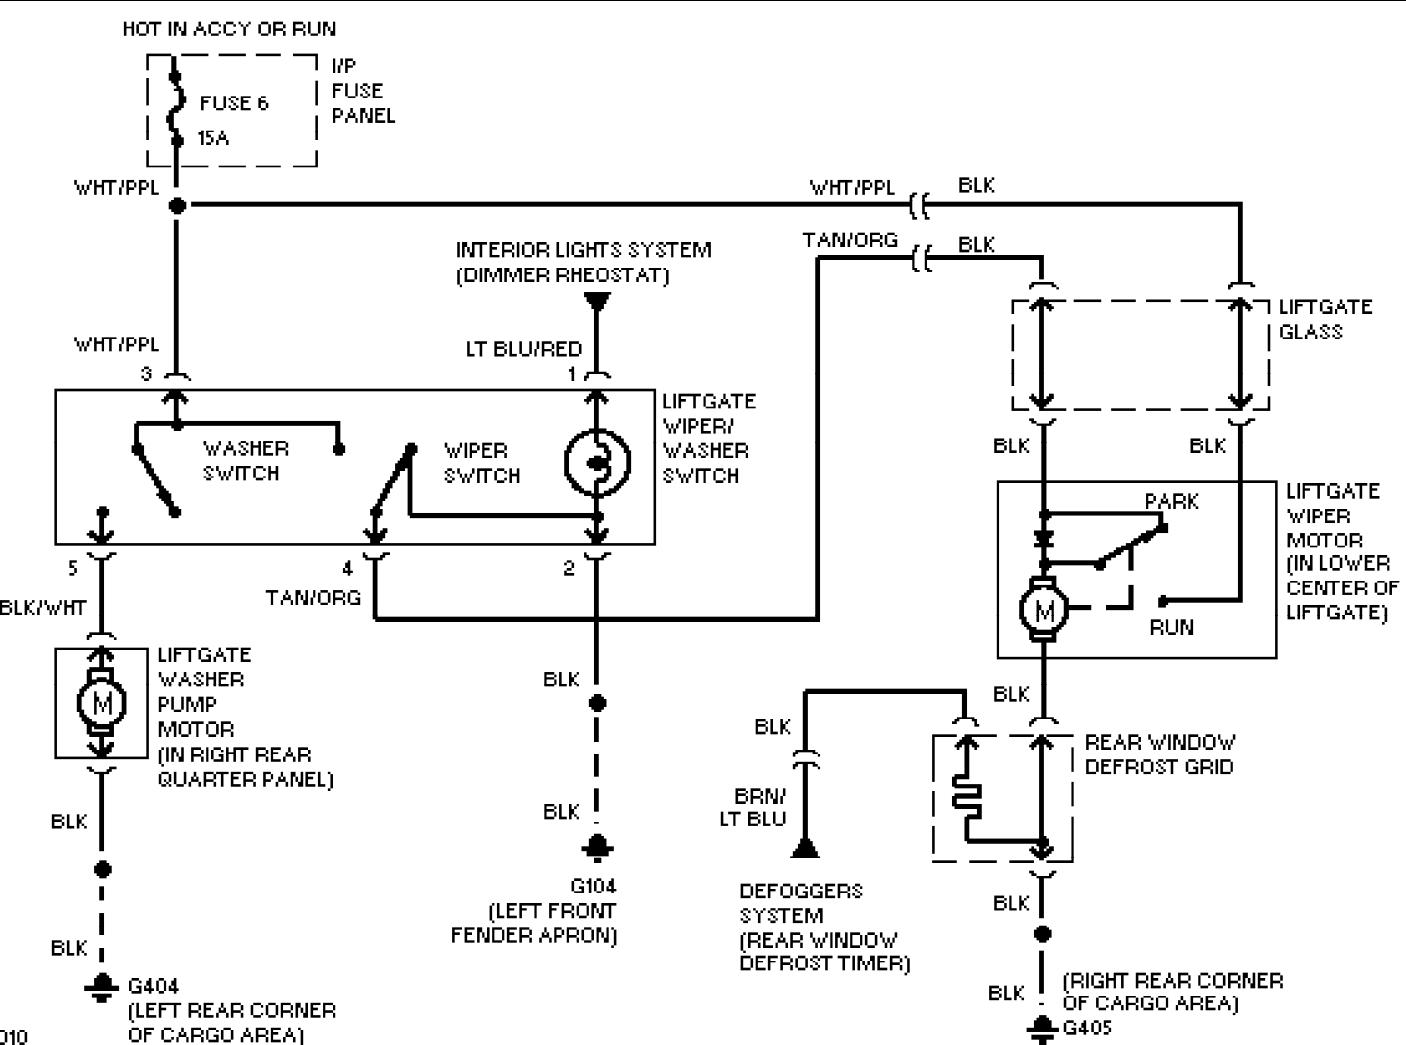

WIRING DIAGRAMS
Power & Ground Distribution

PAVLIN


Fig. 1: Data Link Connectors (Except Flex Fuel & SHO
3.0L & 3.8L)
1993 Ford Taurus LX

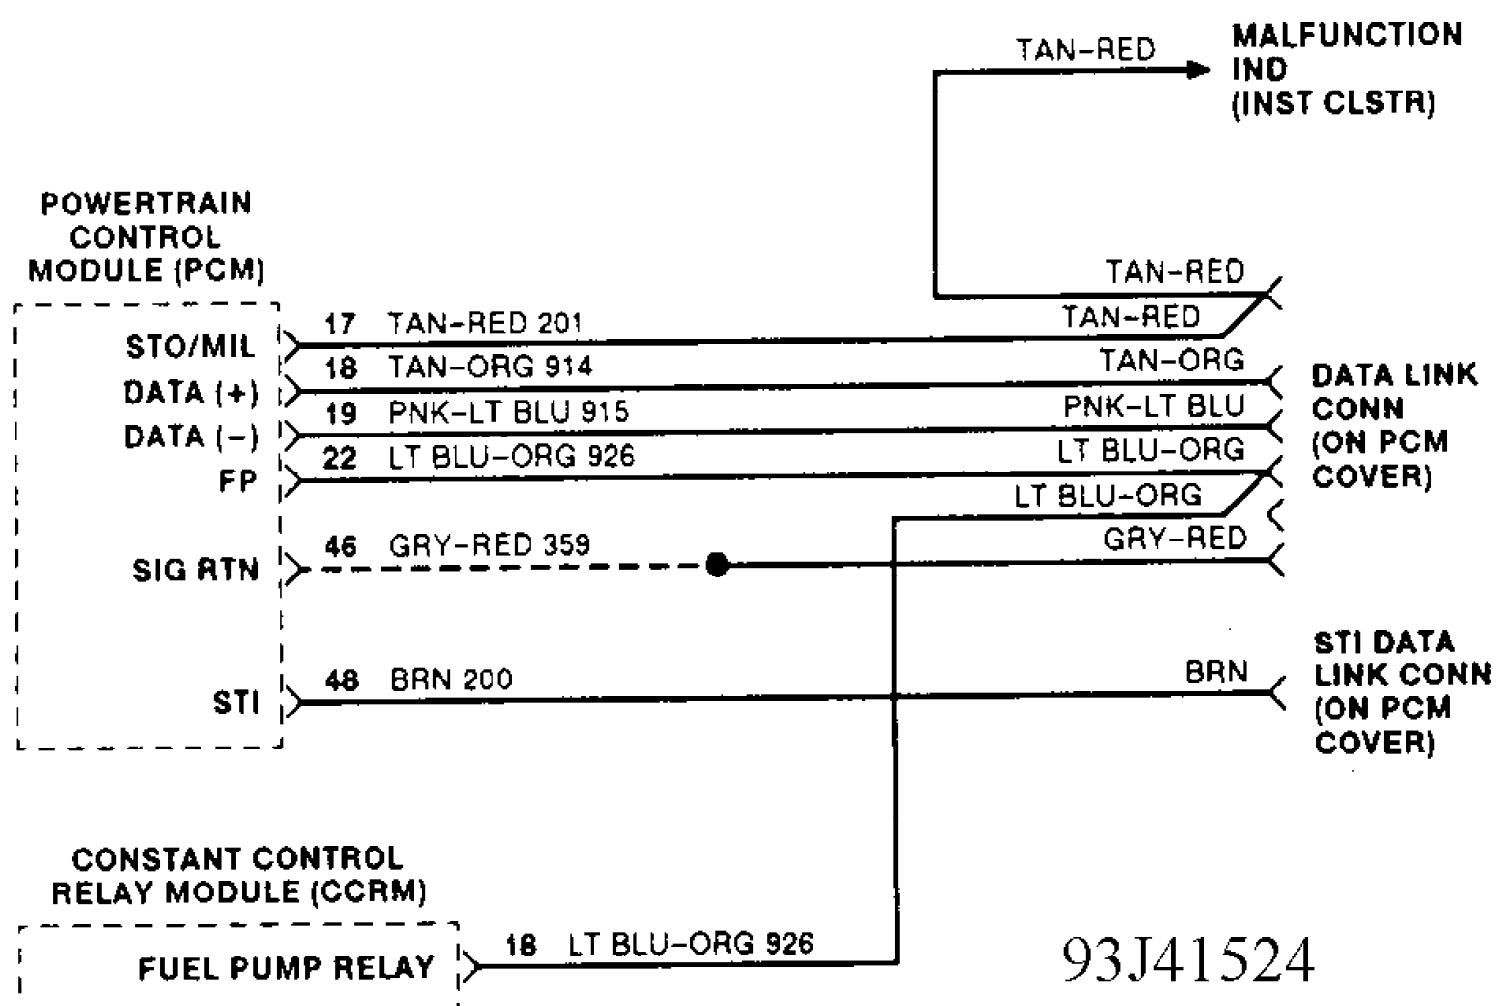

WIRING DIAGRAMS
Power & Ground Distribution

PAVLIN


Fig. 2: Data Link Connectors (SHO 3.0L & 3.2L)
1993 Ford Taurus LX

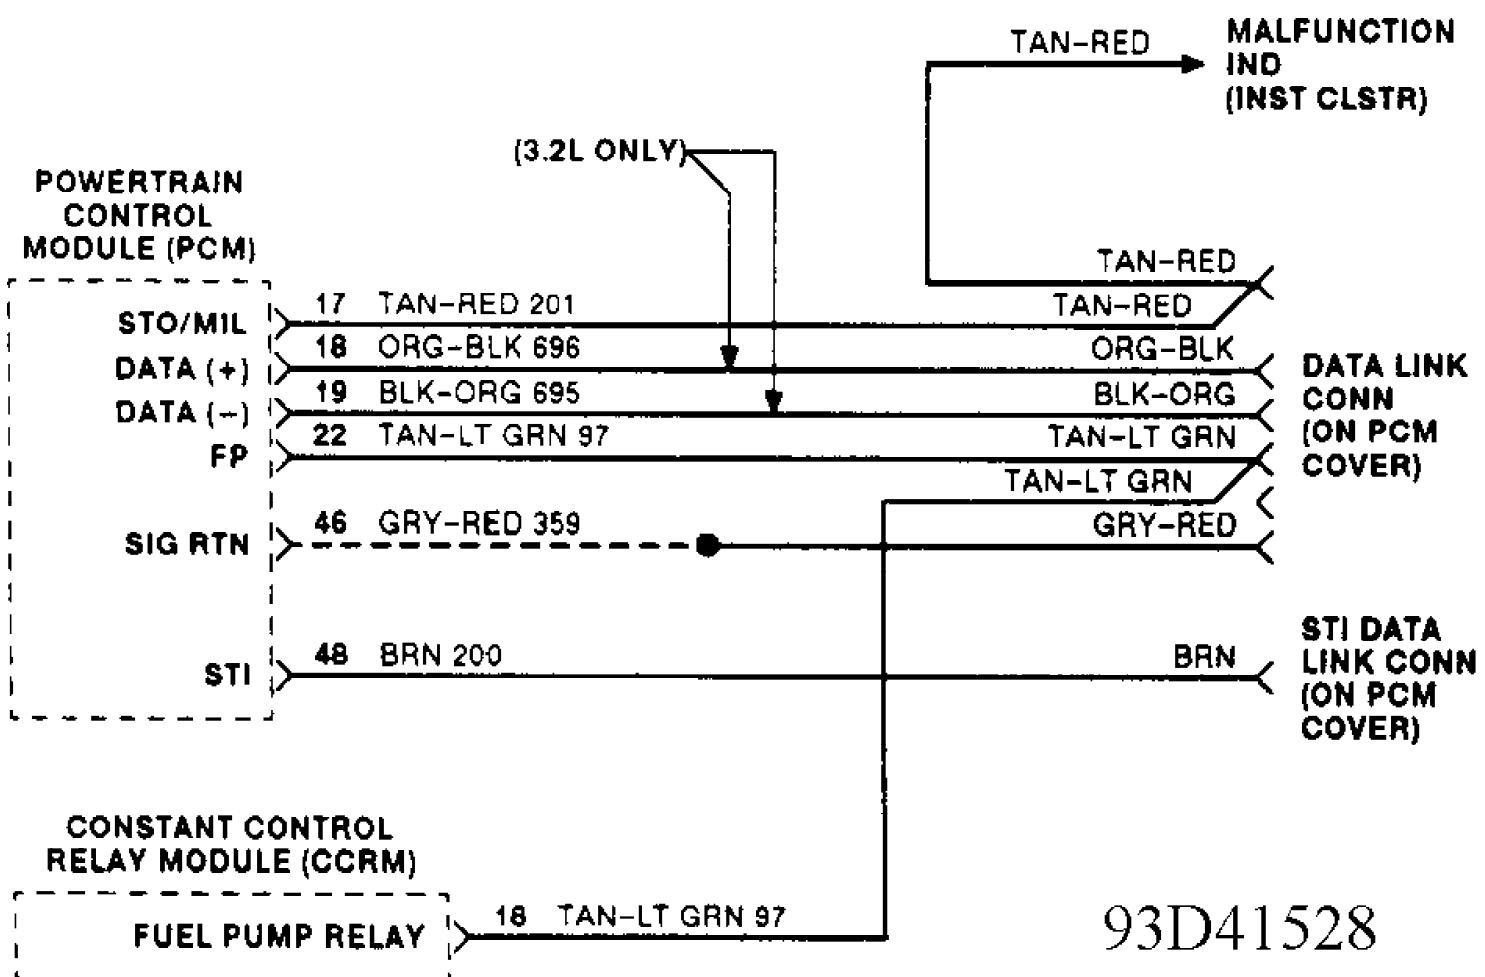

WIRING DIAGRAMS
Power & Ground Distribution

PAVLIN

Fig. 3: Data Link Connectors (3.0L Flex Fuel)
1993 Ford Taurus LX

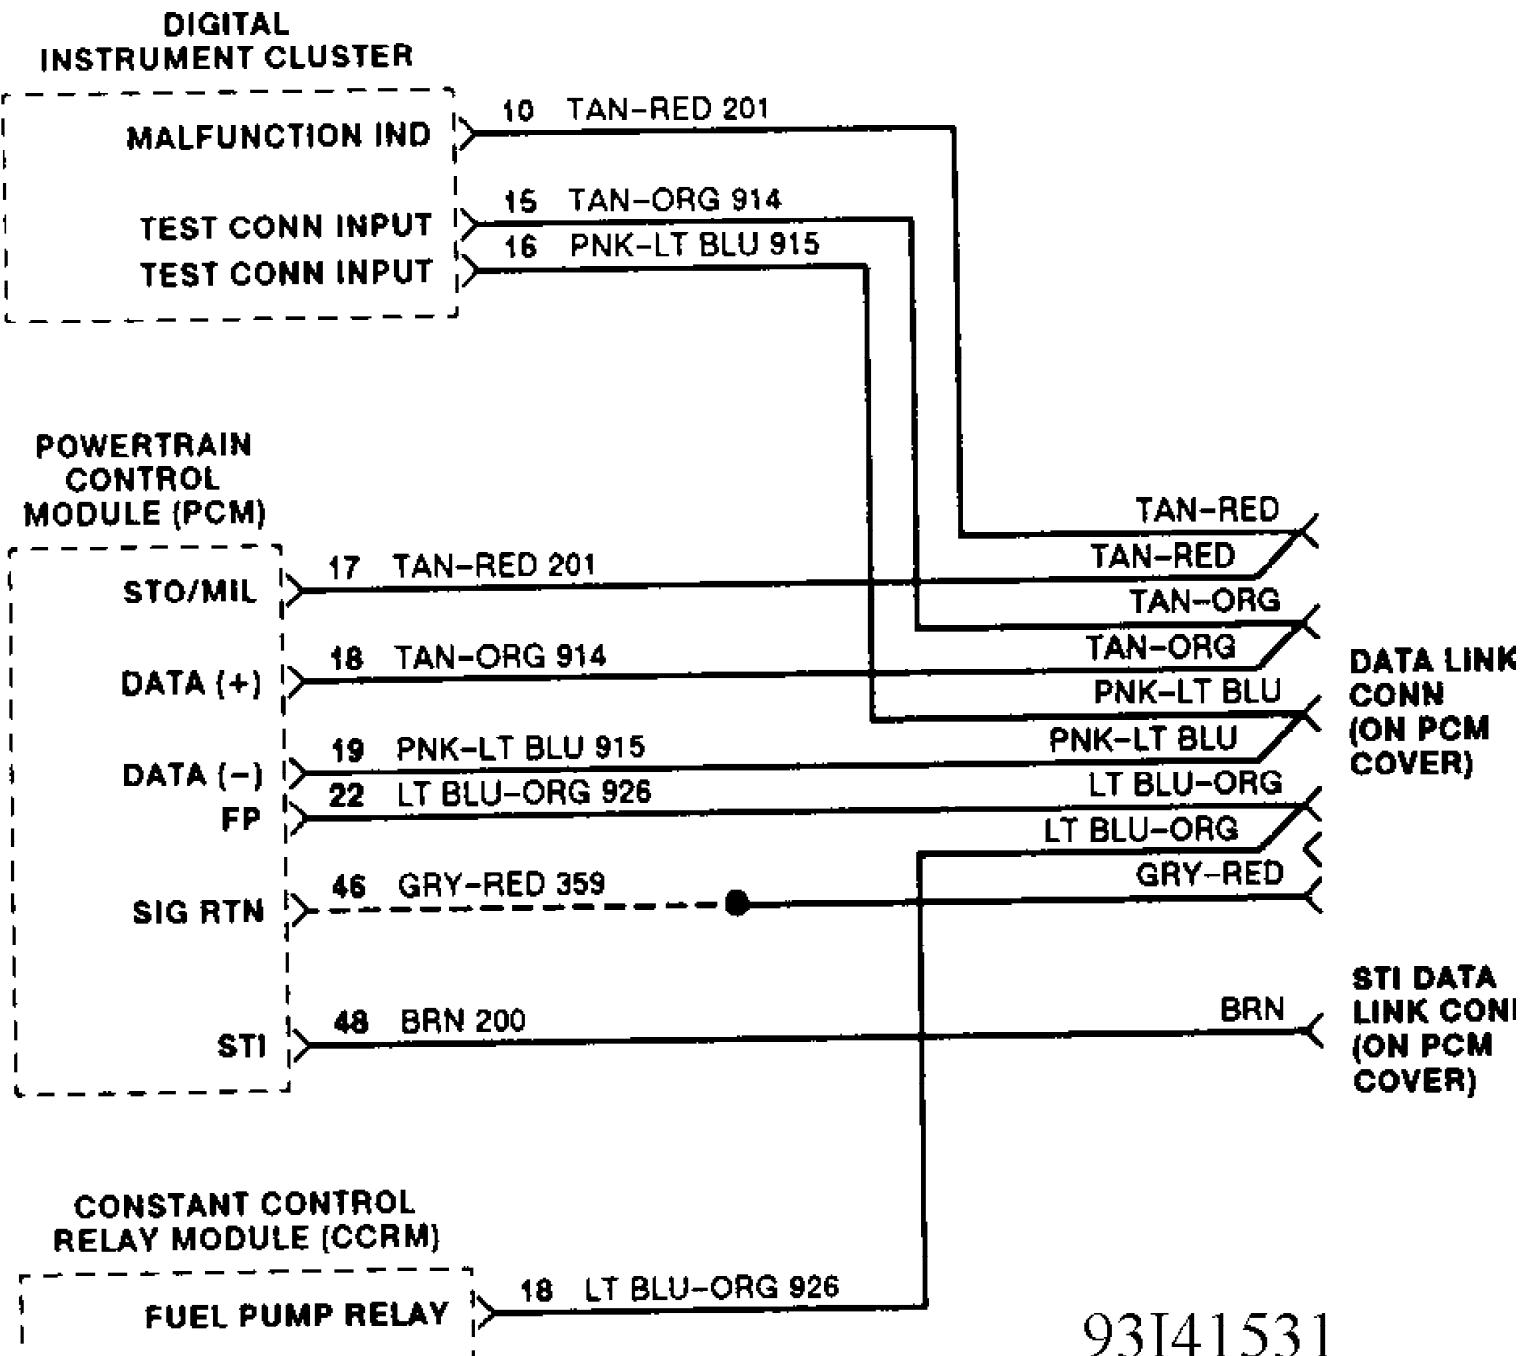


WIRING DIAGRAMS

Power & Ground Distribution

PAVLIN

Fig. 4: Ground Distribution (1 Of 5)
1993 Ford Taurus LX

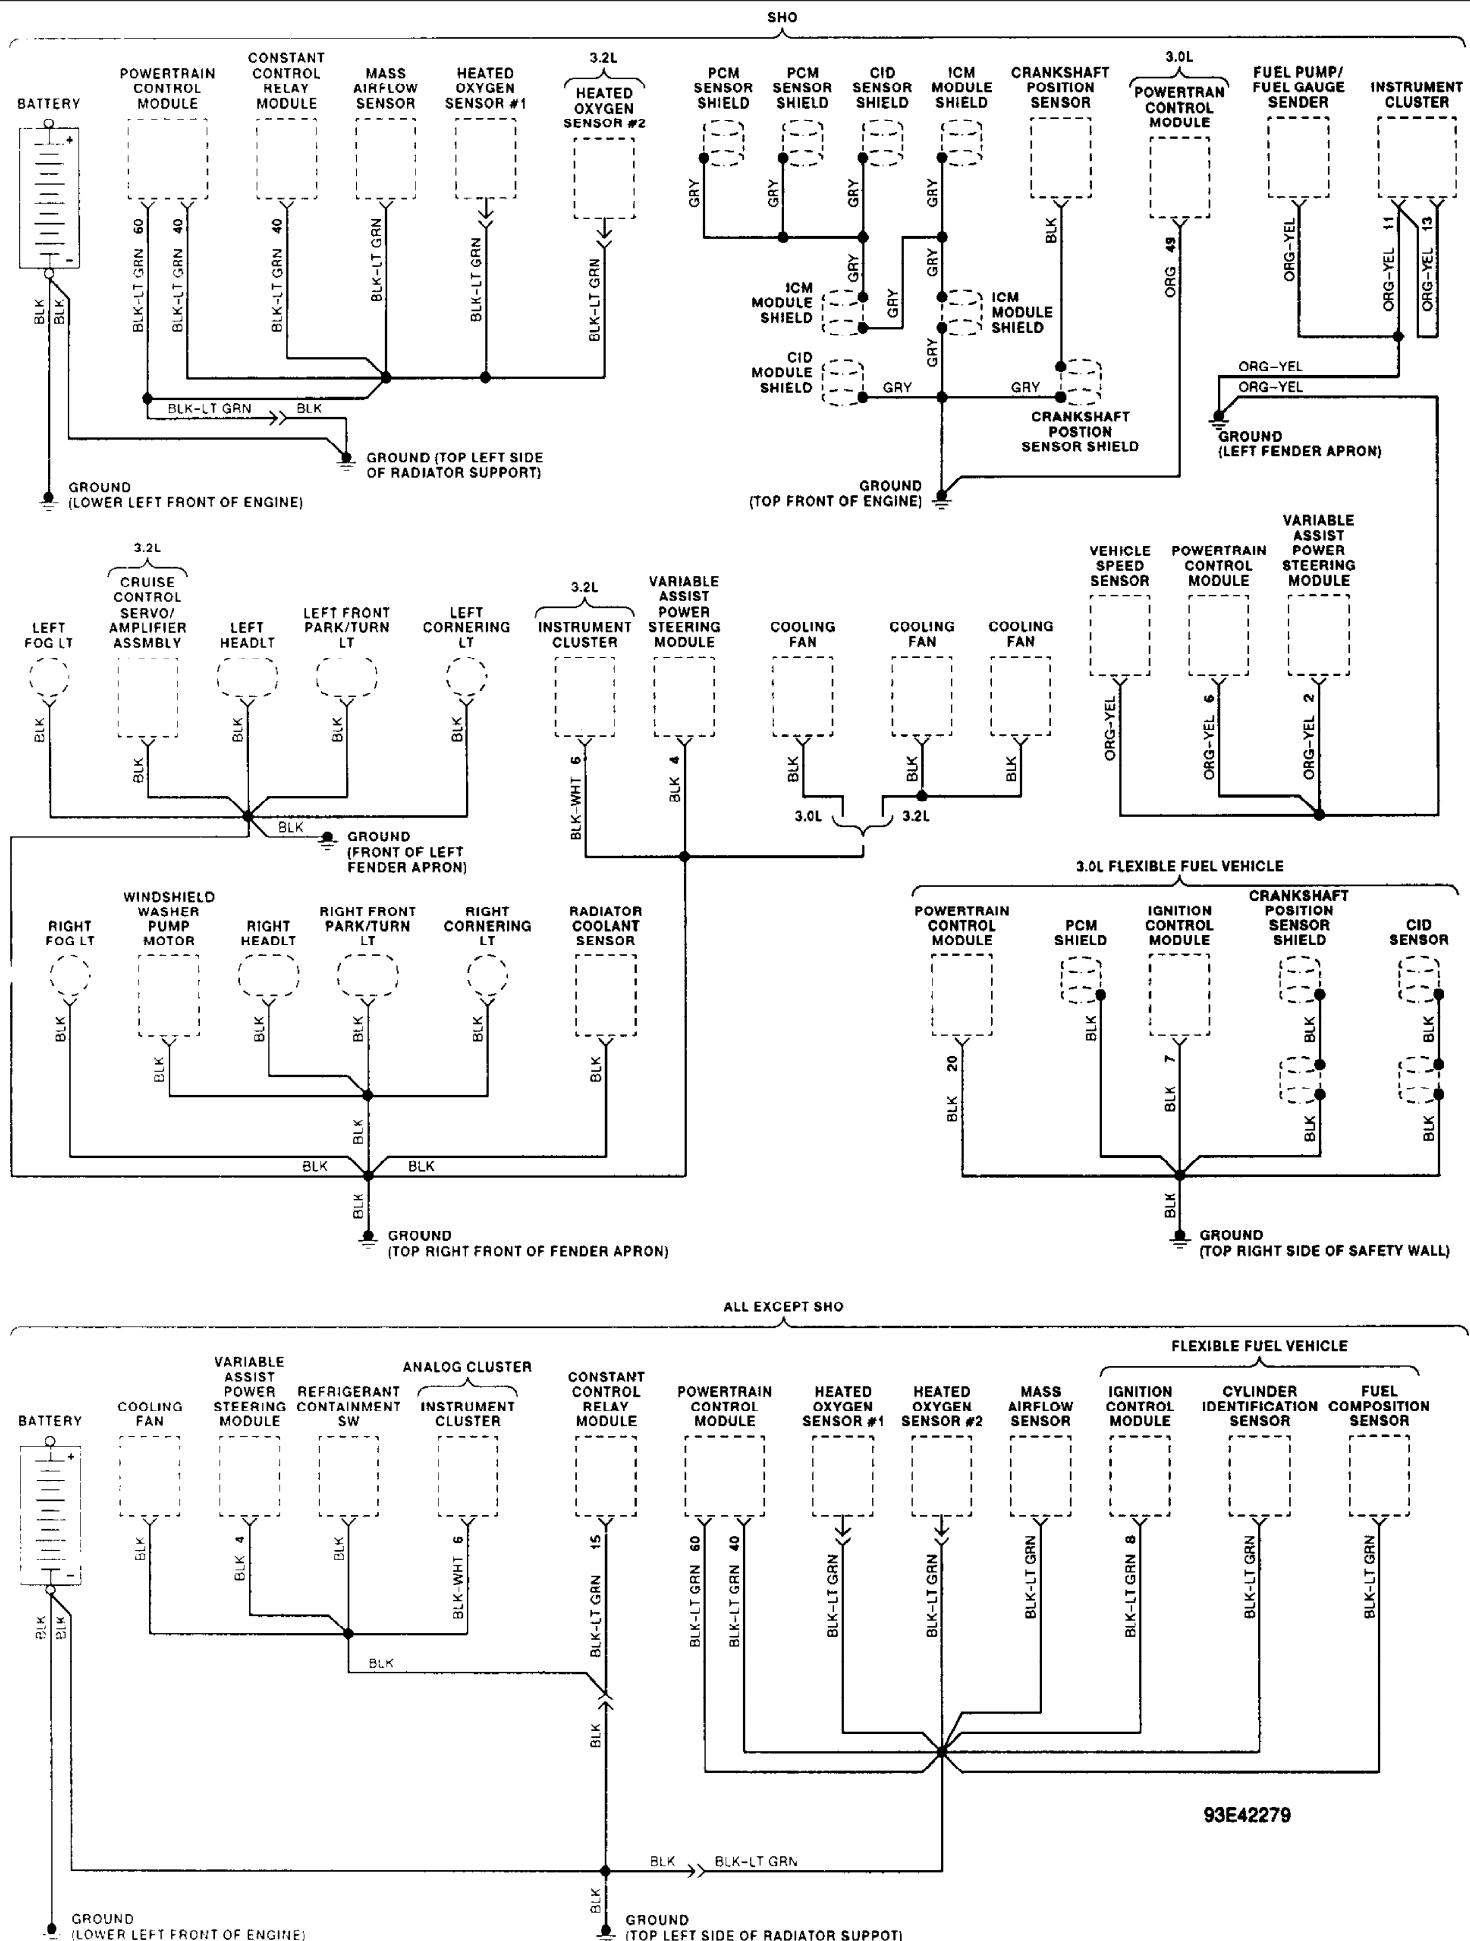


WIRING DIAGRAMS

Power & Ground Distribution

PAVLIN

Fig. 5: Ground Distribution (2 Of 5)
1993 Ford Taurus LX

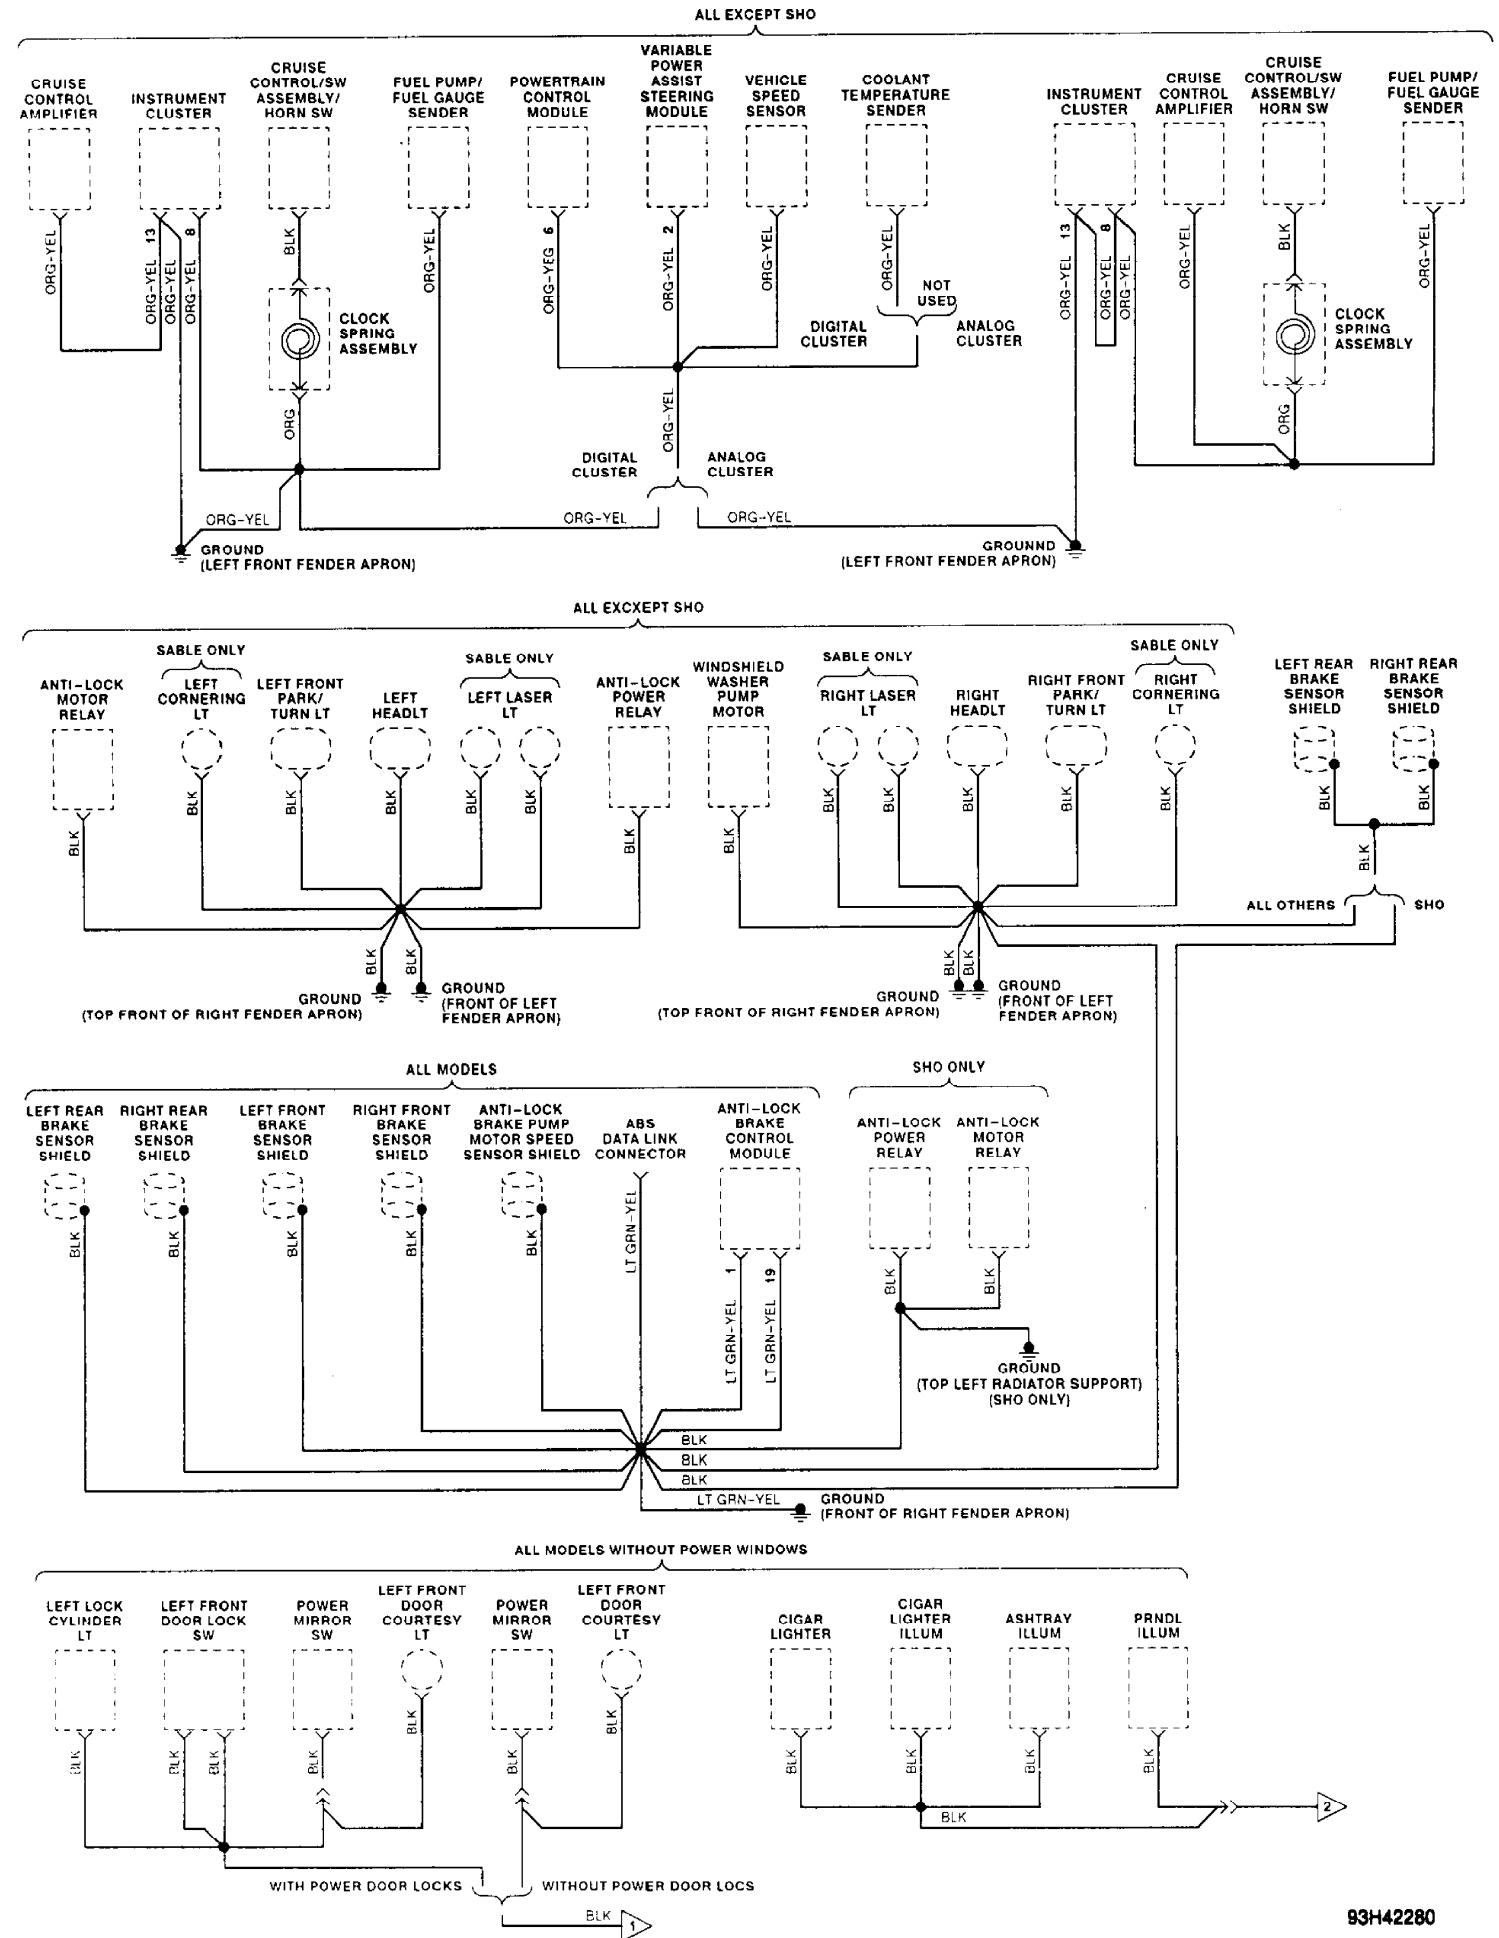


93H42280

WIRING DIAGRAMS

Power & Ground Distribution

PAVLIN

Fig. 6: Ground Distribution (3 Of 5)
1993 Ford Taurus LX

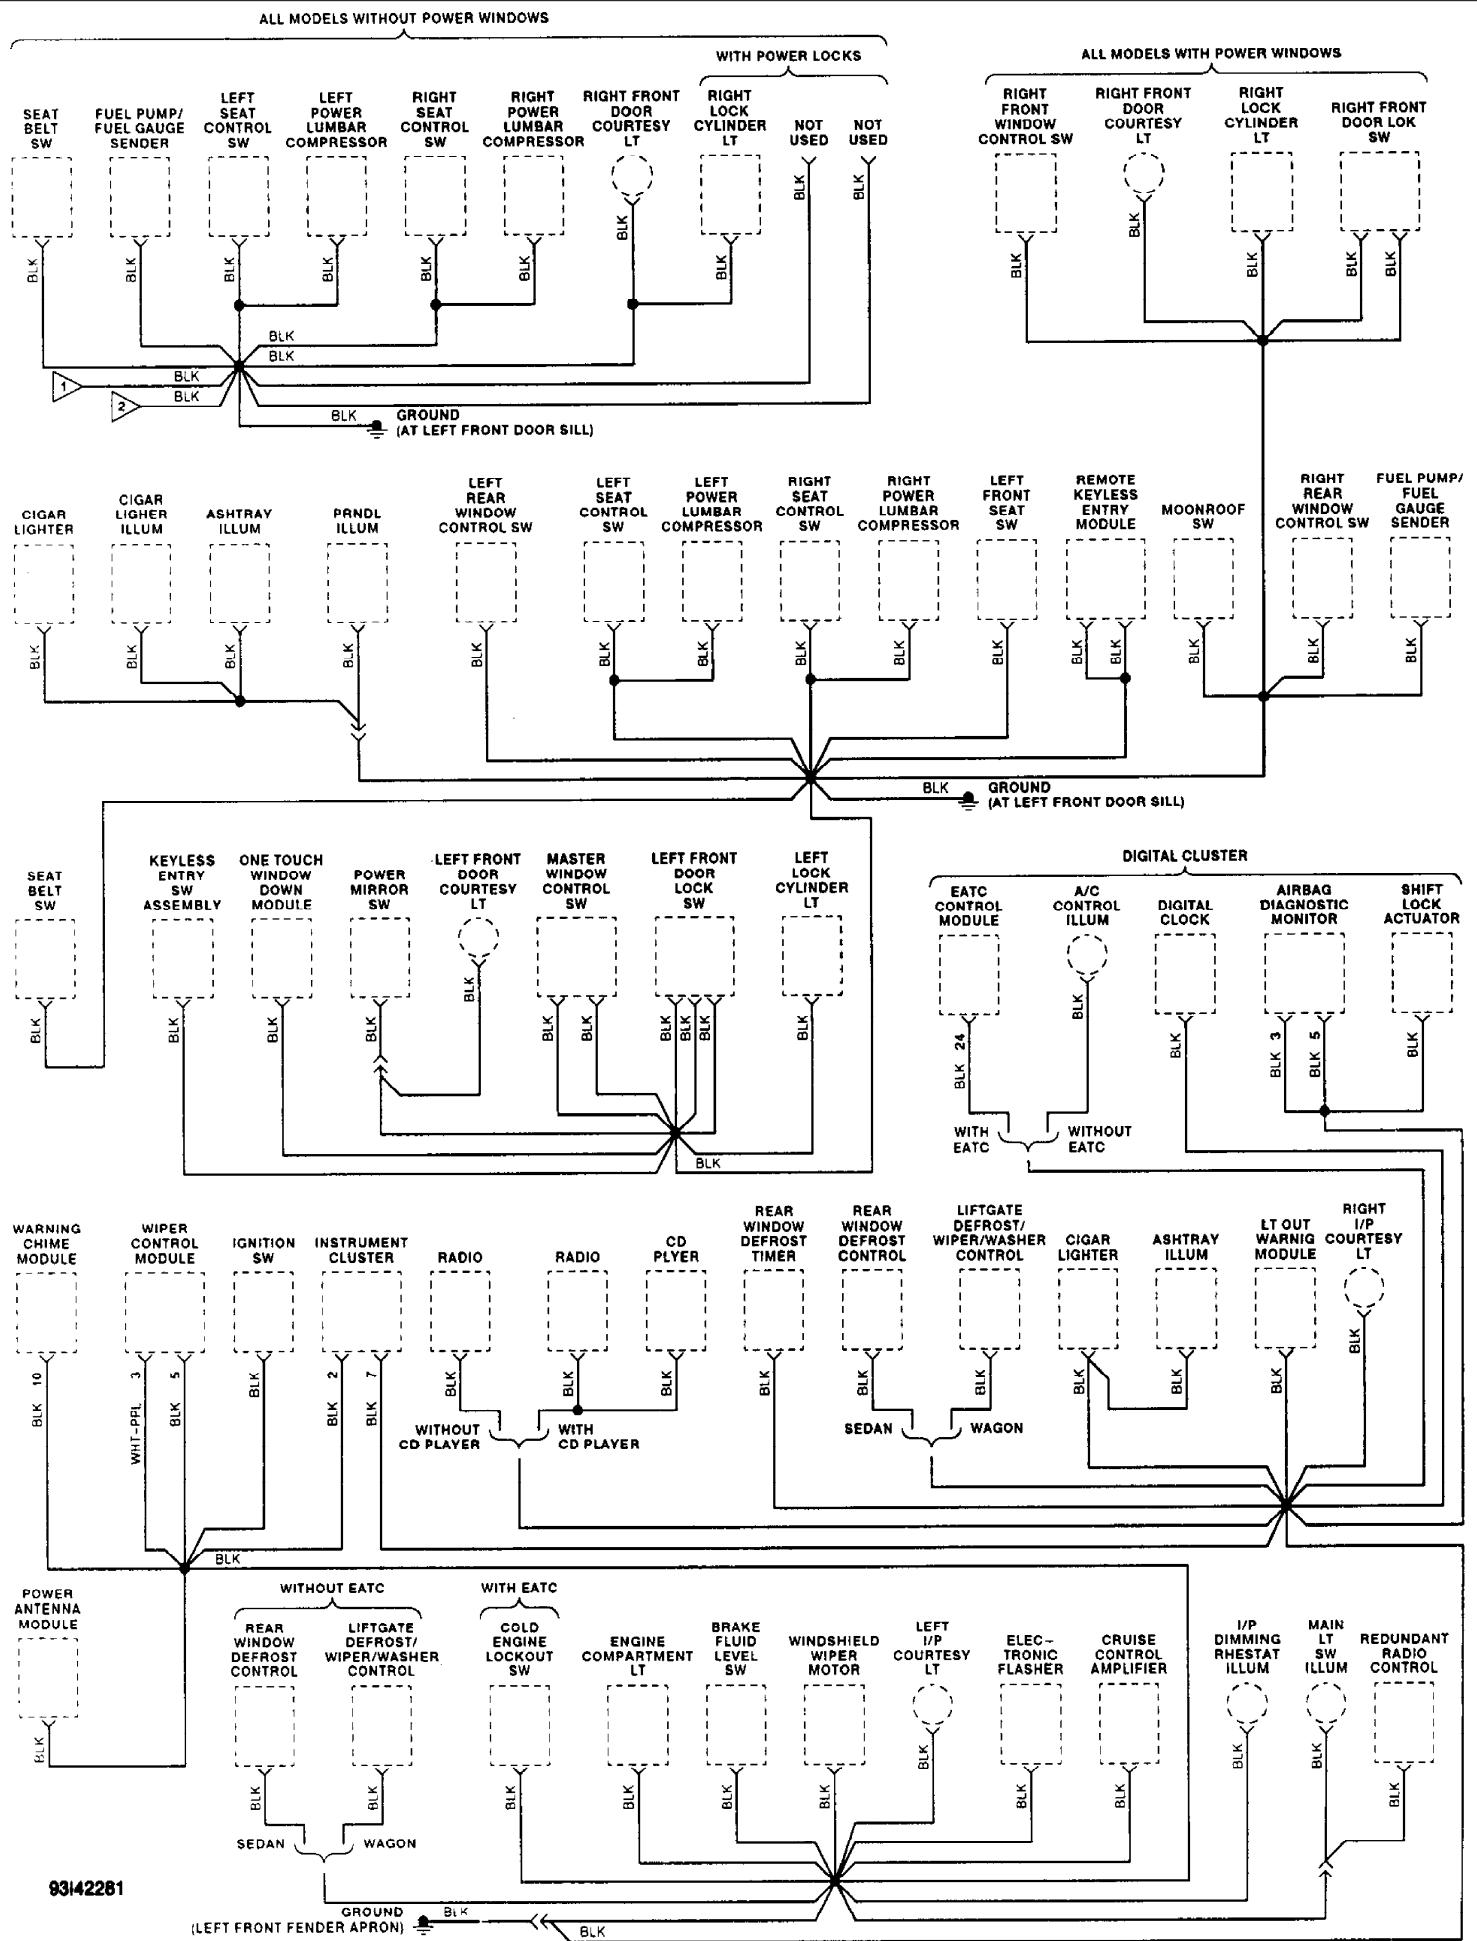


WIRING DIAGRAMS

Power & Ground Distribution

PAVLIN


Fig. 7: Ground Distribution (4 Of 5)
1993 Ford Taurus LX

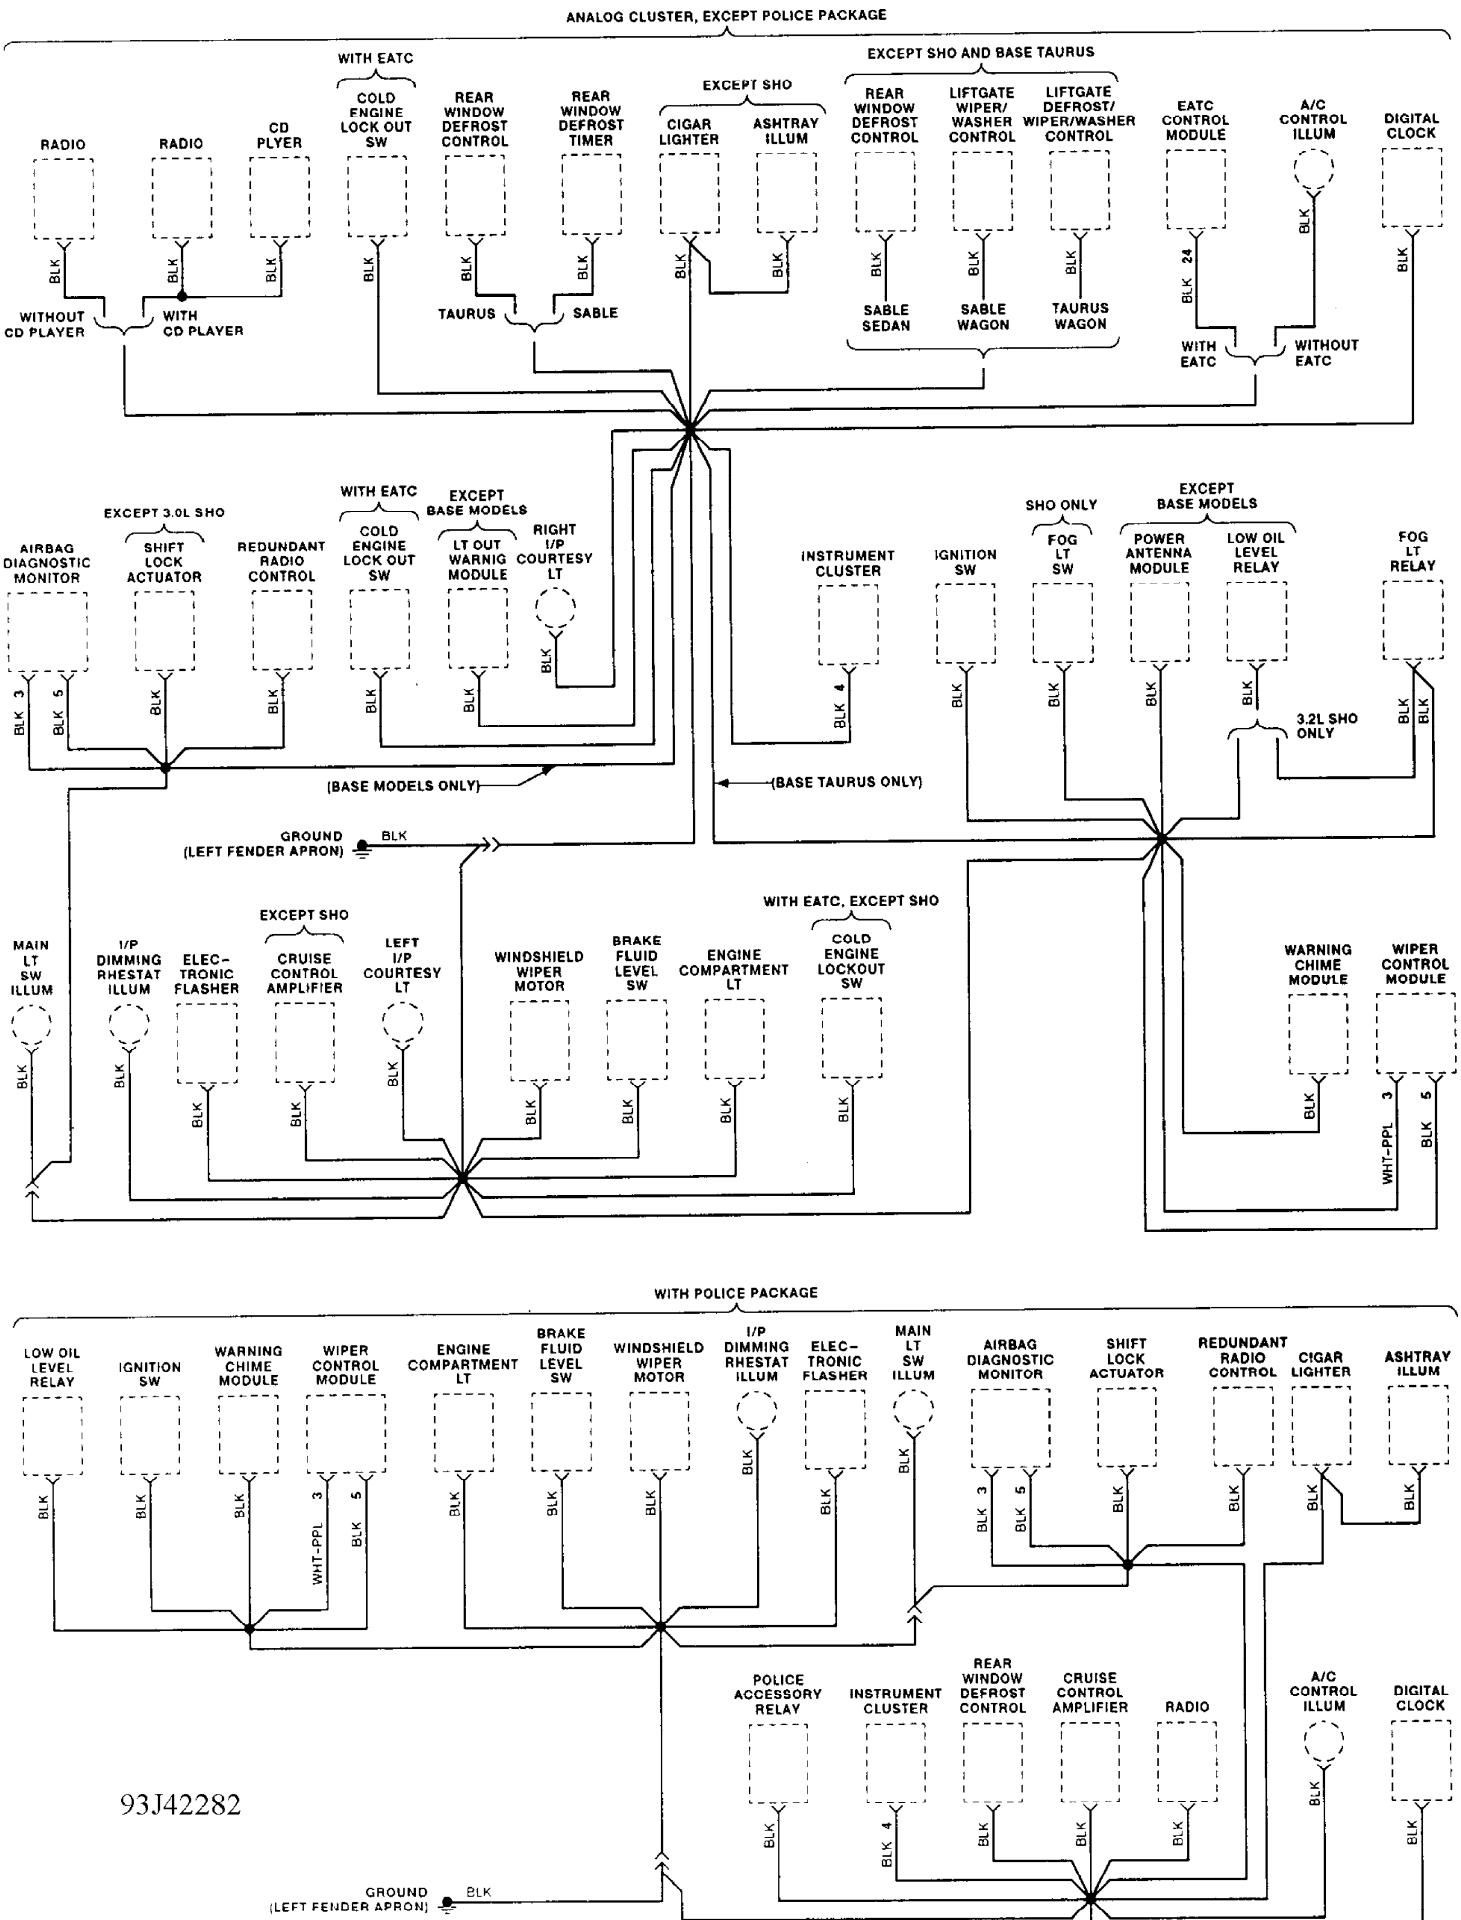

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN


Fig. 8: Ground Distribution (5 Of 5)
1993 Ford Taurus LX

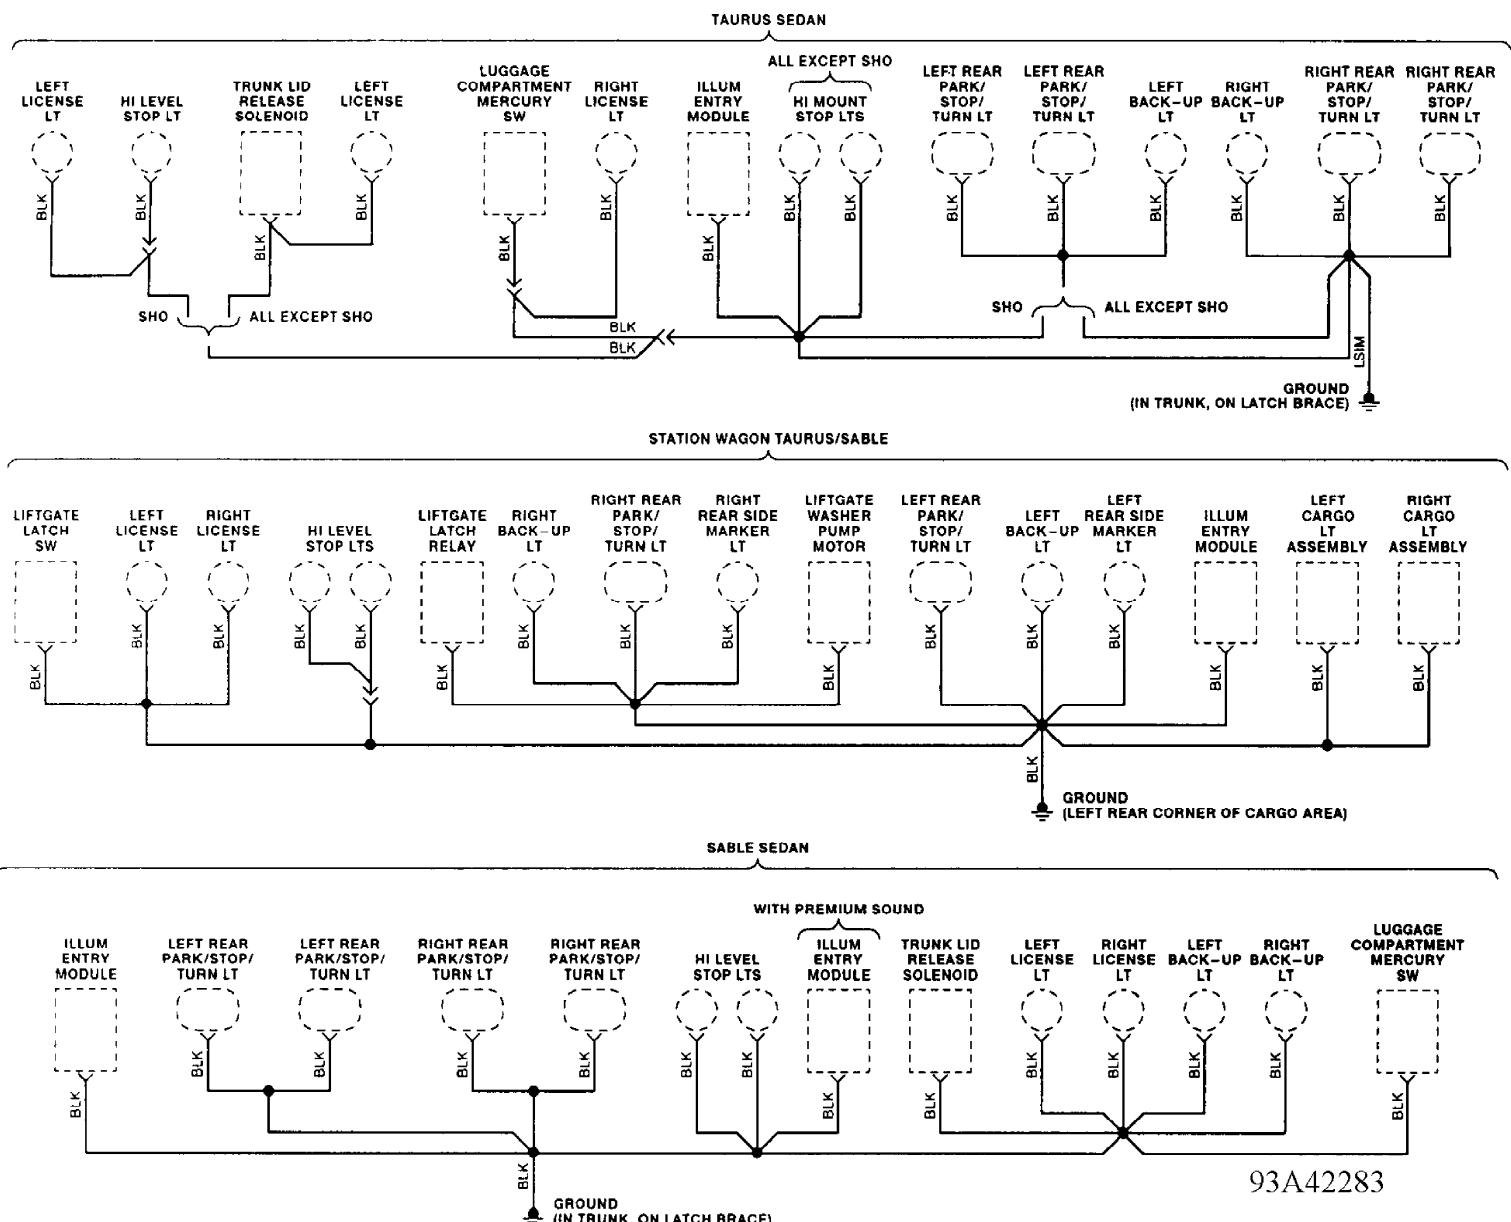

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 9: Power Distribution (1 Of 6)
1993 Ford Taurus LX

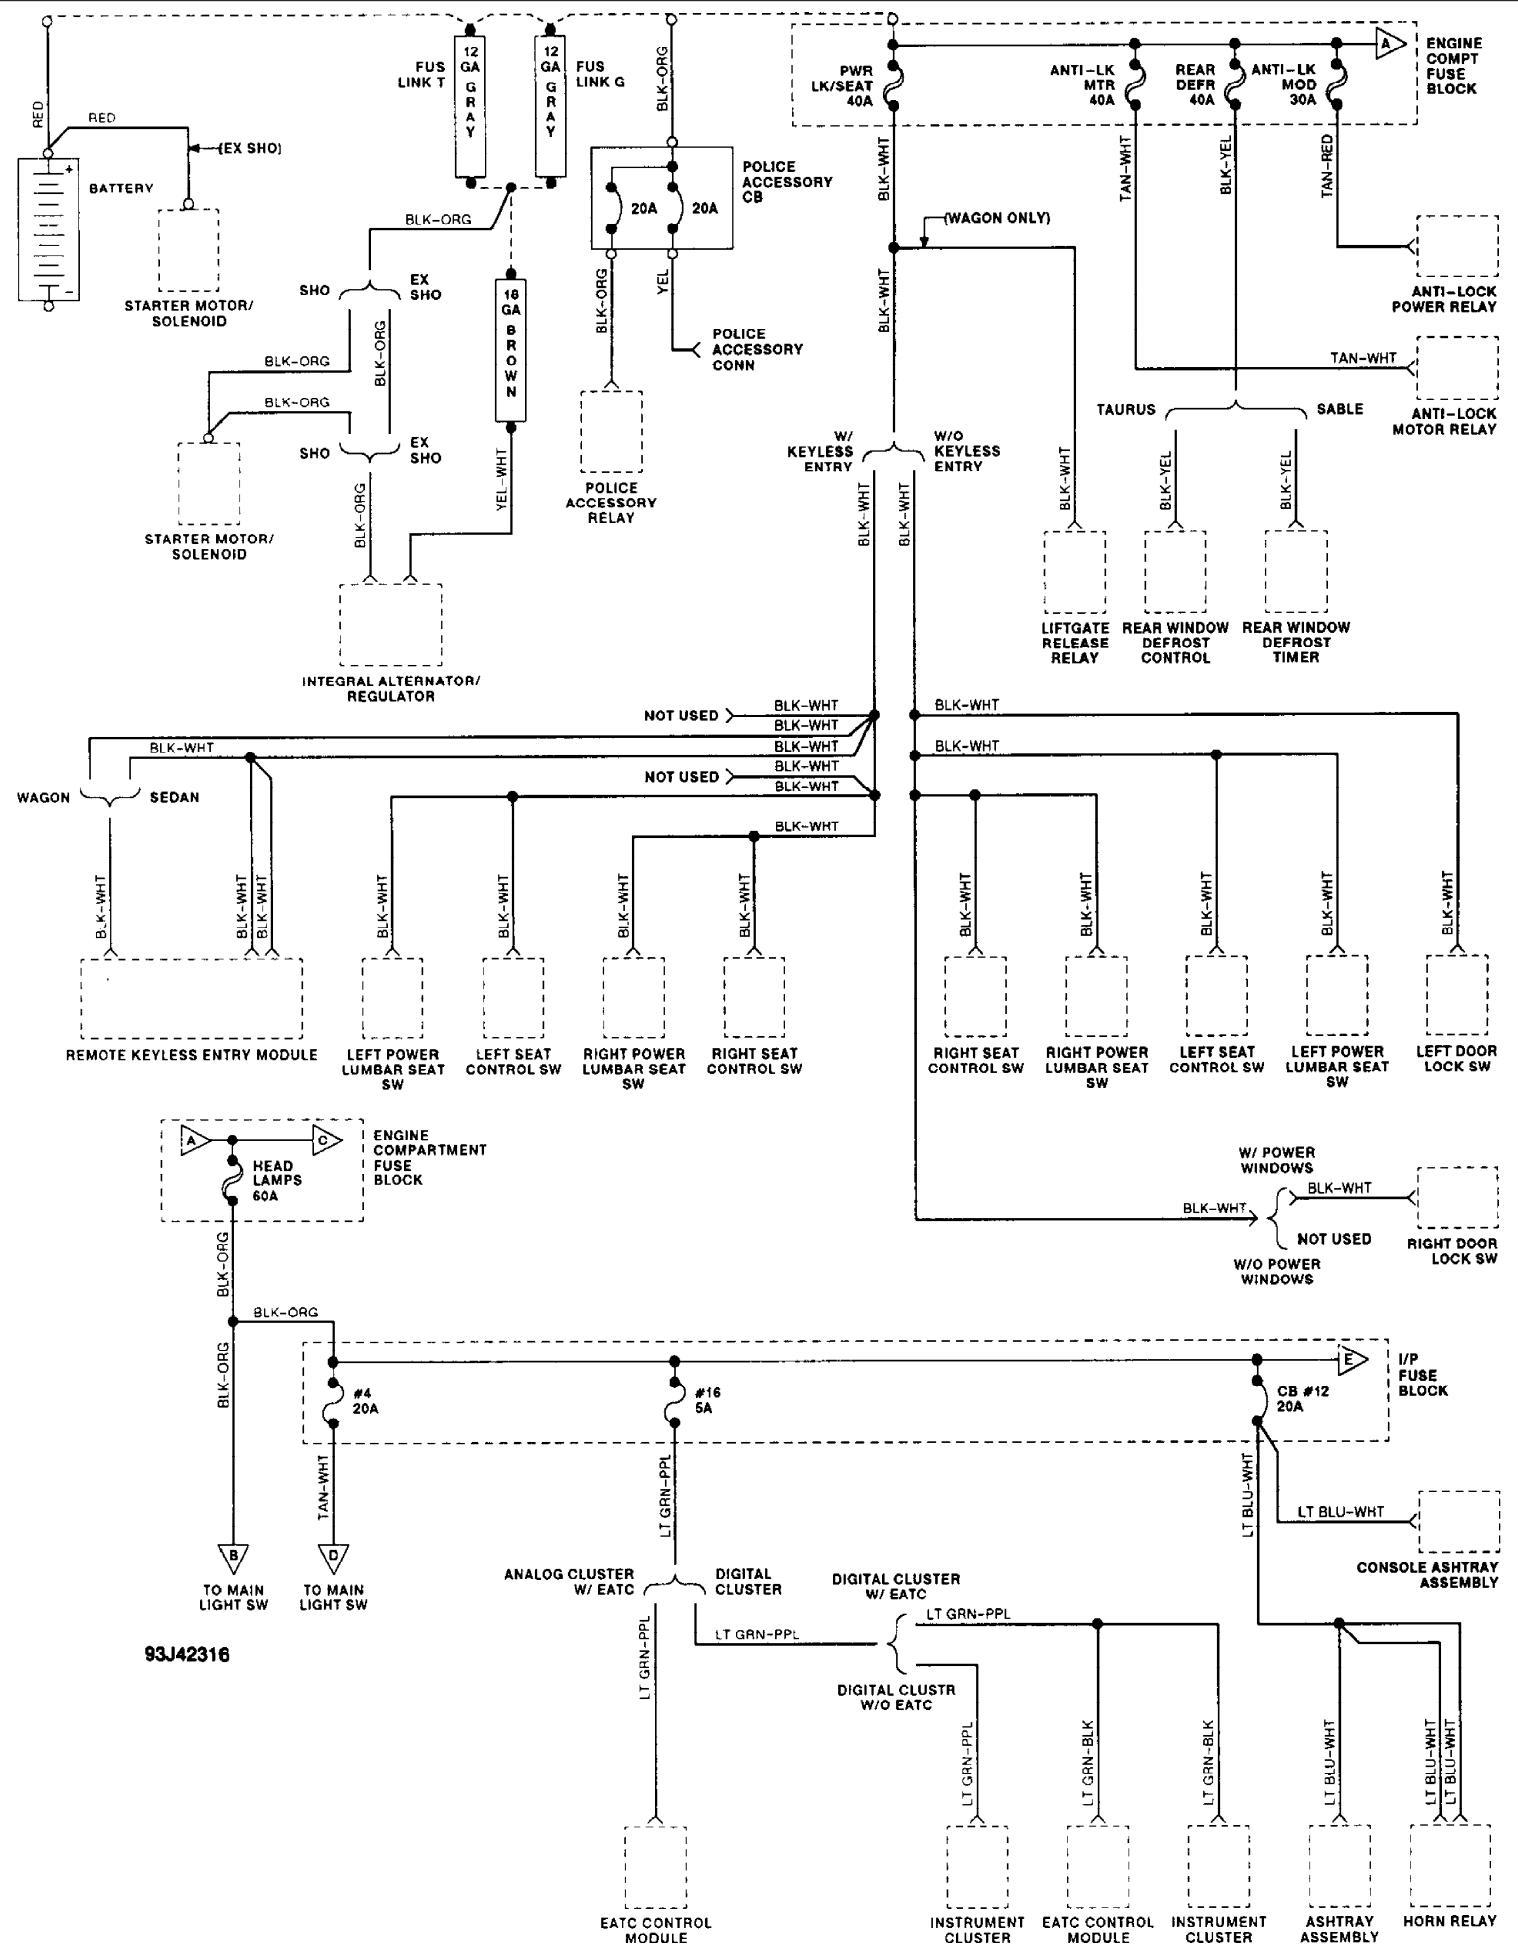


WIRING DIAGRAMS

Power & Ground Distribution

PAVLIN

Fig. 10: Power Distribution (2 Of 6)
1993 Ford Taurus LX

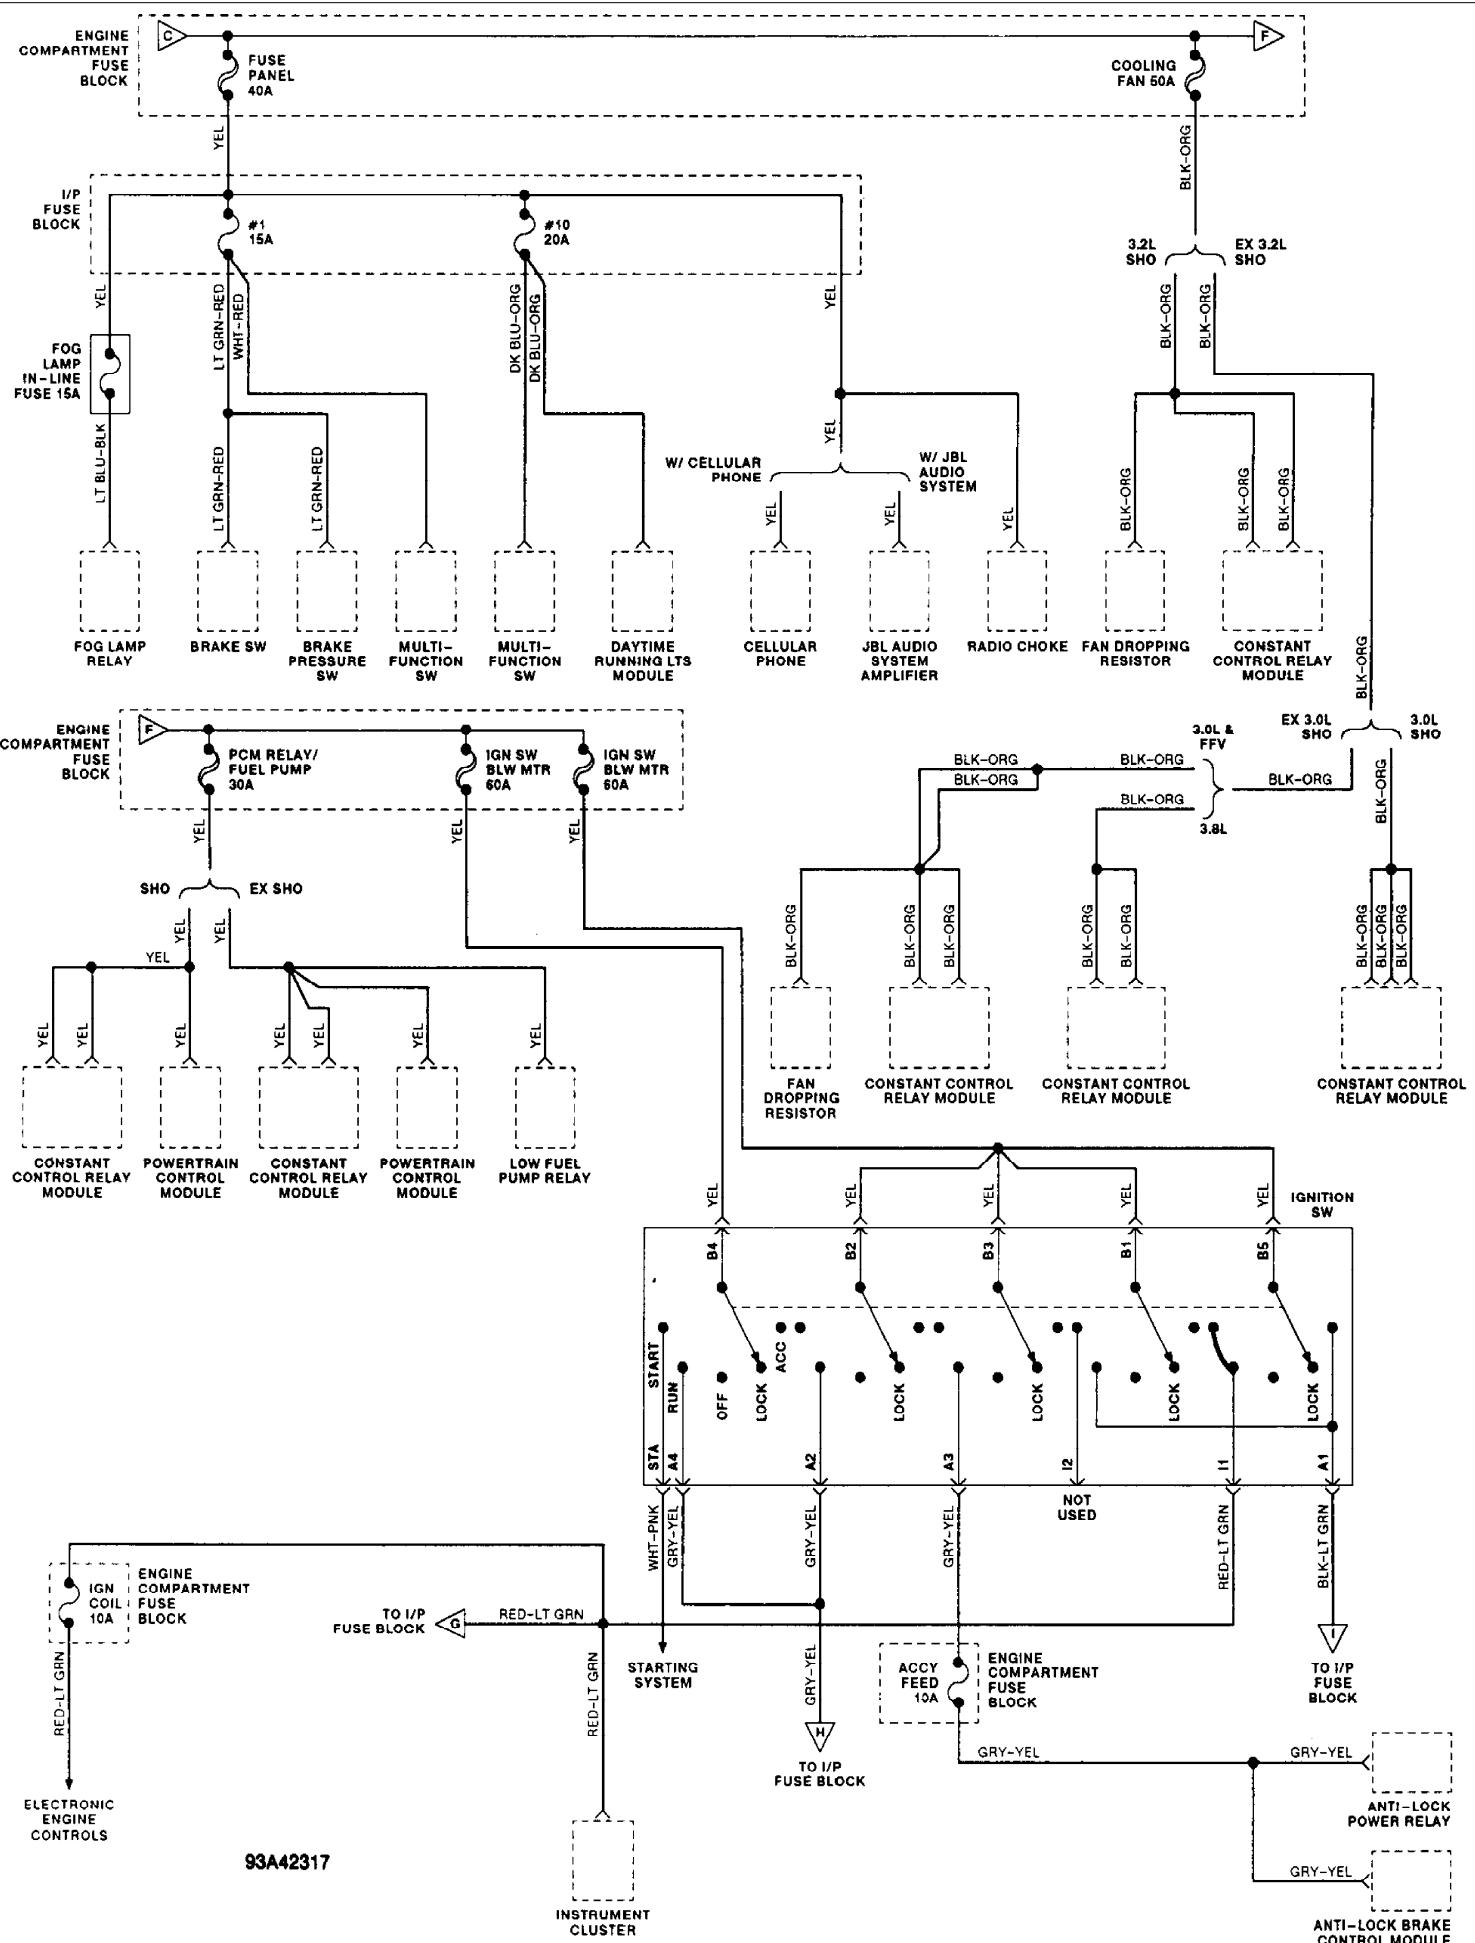


WIRING DIAGRAMS

Power & Ground Distribution

PAVLIN

Fig. 11: Power Distribution (3 Of 6)
1993 Ford Taurus LX

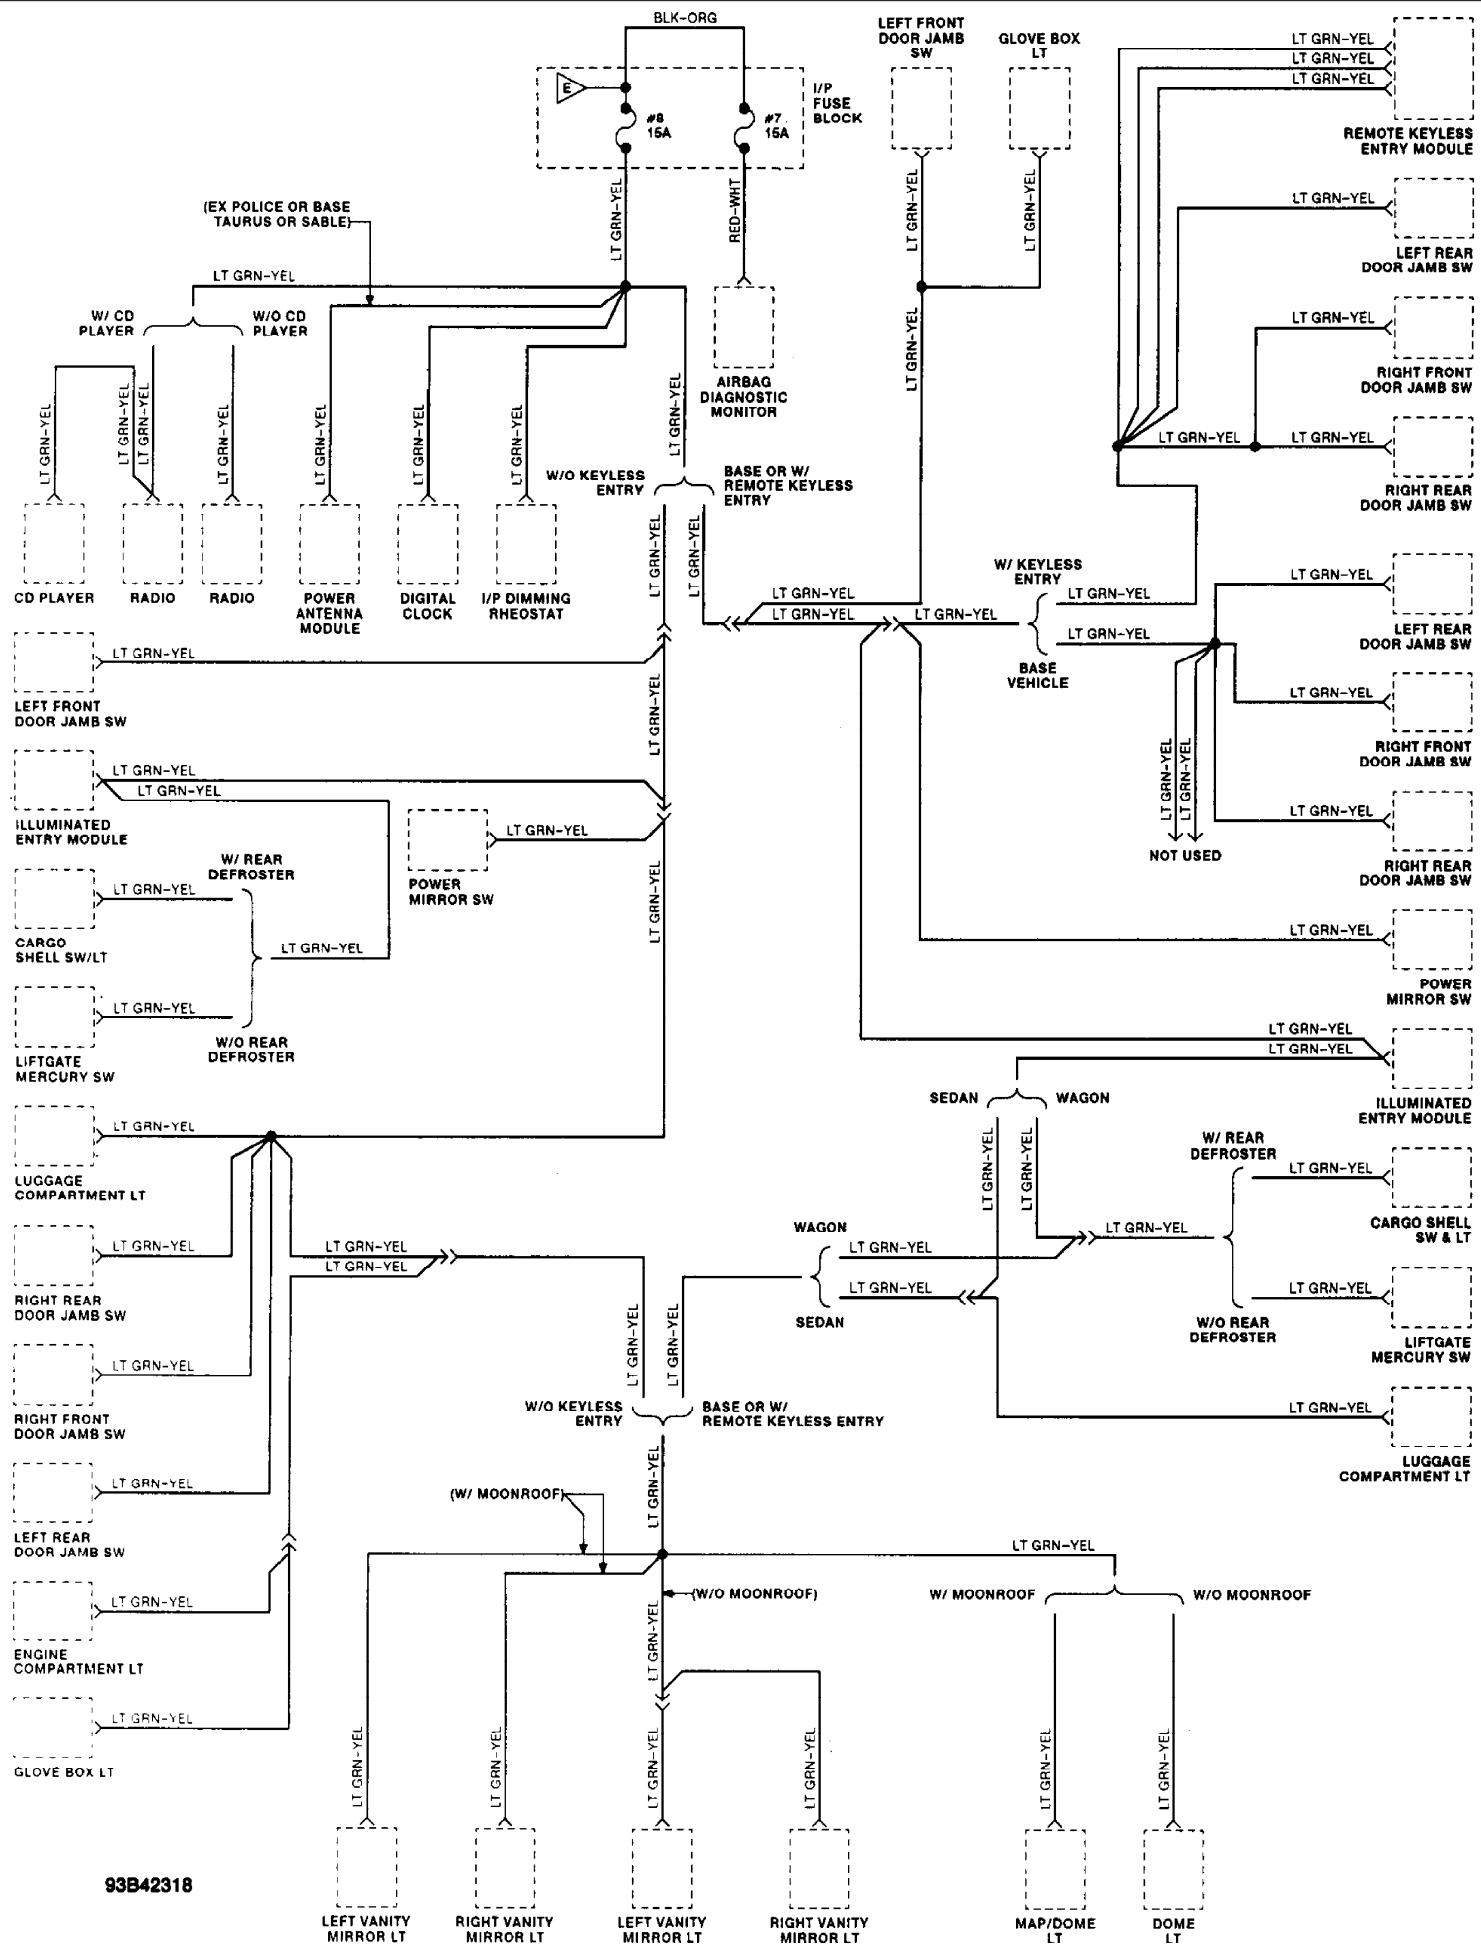


WIRING DIAGRAMS

Power & Ground Distribution

PAVLIN

Fig. 12: Power Distribution (4 Of 6)
1993 Ford Taurus LX

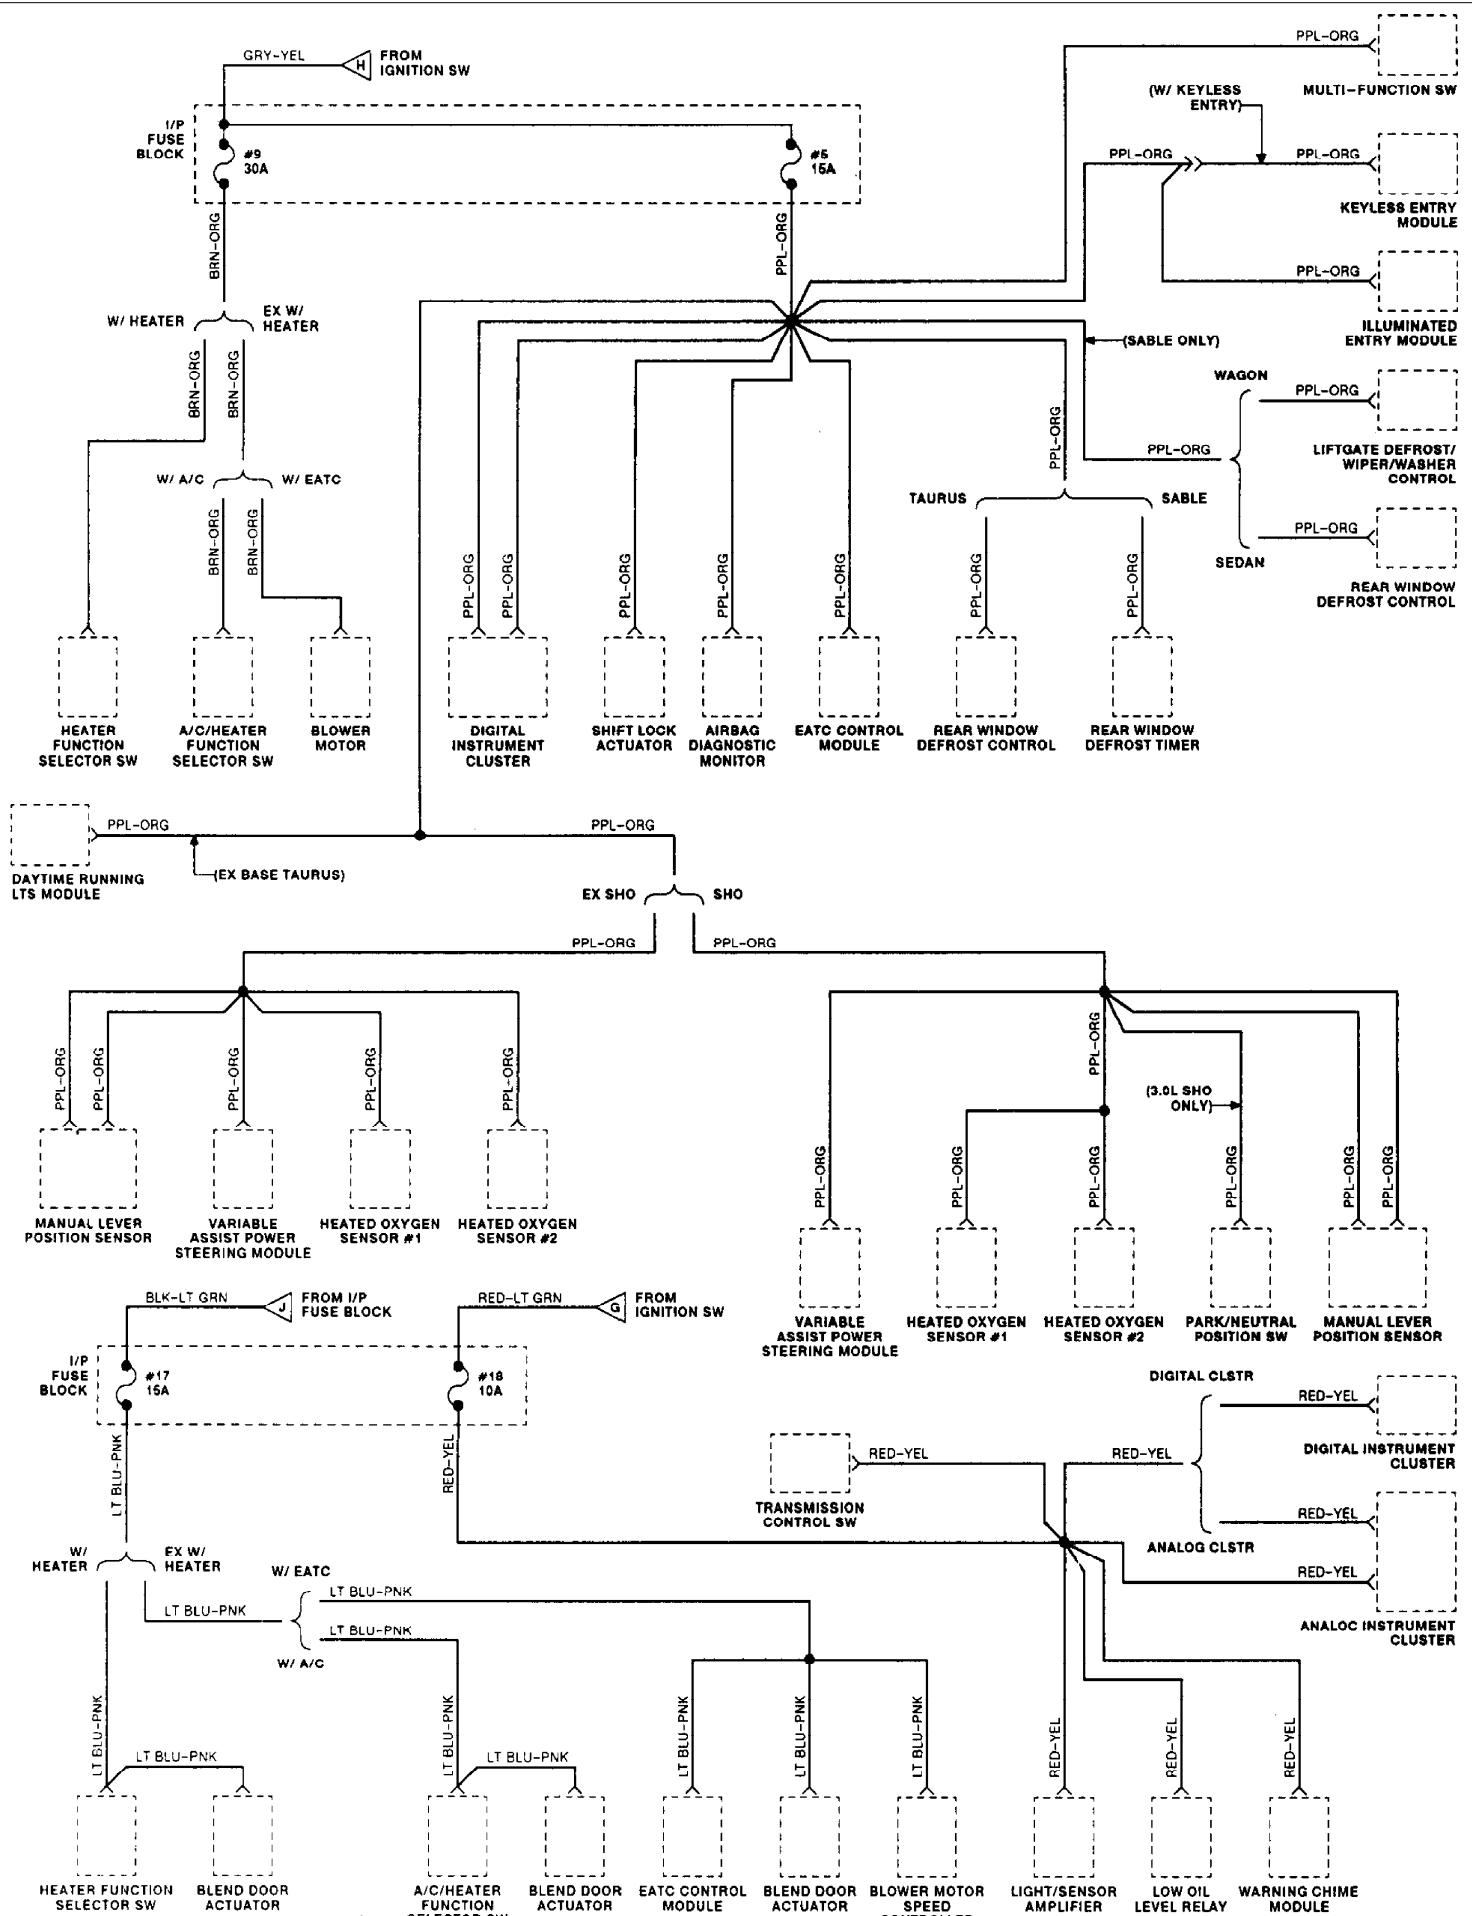


93C42319

WIRING DIAGRAMS

Power & Ground Distribution

PAVLIN

Fig. 13: Power Distribution (5 Of 6)
1993 Ford Taurus LX

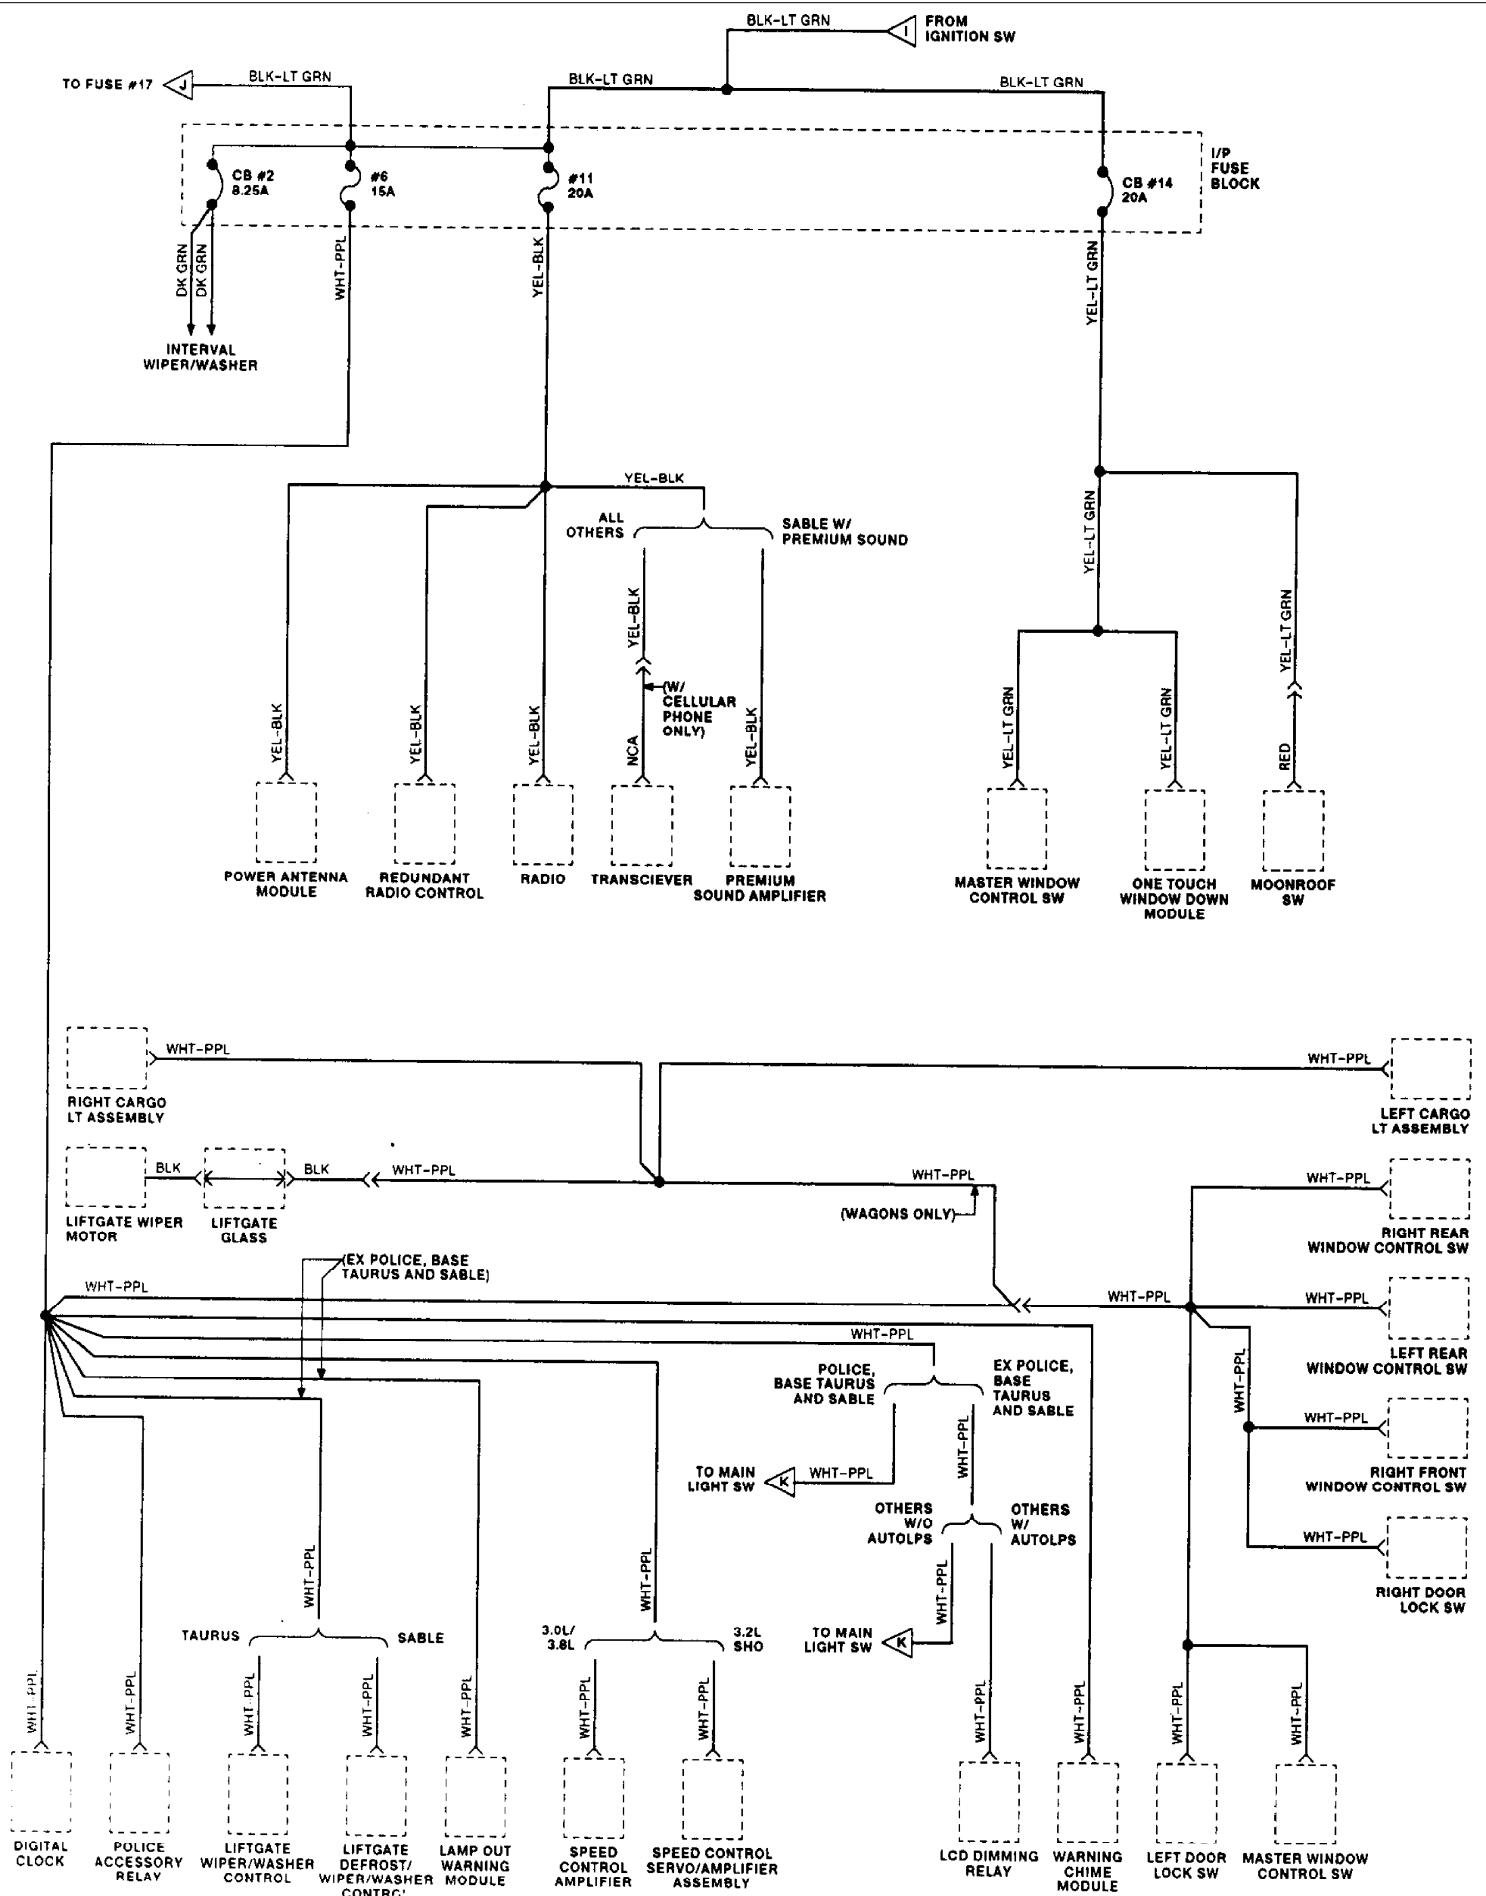


93F42320

WIRING DIAGRAMS

Power & Ground Distribution

PAVLIN

Fig. 14: Power Distribution (6 Of 6)
1993 Ford Taurus LX

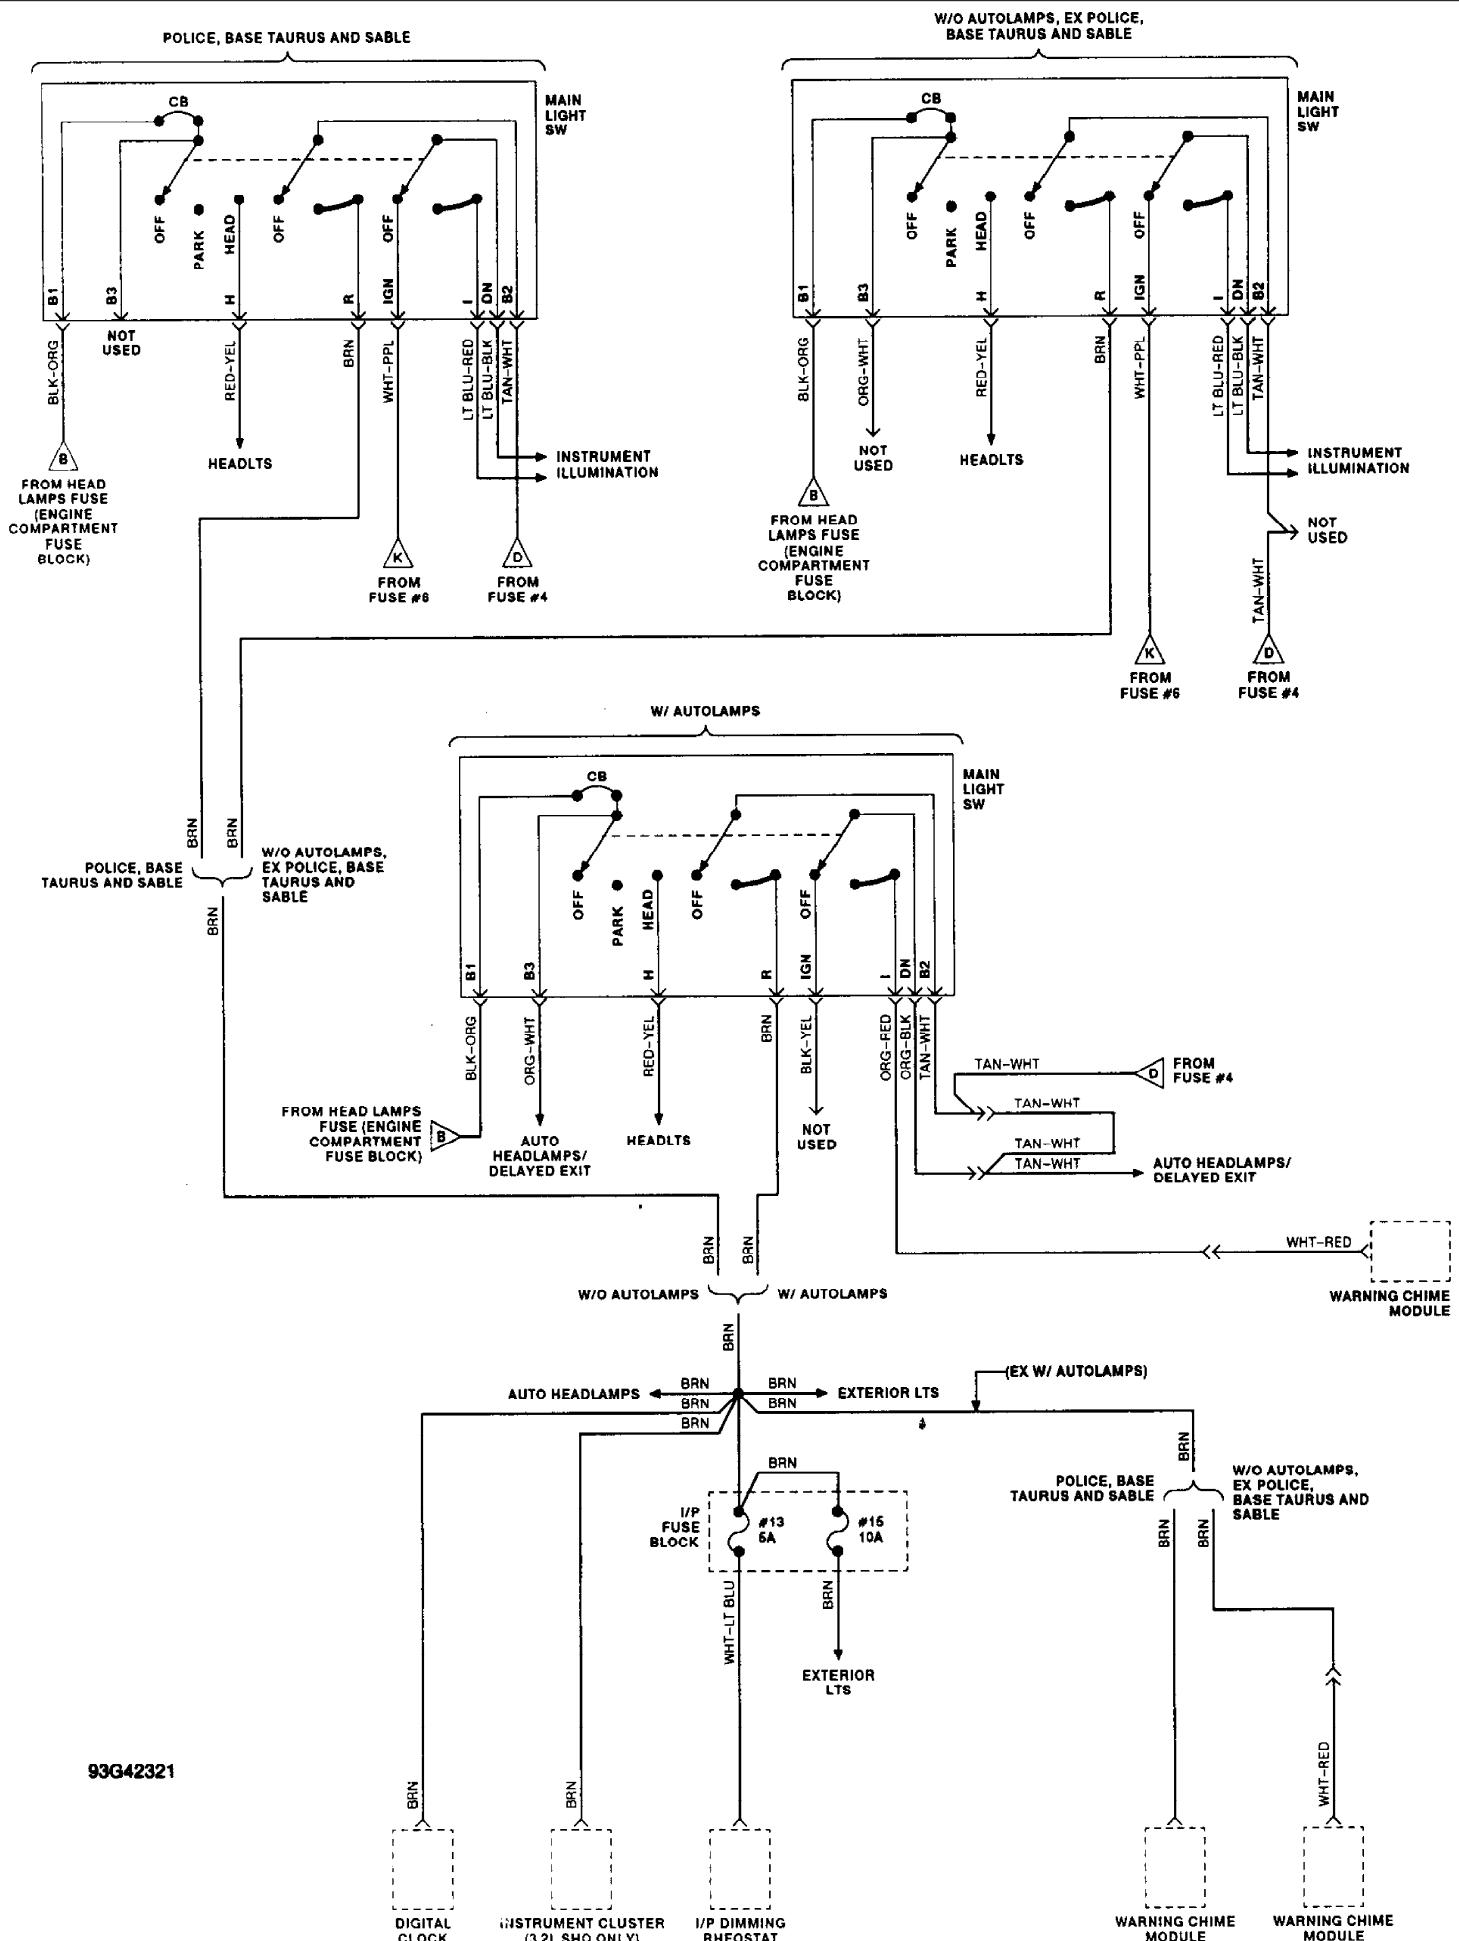


93G42321

WIRING DIAGRAMS

Power & Ground Distribution

PAVLIN

Fig. 15: Daytime Running Lights (Manual Base)
1993 Ford Taurus LX

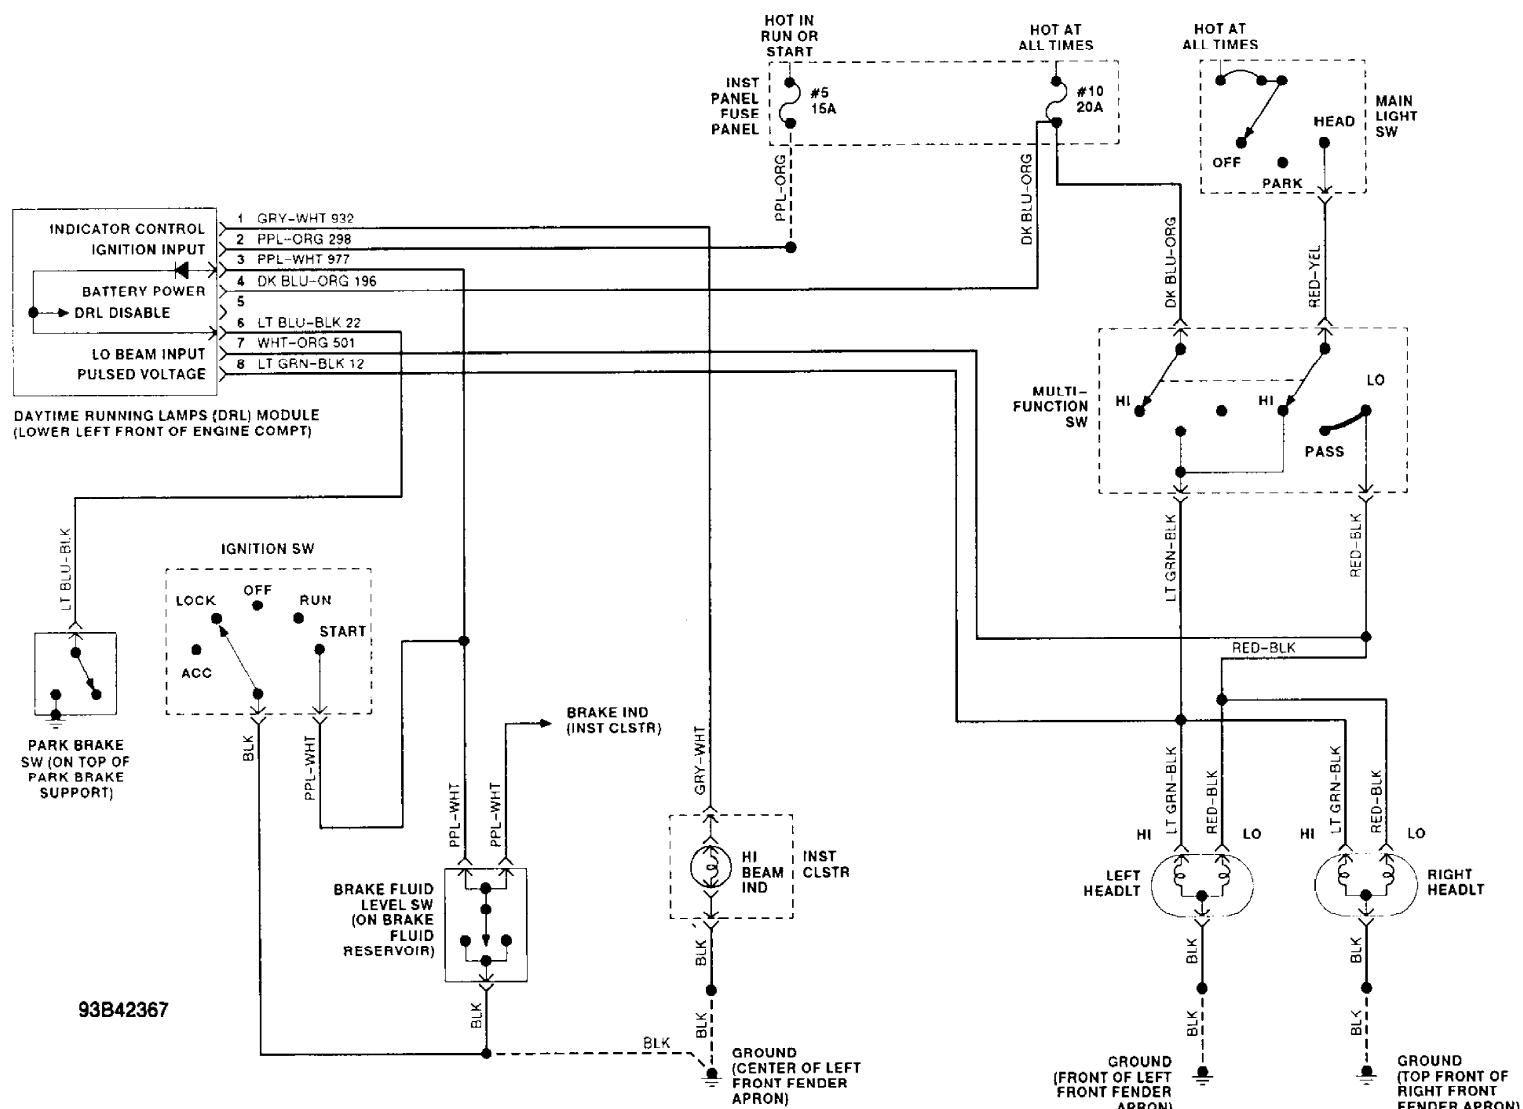


WIRING DIAGRAMS

Power & Ground Distribution

PAVLIN

Fig. 16: Daytime Running Lights (Manual - Except Base)
1993 Ford Taurus LX

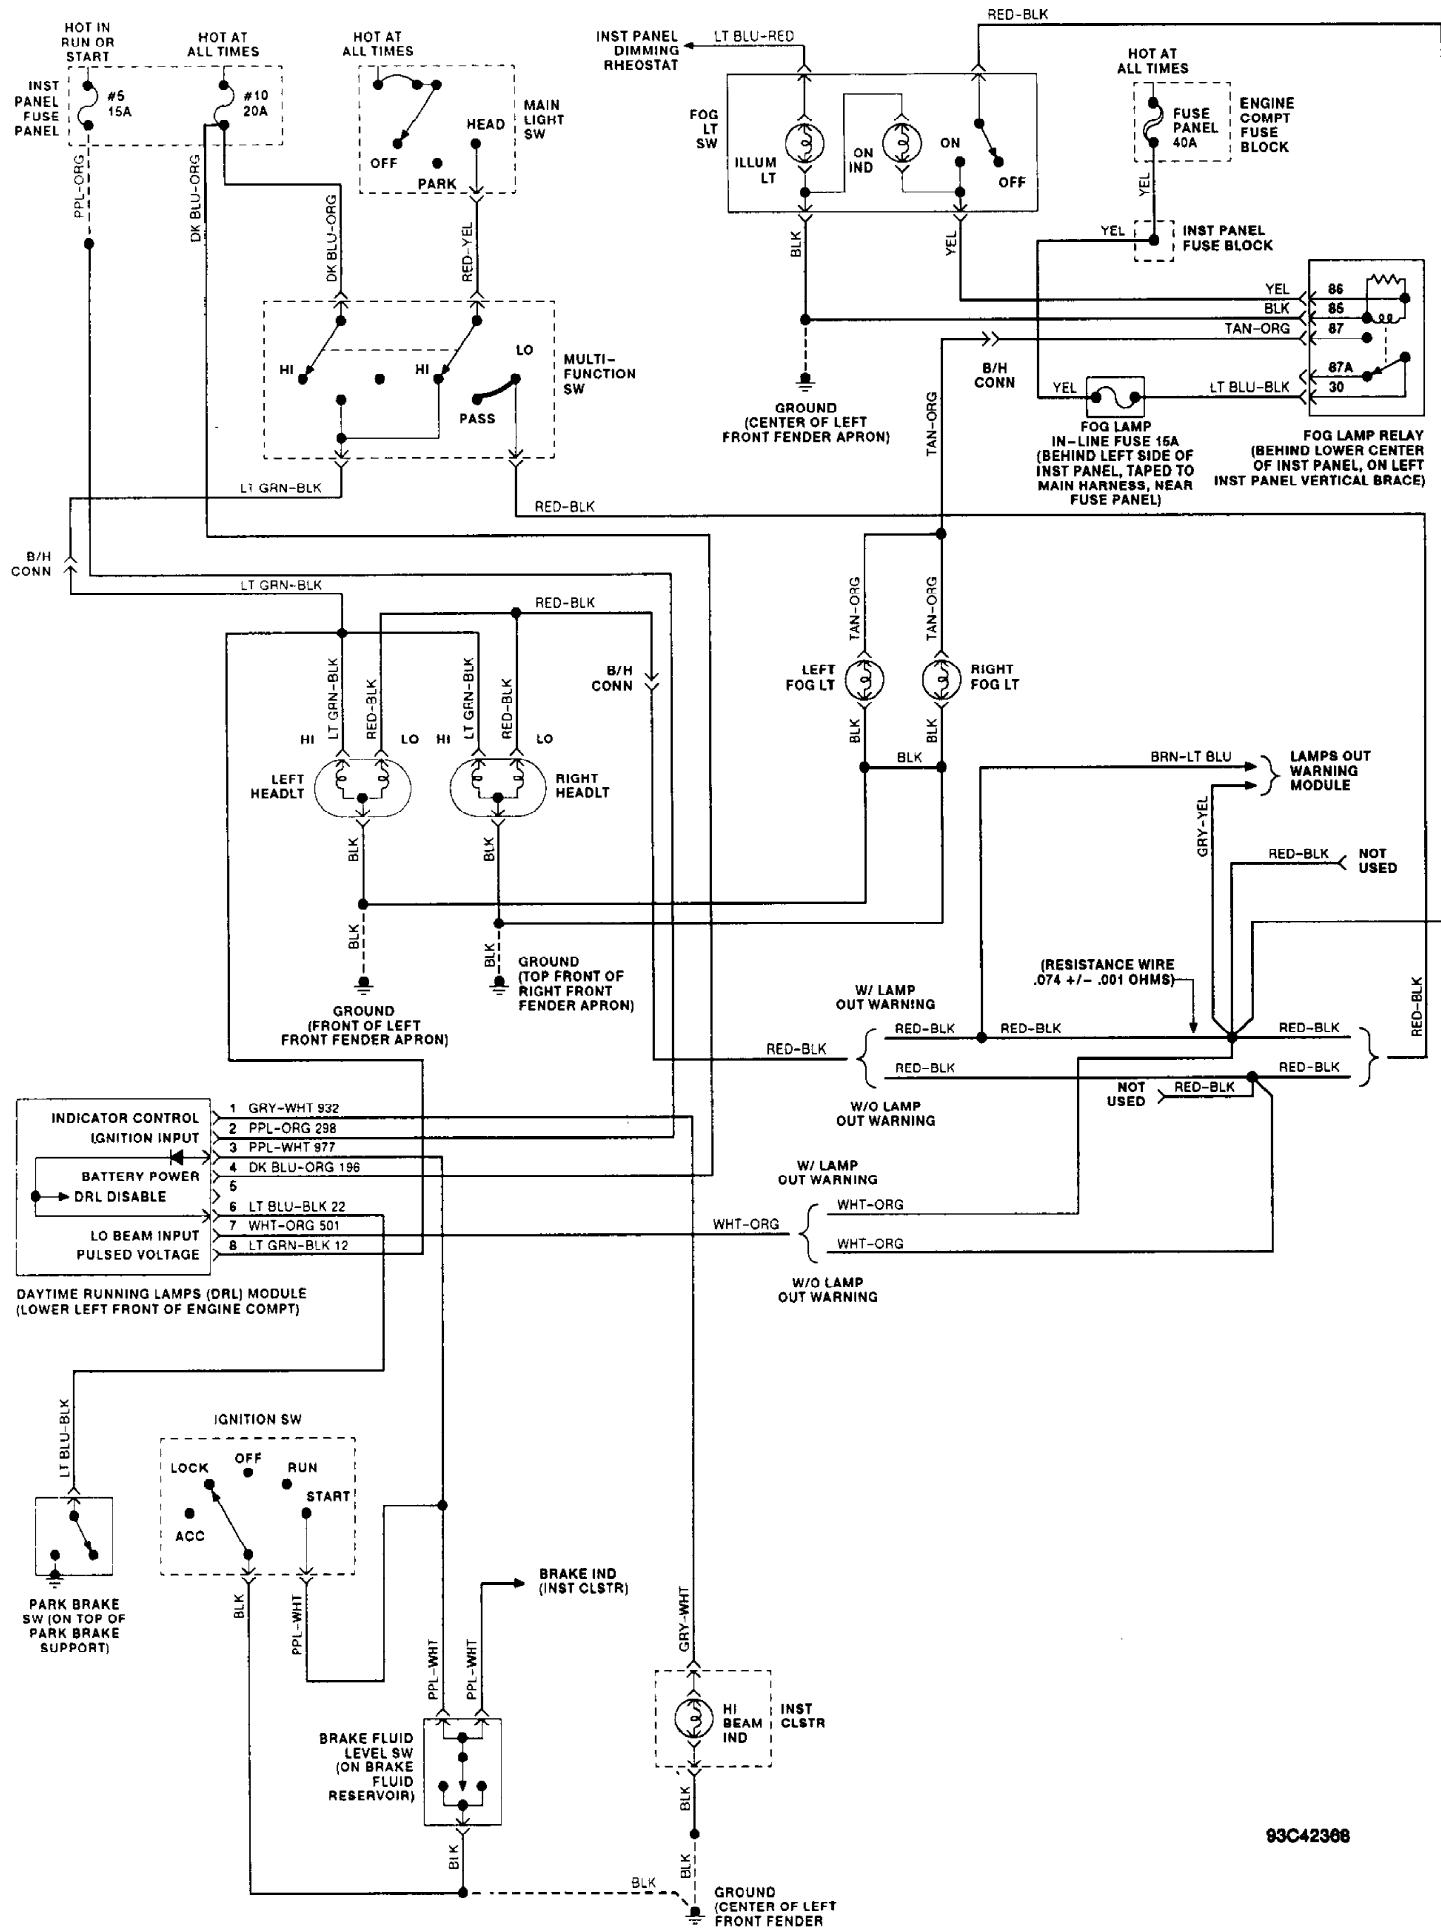


WIRING DIAGRAMS

Power & Ground Distribution

PAVLIN

Fig. 17: Daytime Running Lights (Automatic)
1993 Ford Taurus LX

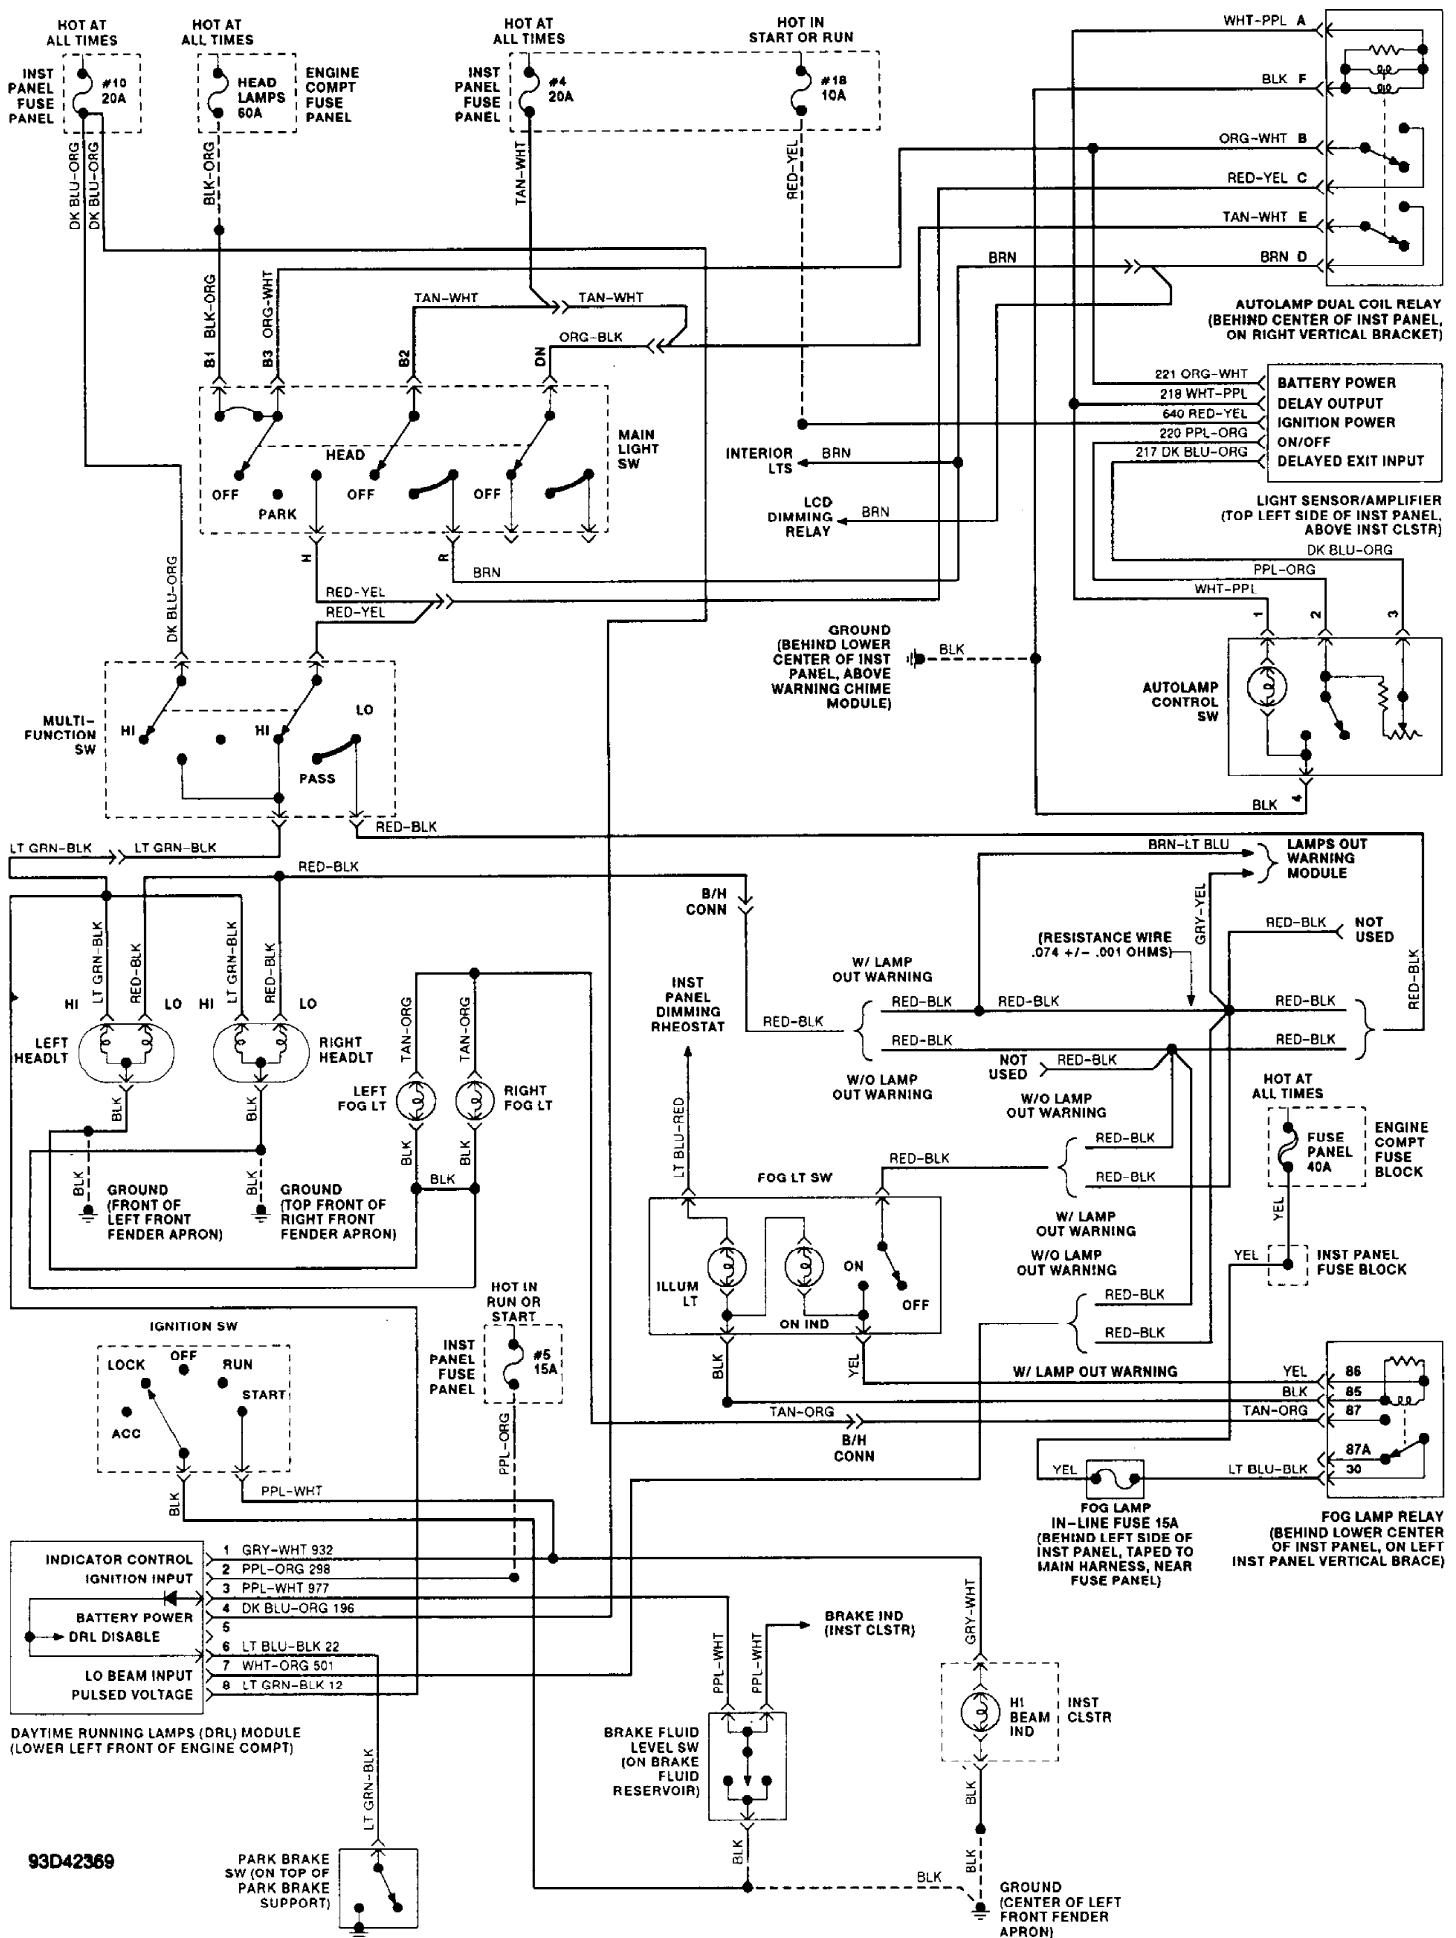


WIRING DIAGRAMS

Power & Ground Distribution

PAVLIN

Fig. 18: EEC-IV Wiring Diagram (3.0L Except SHO 1 of 2)
1993 Ford Taurus LX

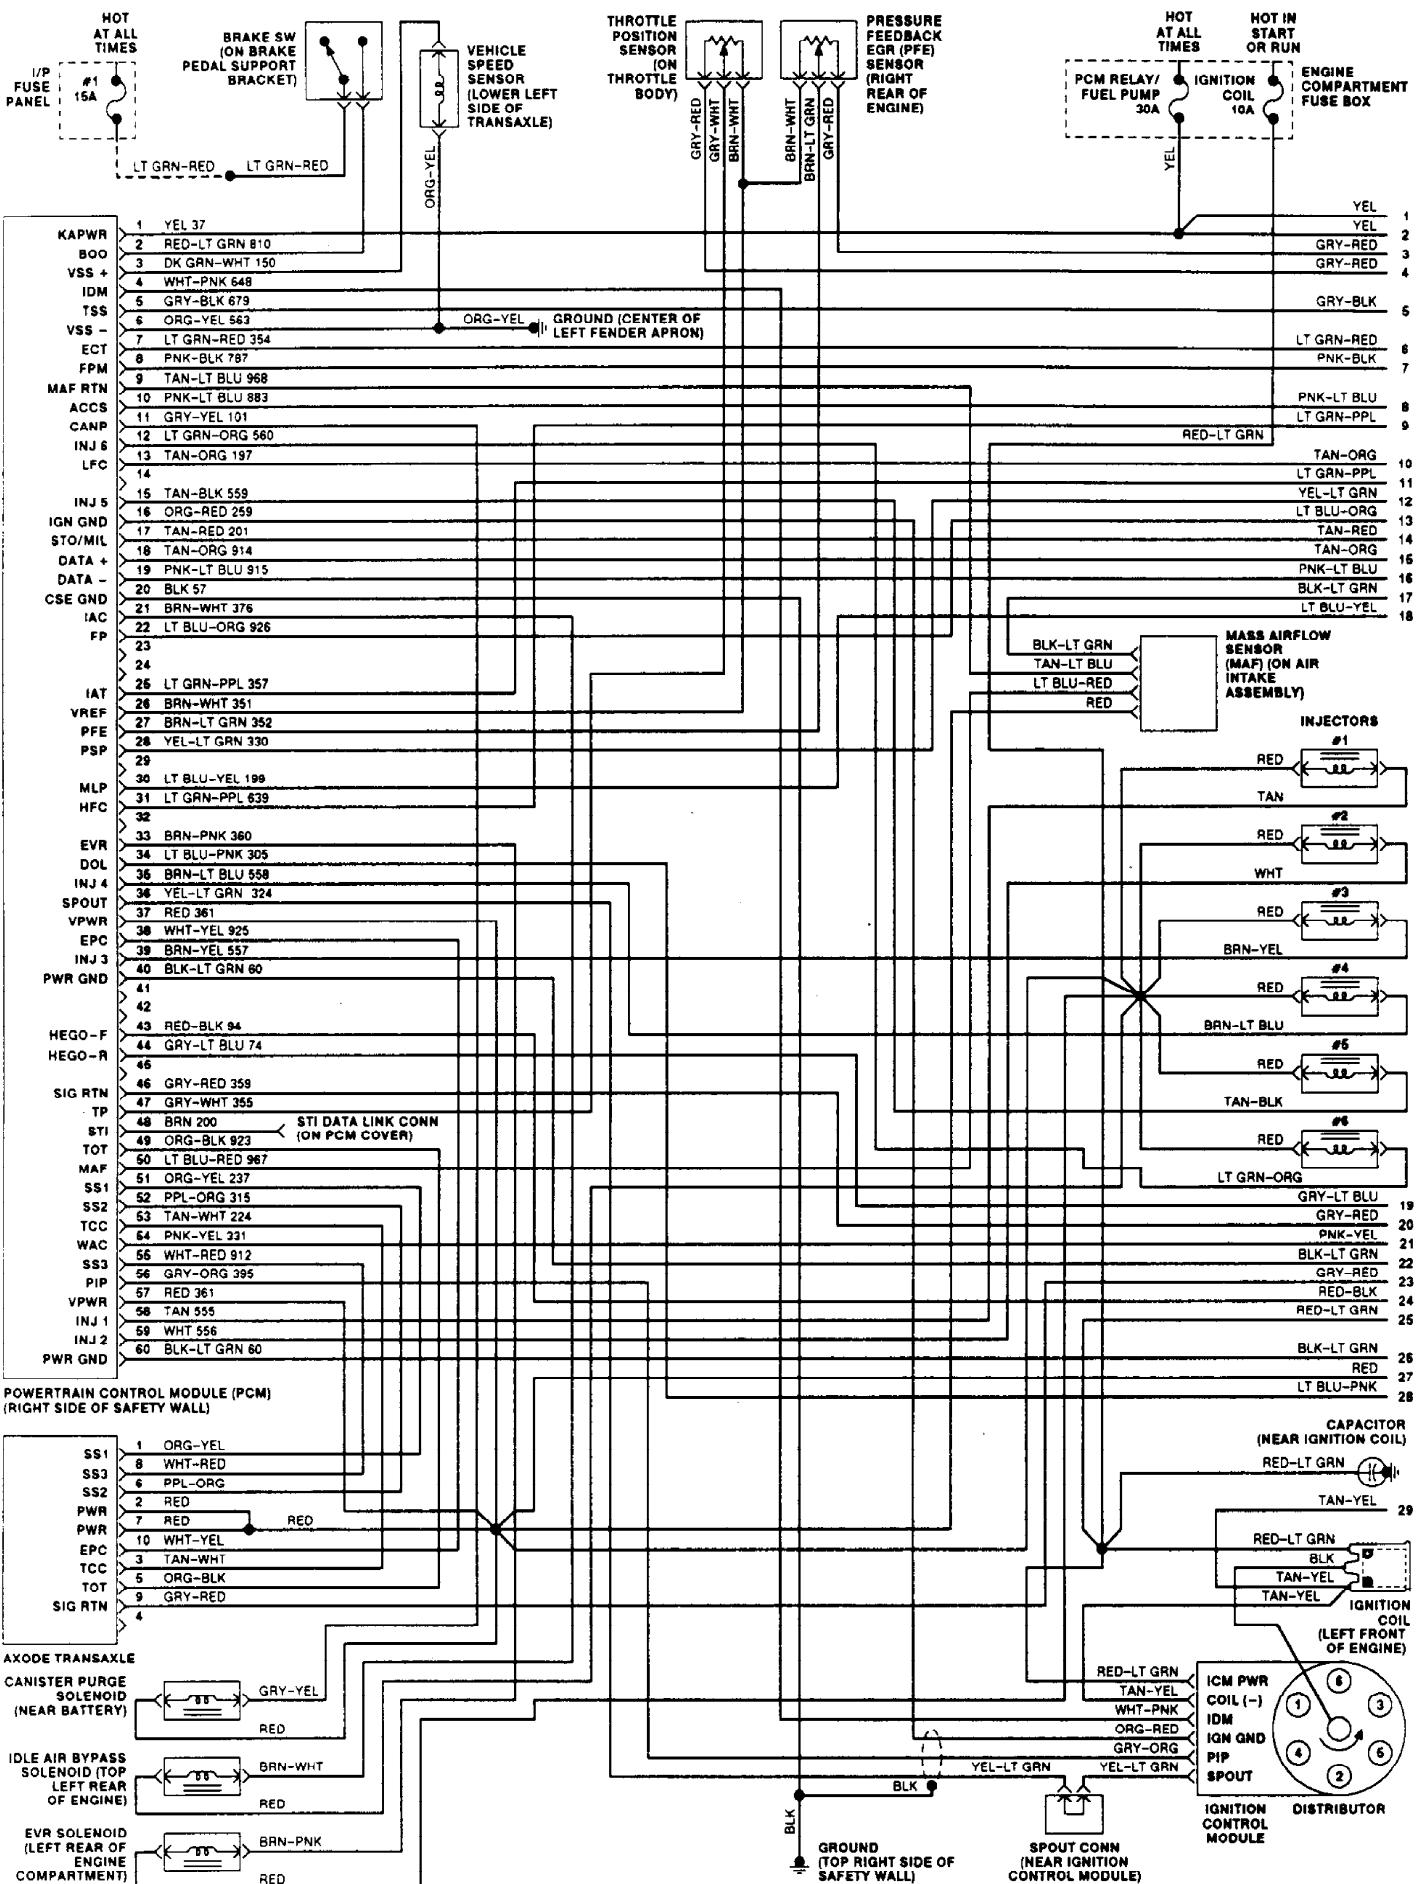


WIRING DIAGRAMS

Power & Ground Distribution

PAVLIN

Fig. 19: EEC-IV Wiring Diagram (3.0L Except SHO 2 of 2)
1993 Ford Taurus LX

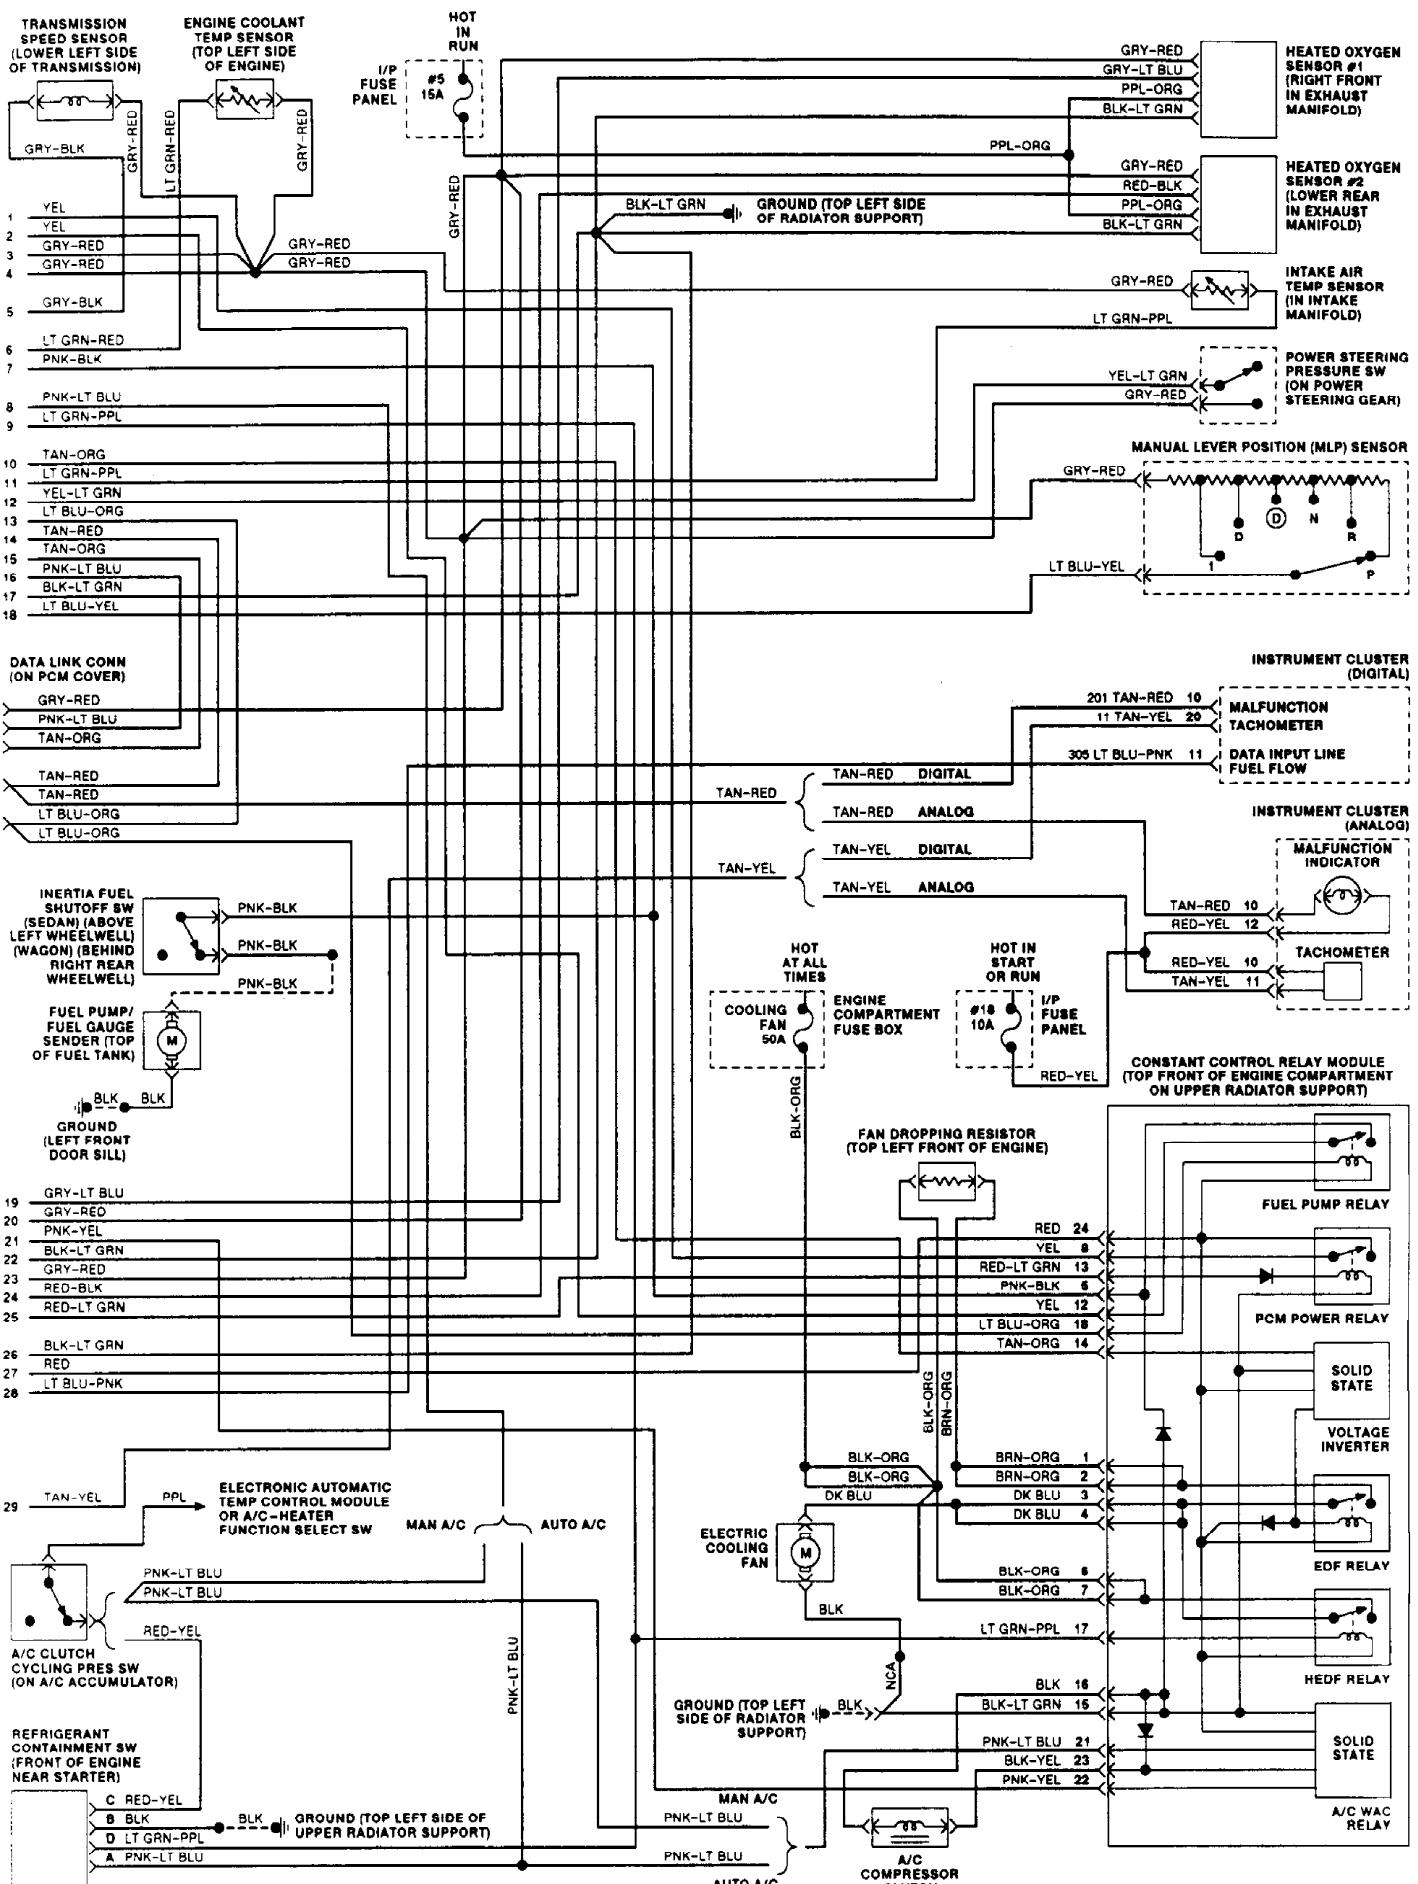


93A40659

WIRING DIAGRAMS

Power & Ground Distribution

PAVLIN

Fig. 20: EEC-IV Wiring Diagram (3.8L - 1 of 2)
1993 Ford Taurus LX

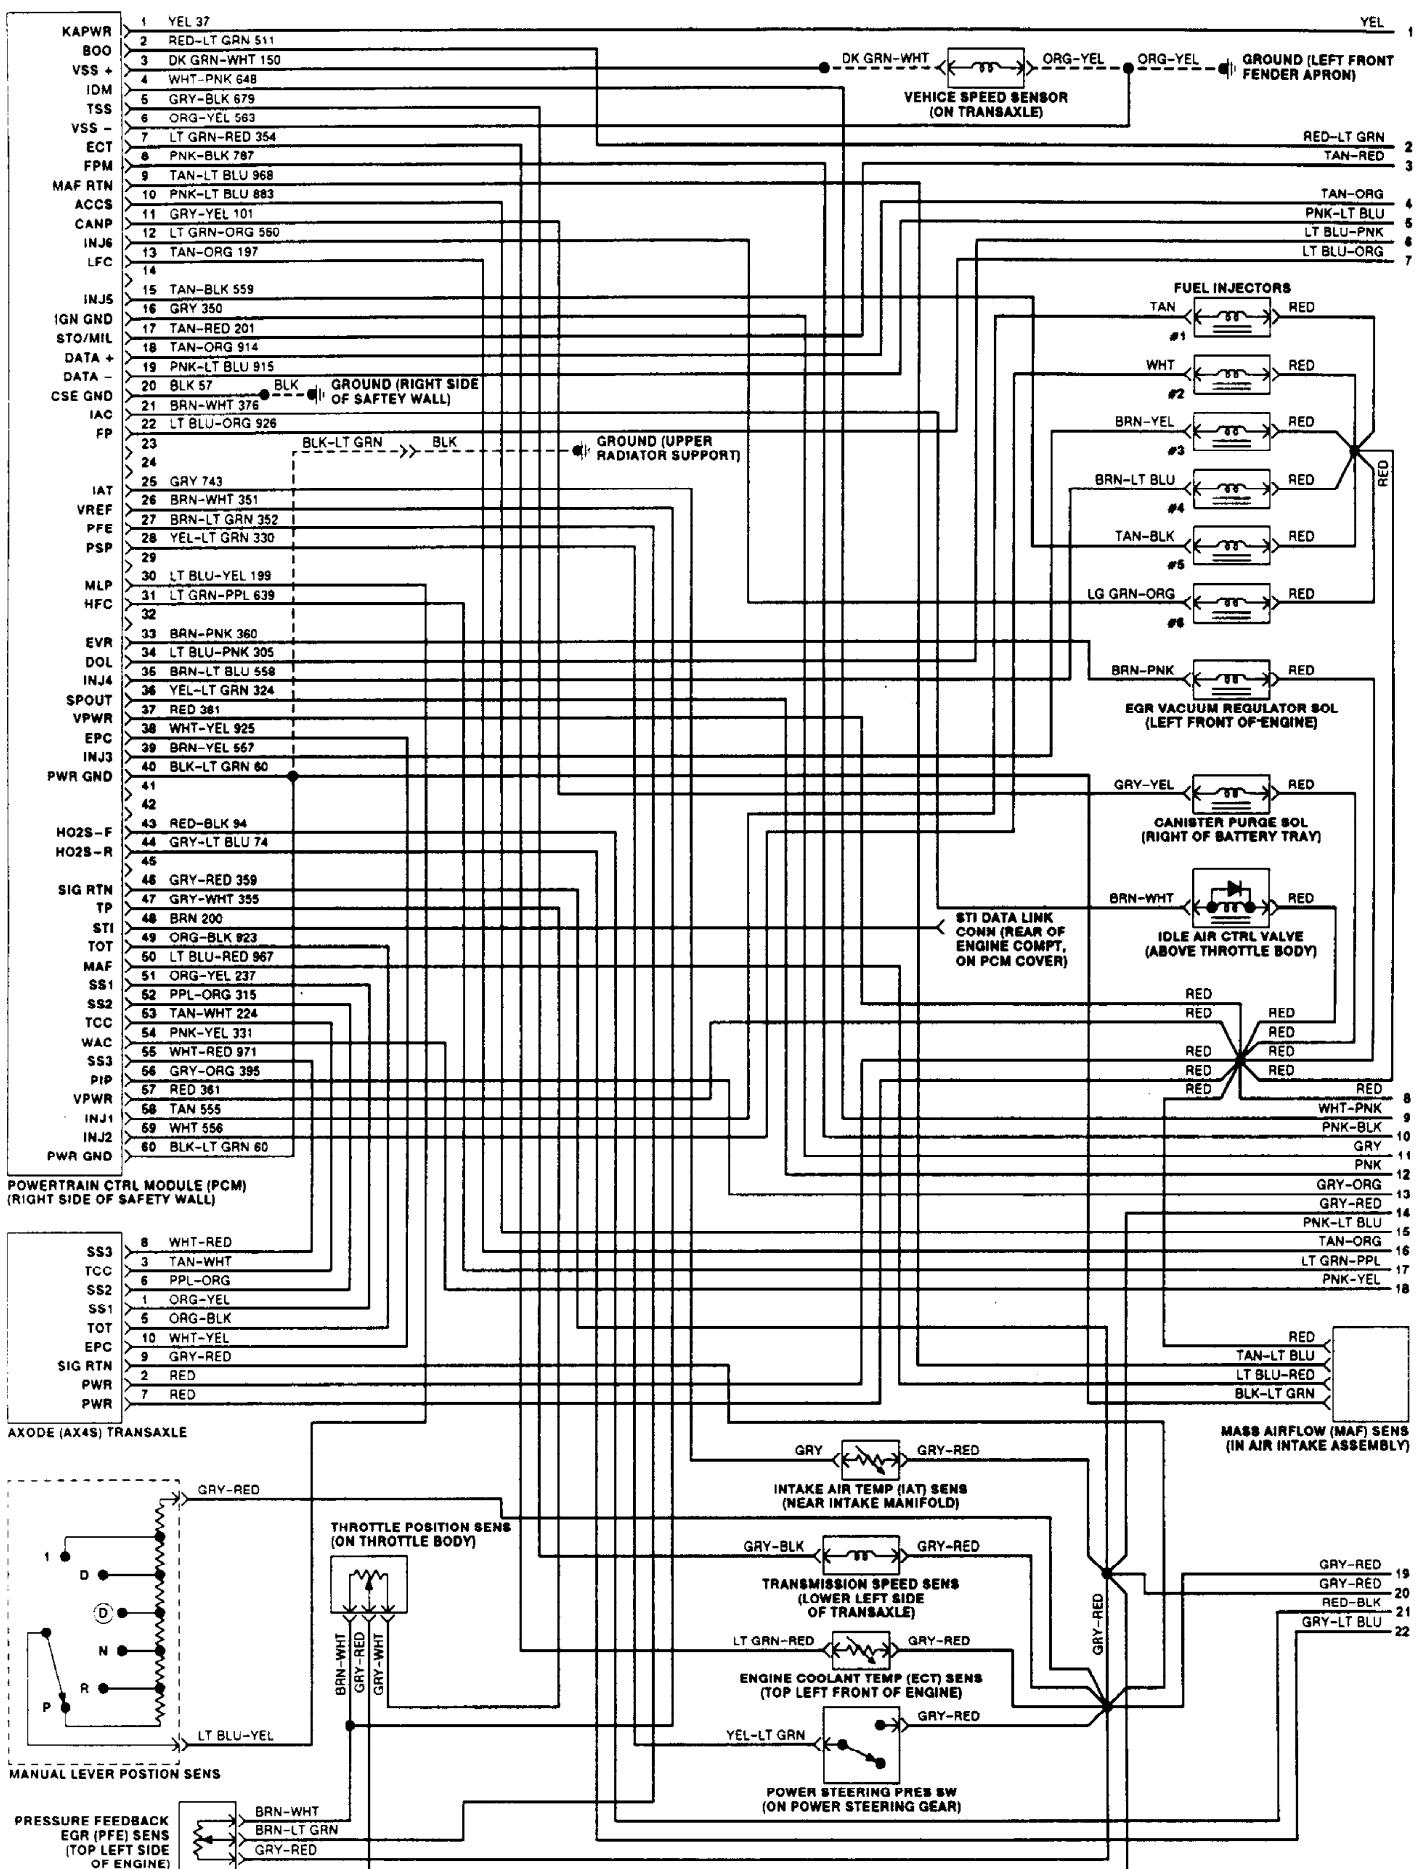


93D40660

WIRING DIAGRAMS

Power & Ground Distribution

PAVLIN

Fig. 21: EEC-IV Wiring Diagram (3.8L - 2 of 2)
1993 Ford Taurus LX

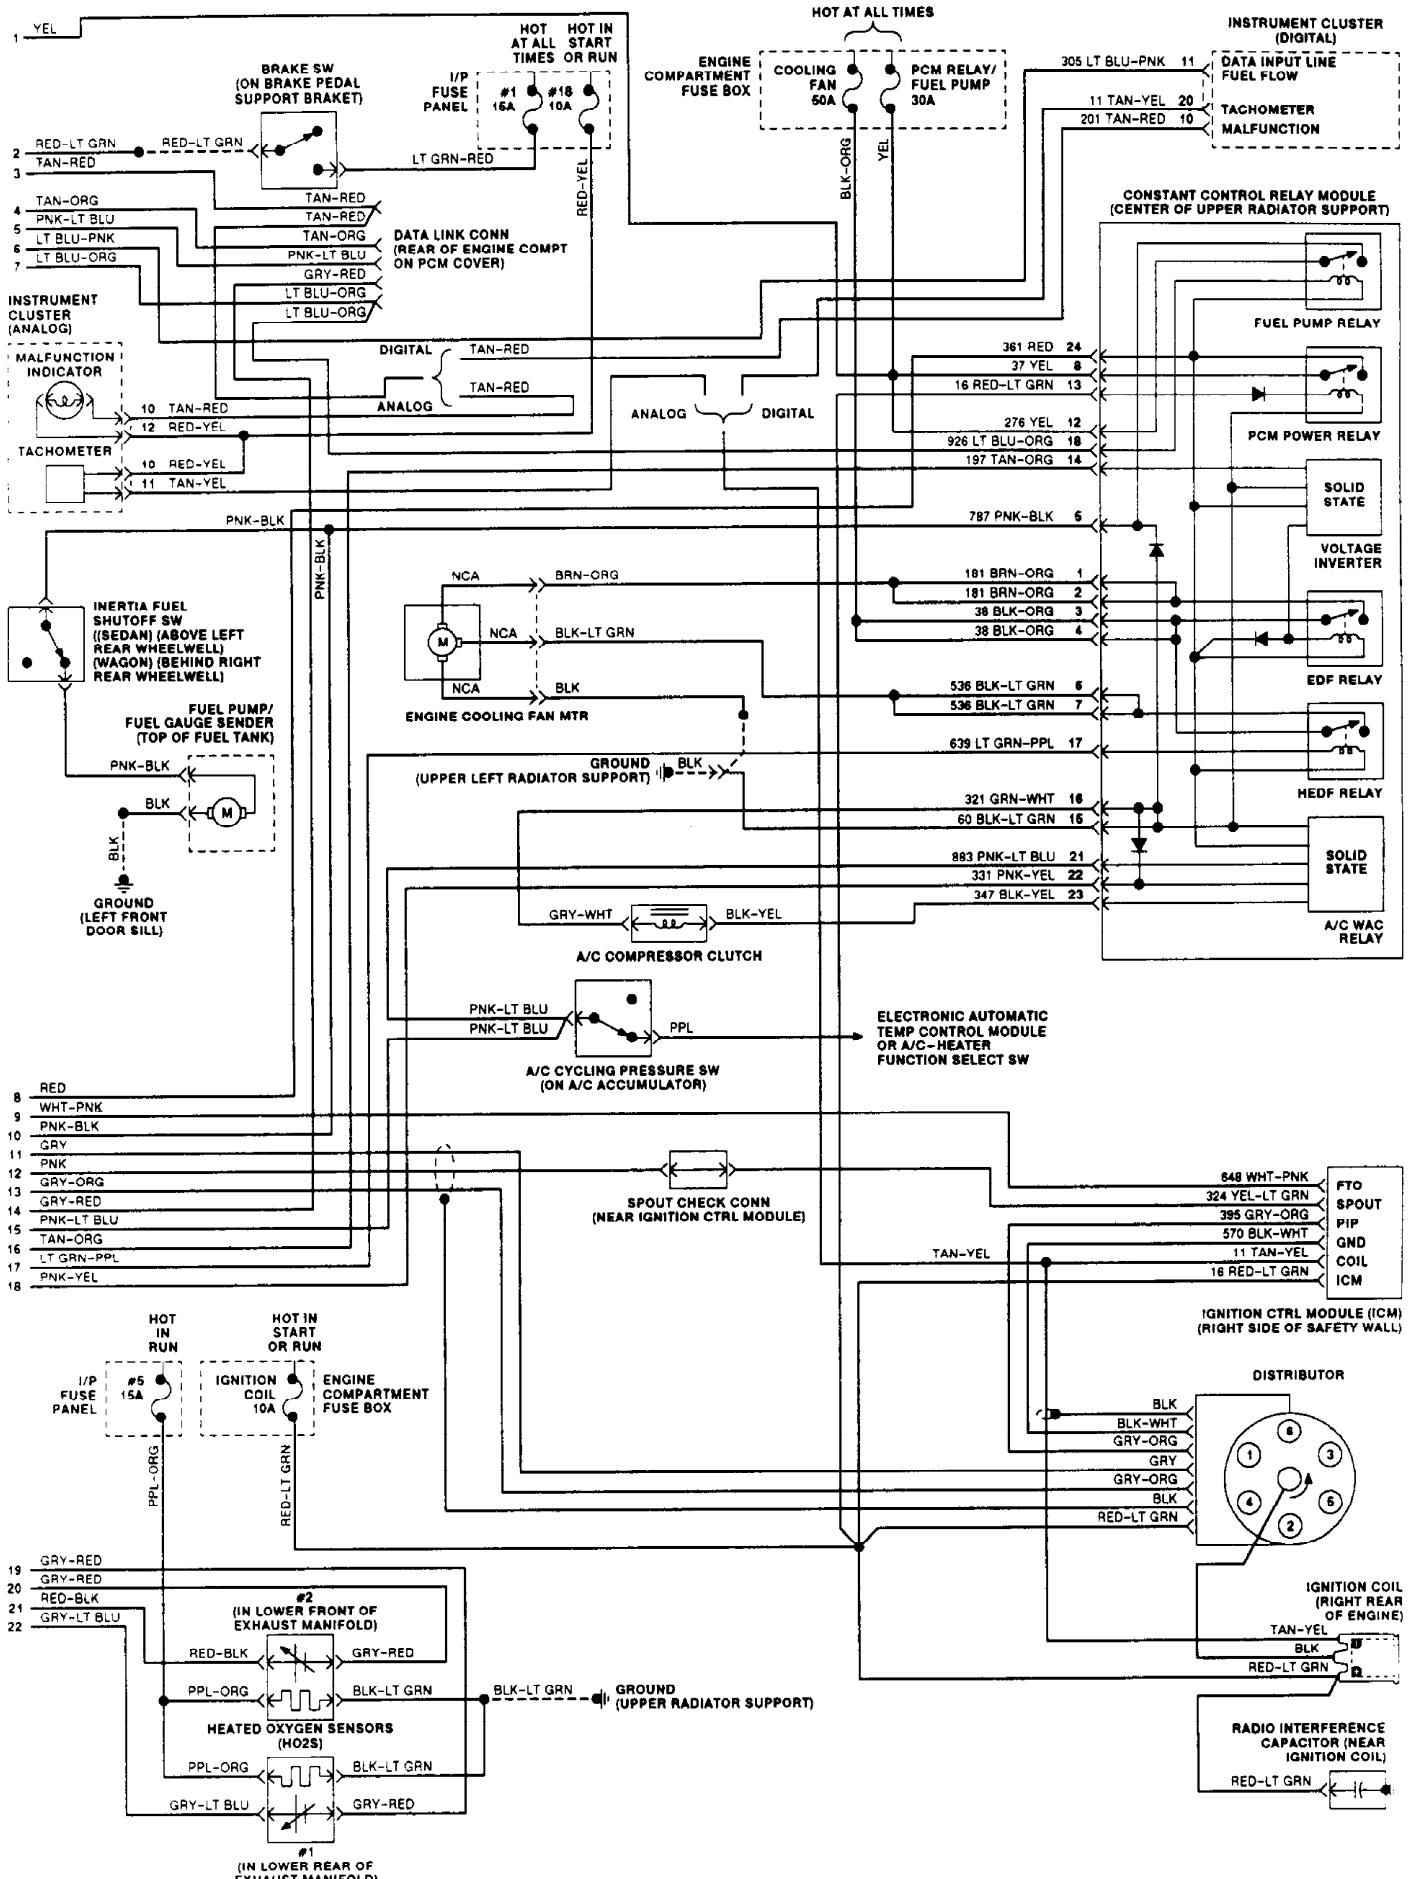


93E40661

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 22: EEC-IV Wiring Diagram (3.0L Flex Fuel - 1 of 2)
1993 Ford Taurus LX

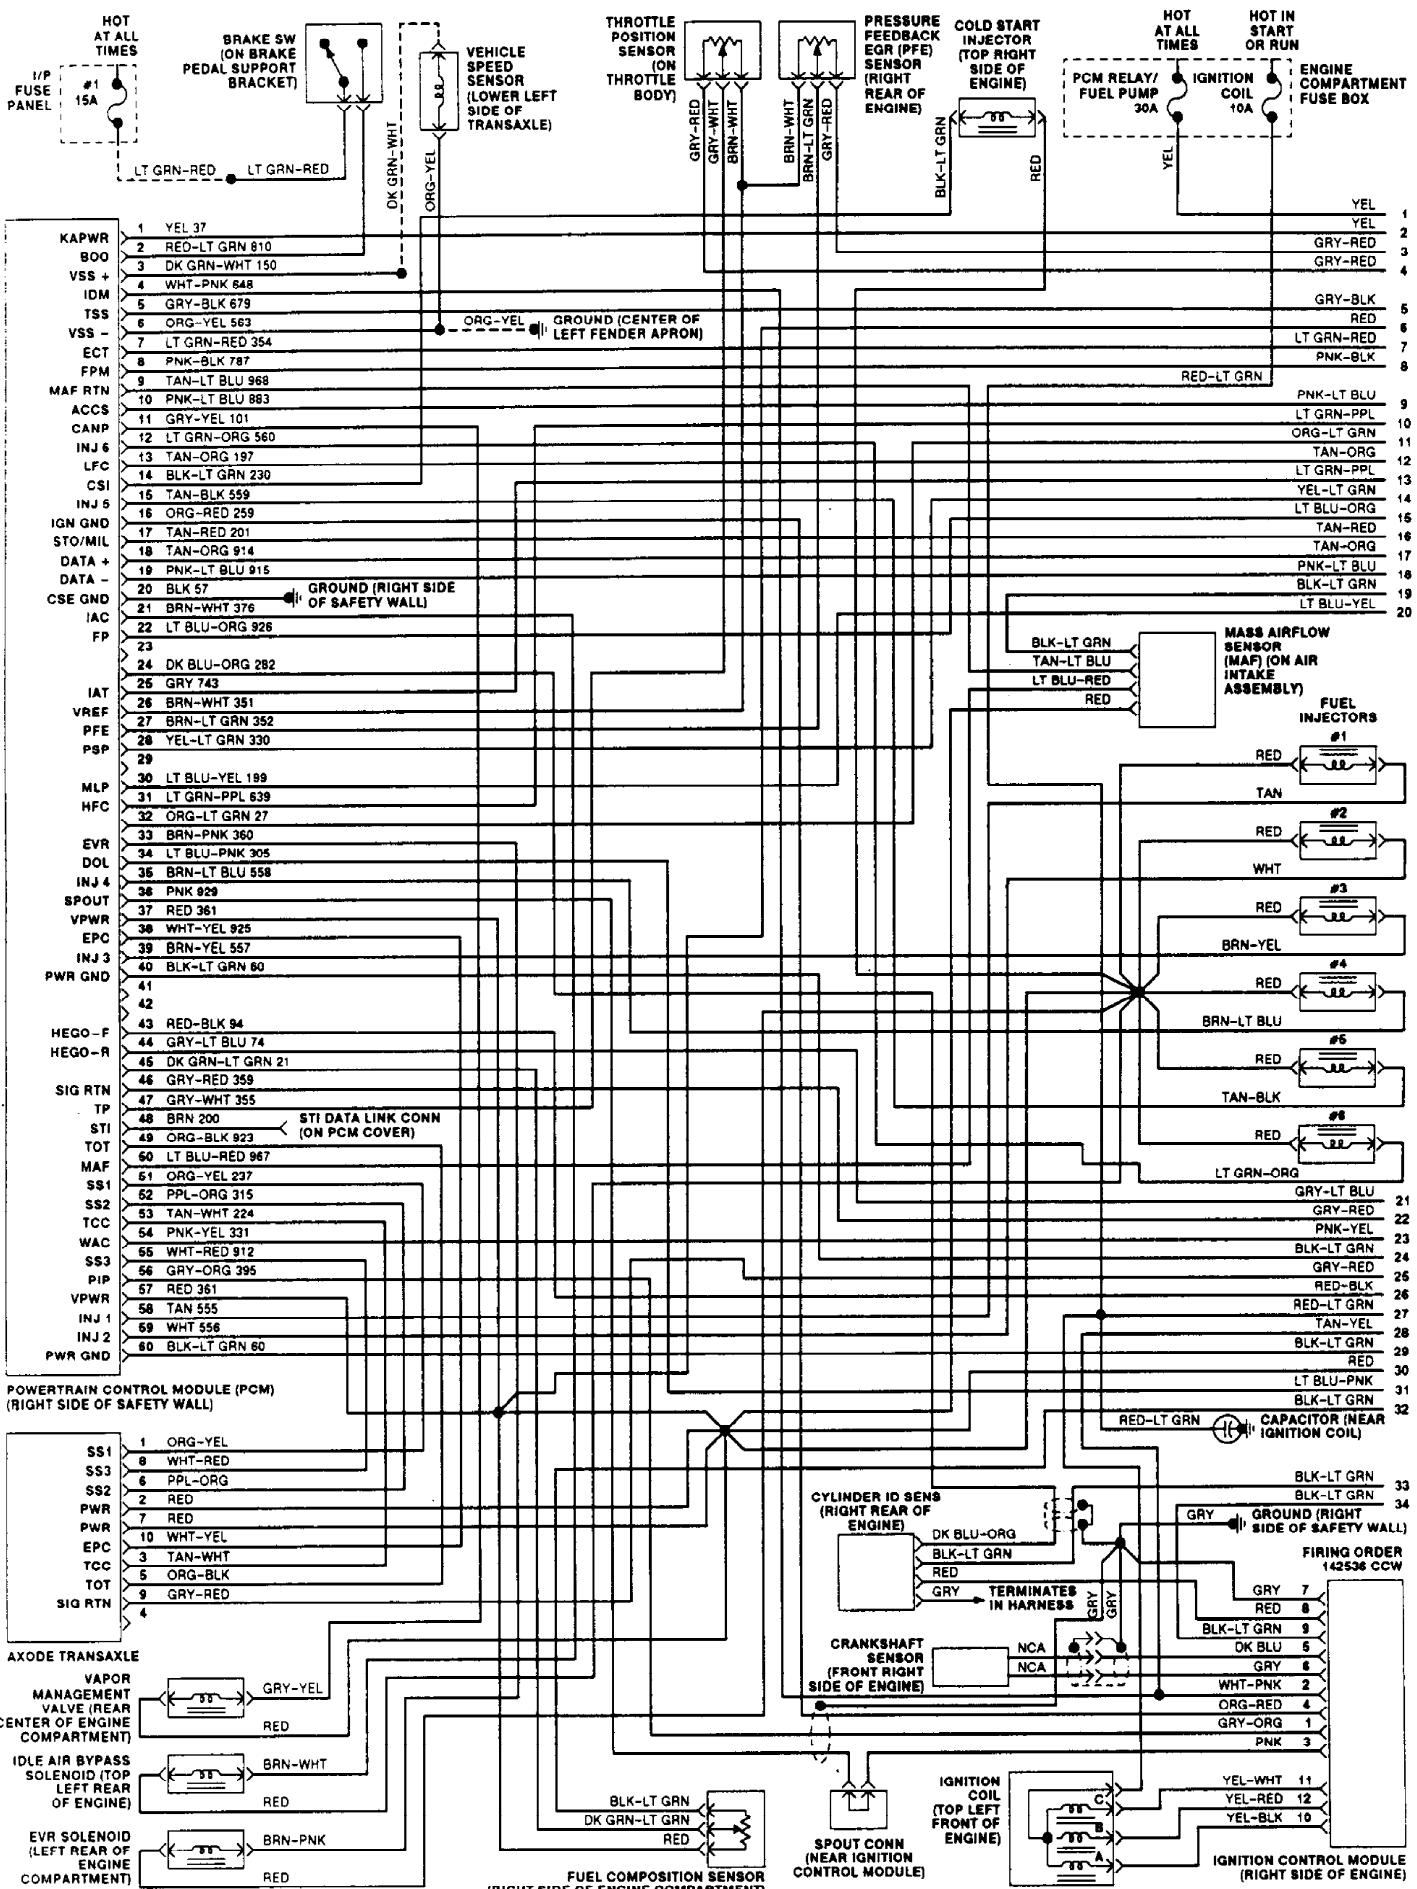


93F40862

WIRING DIAGRAMS

Power & Ground Distribution

PAVLIN

Fig. 23: EEC-IV Wiring Diagram (3.0L Flex Fuel - 2 of 2)
1993 Ford Taurus LX

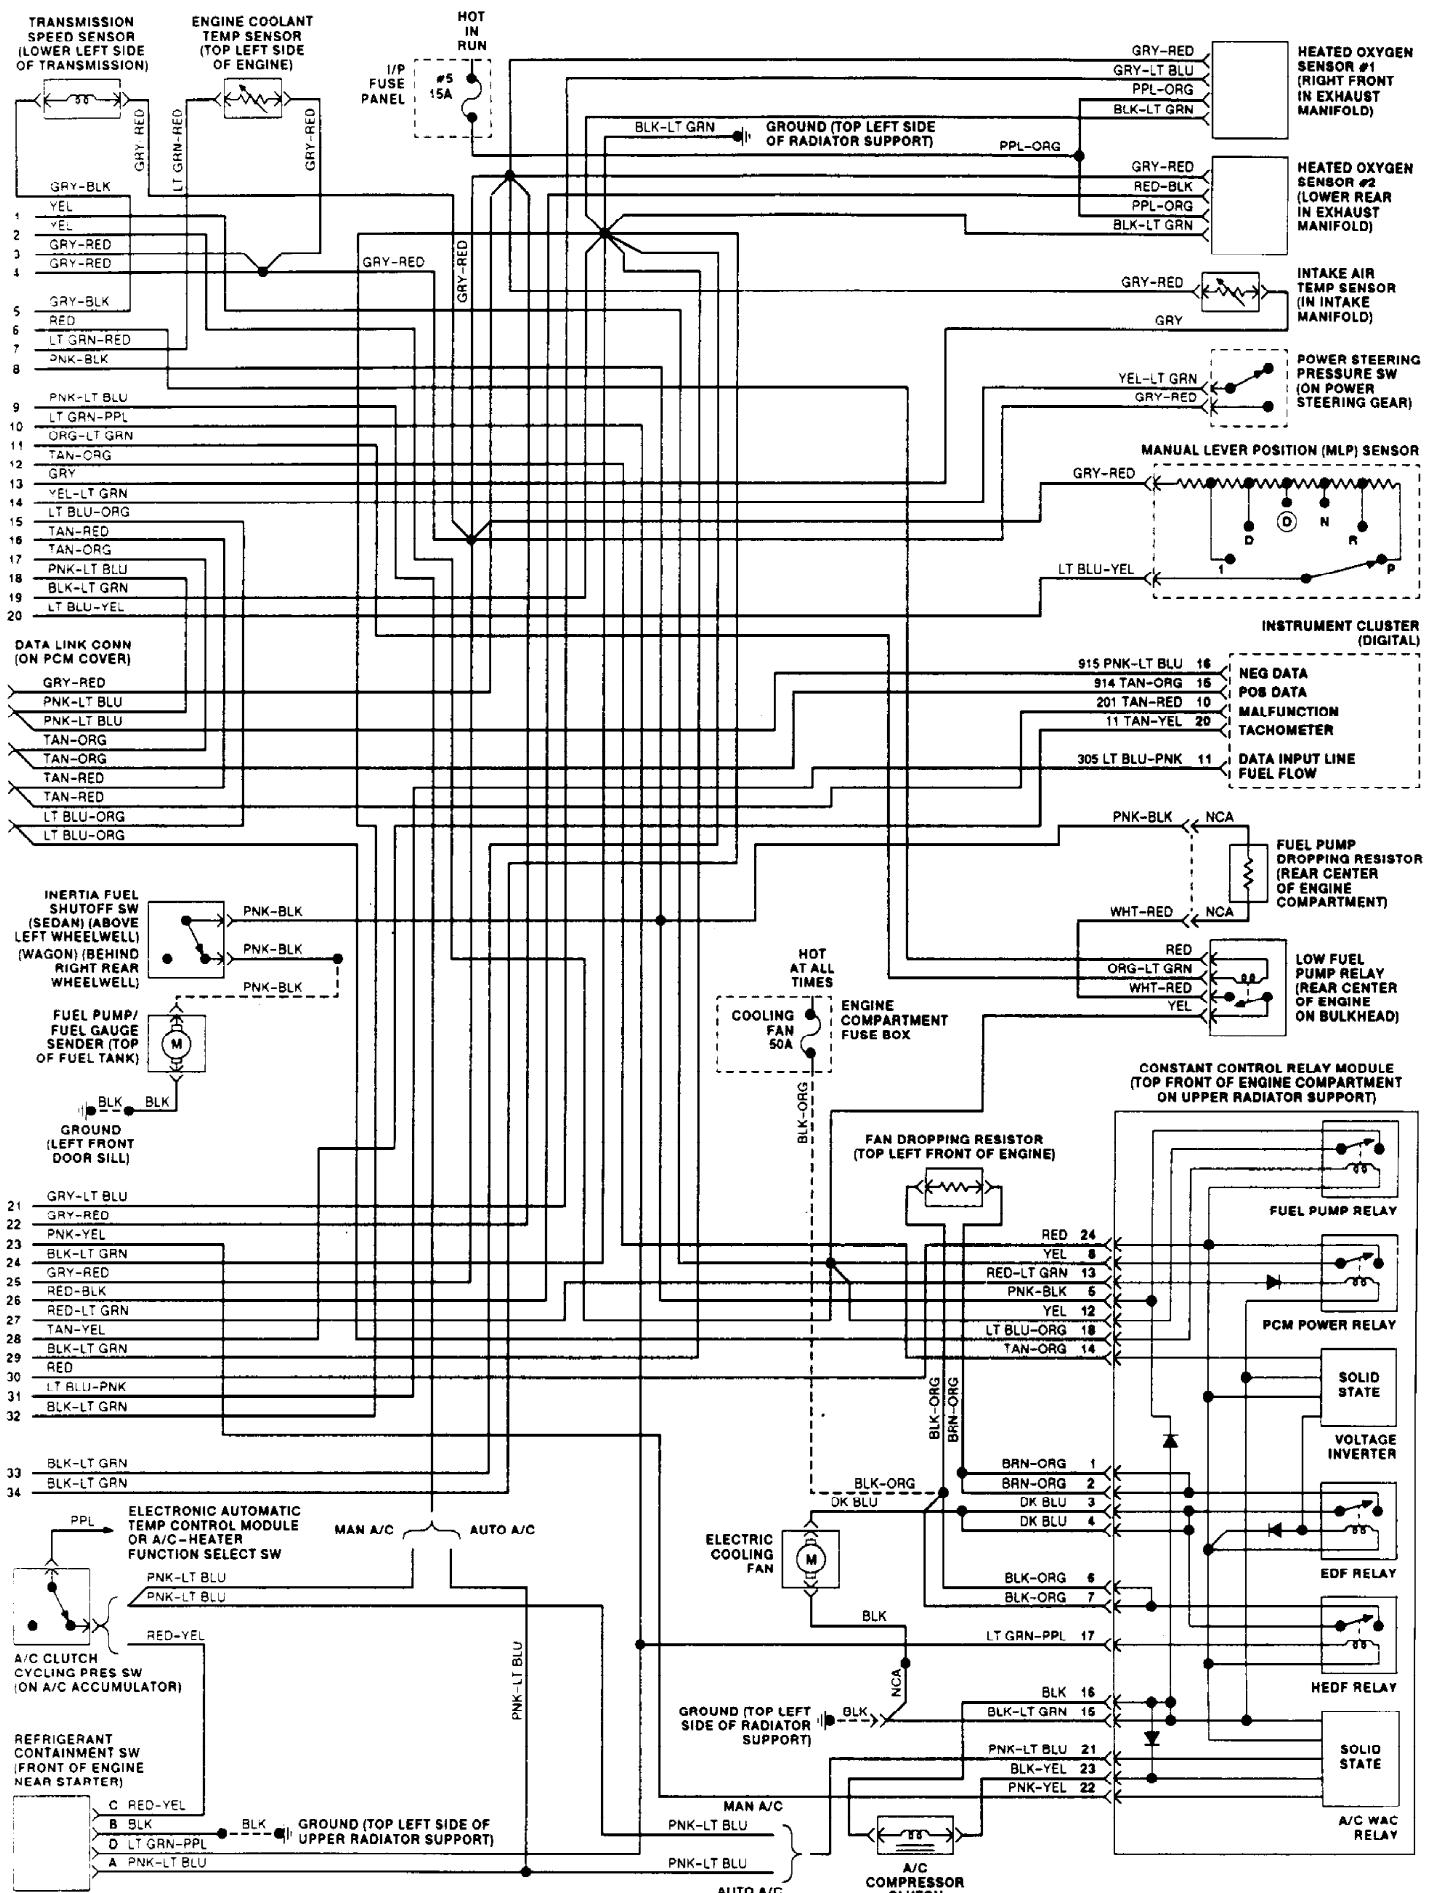


93G40663

WIRING DIAGRAMS

Power & Ground Distribution

PAVLIN

Fig. 24: EEC-IV Wiring Diagram (3.0L SHO - 1 of 2)
1993 Ford Taurus LX

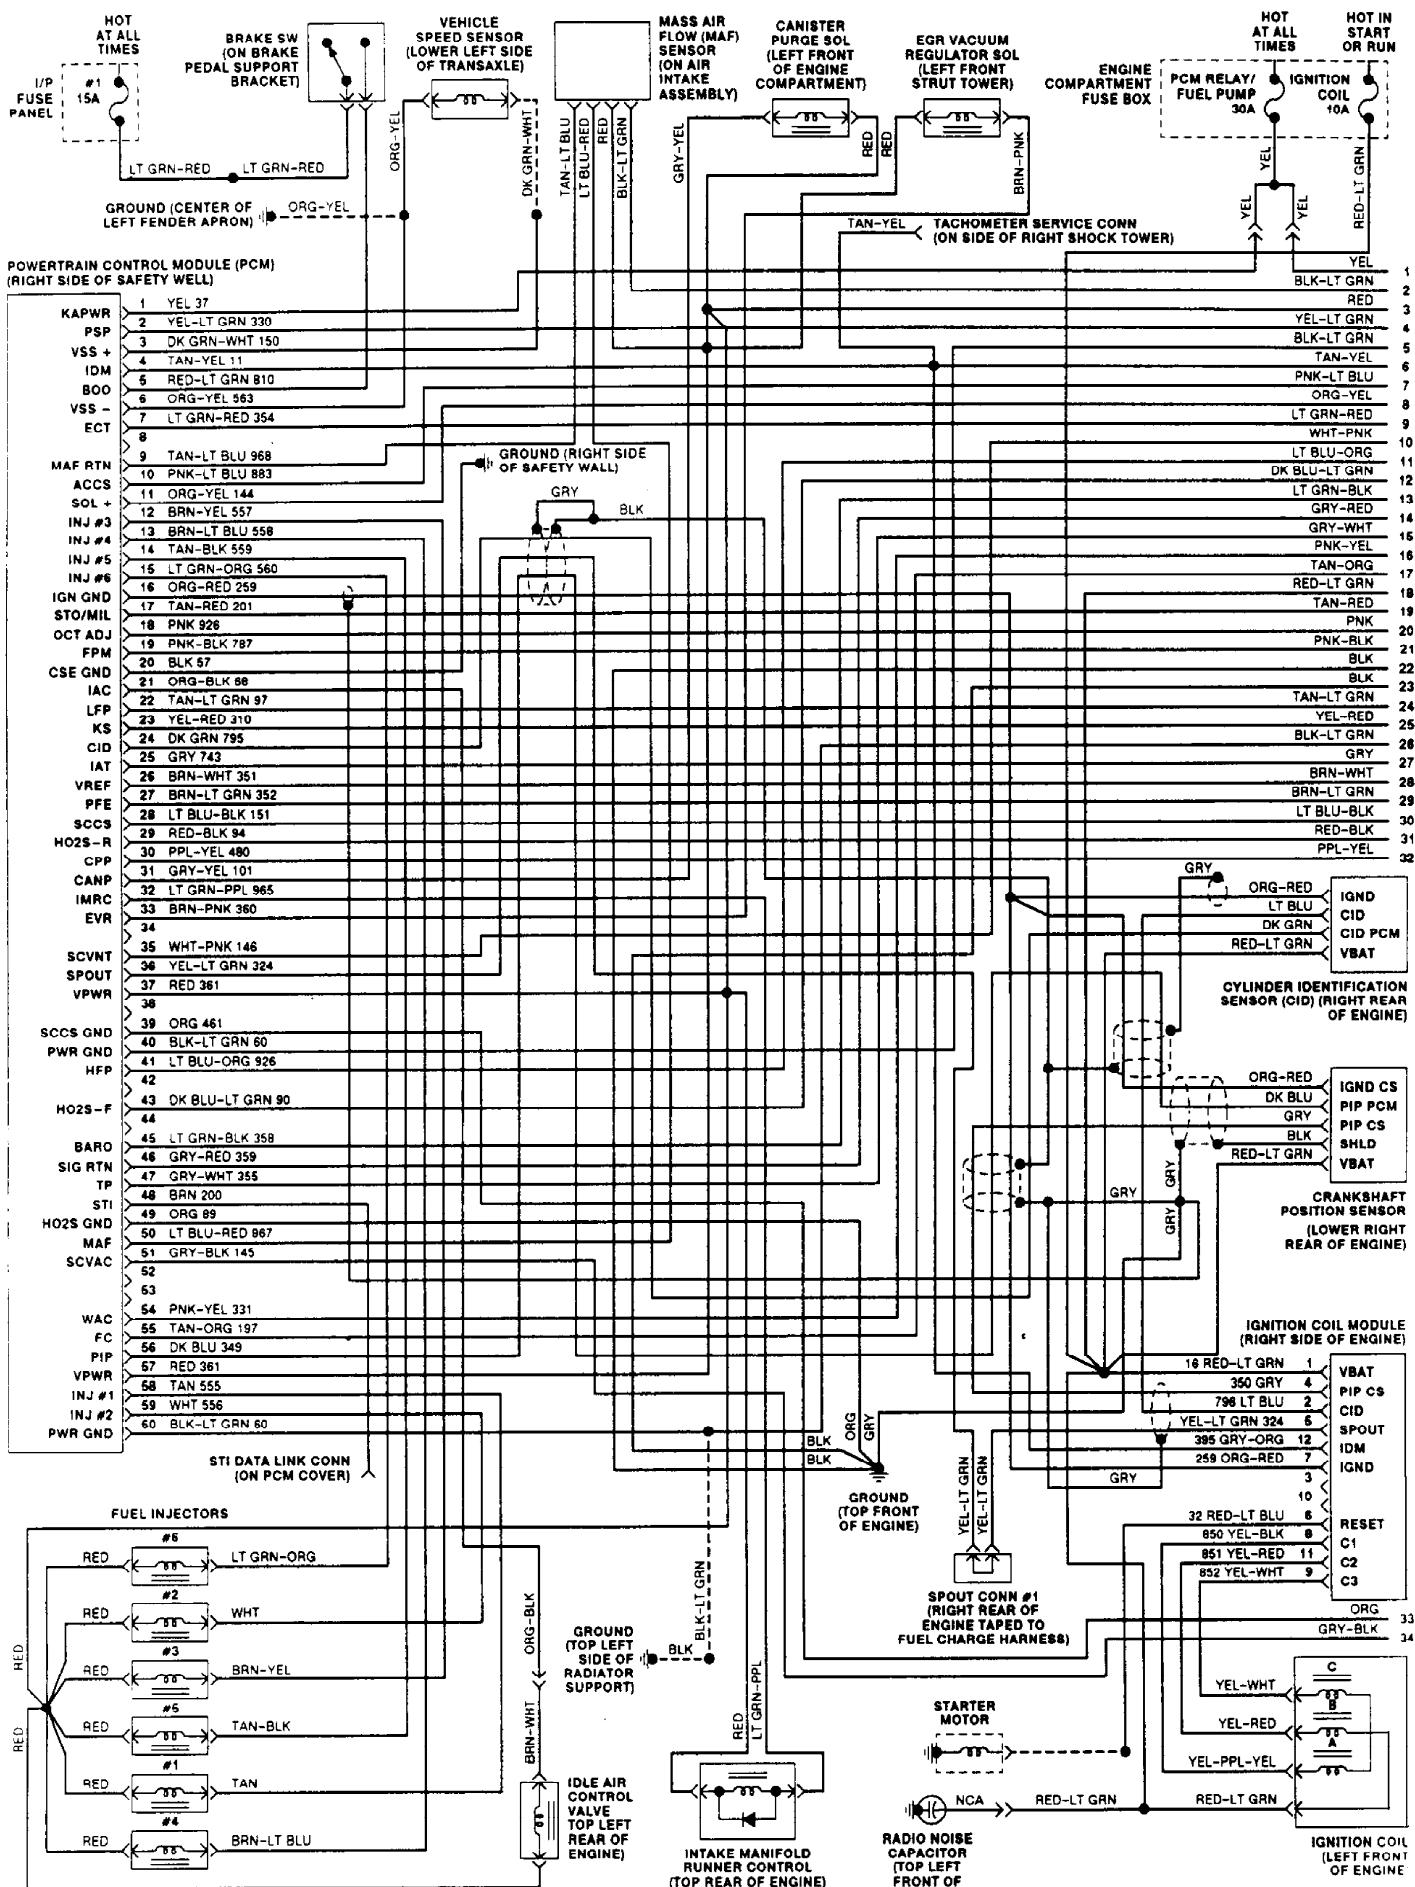


93H40684

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 25: EEC-IV Wiring Diagram (3.0L SHO - 2 of 2)
1993 Ford Taurus LX

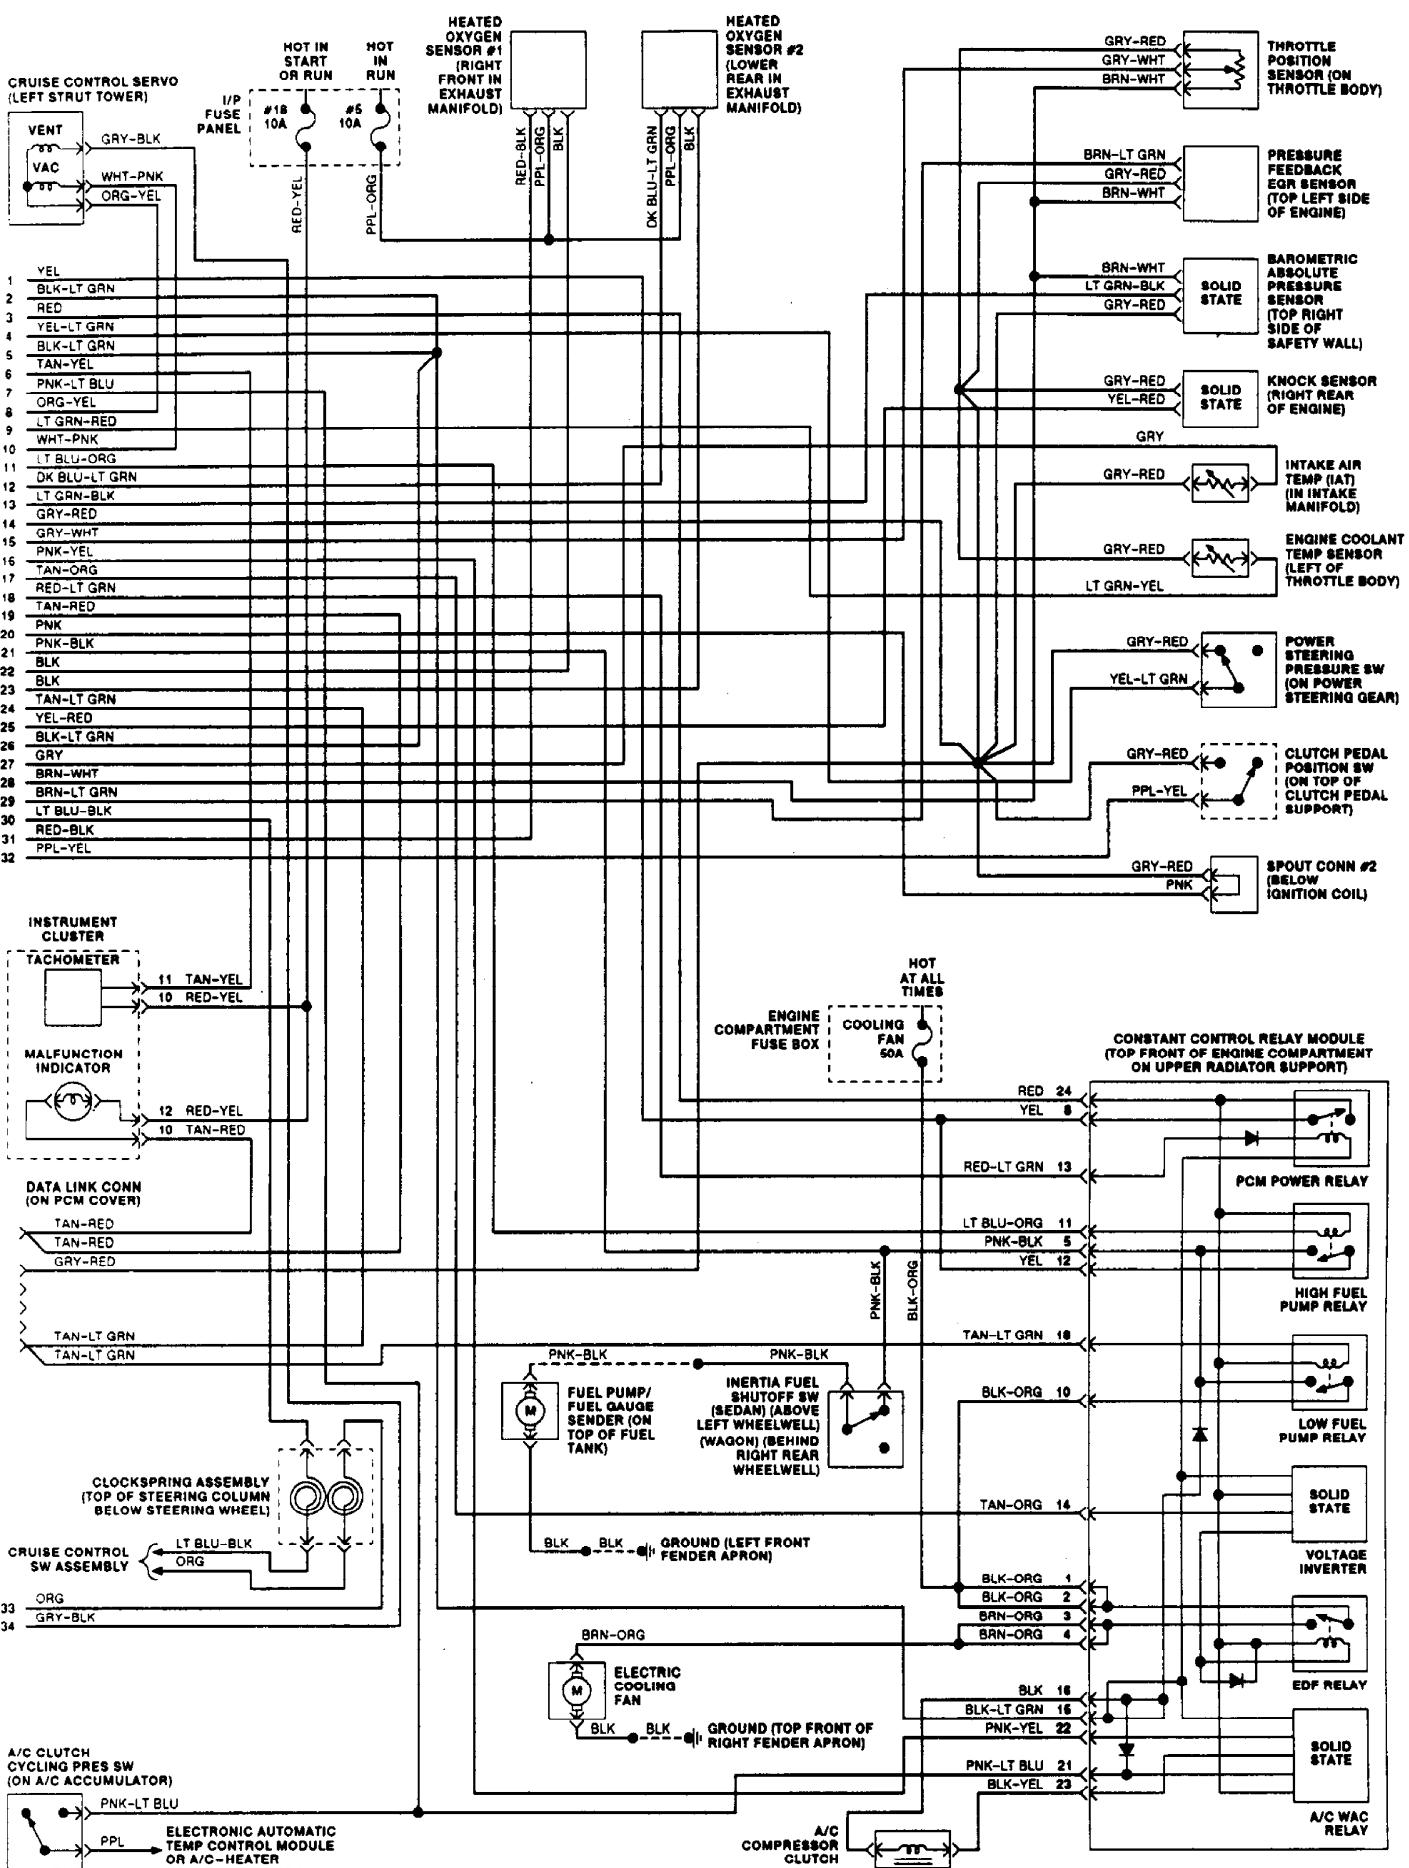


93T40665

WIRING DIAGRAMS

Power & Ground Distribution

PAVLIN

Fig. 26: EEC-IV Wiring Diagram (3.2L SHO - 1 of 2)
1993 Ford Taurus LX

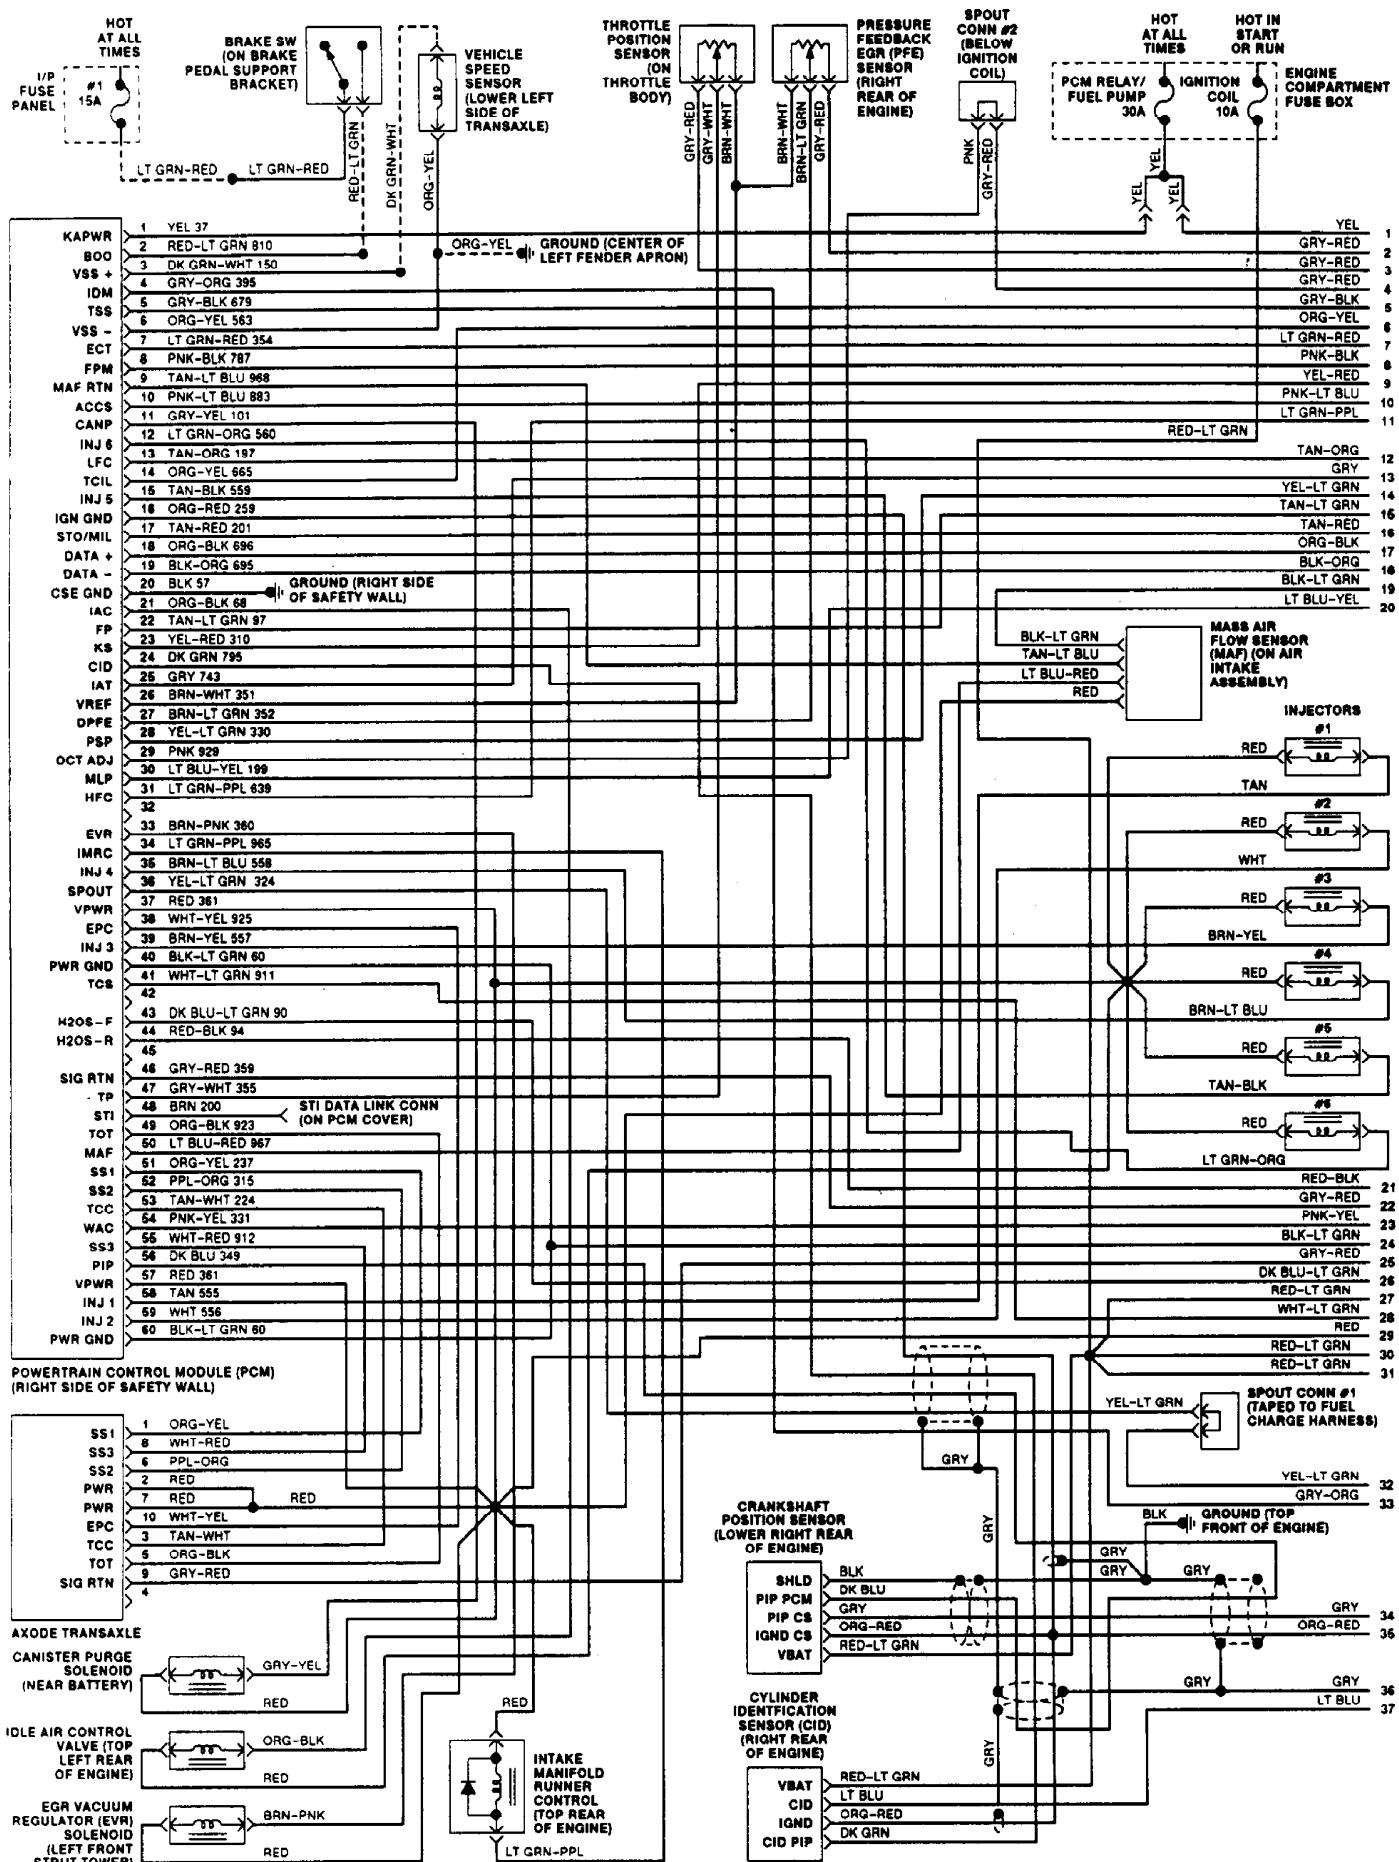


93J40666

WIRING DIAGRAMS

Power & Ground Distribution

PAVLIN

Fig. 27: EEC-IV Wiring Diagram (3.2L SHO - 2 of 2)
1993 Ford Taurus LX

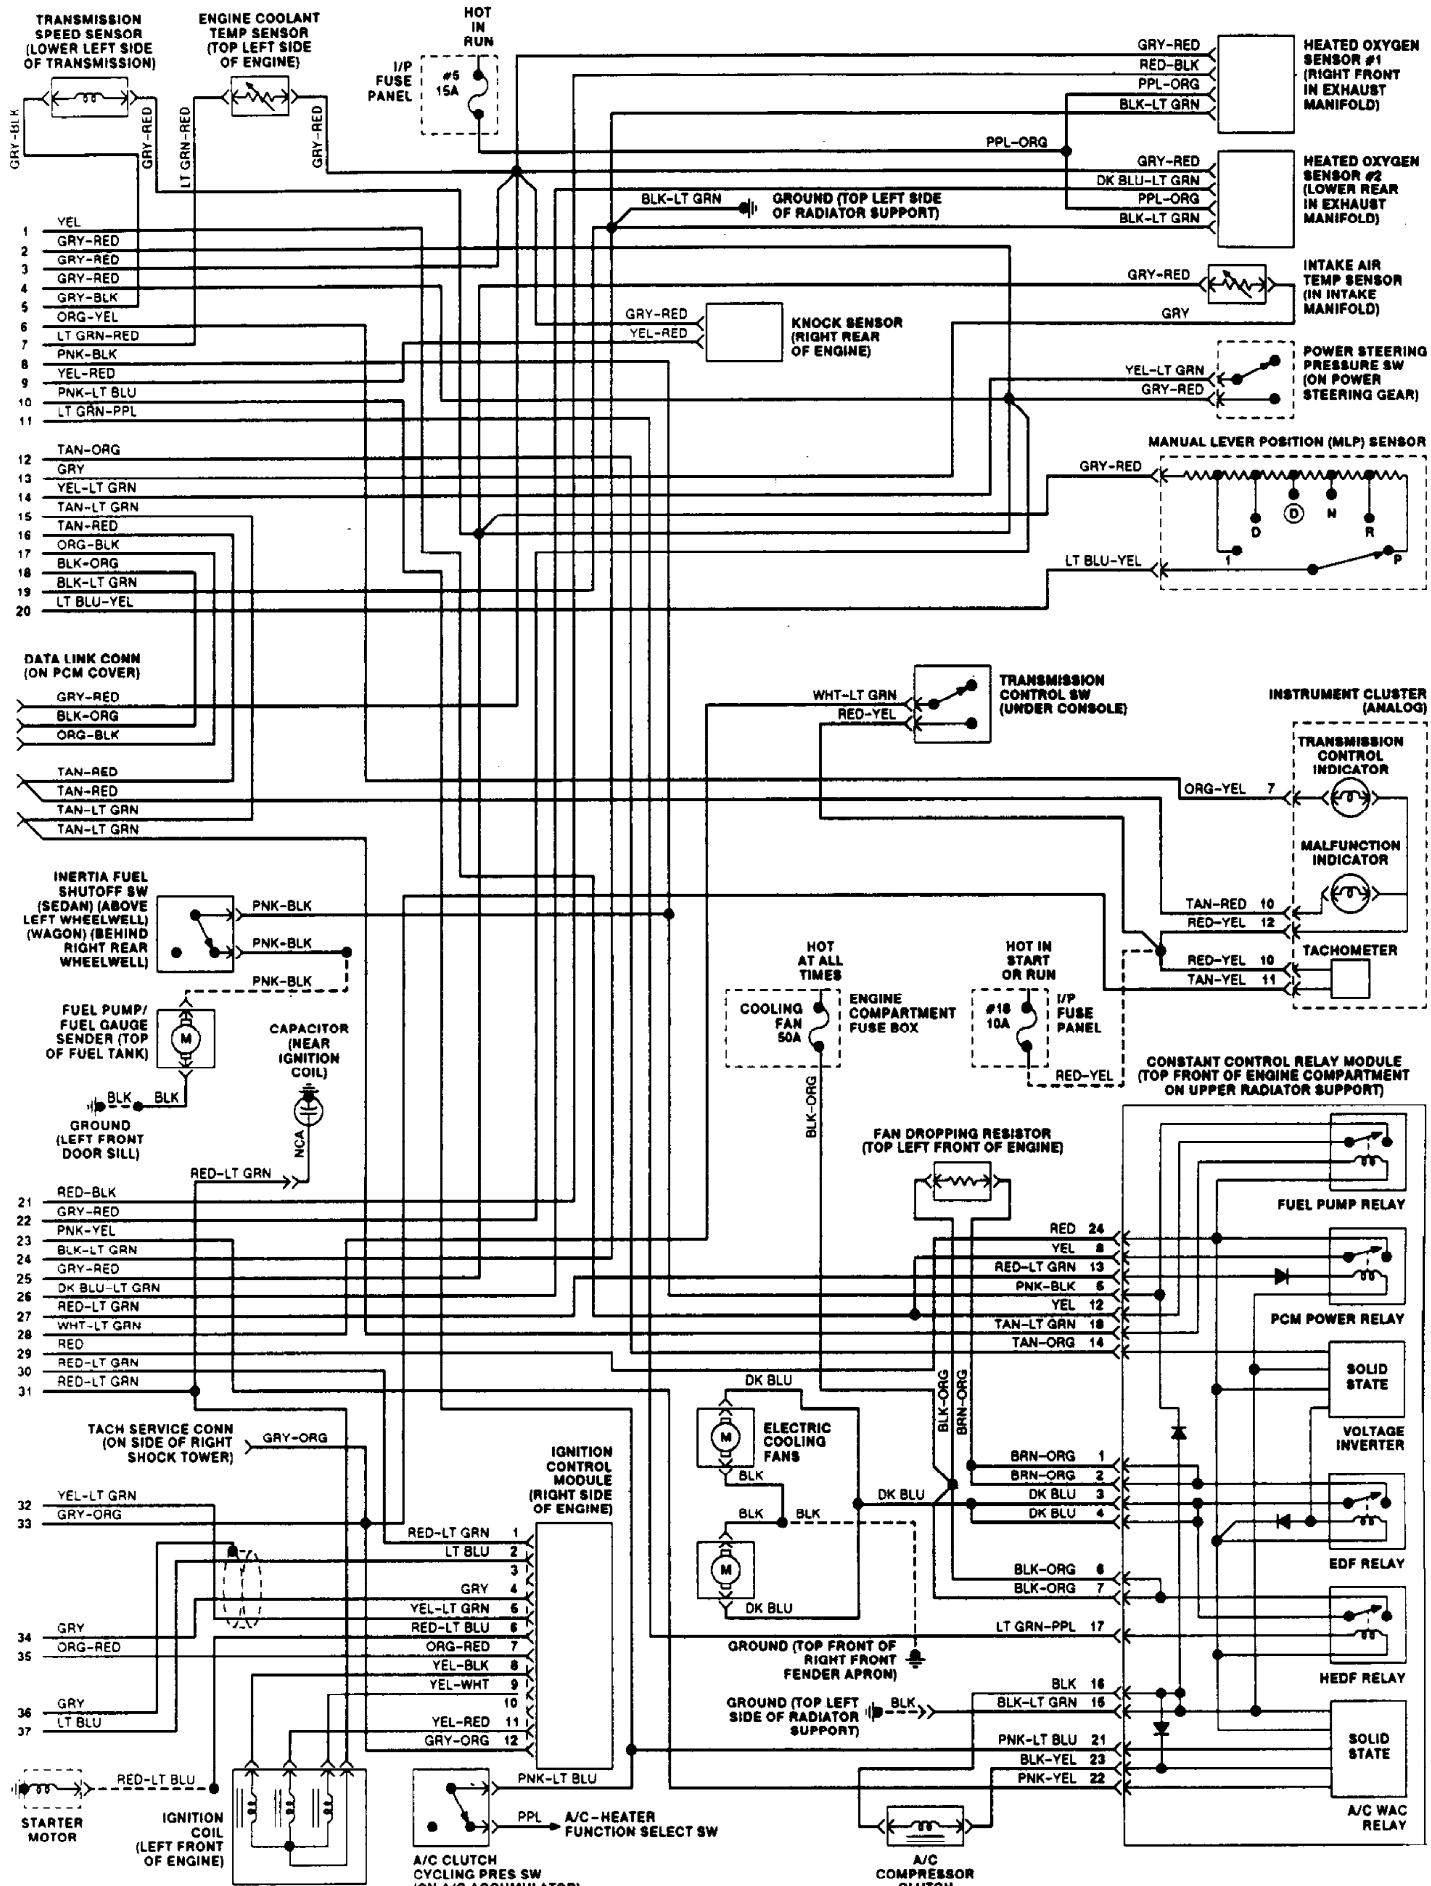


93A40667

WIRING DIAGRAMS
Power & Ground Distribution

PAVLIN

Fig. 28: SRS Wiring Diagram
1993 Ford Taurus LX

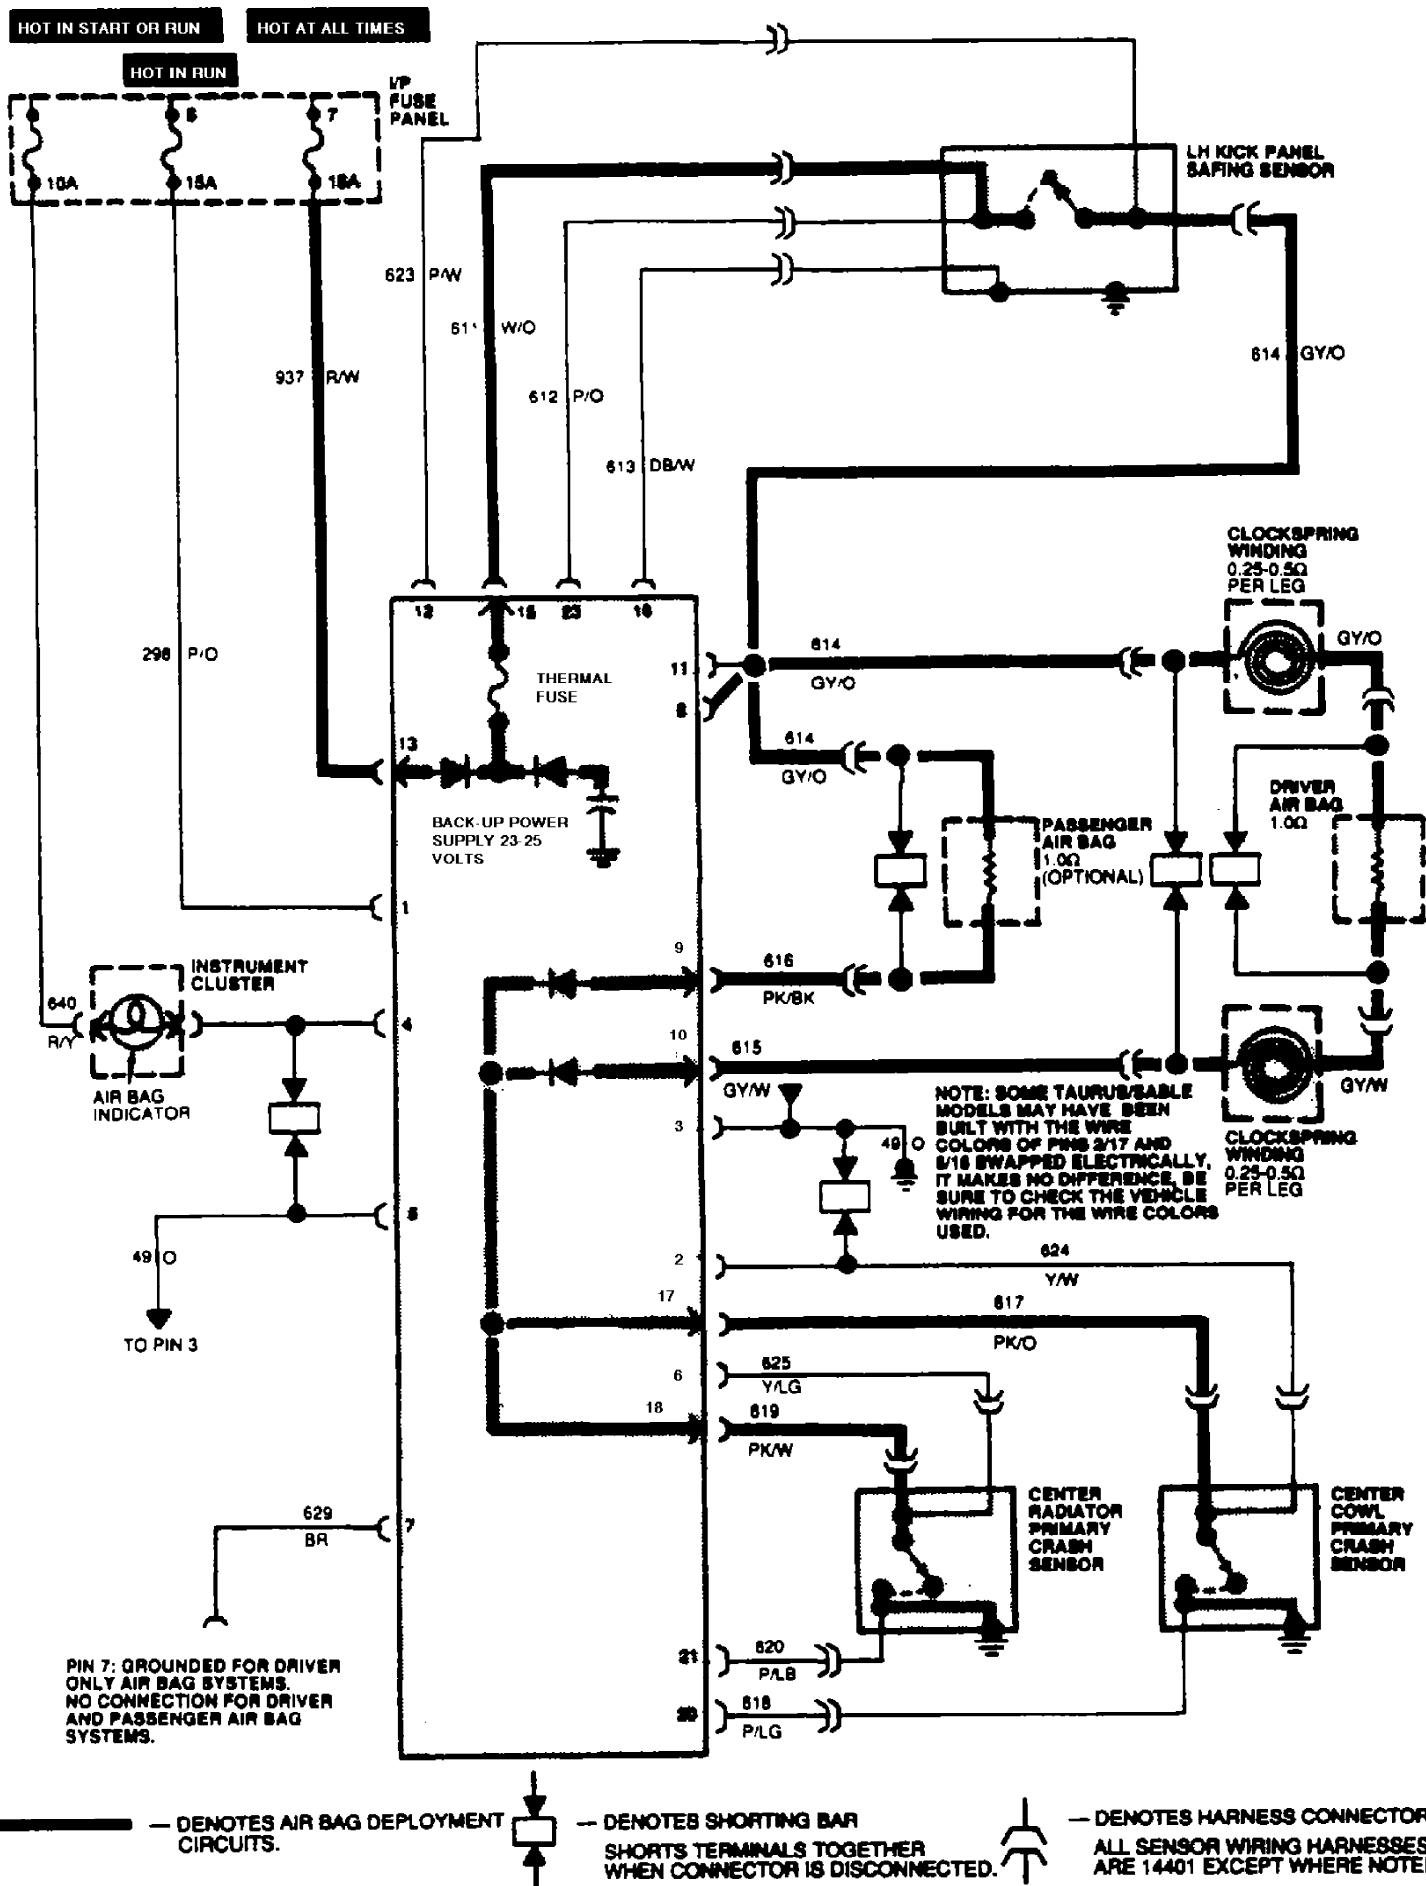

93A75432


WIRING DIAGRAMS

Power & Ground Distribution

PAVLIN

**Fig. 29: Analog Instrument Cluster Wiring Diagram
(Except SHO)**

1993 Ford Taurus LX

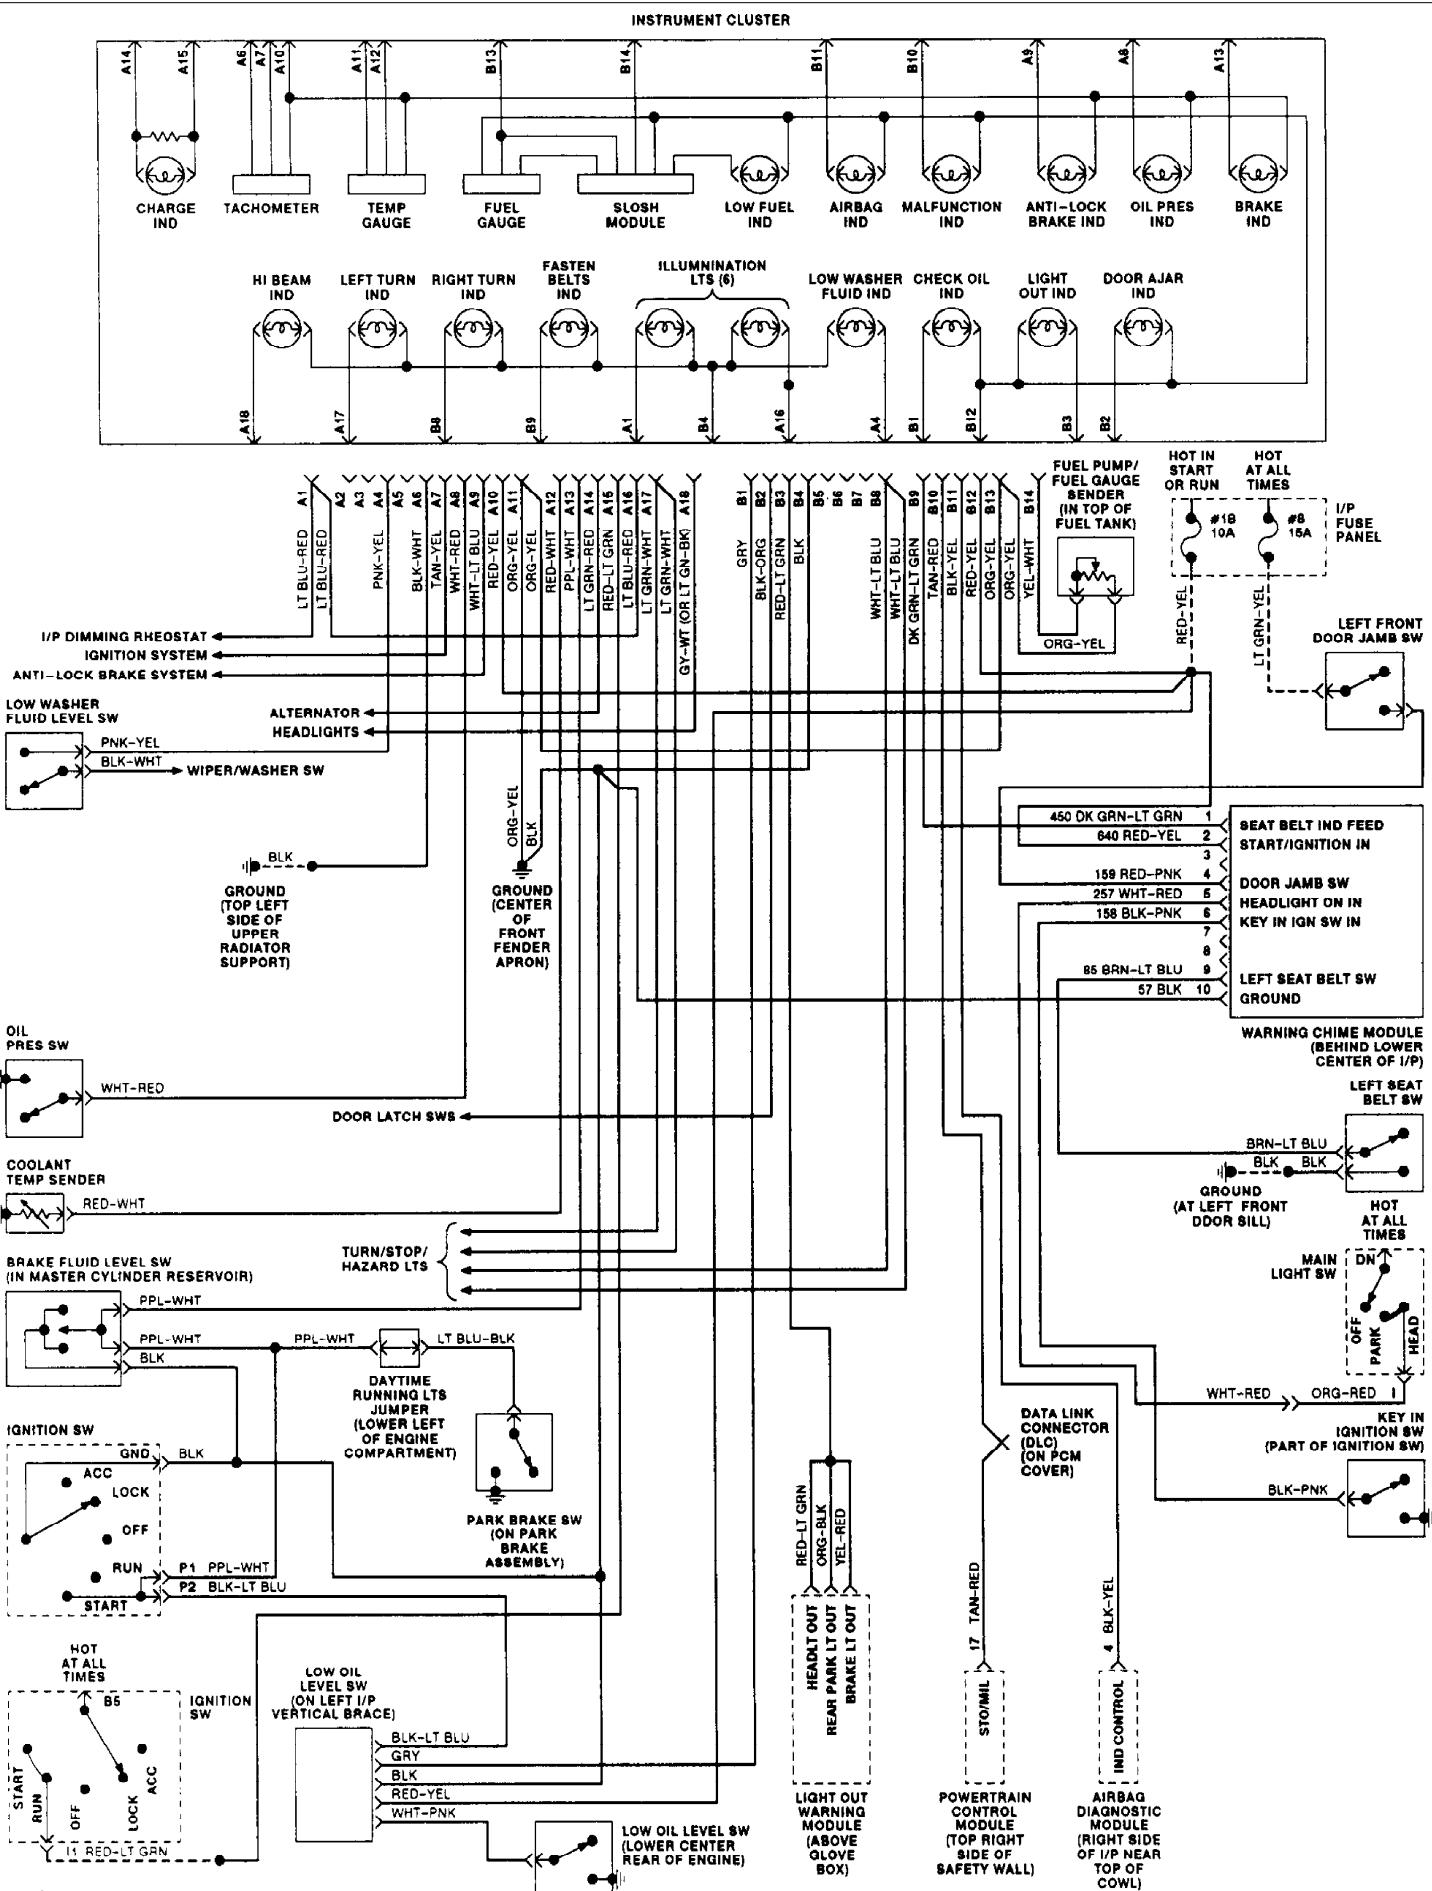


93A41426

WIRING DIAGRAMS

Power & Ground Distribution

PAVLIN

Fig. 30: Analog Instrument Cluster Wiring Diagram (SHO)
1993 Ford Taurus LX

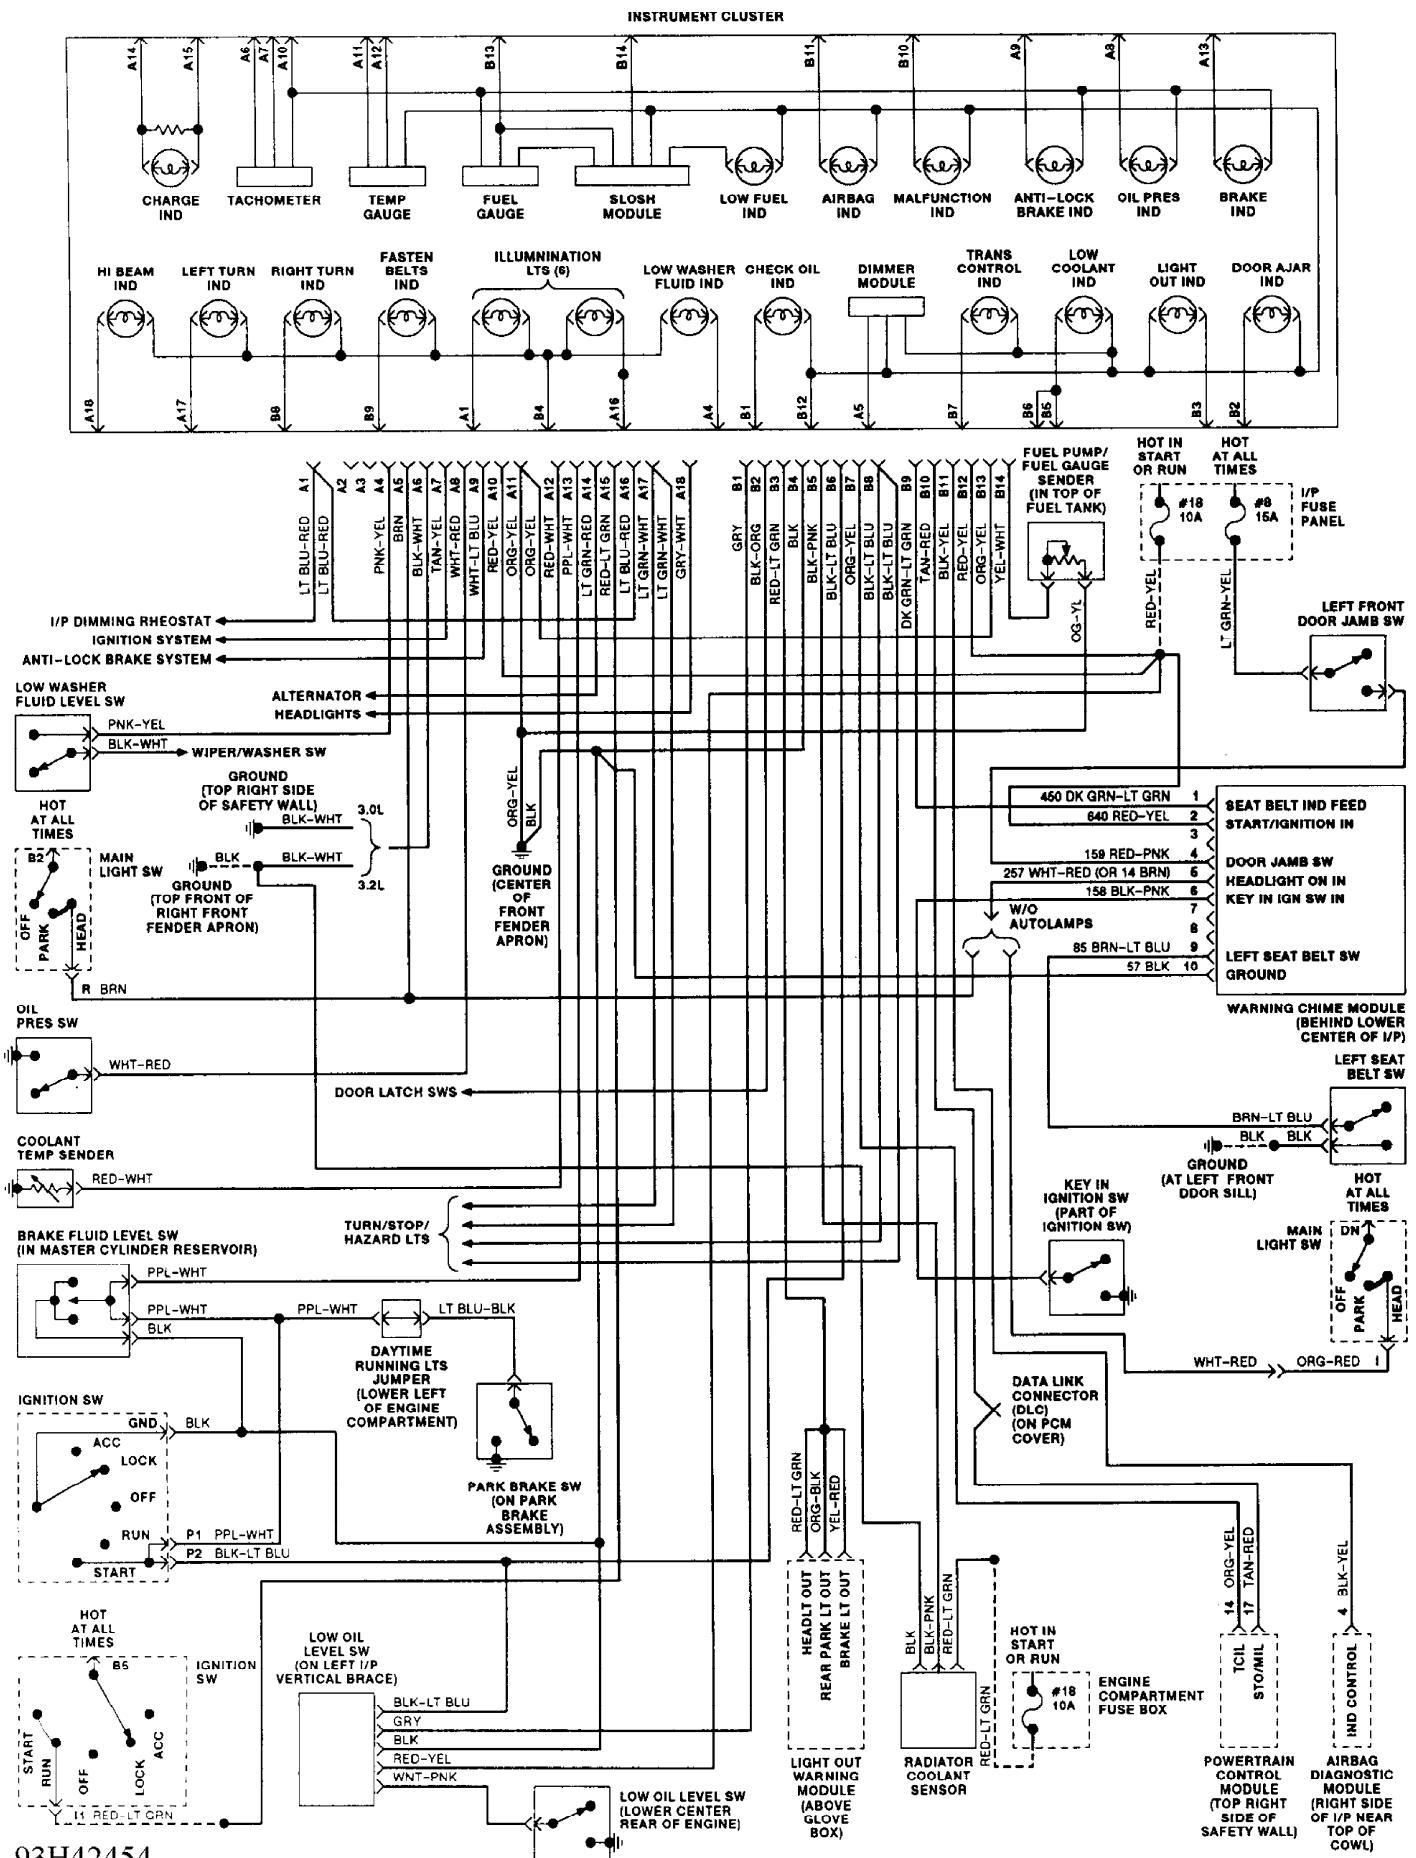


93H42454

WIRING DIAGRAMS

Power & Ground Distribution

PAVLIN


Fig. 31: Headlight System Wiring Diagram (Automatic)
1993 Ford Taurus LX

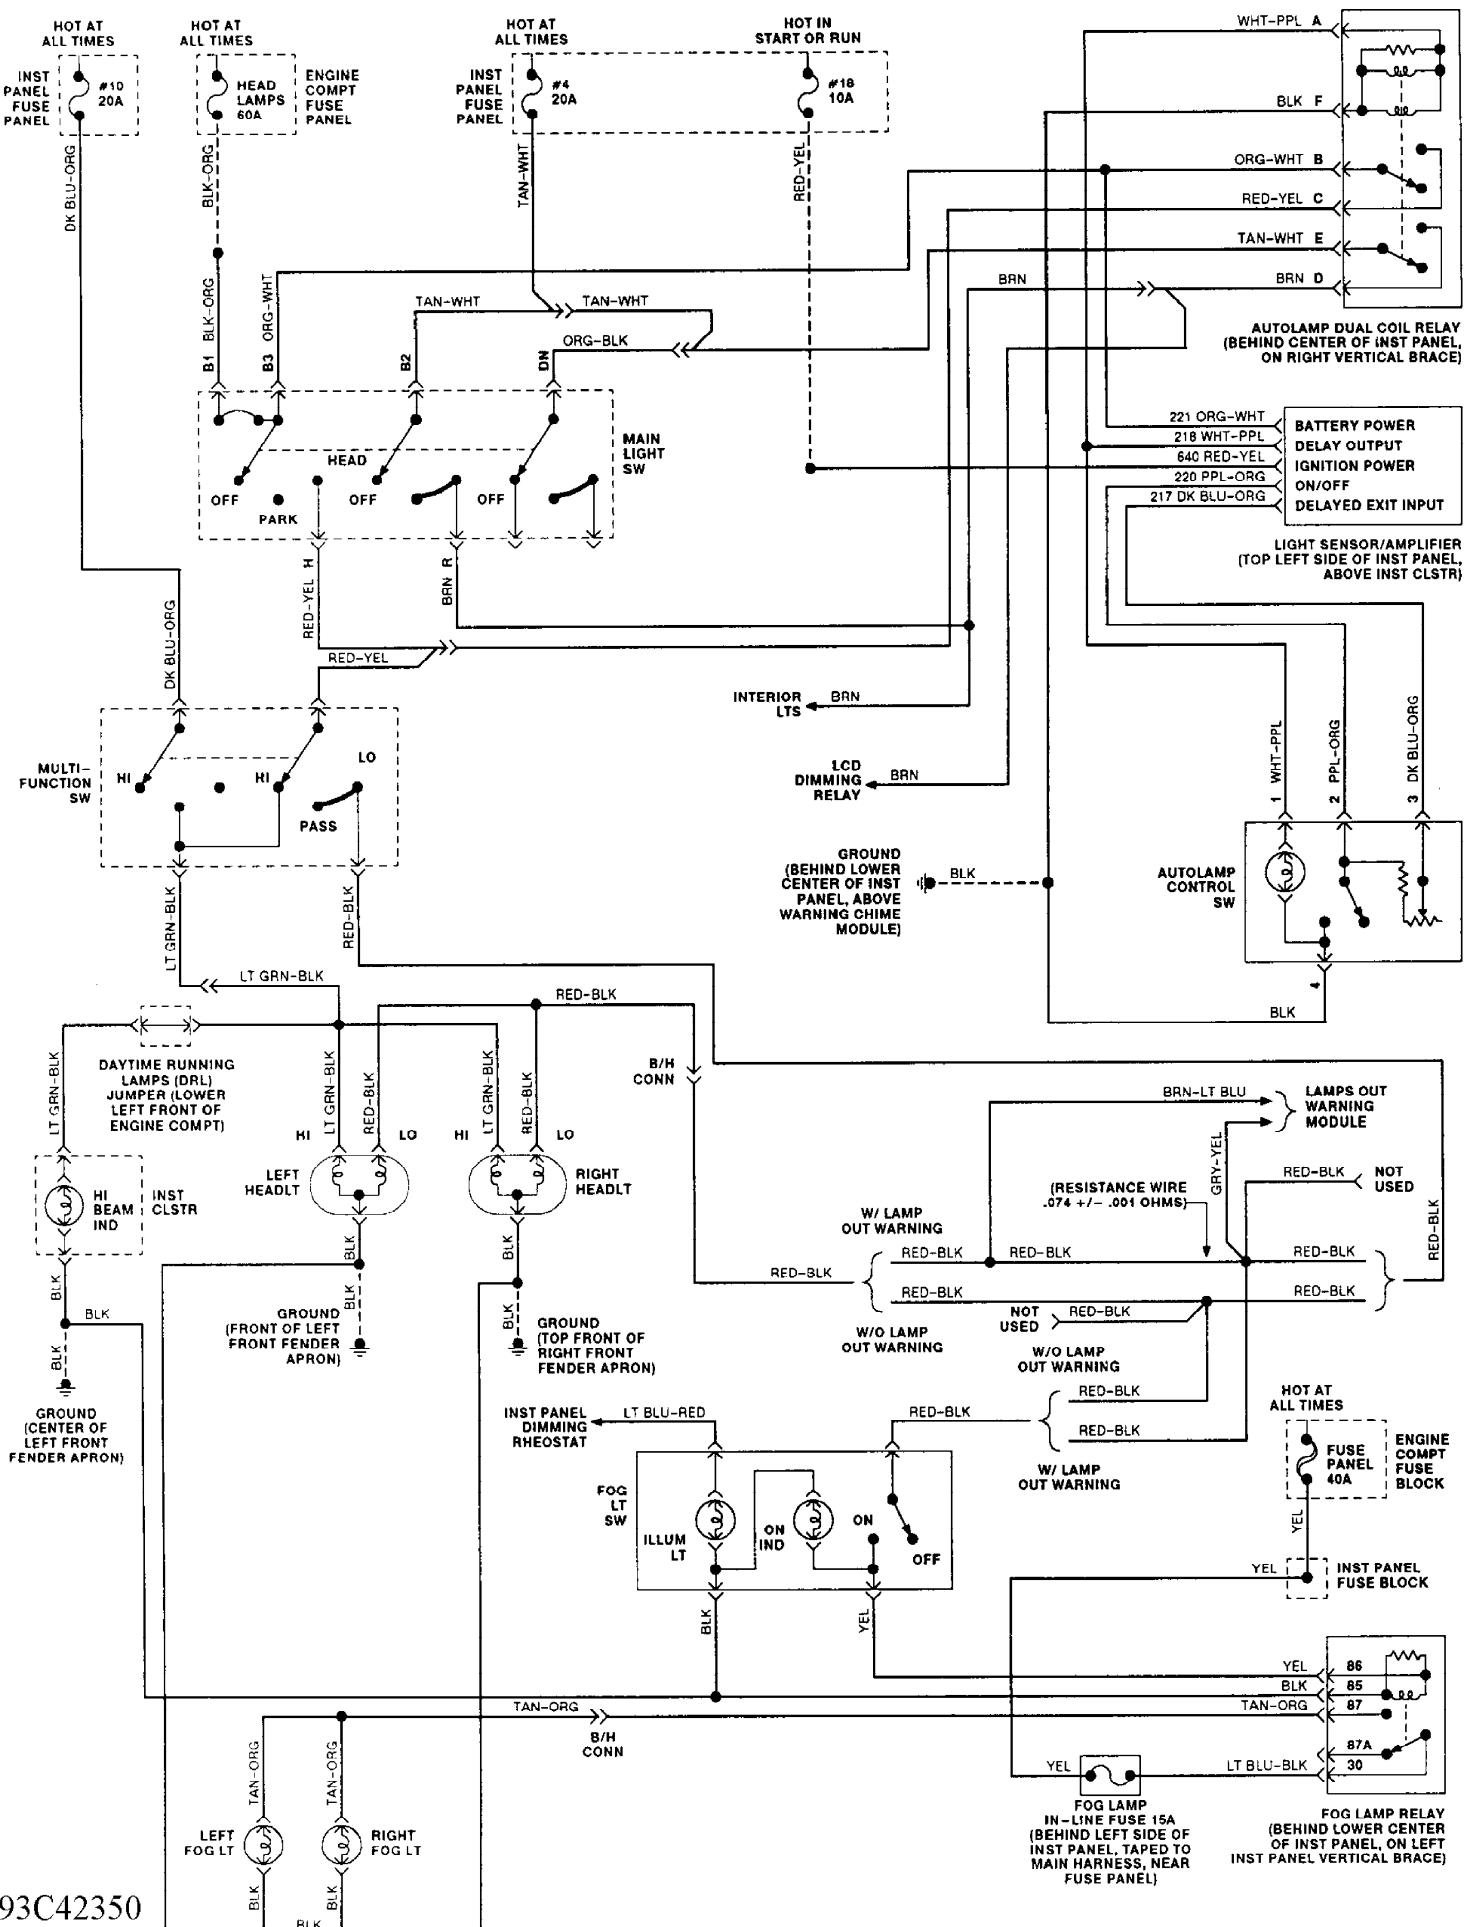

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 32: Headlight System Wiring Diagram (Manual)
1993 Ford Taurus LX

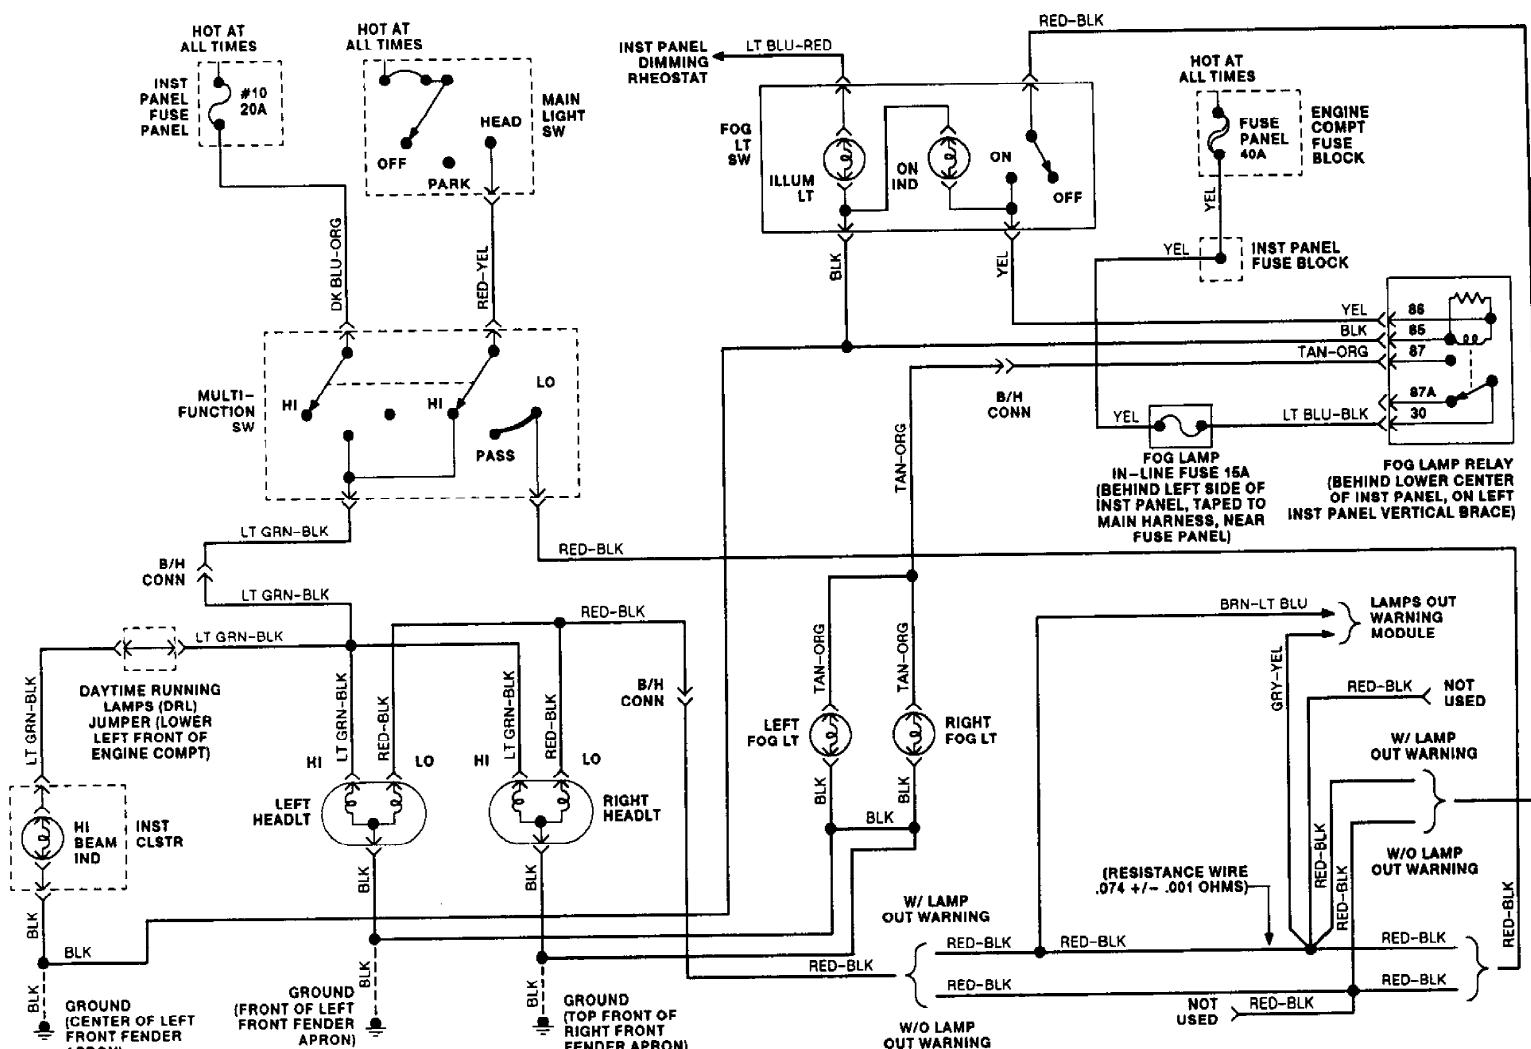


93D42351

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 33: Headlight System Wiring Diagram (Manual)
1993 Ford Taurus LX

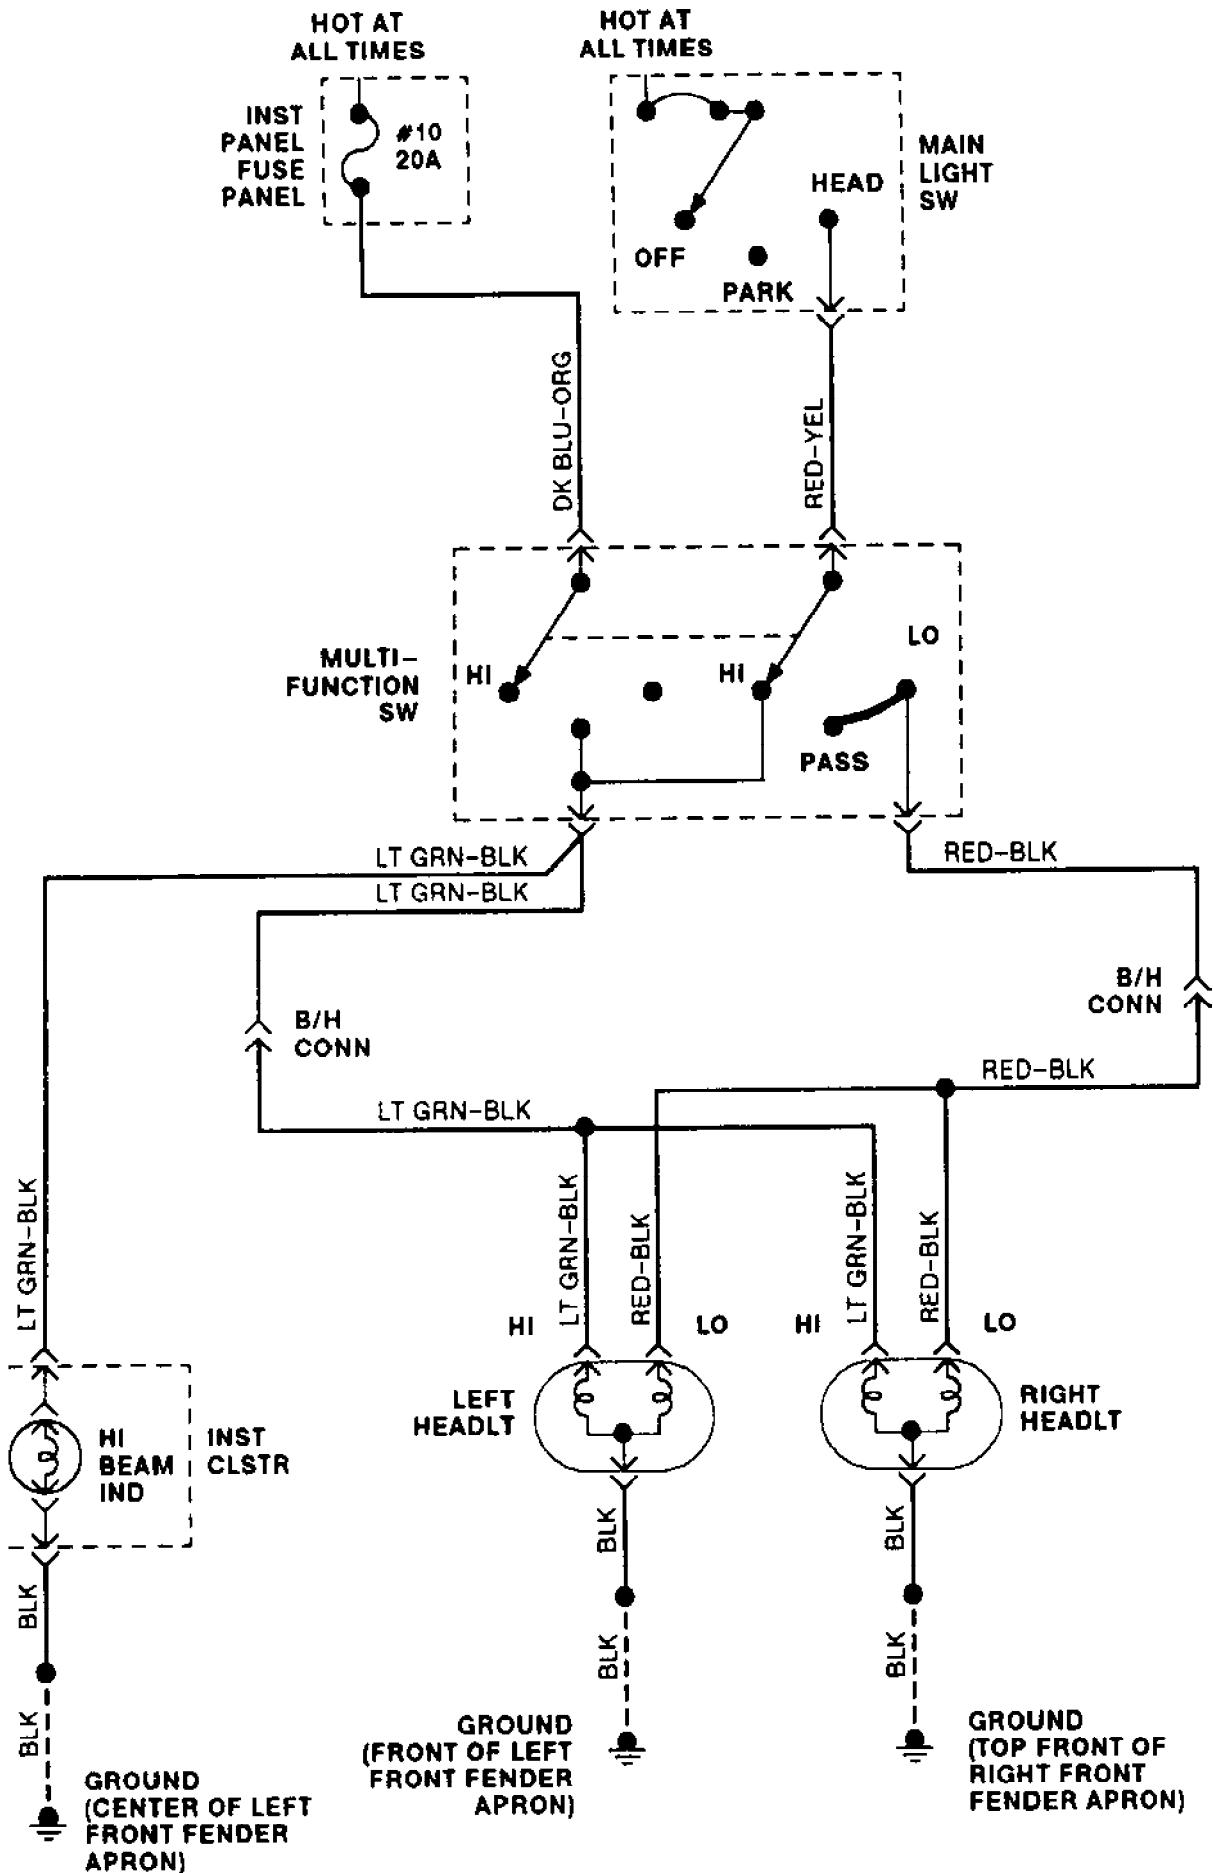


93E42352

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN


Fig. 34: Cruise Control Sys. Wiring Diagram (Ex. 3.0L SHO & 3.2L SHO)
1993 Ford Taurus LX

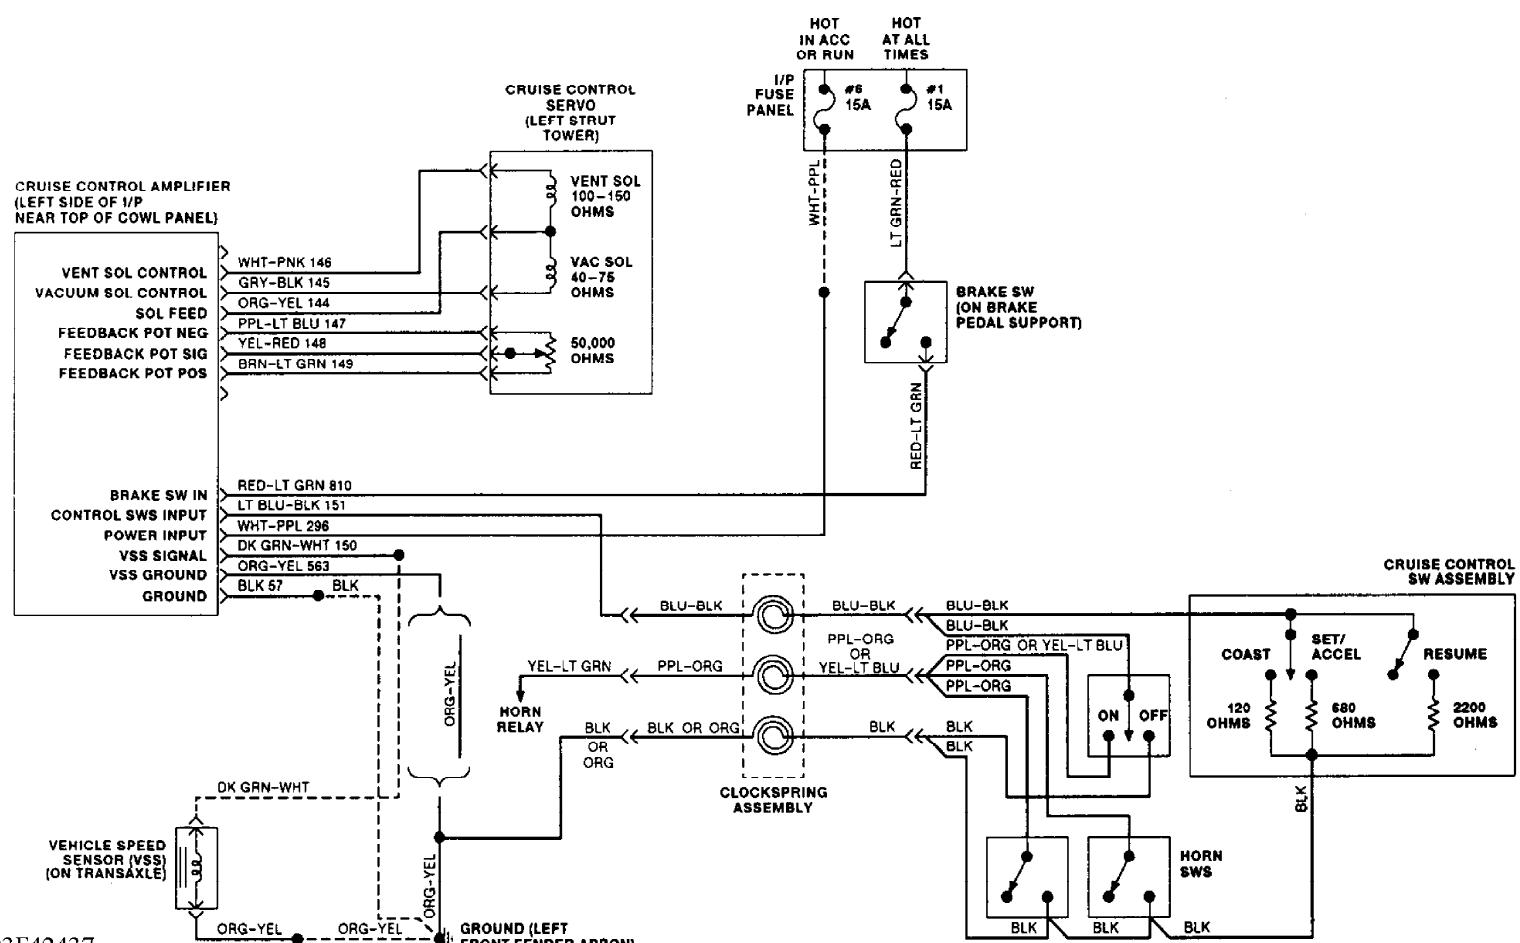

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 35: Cruise Control System Wiring Diagram (3.0L SHO)
1993 Ford Taurus LX

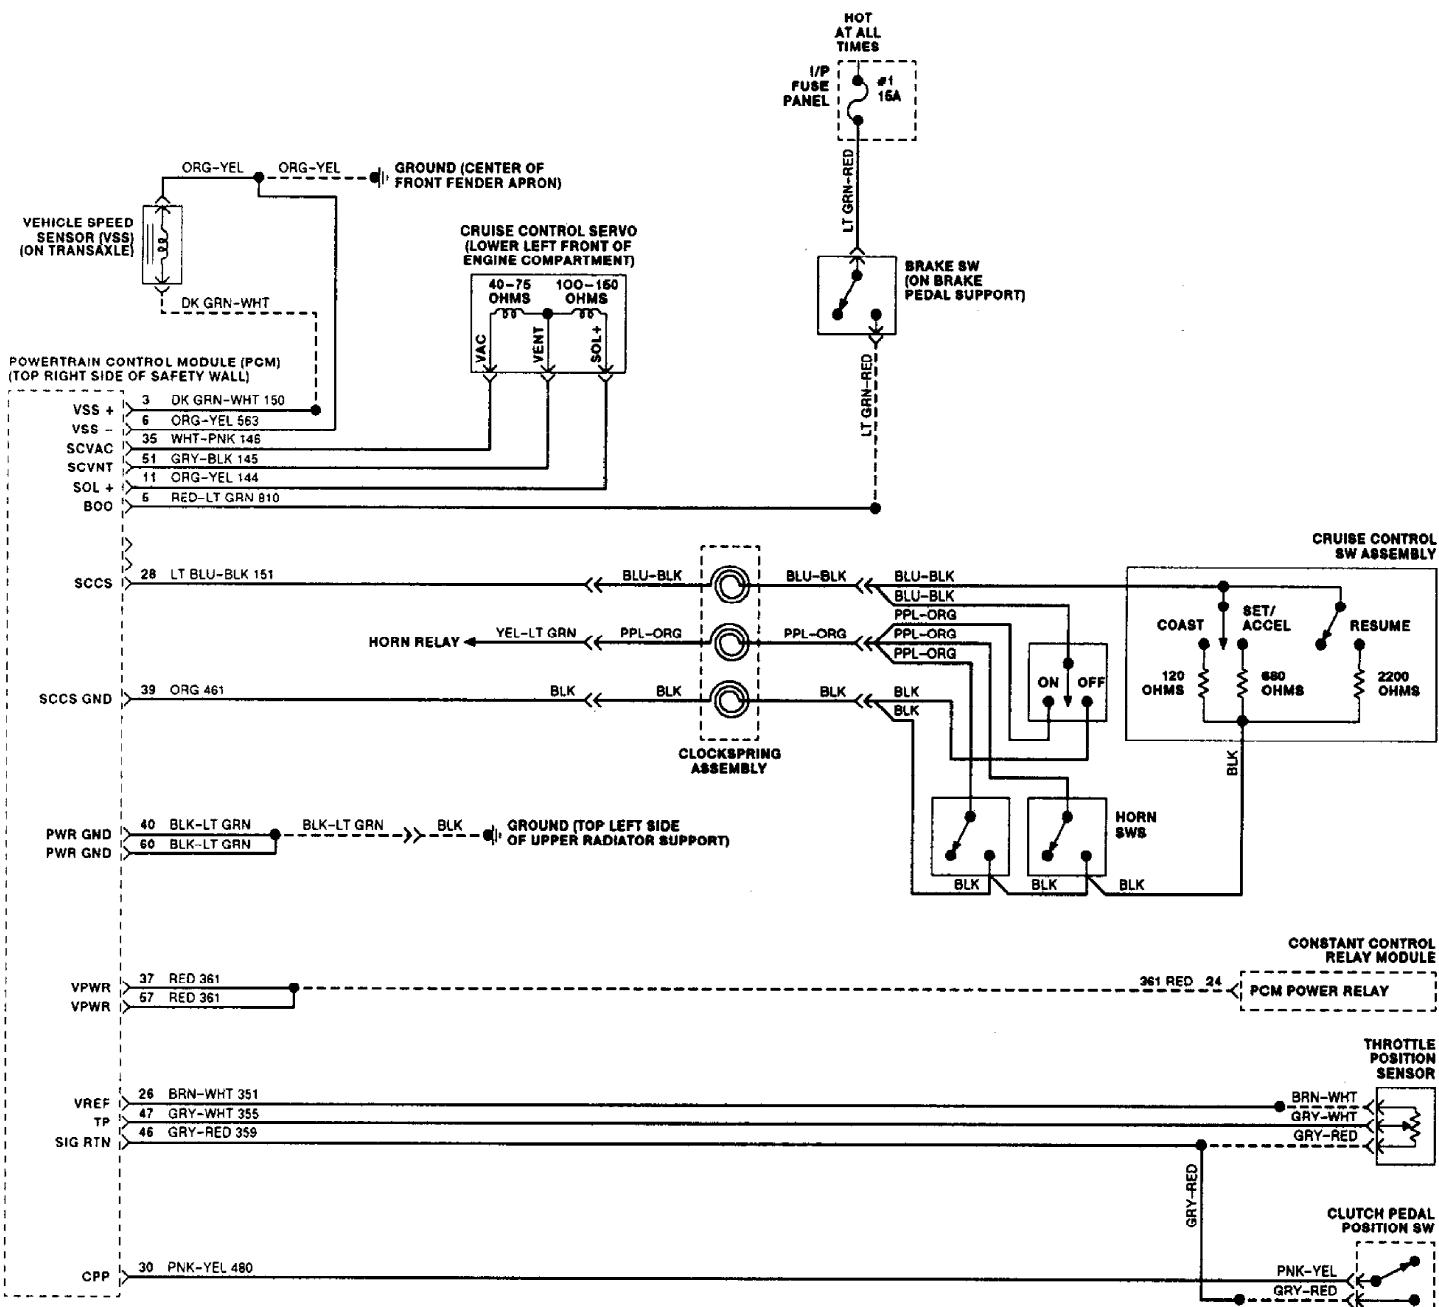


93G40424

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 36: Cruise Control Sys. Wiring Diagram (3.2L SHO)
1993 Ford Taurus LX

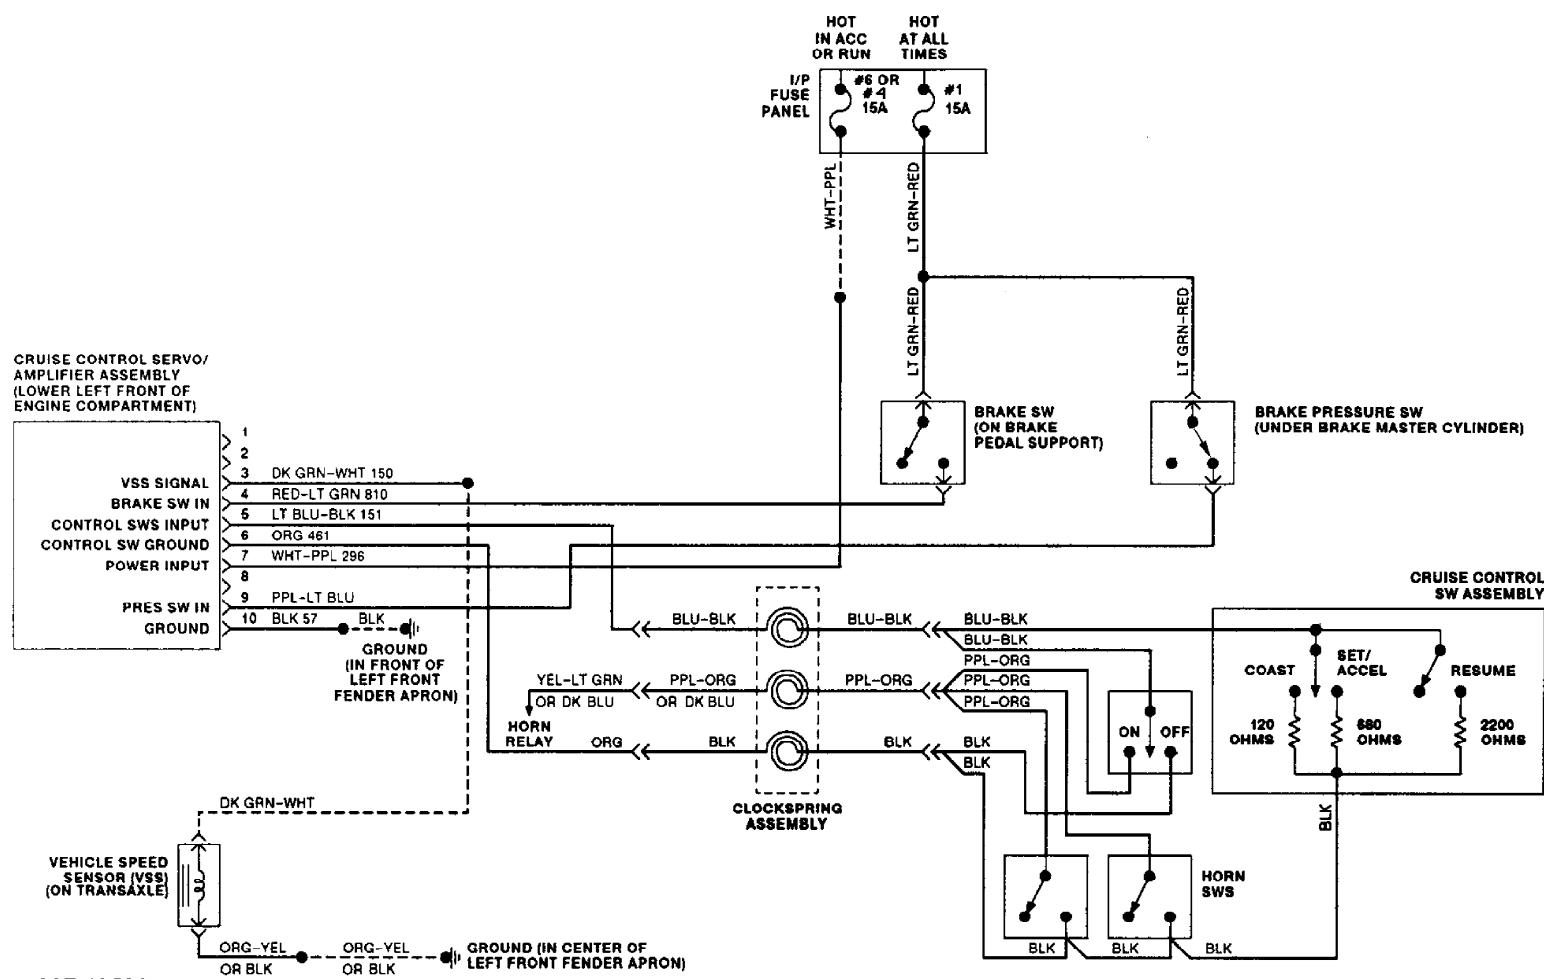


WIRING DIAGRAMS

Power & Ground Distribution

PAVLIN

Fig. 37: Electronic Instrument Cluster Wiring Diagram
1993 Ford Taurus LX

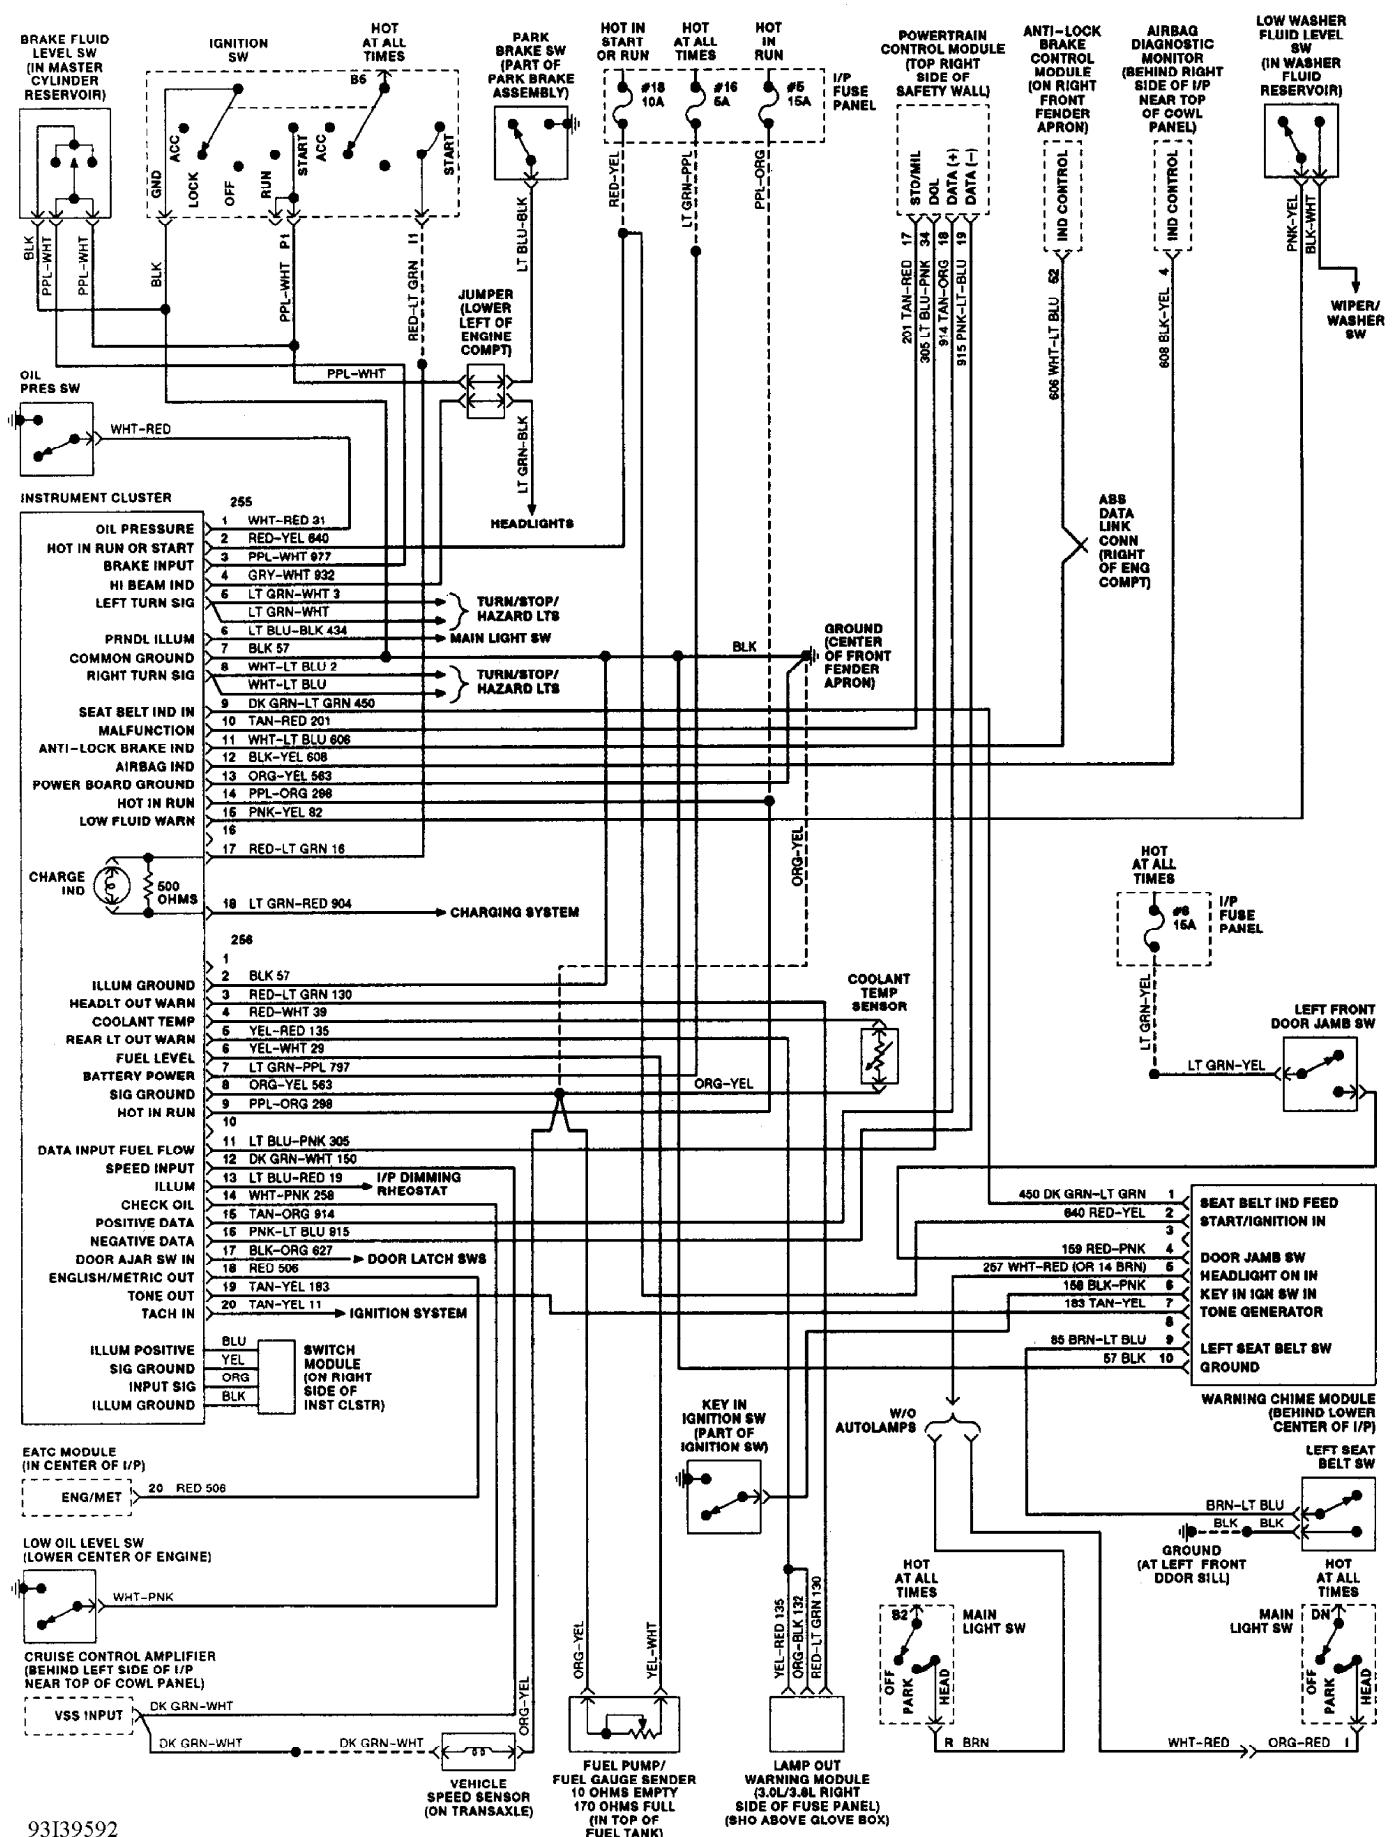


93I39592

WIRING DIAGRAMS

PAVLIN

Fig. 38: Exterior Lights (1 Of 17)
1993 Ford Taurus LX

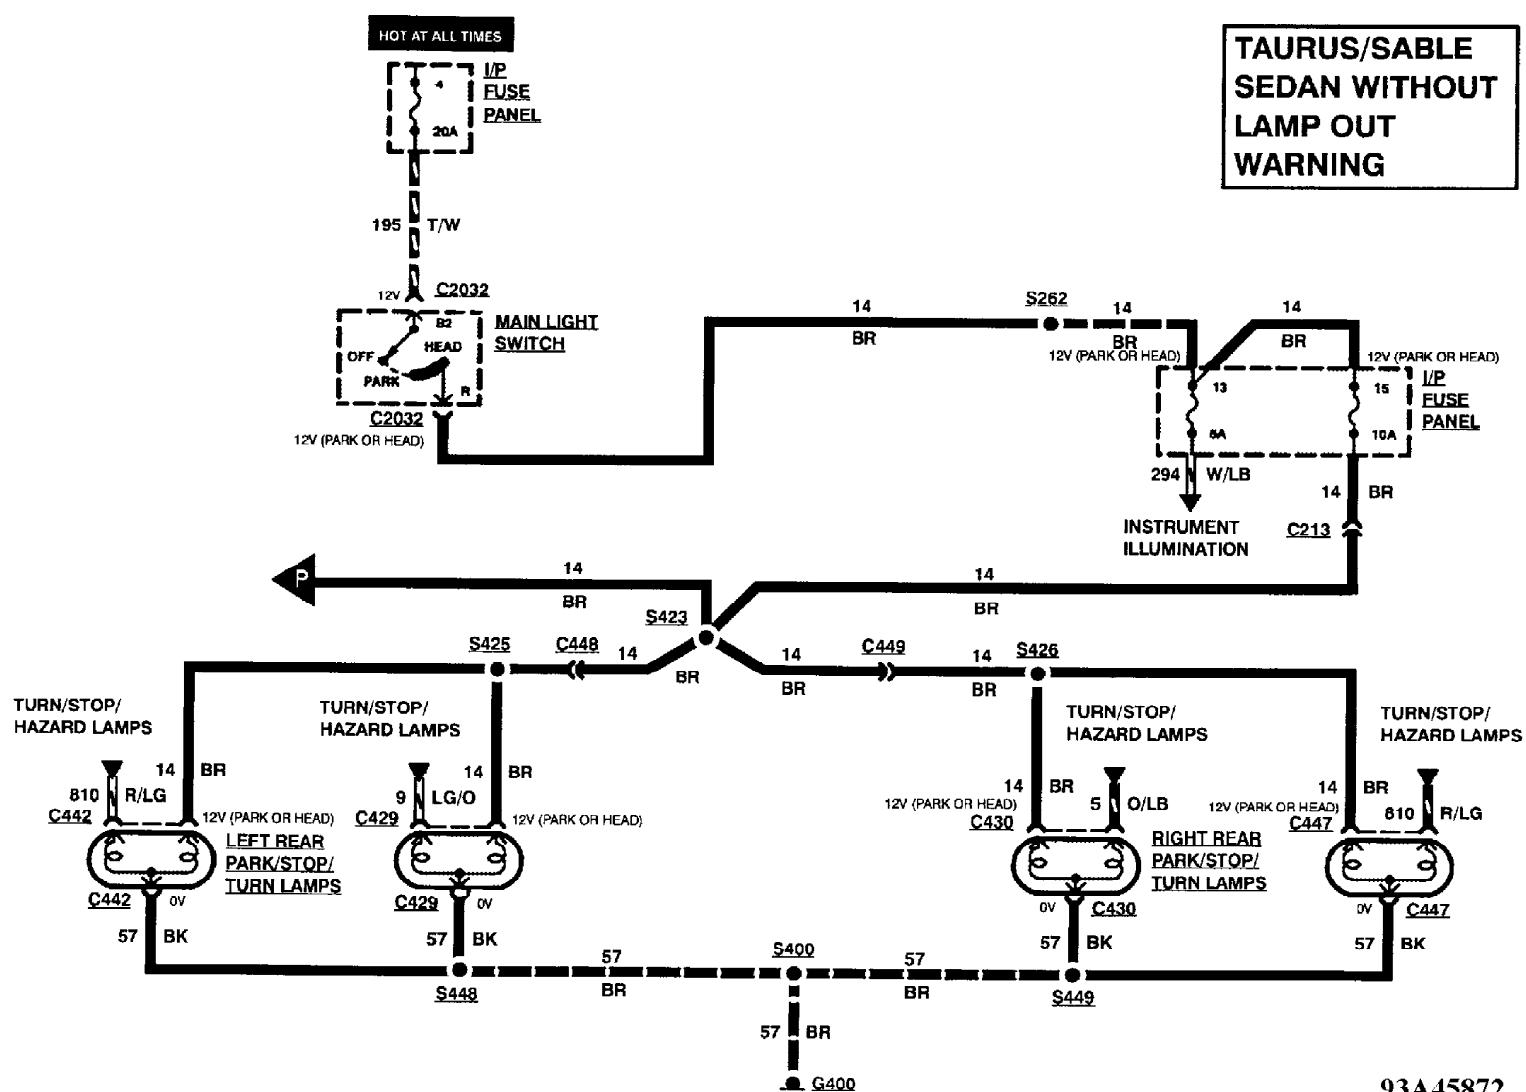


93A45872

WIRING DIAGRAMS
Power & Ground Distribution

PAVLIN


Fig. 39: Exterior Lights (2 Of 17)
1993 Ford Taurus LX

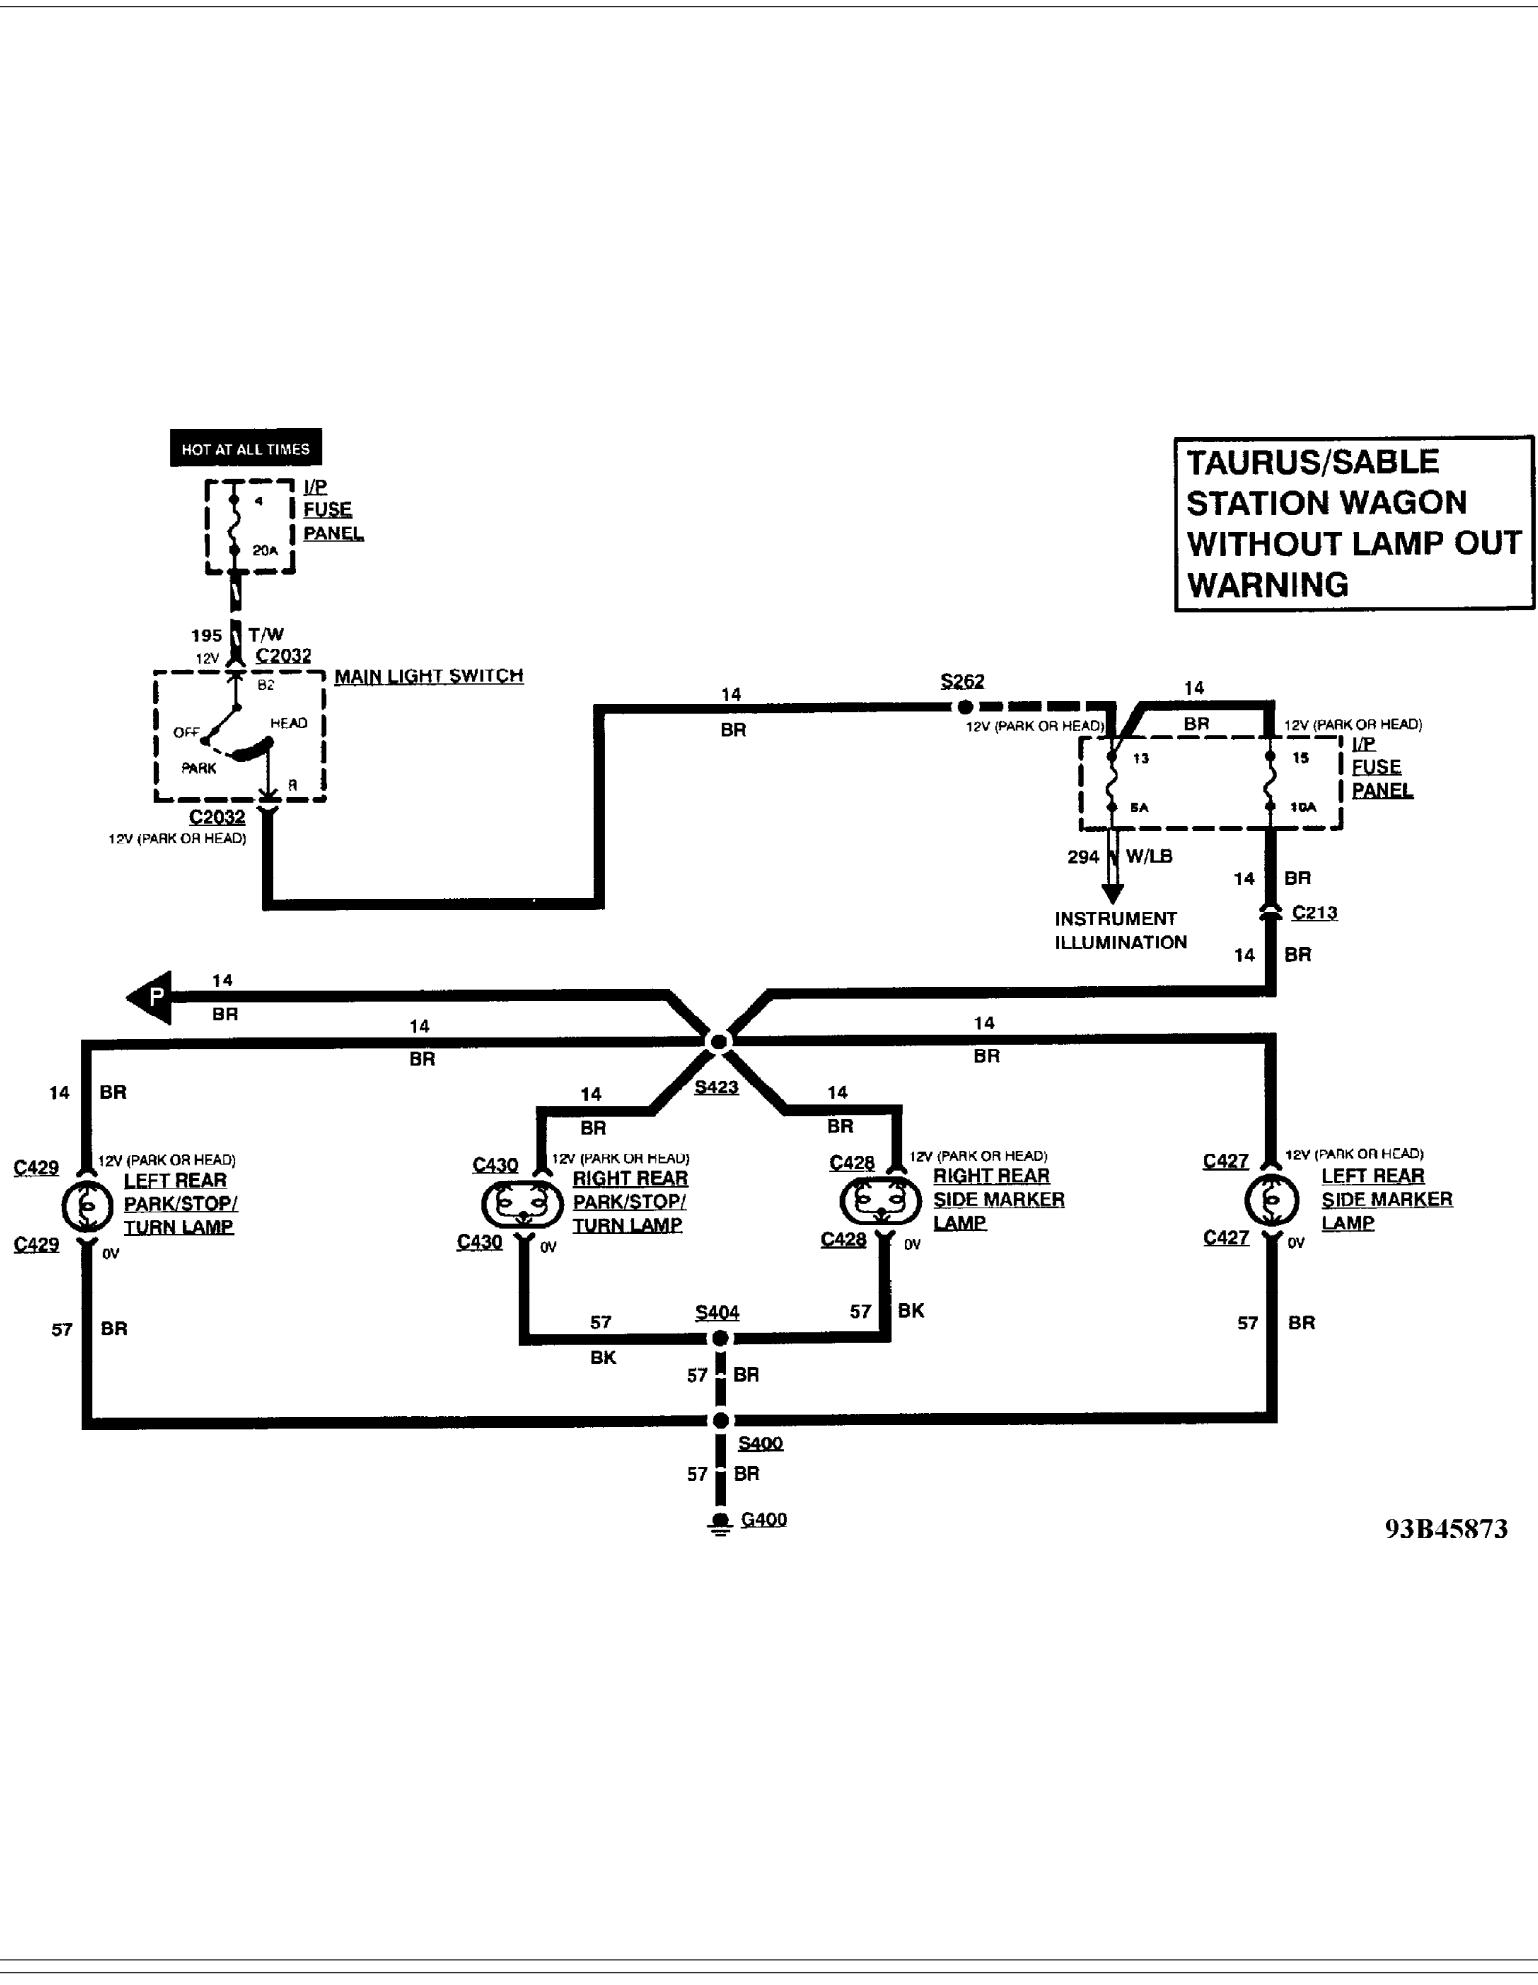

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 40: Exterior Lights (3 Of 17)
1993 Ford Taurus LX

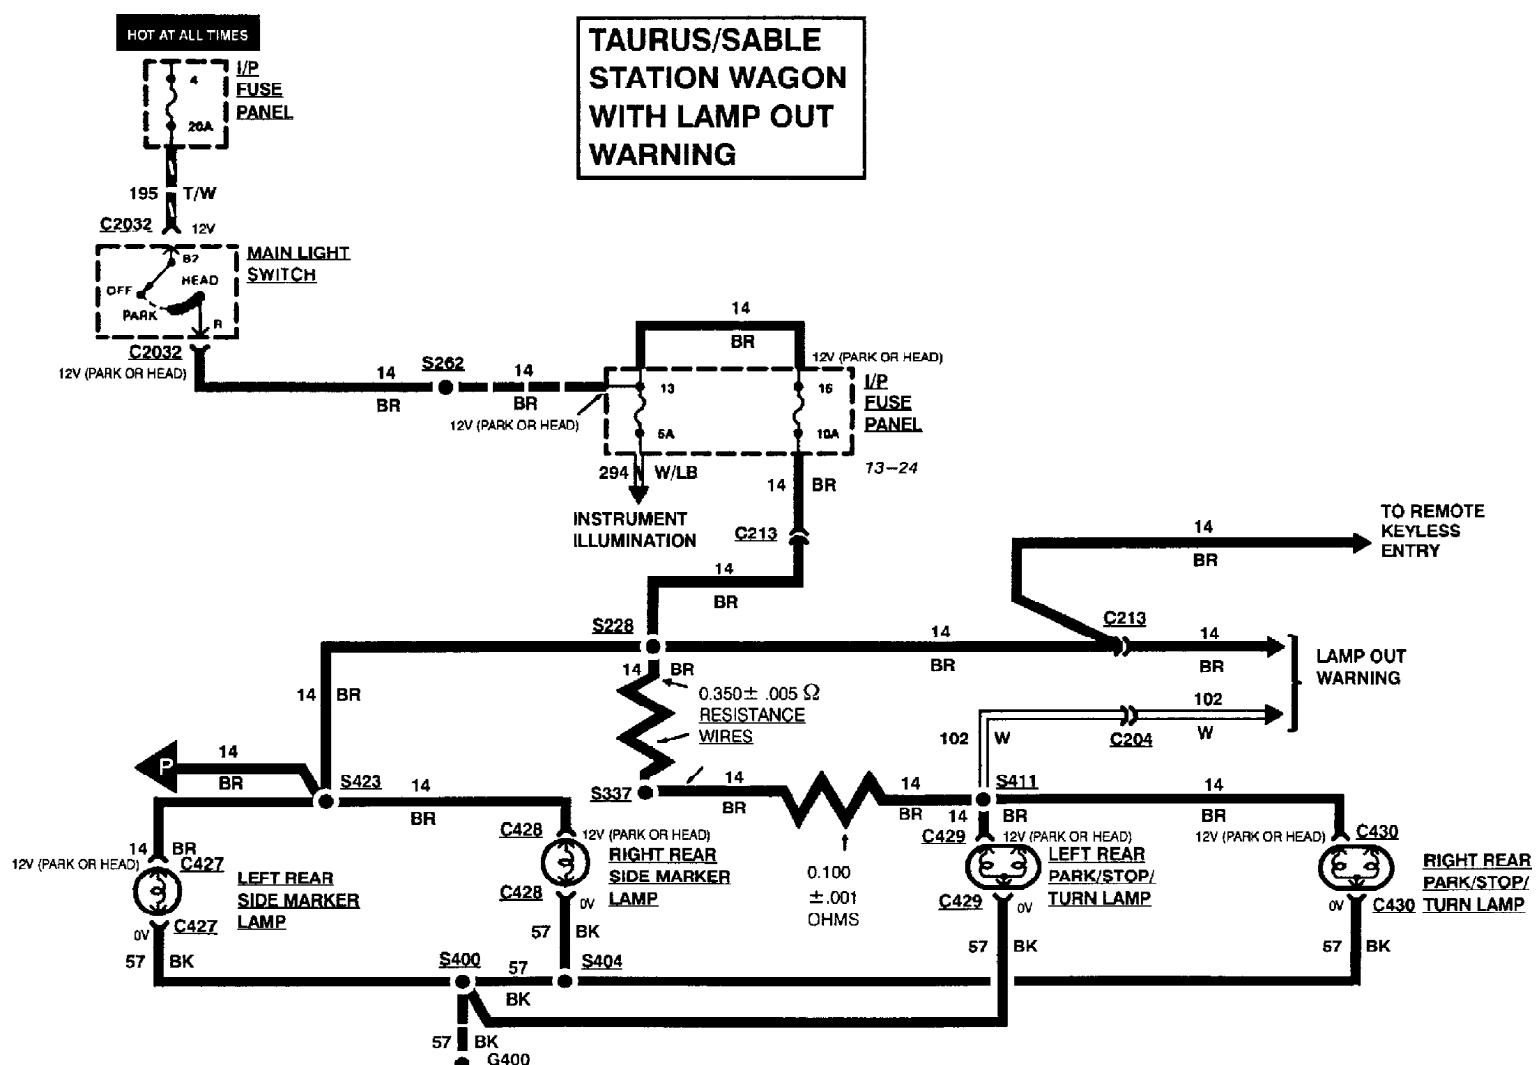


93C45874

WIRING DIAGRAMS
Power & Ground Distribution

PAVLIN

Fig. 41: Exterior Lights (4 Of 17)
1993 Ford Taurus LX


**TAURUS/
SABLE SEDAN
WITH LAMP
OUT WARNING**

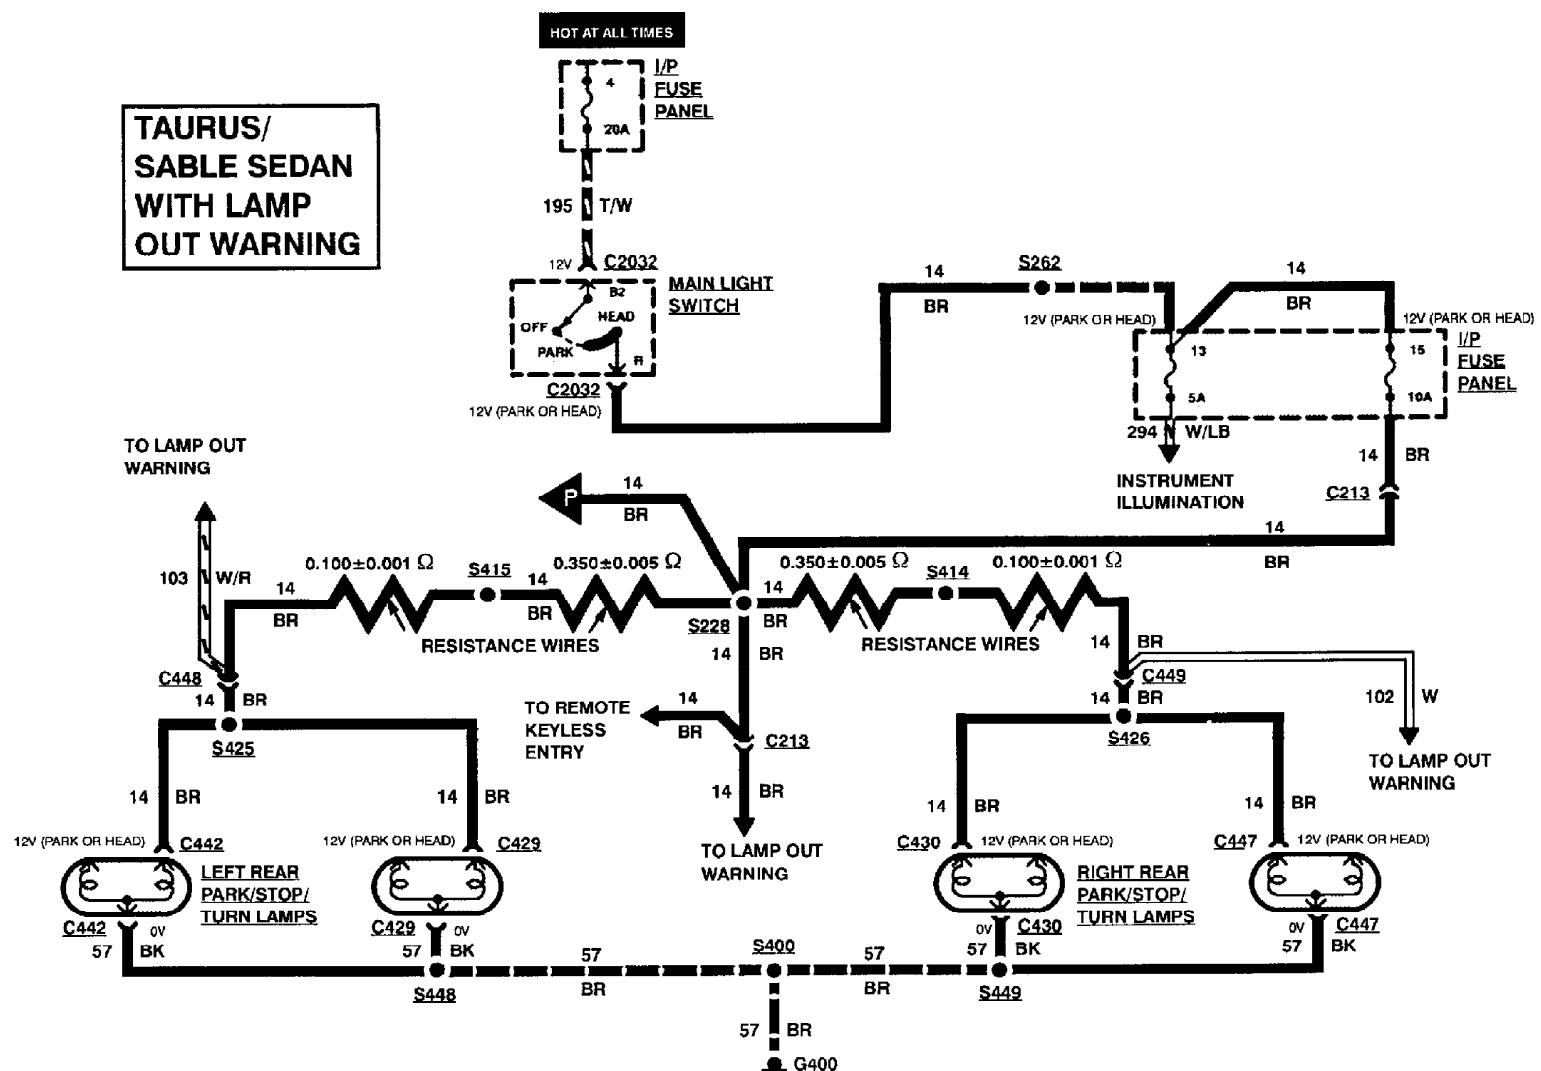

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 42: Exterior Lights (5 Of 17)
1993 Ford Taurus LX

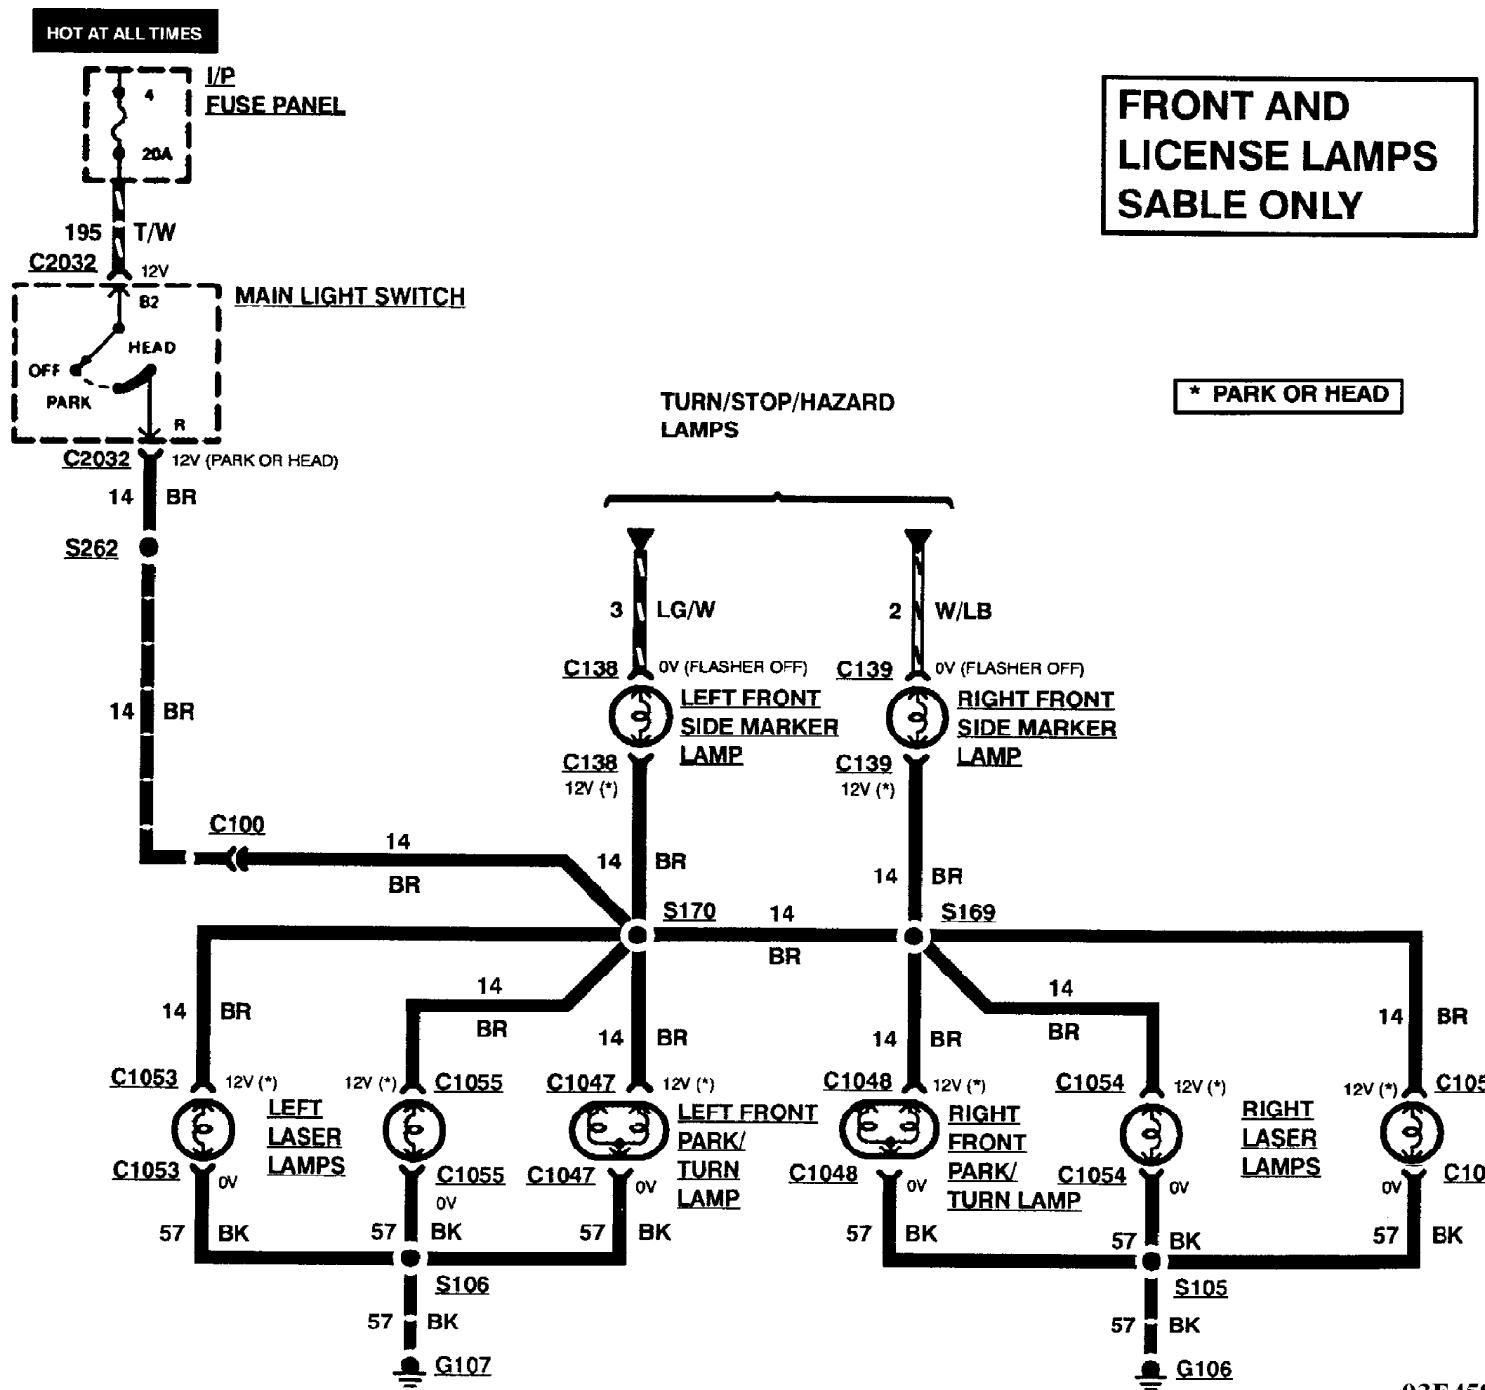


93E45876

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 43: Exterior Lights (6 Of 17)
1993 Ford Taurus LX


**FRONT AND
LICENSE LAMPS
TAURUS ONLY**

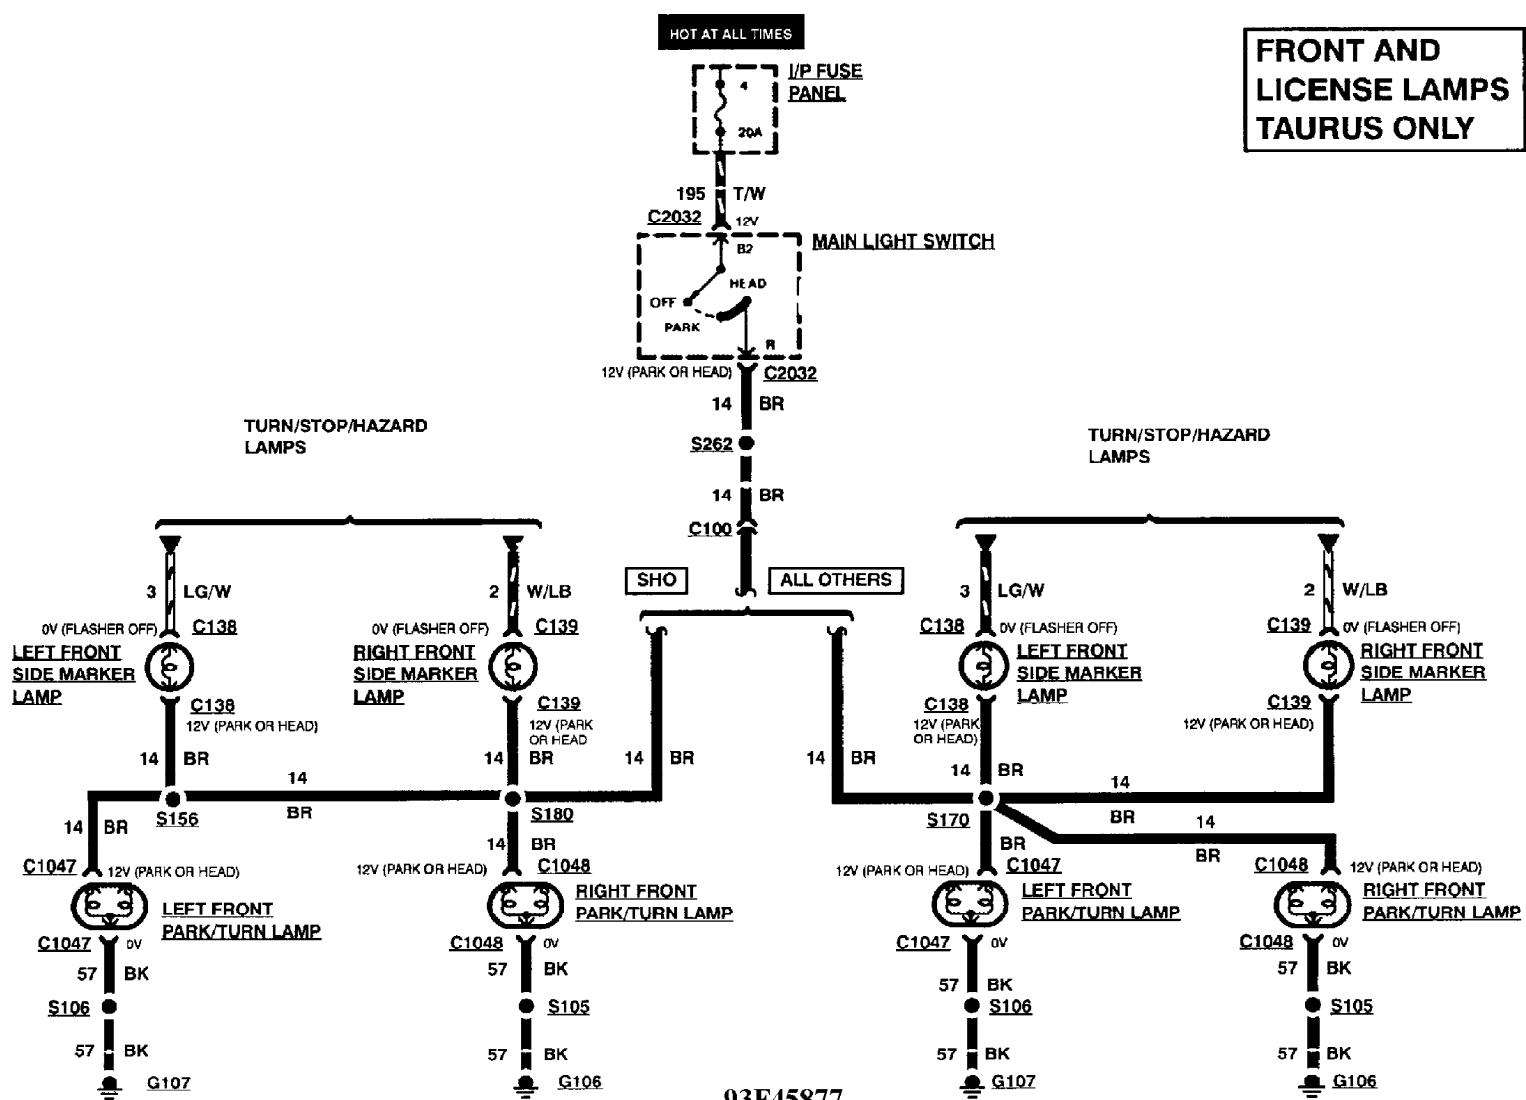

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 44: Exterior Lights (7 Of 17)
1993 Ford Taurus LX

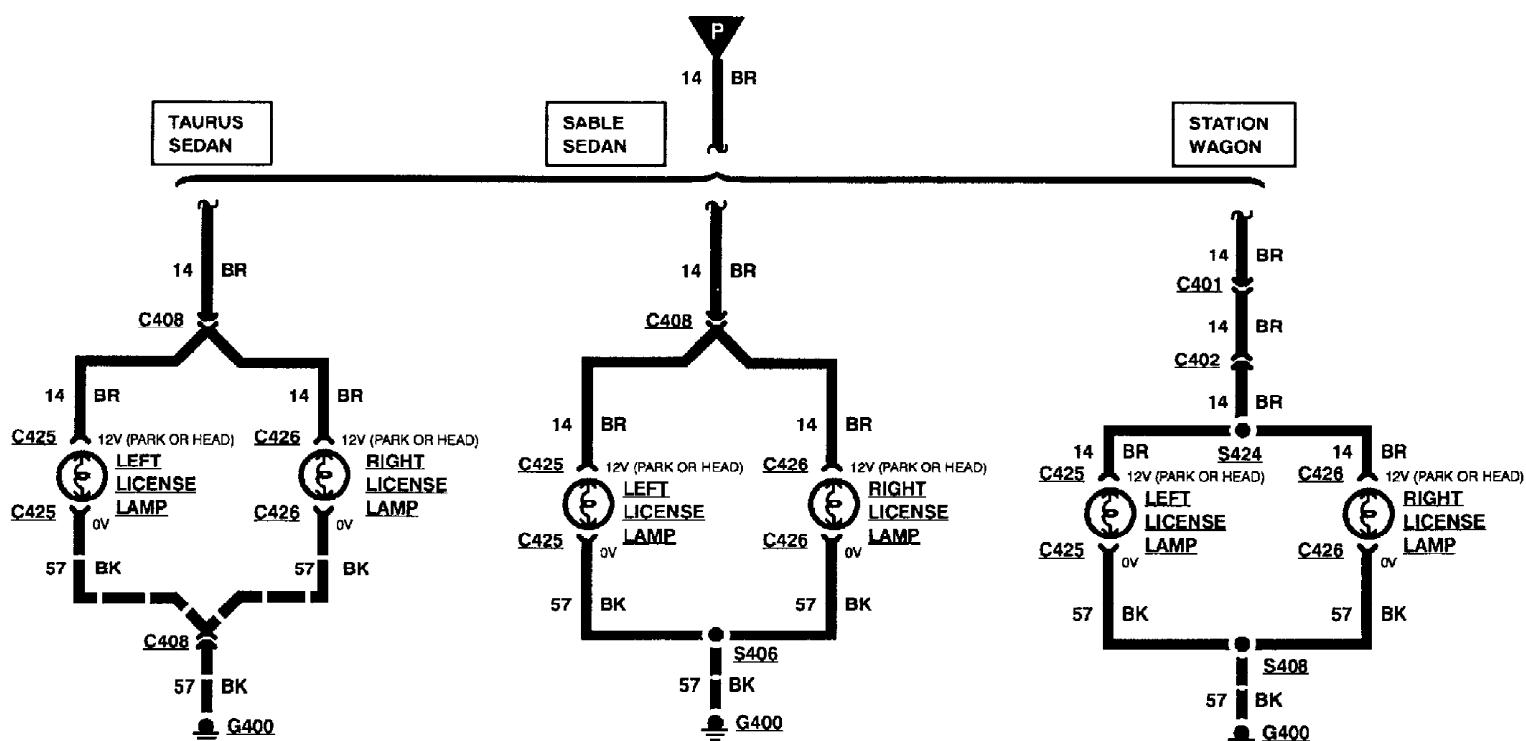


93G45878

WIRING DIAGRAMS
Power & Ground Distribution

PAVLIN


Fig. 45: Exterior Lights (8 Of 17)
1993 Ford Taurus LX

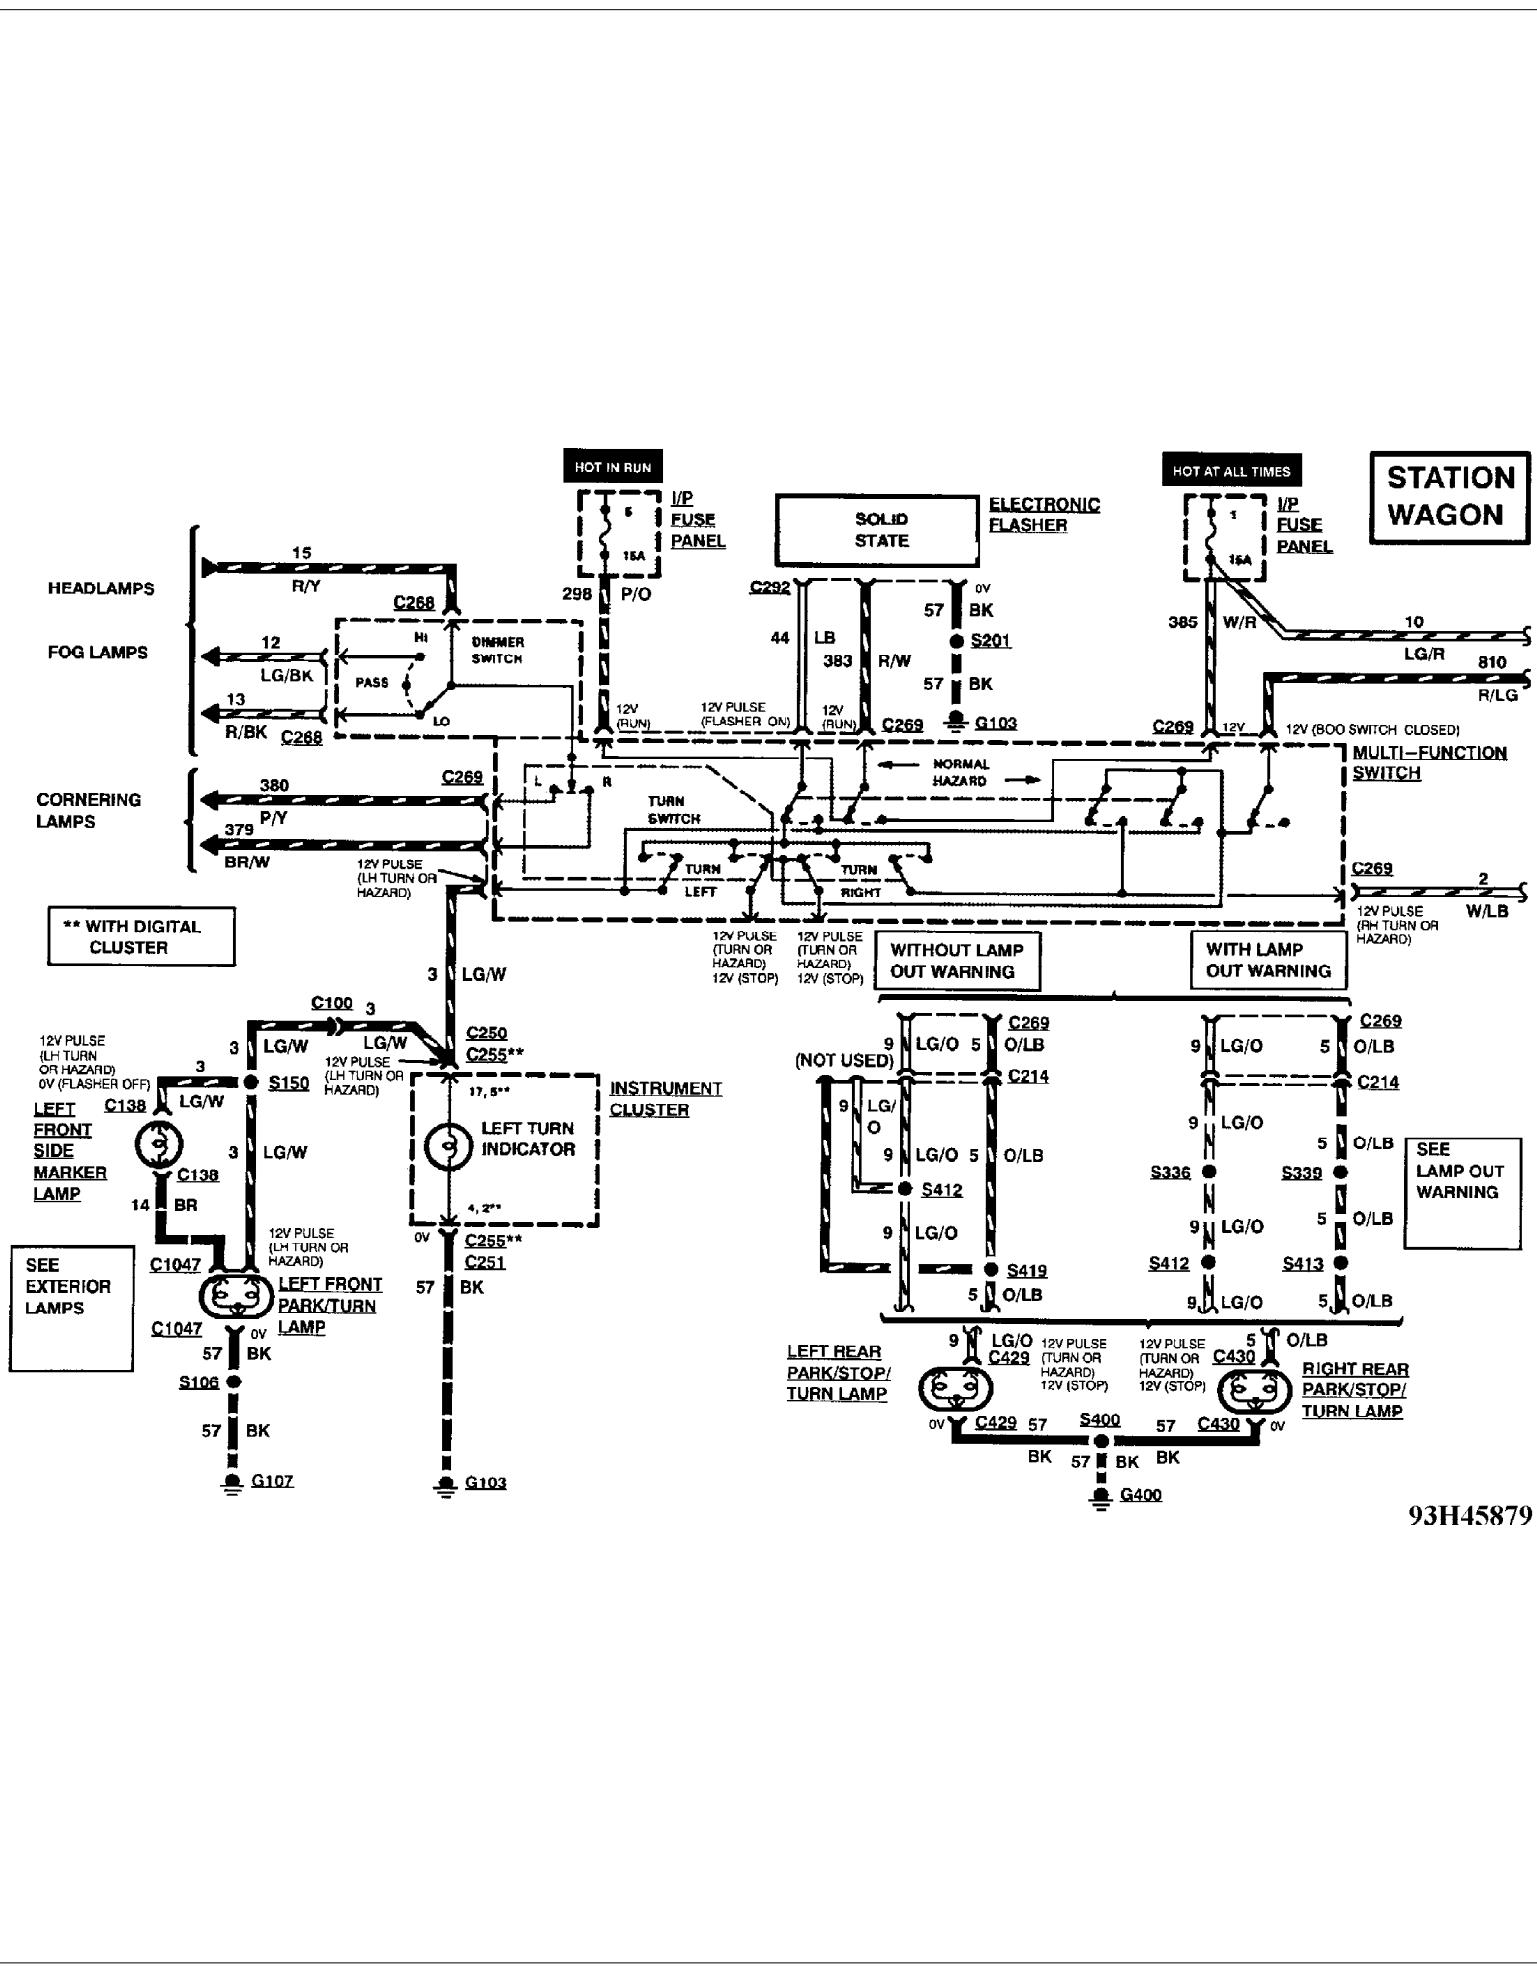

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 46: Exterior Lights (9 Of 17)
1993 Ford Taurus LX

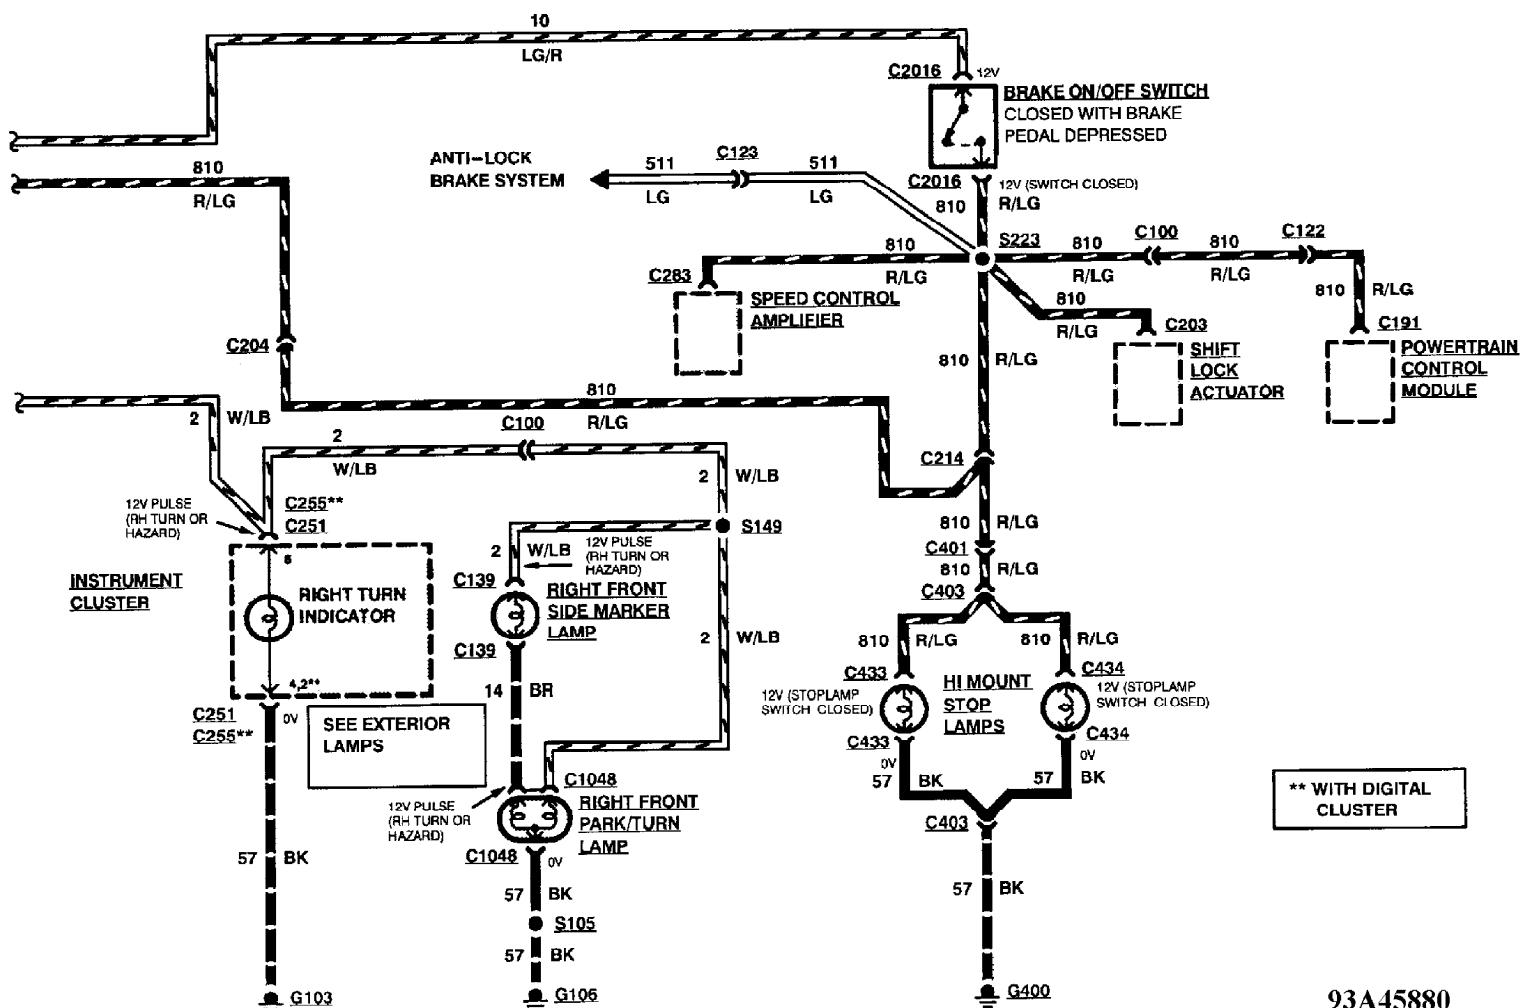


93A45880

** WITH DIGITAL CLUSTER

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN


Fig. 47: Exterior Lights (10 Of 17)
1993 Ford Taurus LX

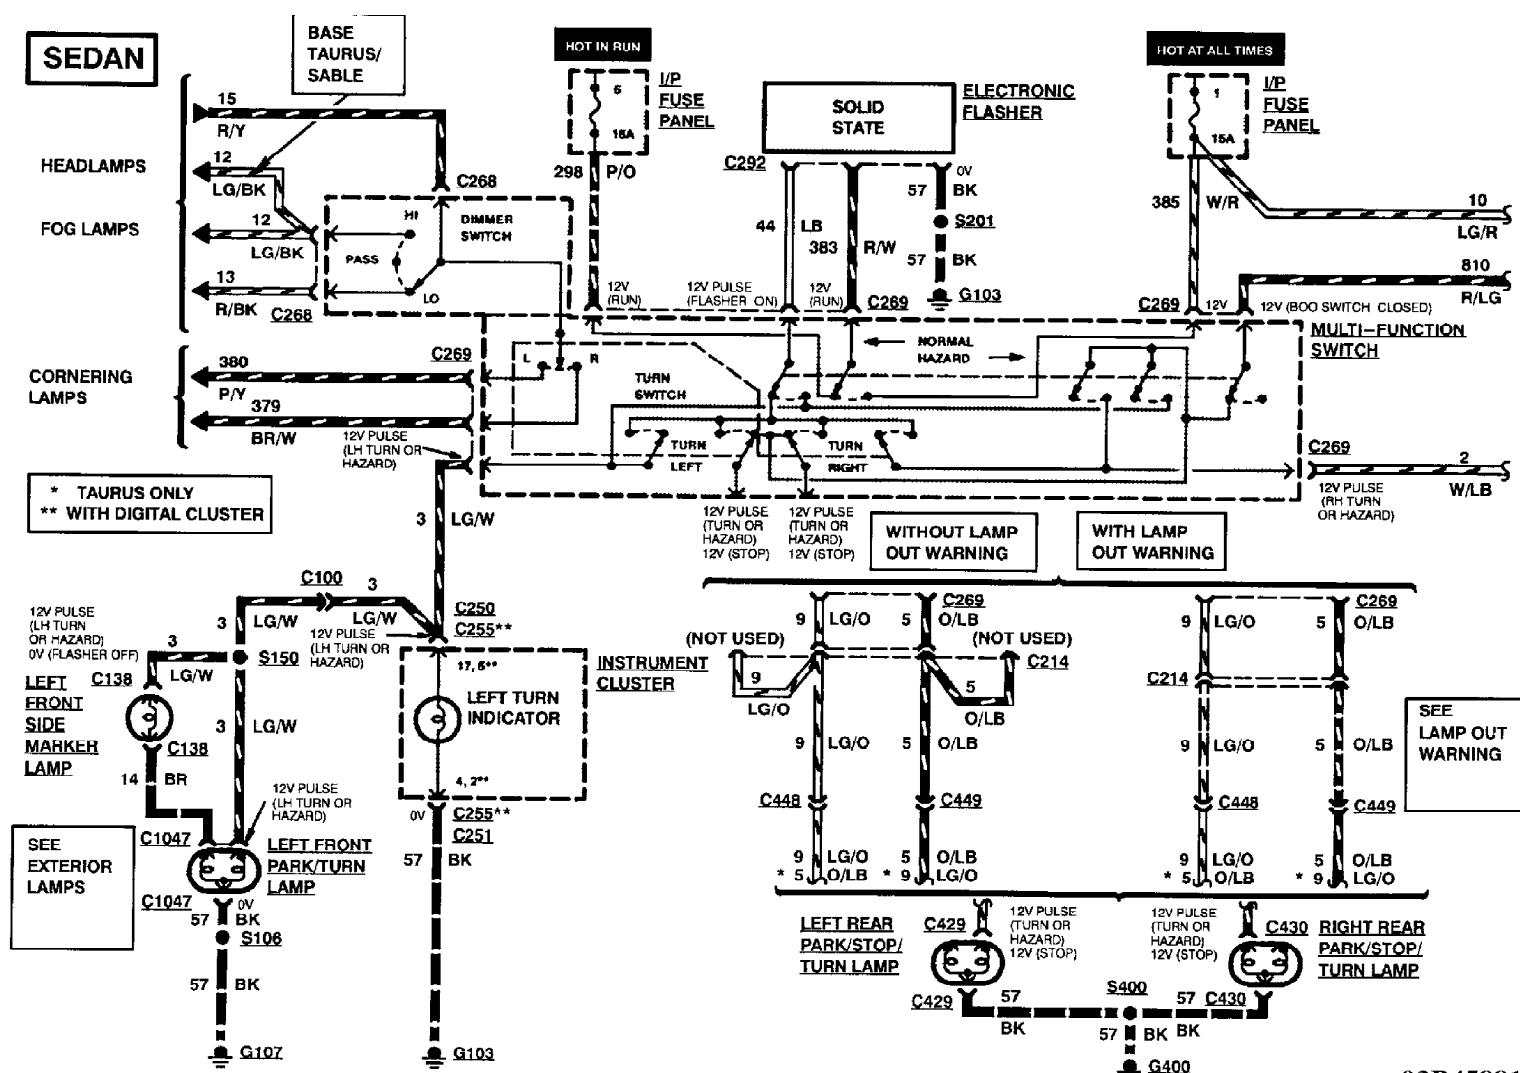

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN


Fig. 48: Exterior Lights (11 Of 17)
1993 Ford Taurus LX

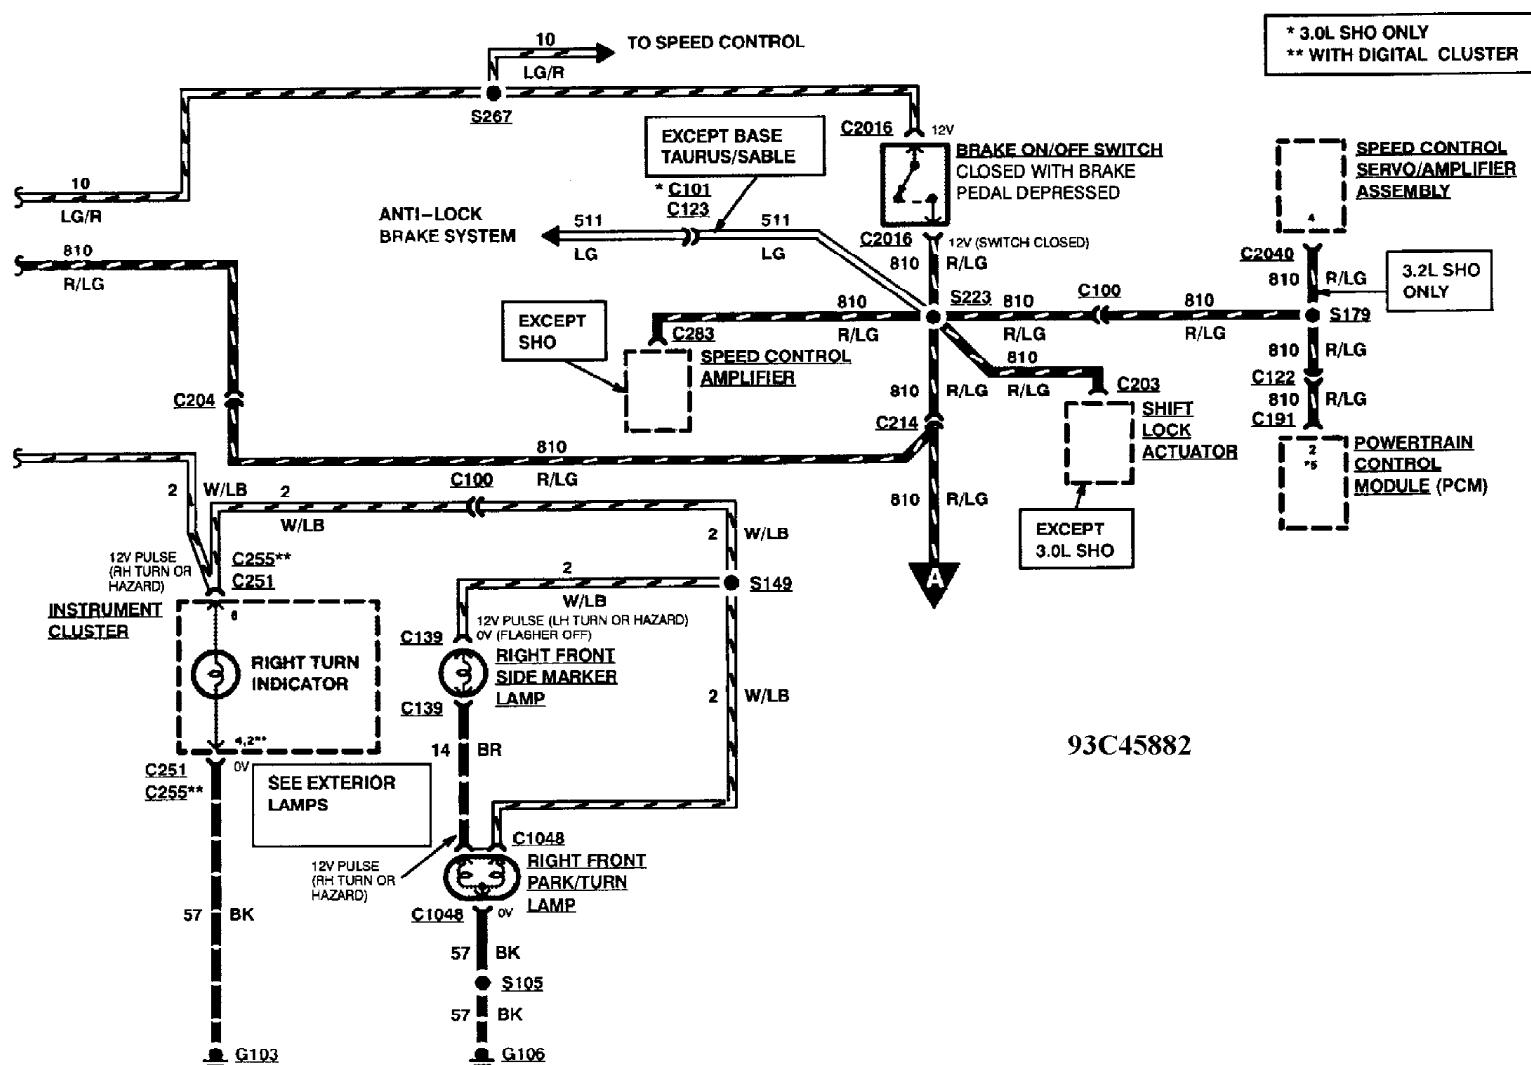

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN


Fig. 49: Exterior Lights (12 Of 17)
1993 Ford Taurus LX

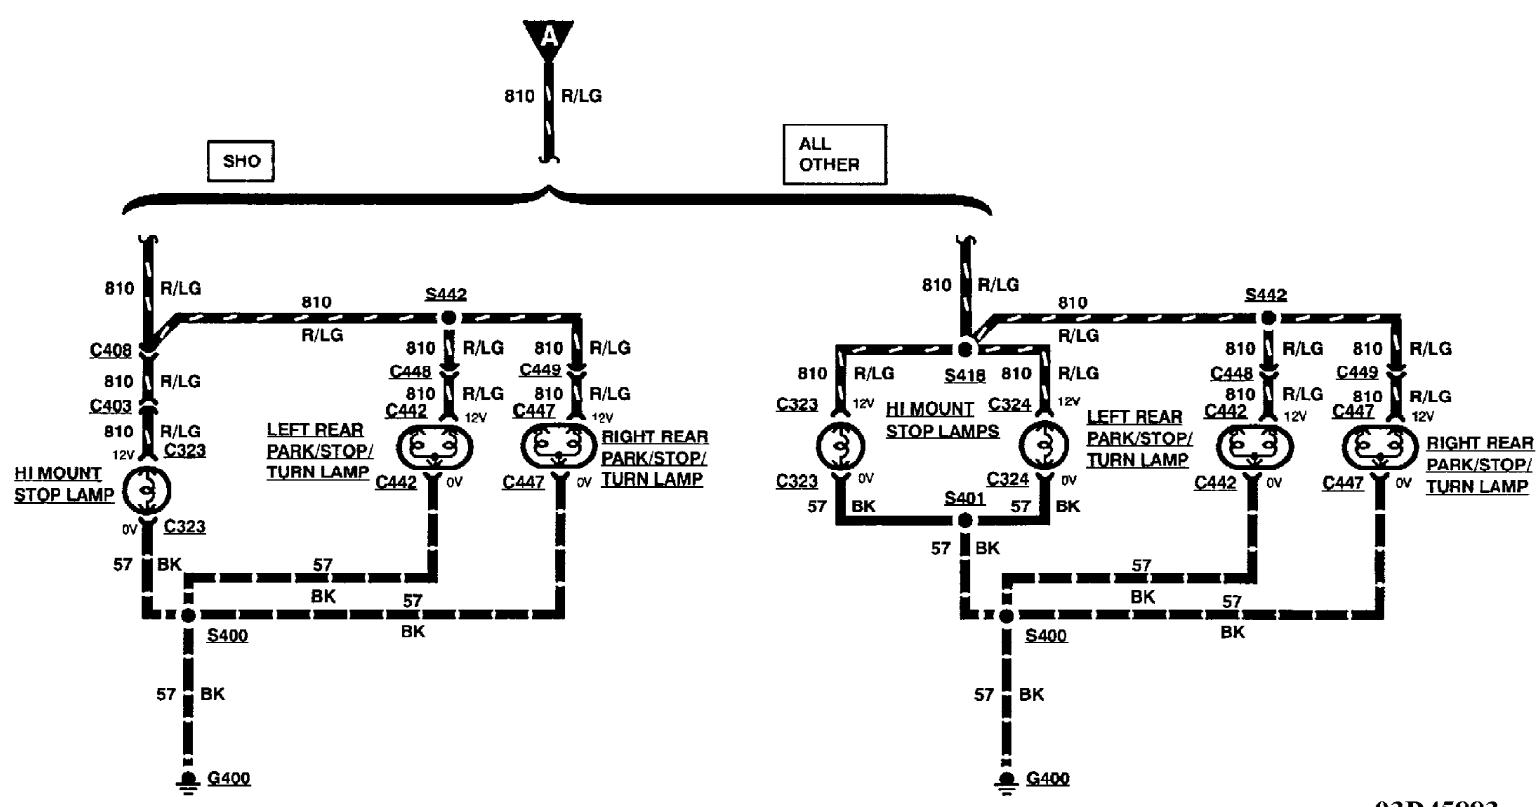

WIRING DIAGRAMS
Power & Ground Distribution

PAVLIN


Fig. 50: Exterior Lights (13 Of 17)
1993 Ford Taurus LX

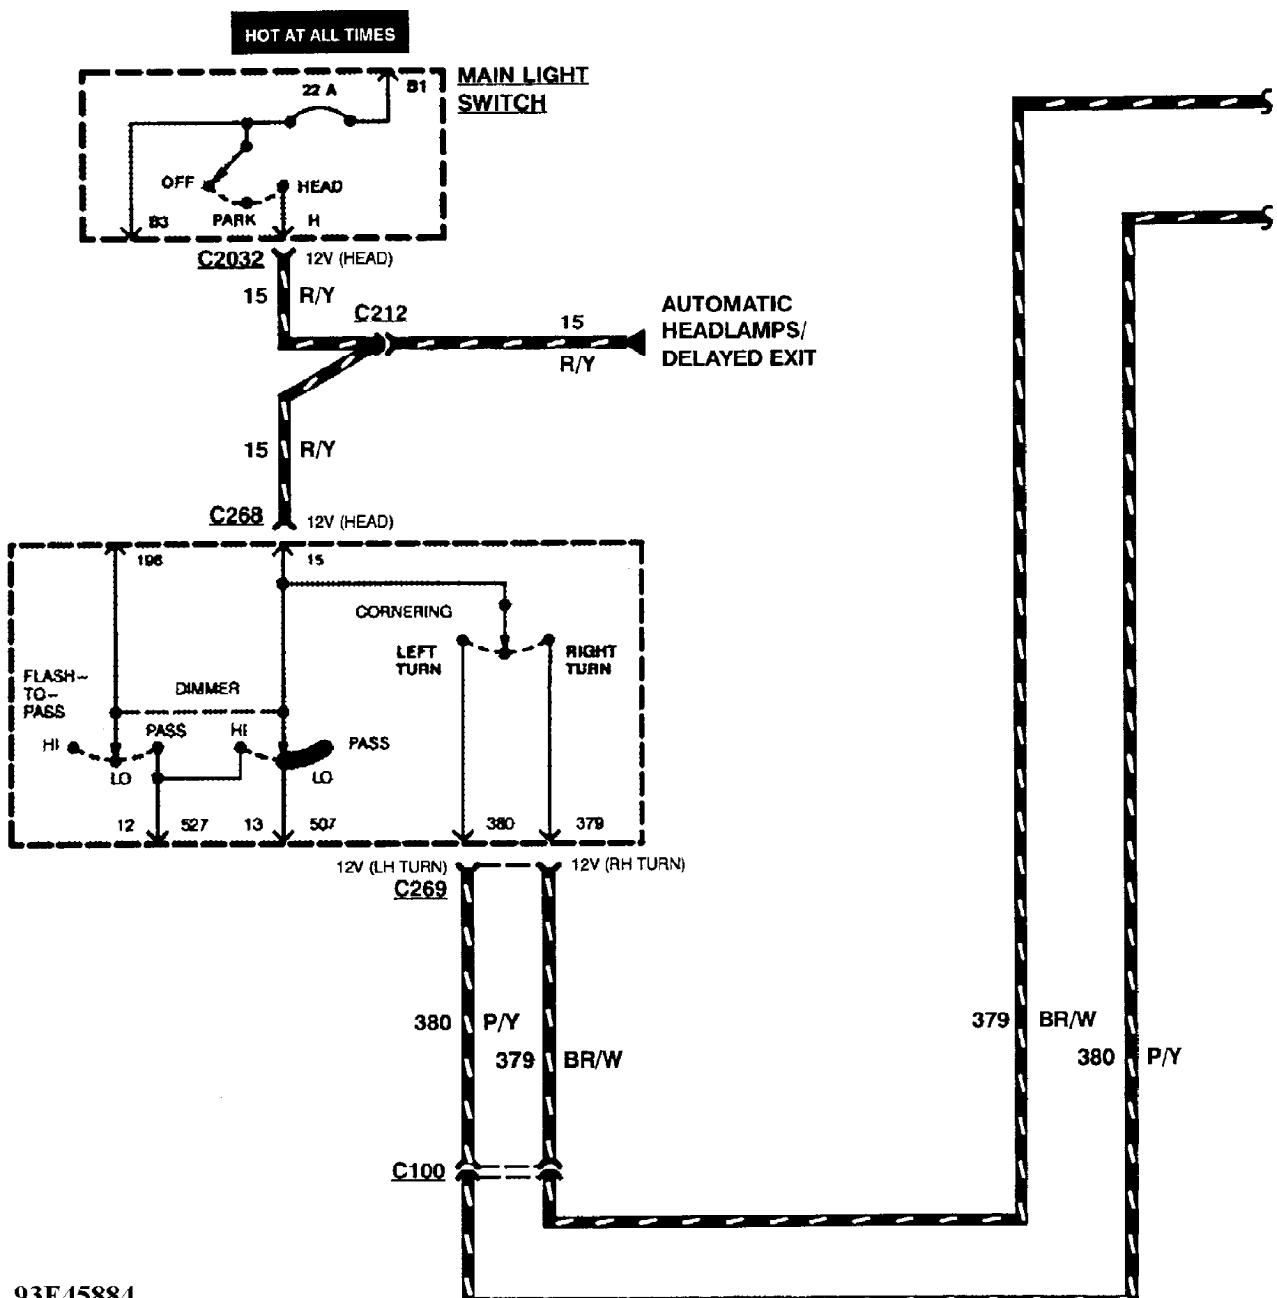

WIRING DIAGRAMS
Power & Ground Distribution

PAVLIN


Fig. 51: Exterior Lights (14 Of 17)
1993 Ford Taurus LX

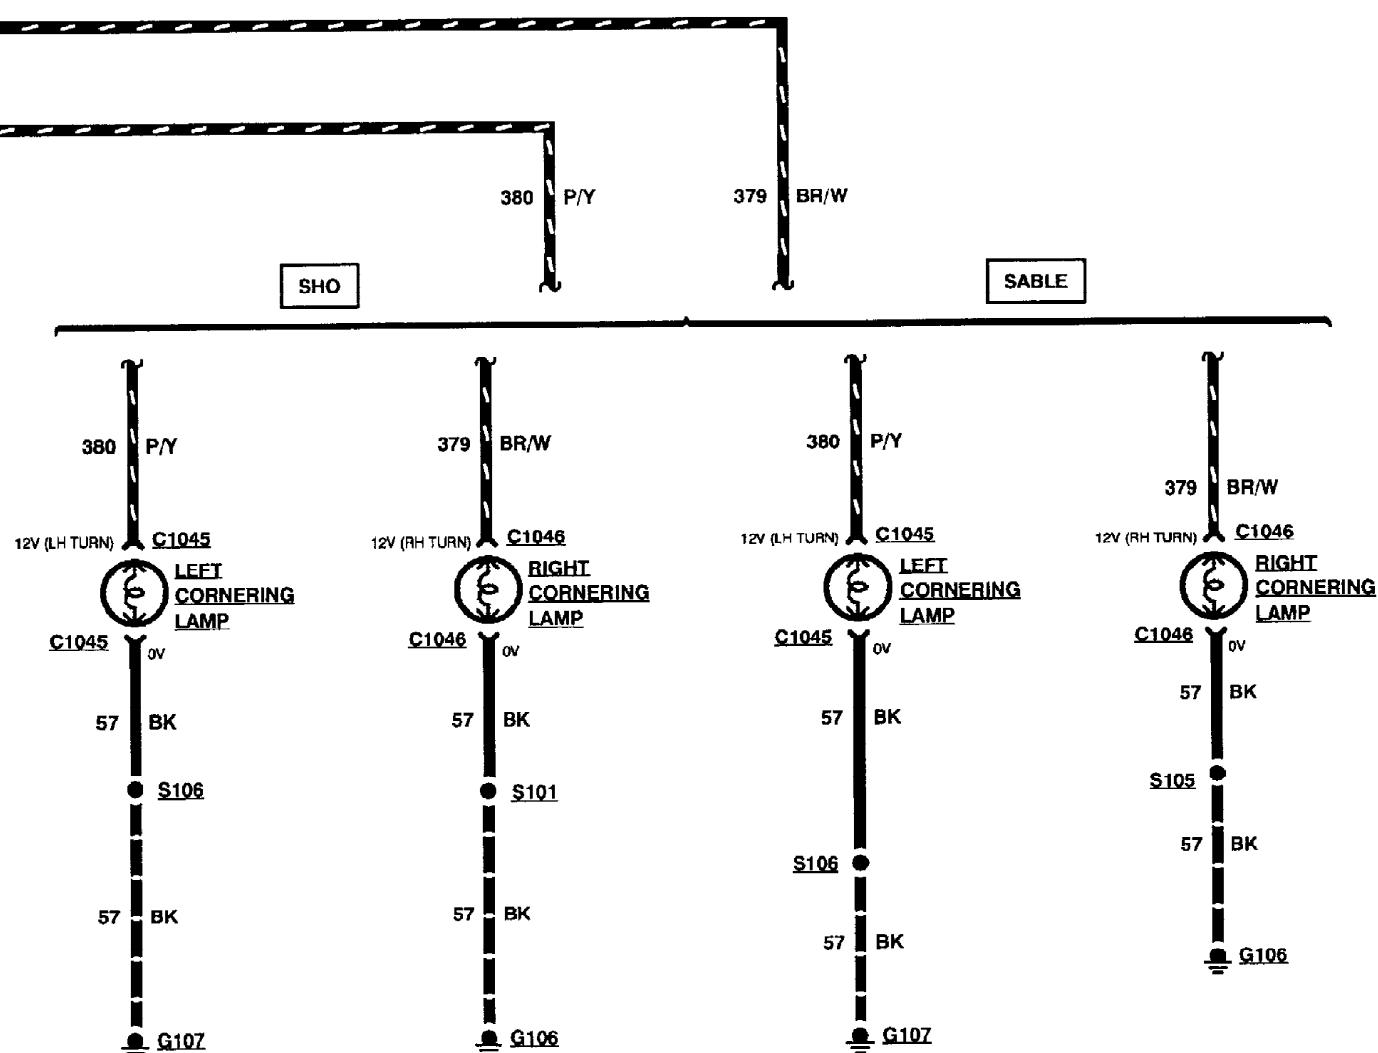

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN


Fig. 52: Exterior Lights (15 Of 17)
1993 Ford Taurus LX

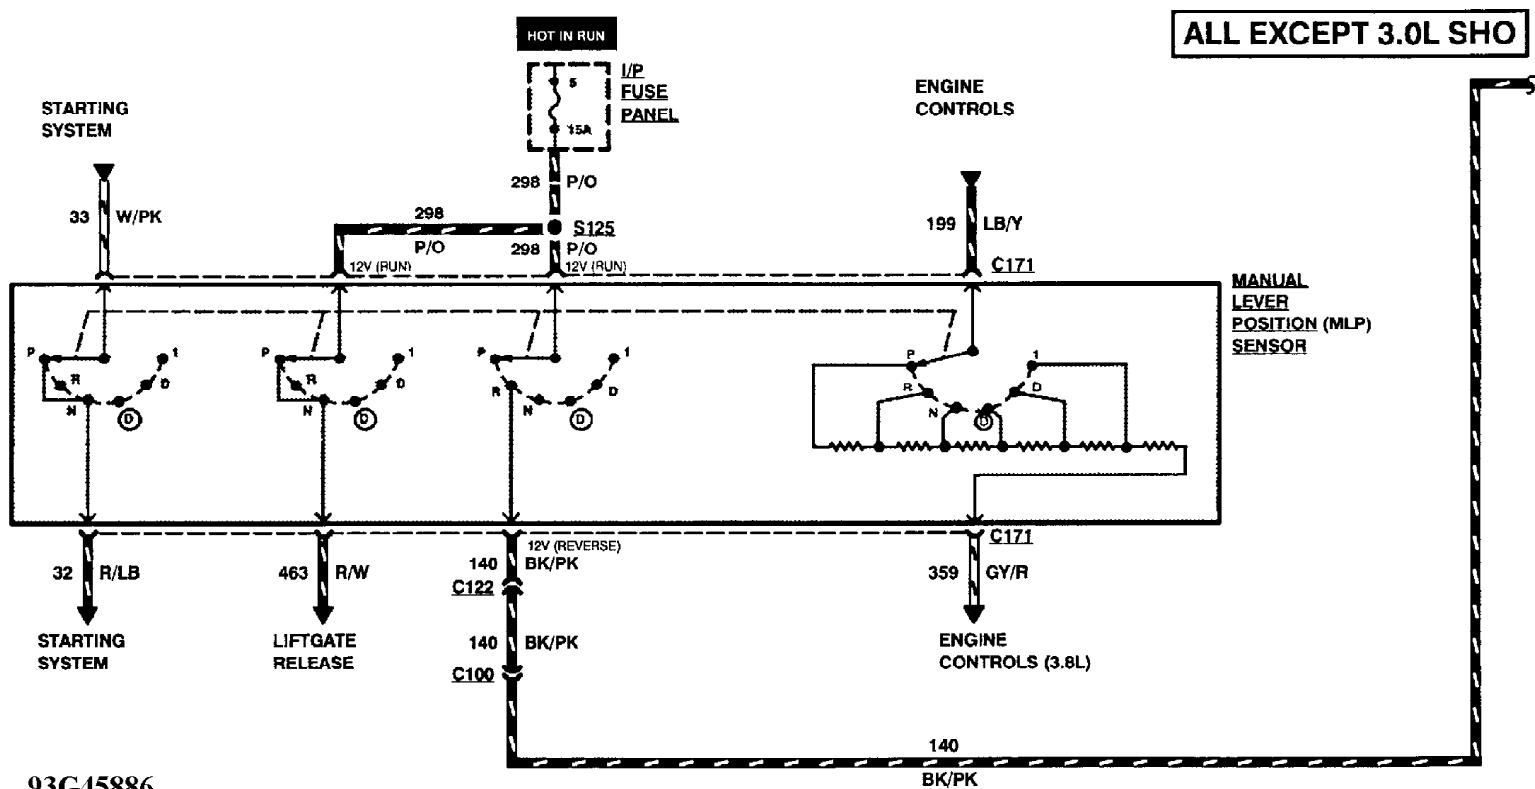

WIRING DIAGRAMS
Power & Ground Distribution

PAVLIN


Fig. 53: Exterior Lights (16 Of 17)
1993 Ford Taurus LX

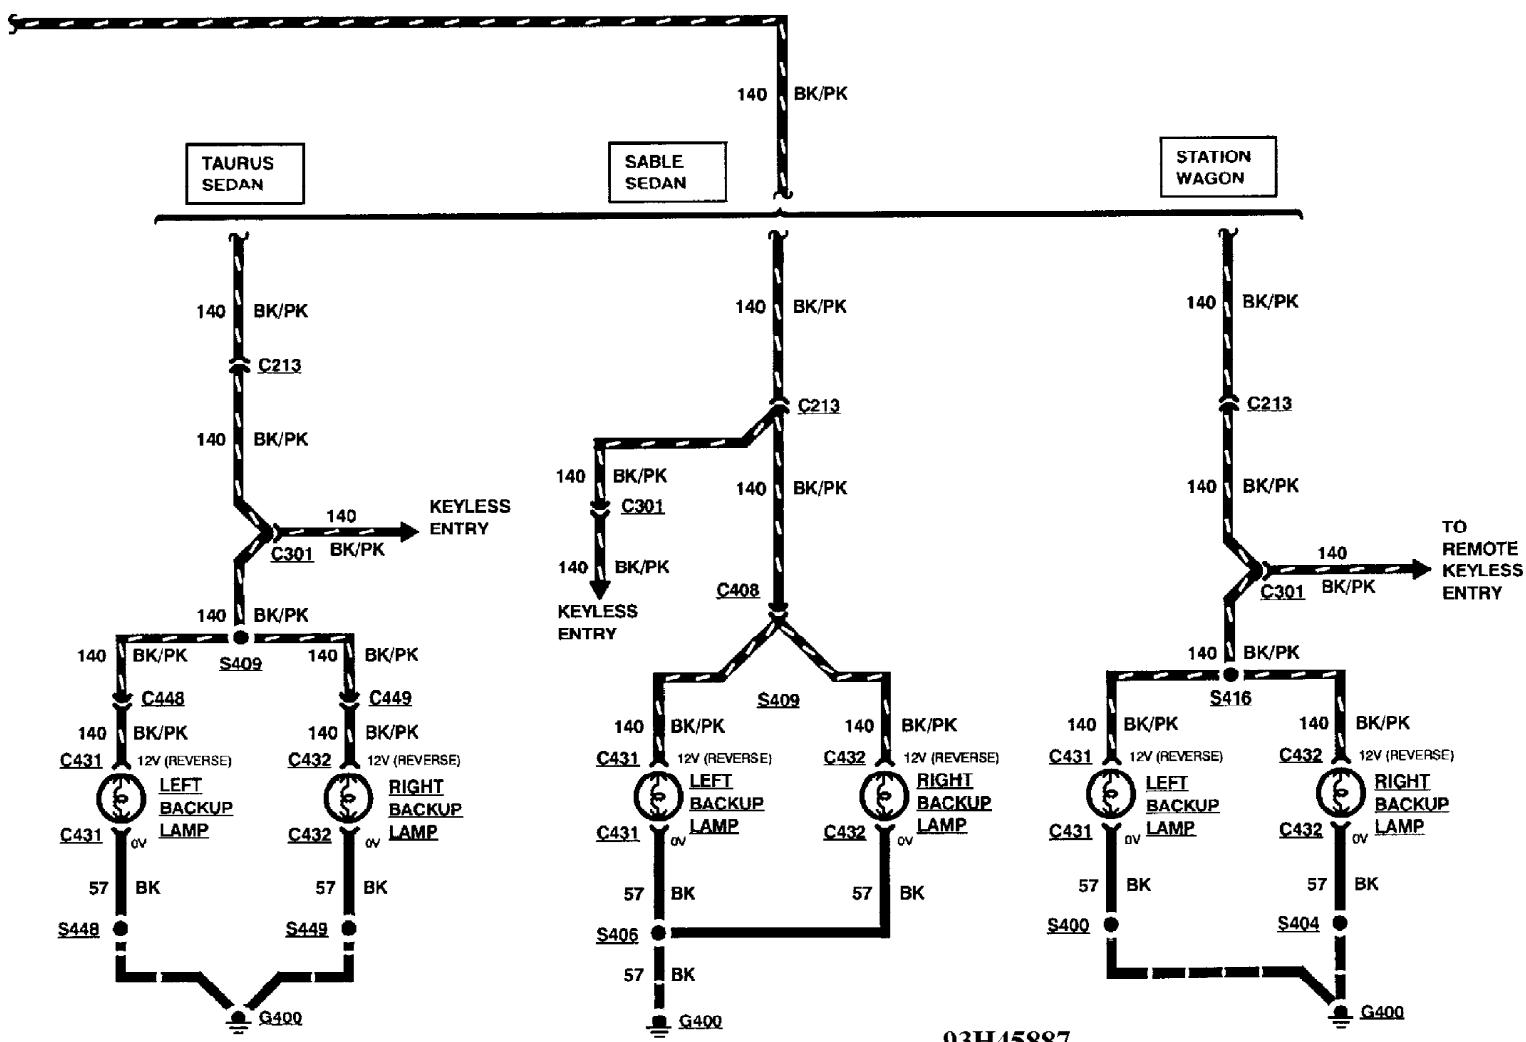

WIRING DIAGRAMS
Power & Ground Distribution

PAVLIN

Fig. 54: Exterior Lights (17 Of 17)
1993 Ford Taurus LX

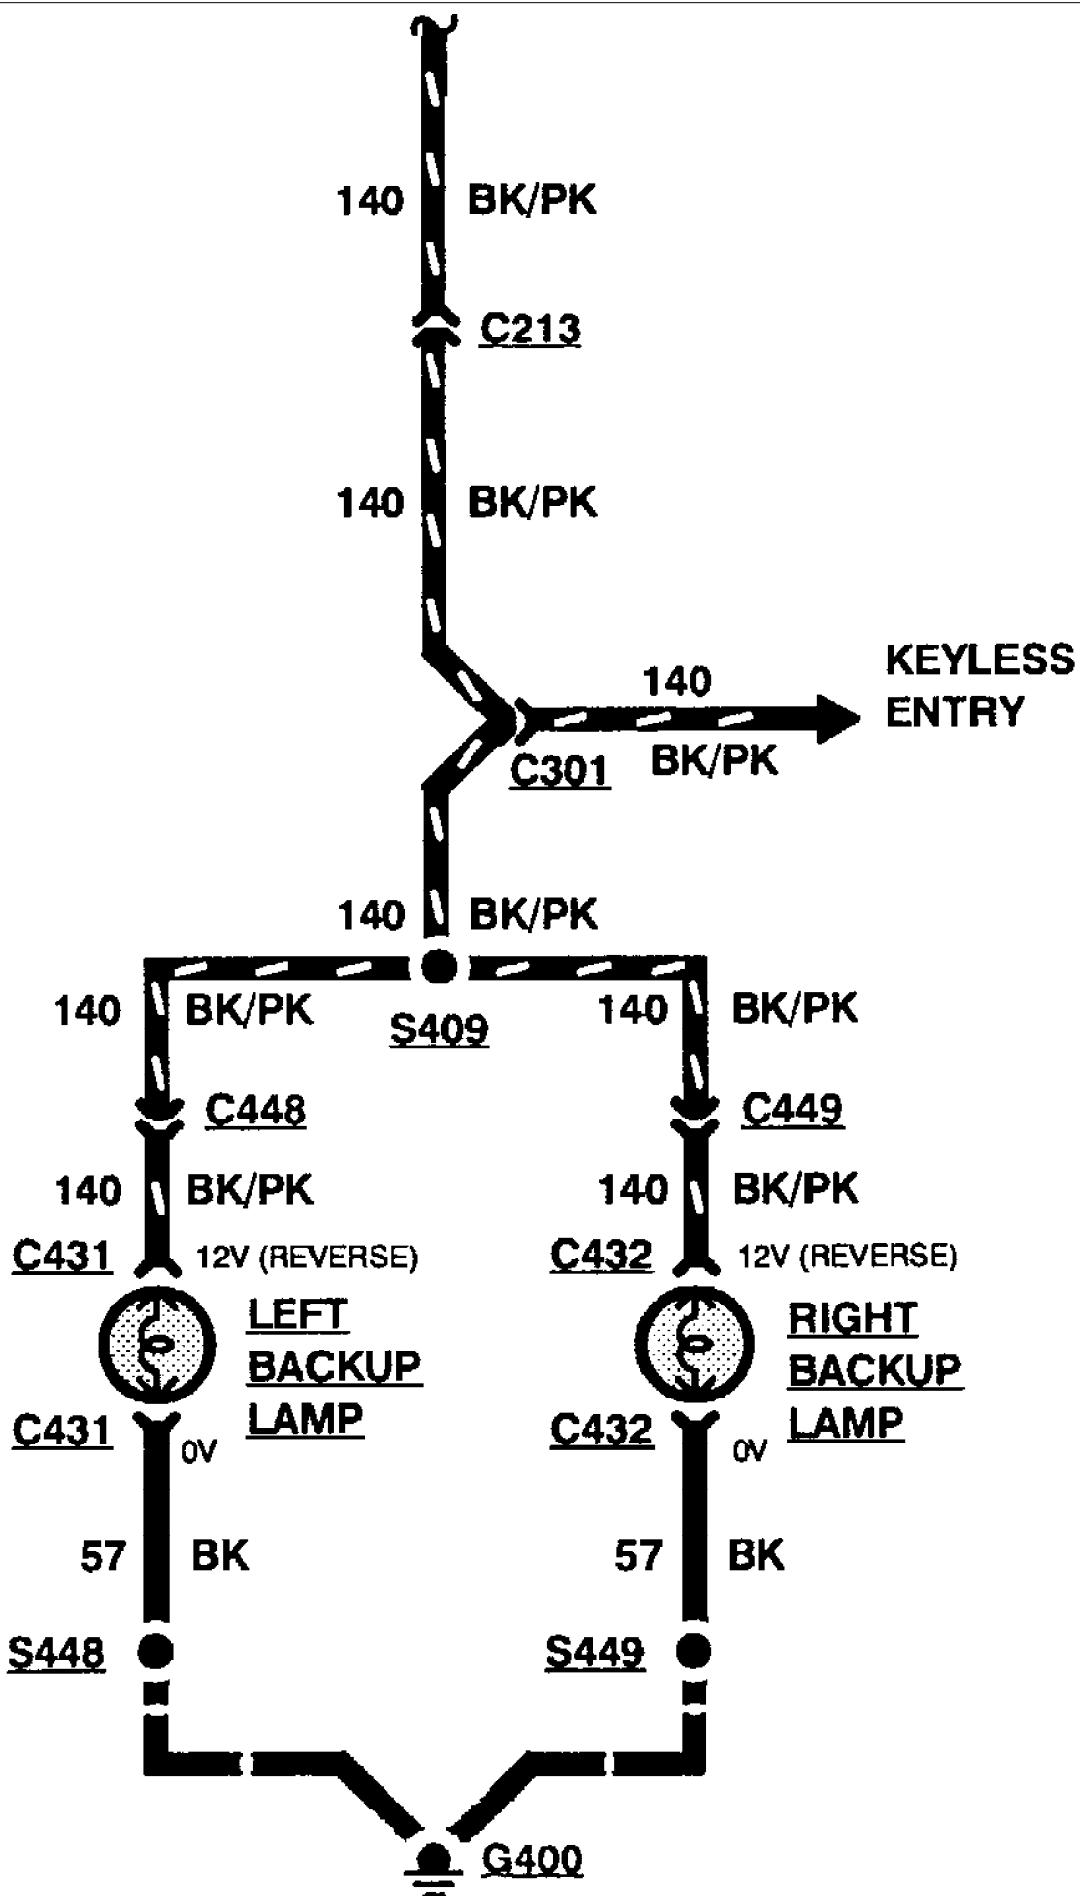


93D45891

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN


Fig. 55: Remote Keyless Entry With Power Door Locks (1 Of 5)
1993 Ford Taurus LX

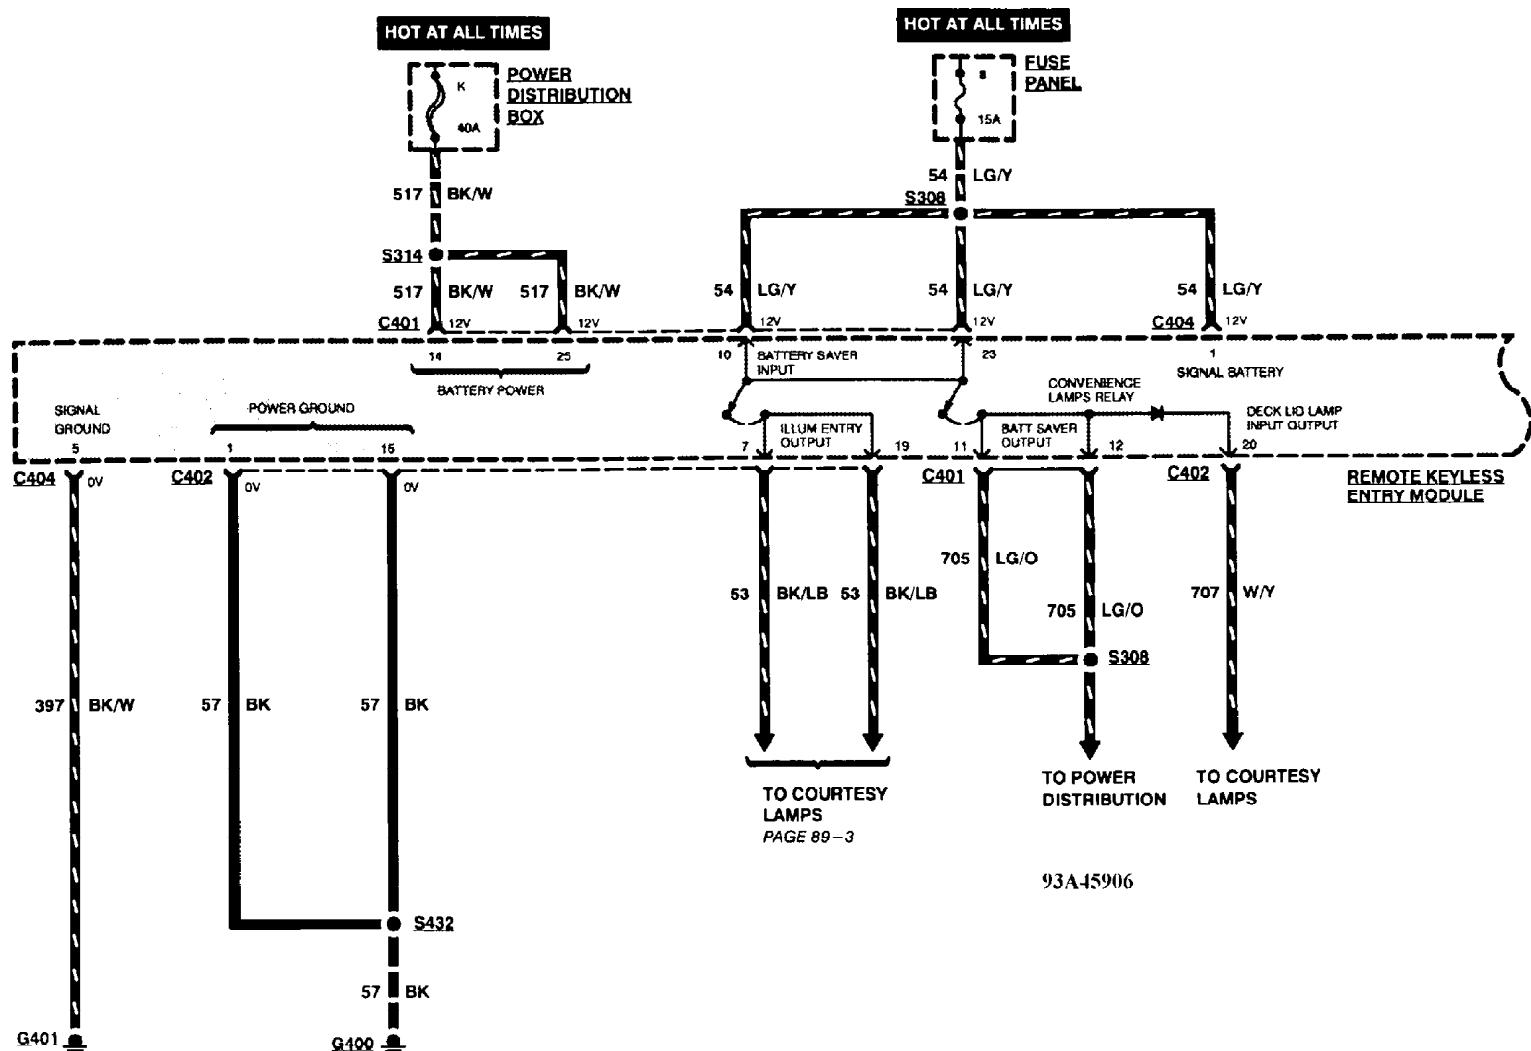

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN


Fig. 56: Remote Keyless Entry With Power Door Locks (2 Of 5)
1993 Ford Taurus LX

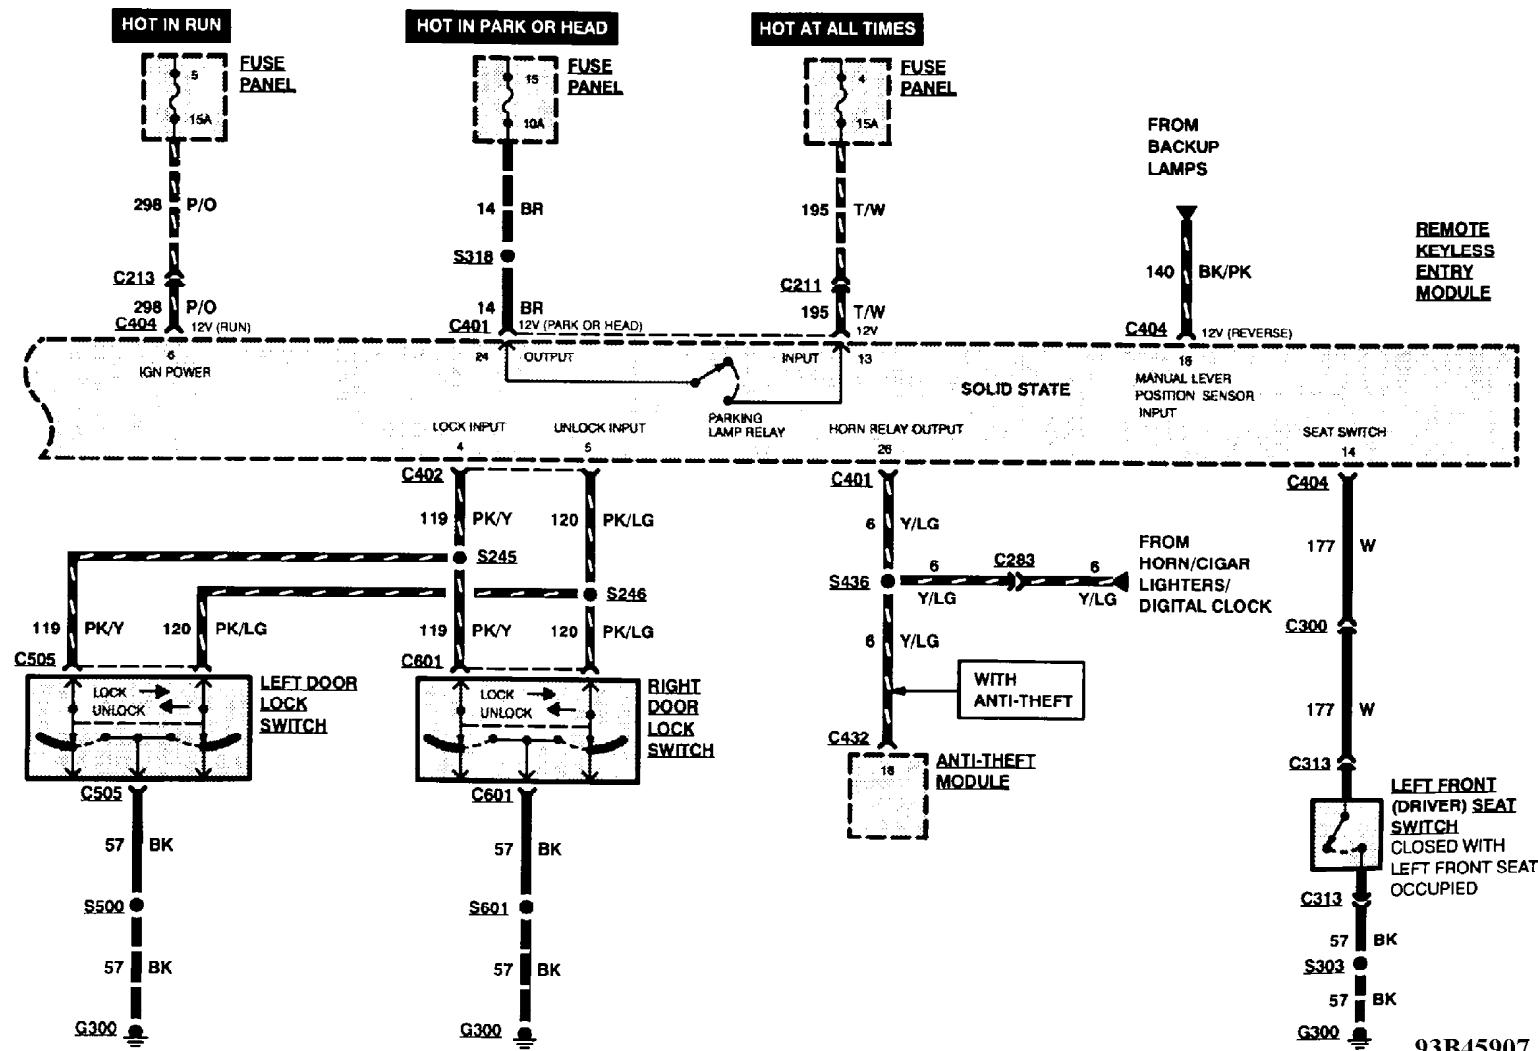

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 57: Remote Keyless Entry With Power Door Locks (3 Of 5)
1993 Ford Taurus LX

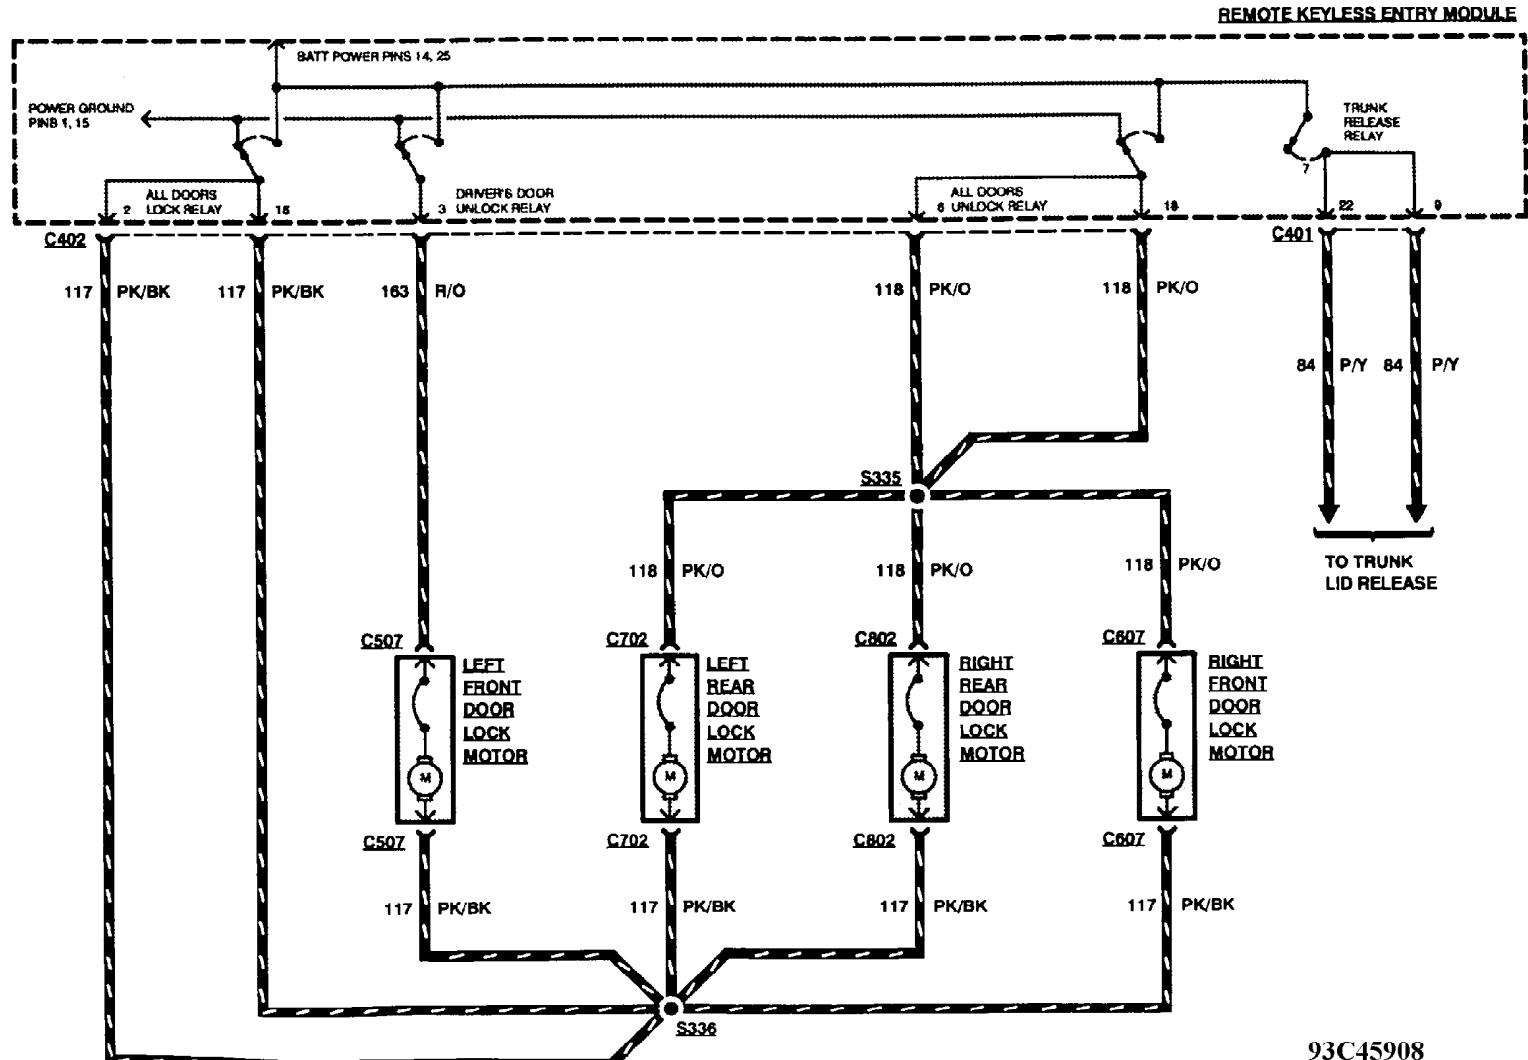


WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 58: Remote Keyless Entry With Power Door Locks (4 Of 5)

1993 Ford Taurus LX

REMOTE KEYLESS ENTRY MODULE

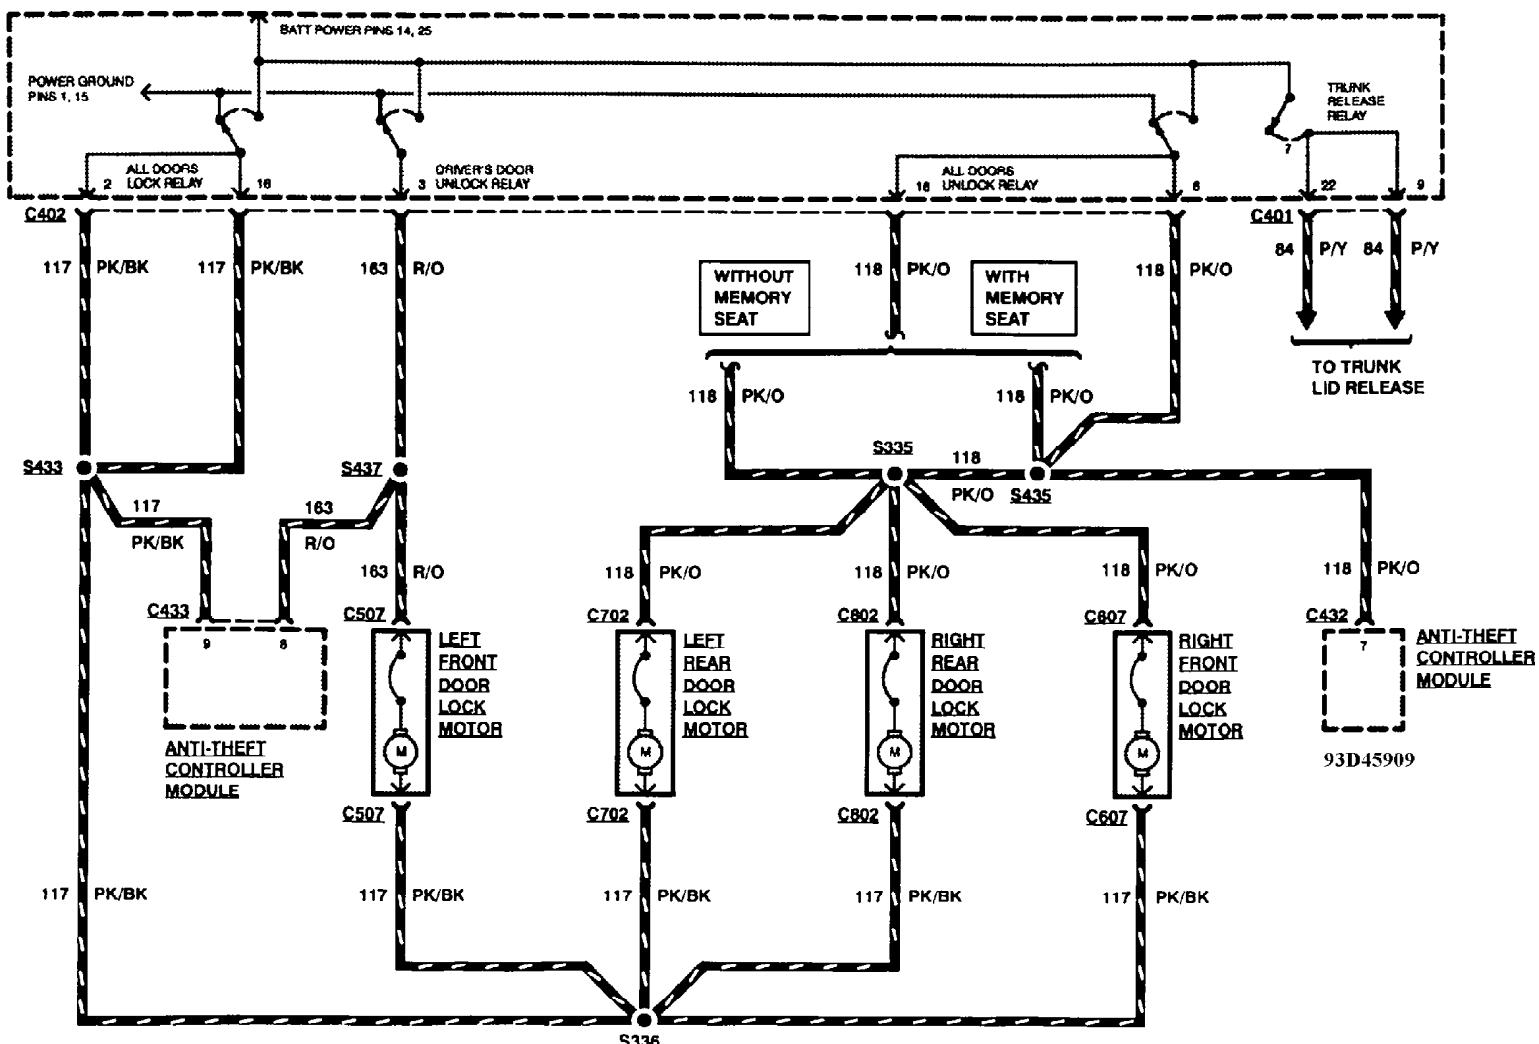


WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 59: Remote Keyless Entry With Power Door Locks (5 Of 5)
1993 Ford Taurus LX


REMOTE
KEYLESS
ENTRY
SWITCH
ASSEMBLY

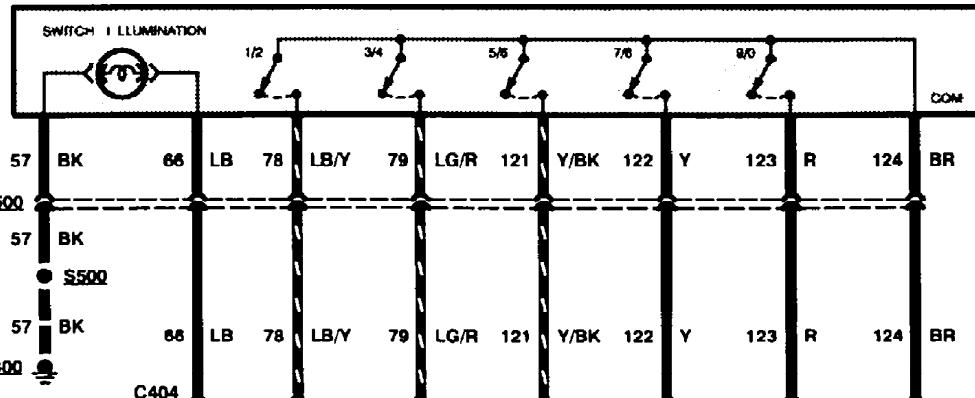


CONNECTOR REFERENCE LIST

CONNECTOR	SECTION
C432	112
C433	112

TO POWER MEMORY SEAT
(FOR SIGNATURE SERIES
VEHICLE AFTER FEB 3, 1993)

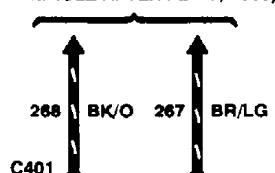


**REMOTE
KEYLESS
ENTRY
MODULE**

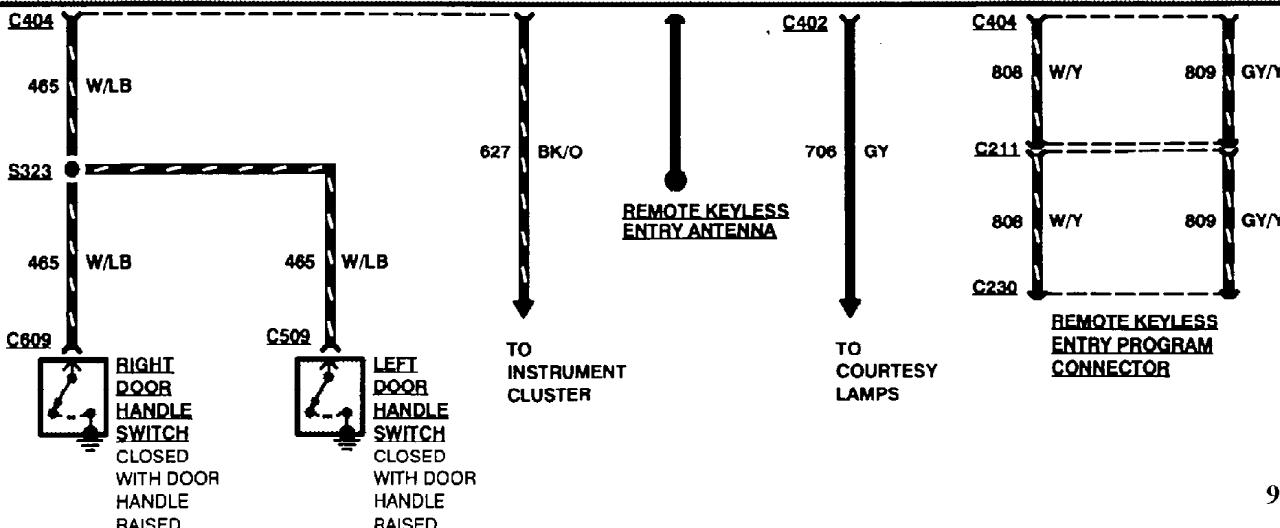

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN


Fig. 60: Remote Keyless Entry Wiring Diagram (1 Of 4)
1993 Ford Taurus LX

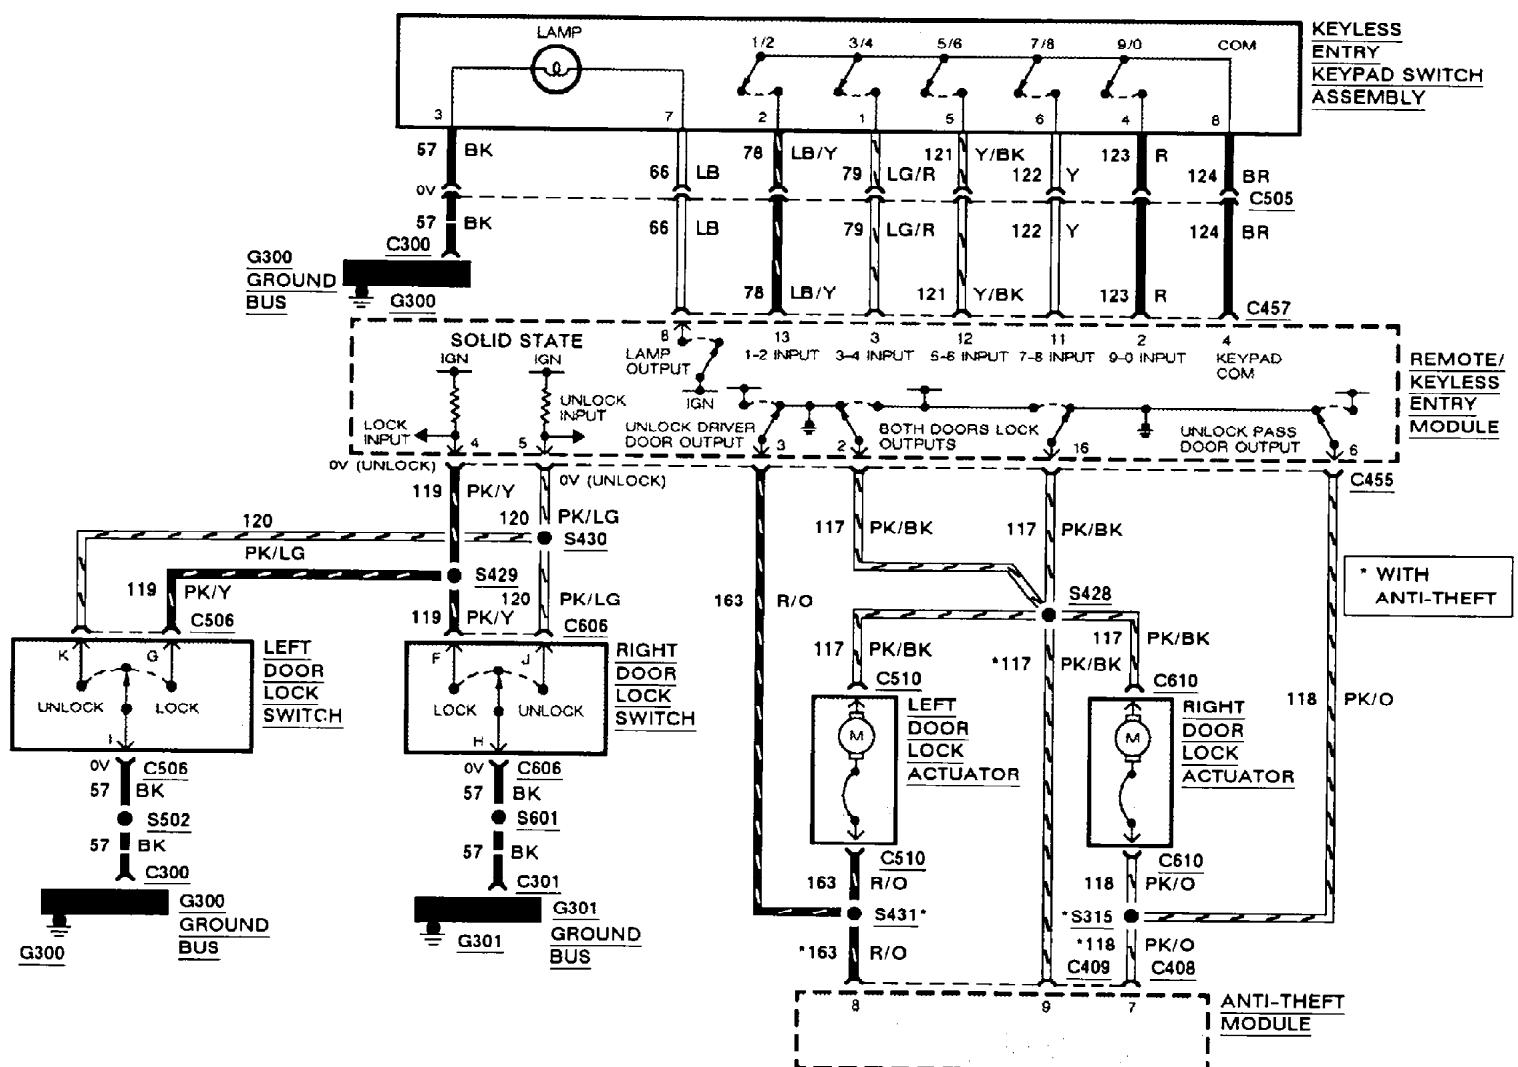

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN


Fig. 61: Remote Keyless Entry Wiring Diagram (2 Of 4)
1993 Ford Taurus LX

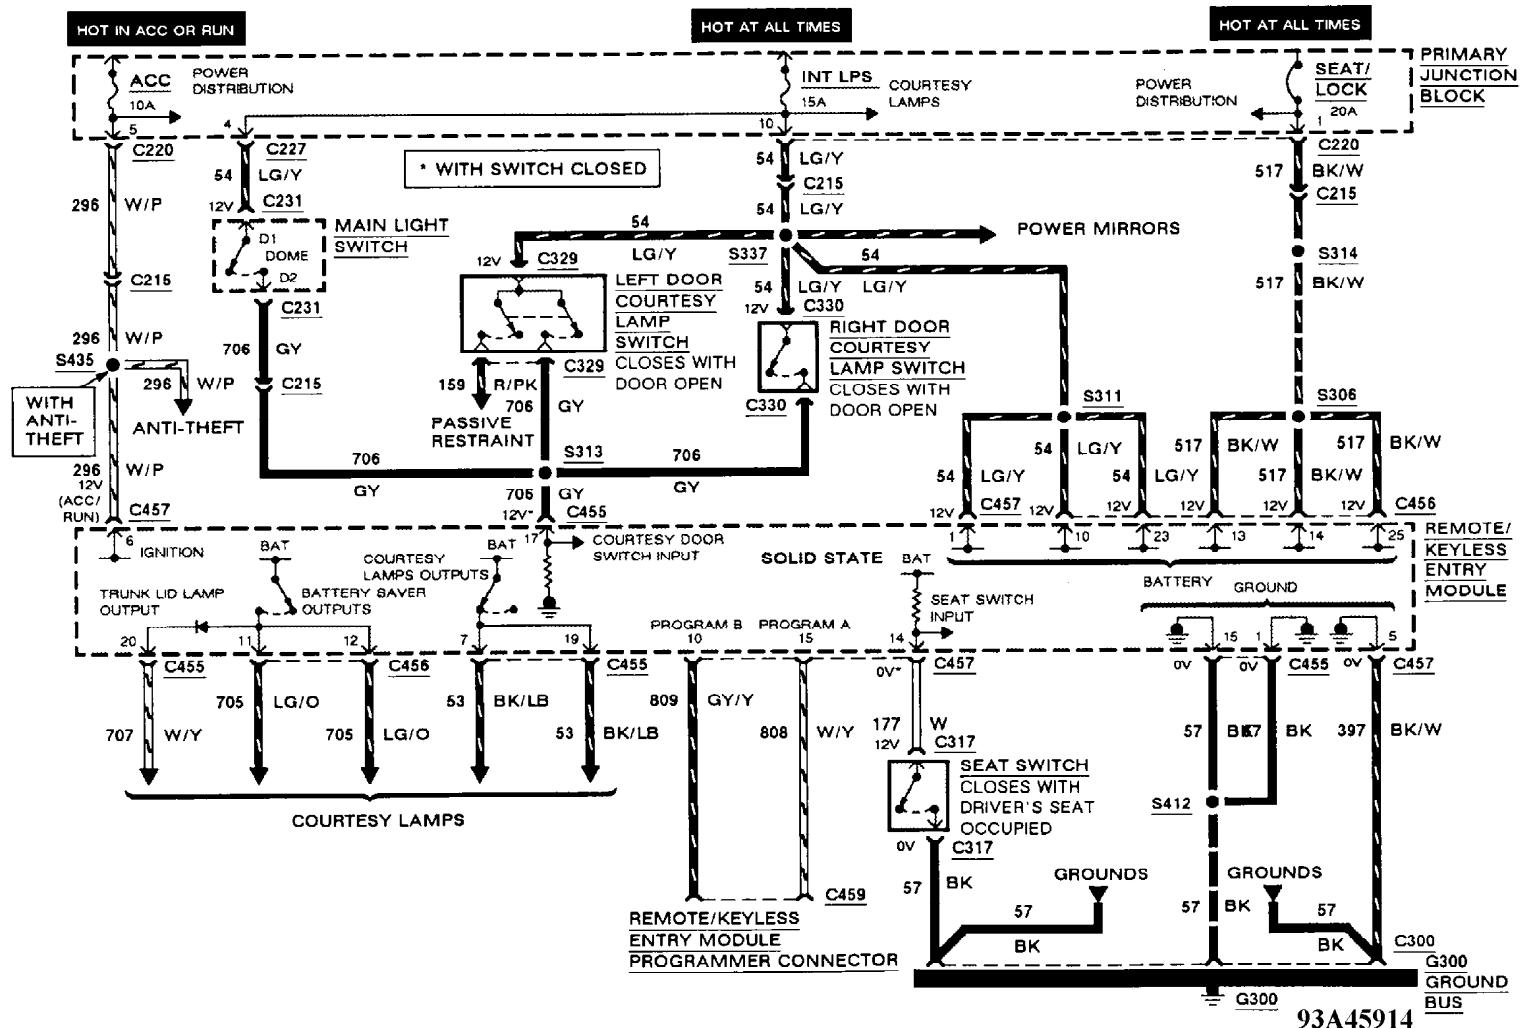

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN


Fig. 62: Remote Keyless Entry Wiring Diagram (3 Of 4)
1993 Ford Taurus LX

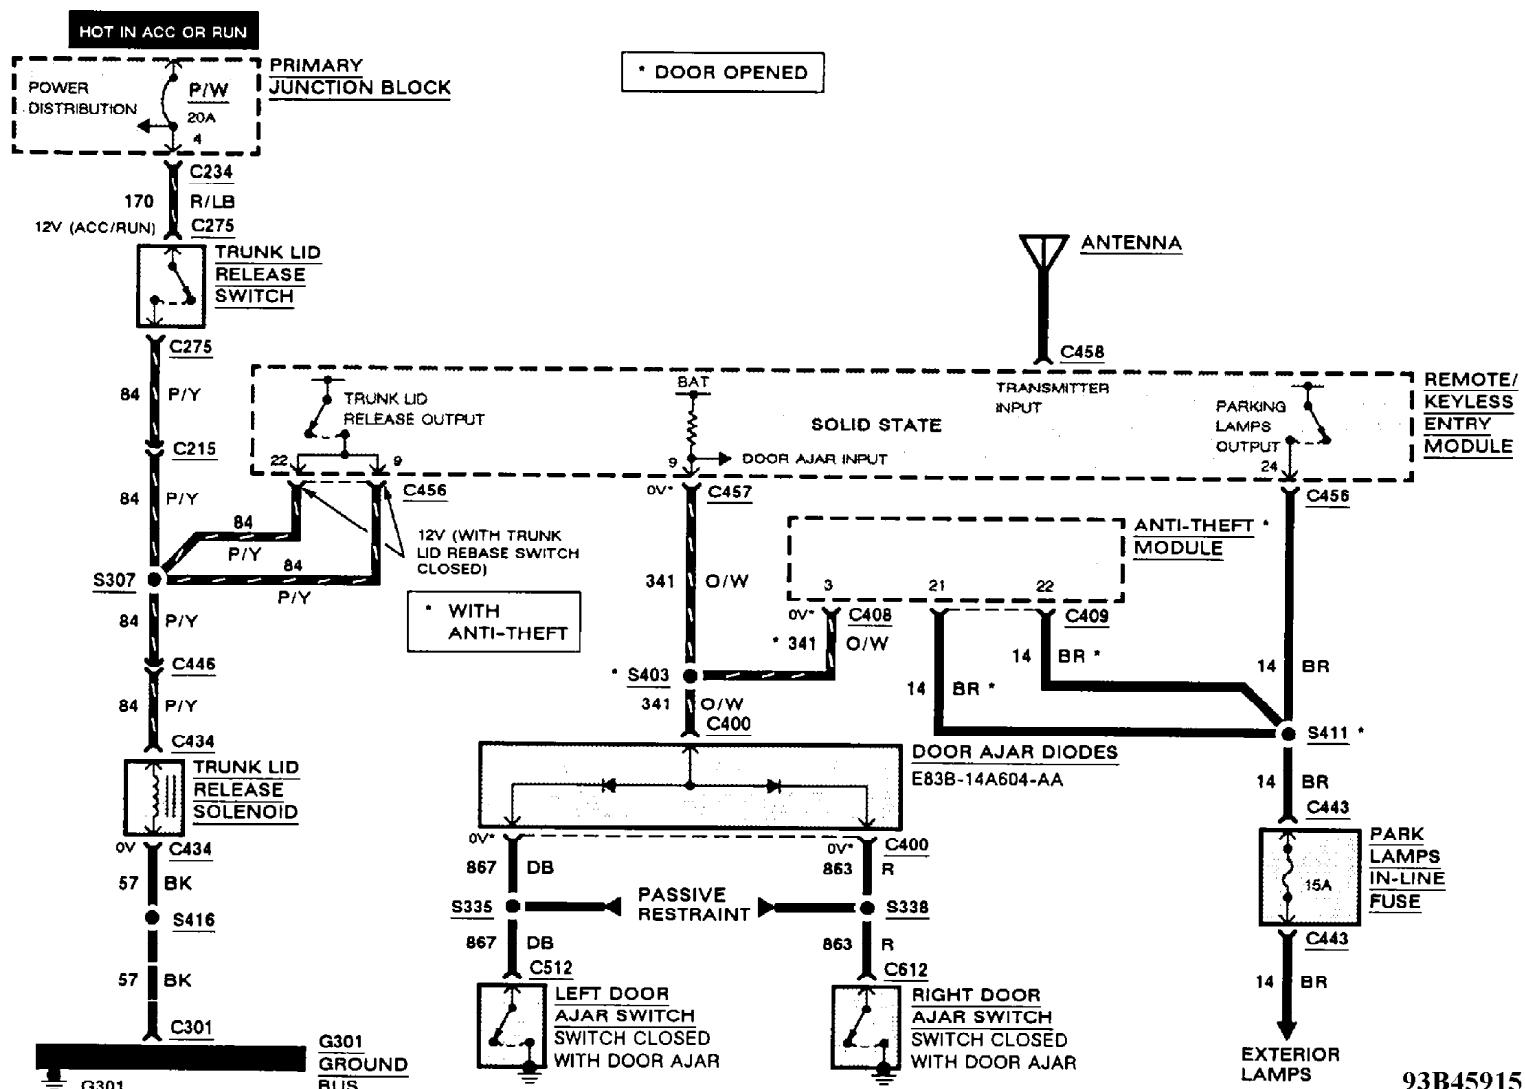

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN


Fig. 63: Remote Keyless Entry Wiring Diagram (4 Of 4)
1993 Ford Taurus LX

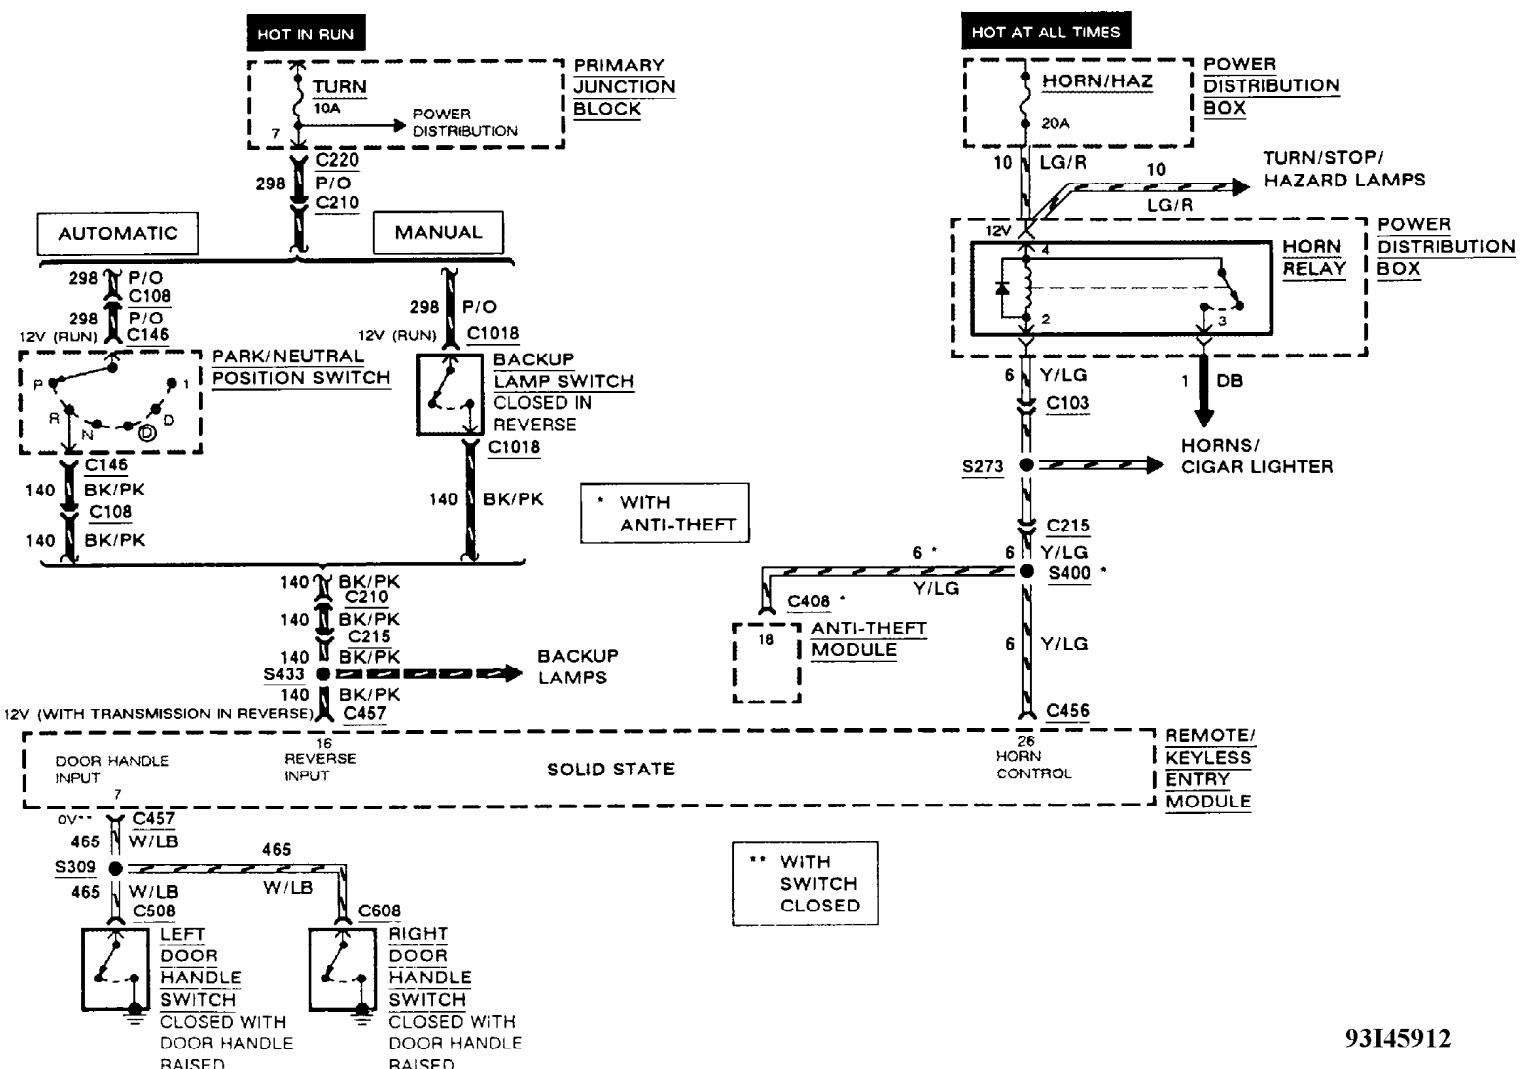

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN


Fig. 64: Remote Keyless Entry With Illuminated Entry (1 Of 4)
1993 Ford Taurus LX

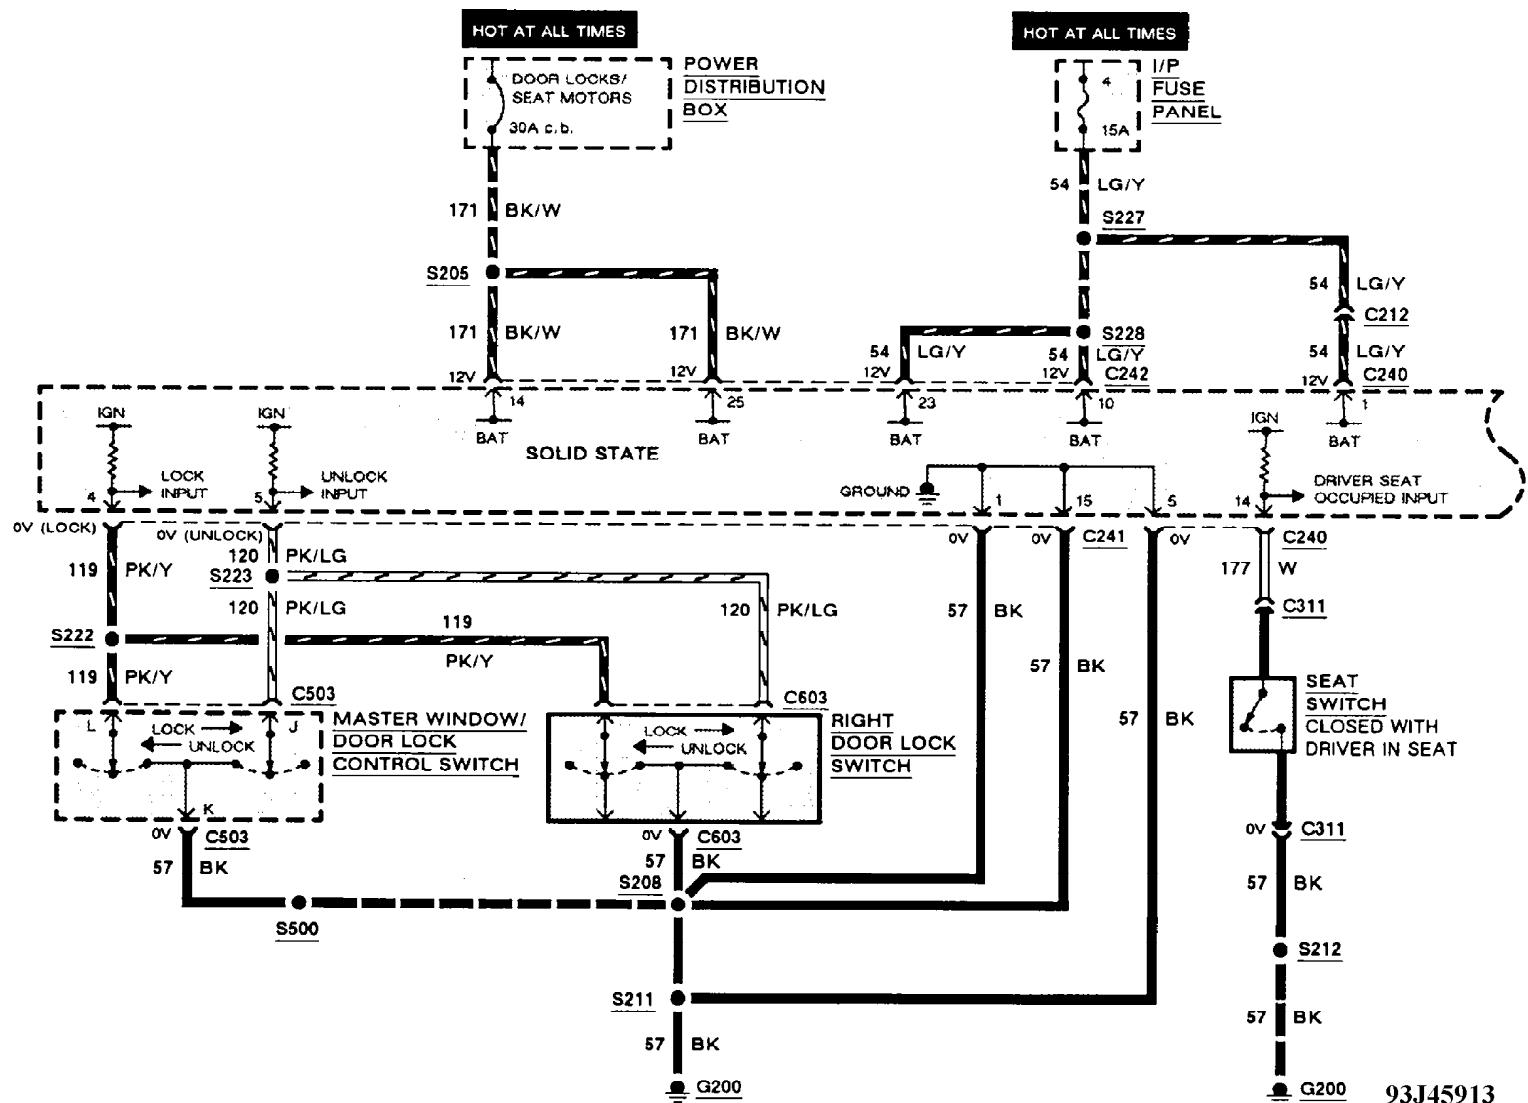

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN


Fig. 65: Remote Keyless Entry With Illuminated Entry (2 Of 4)
1993 Ford Taurus LX

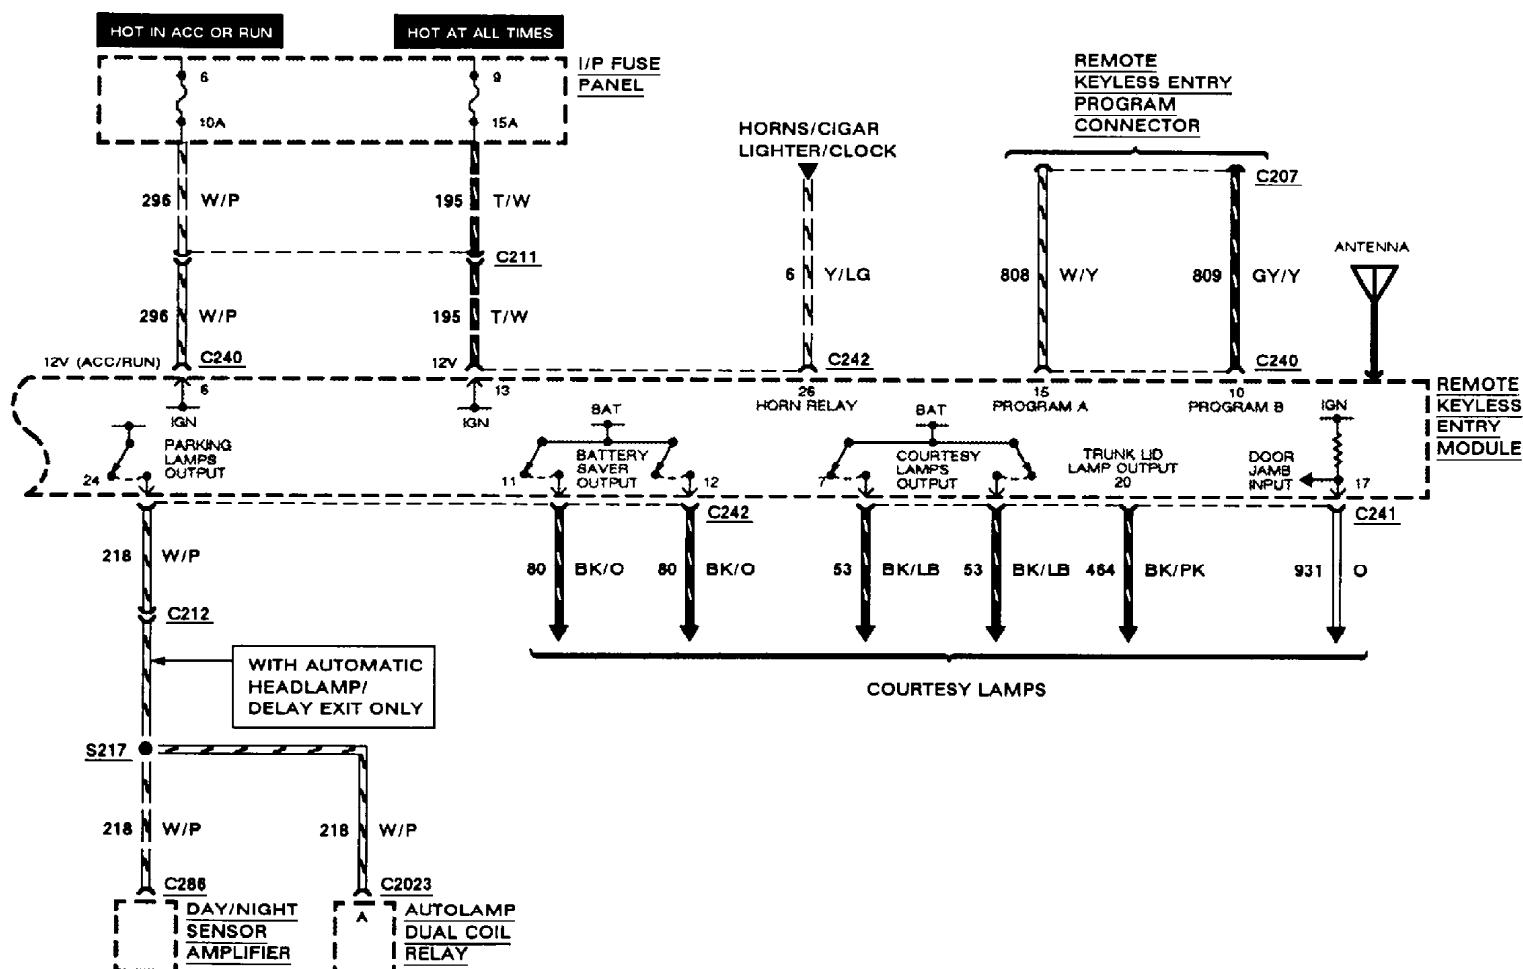

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 66: Remote Keyless Entry With Illuminated Entry (3 Of 4)
1993 Ford Taurus LX

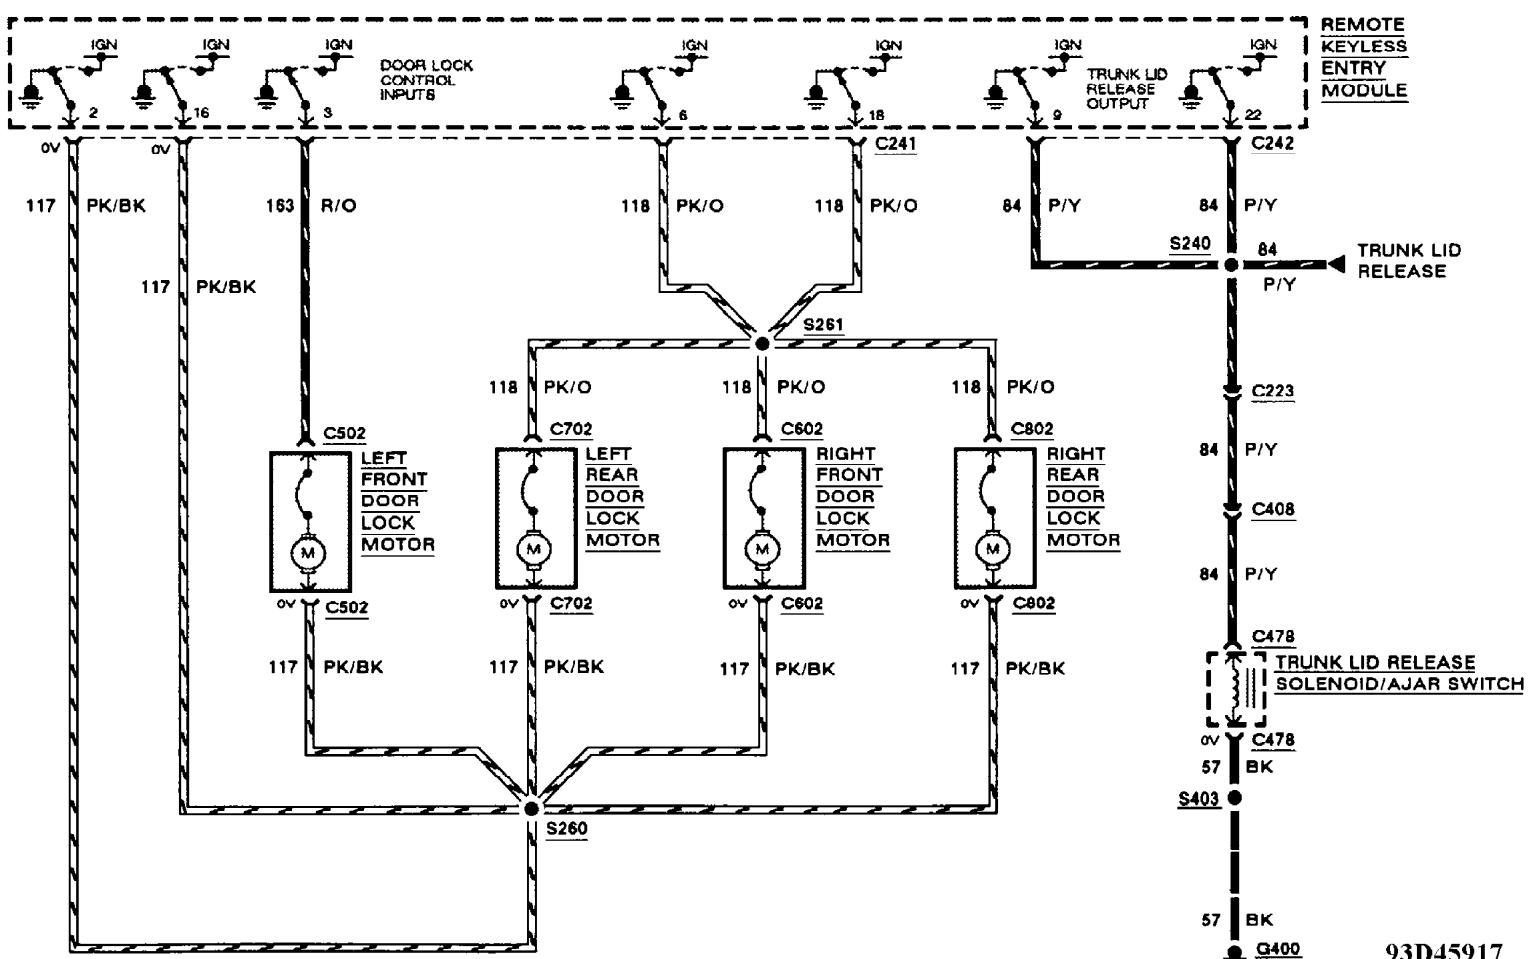


93D45917

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 67: Remote Keyless Entry With Illuminated Entry (4 Of 4)
1993 Ford Taurus LX

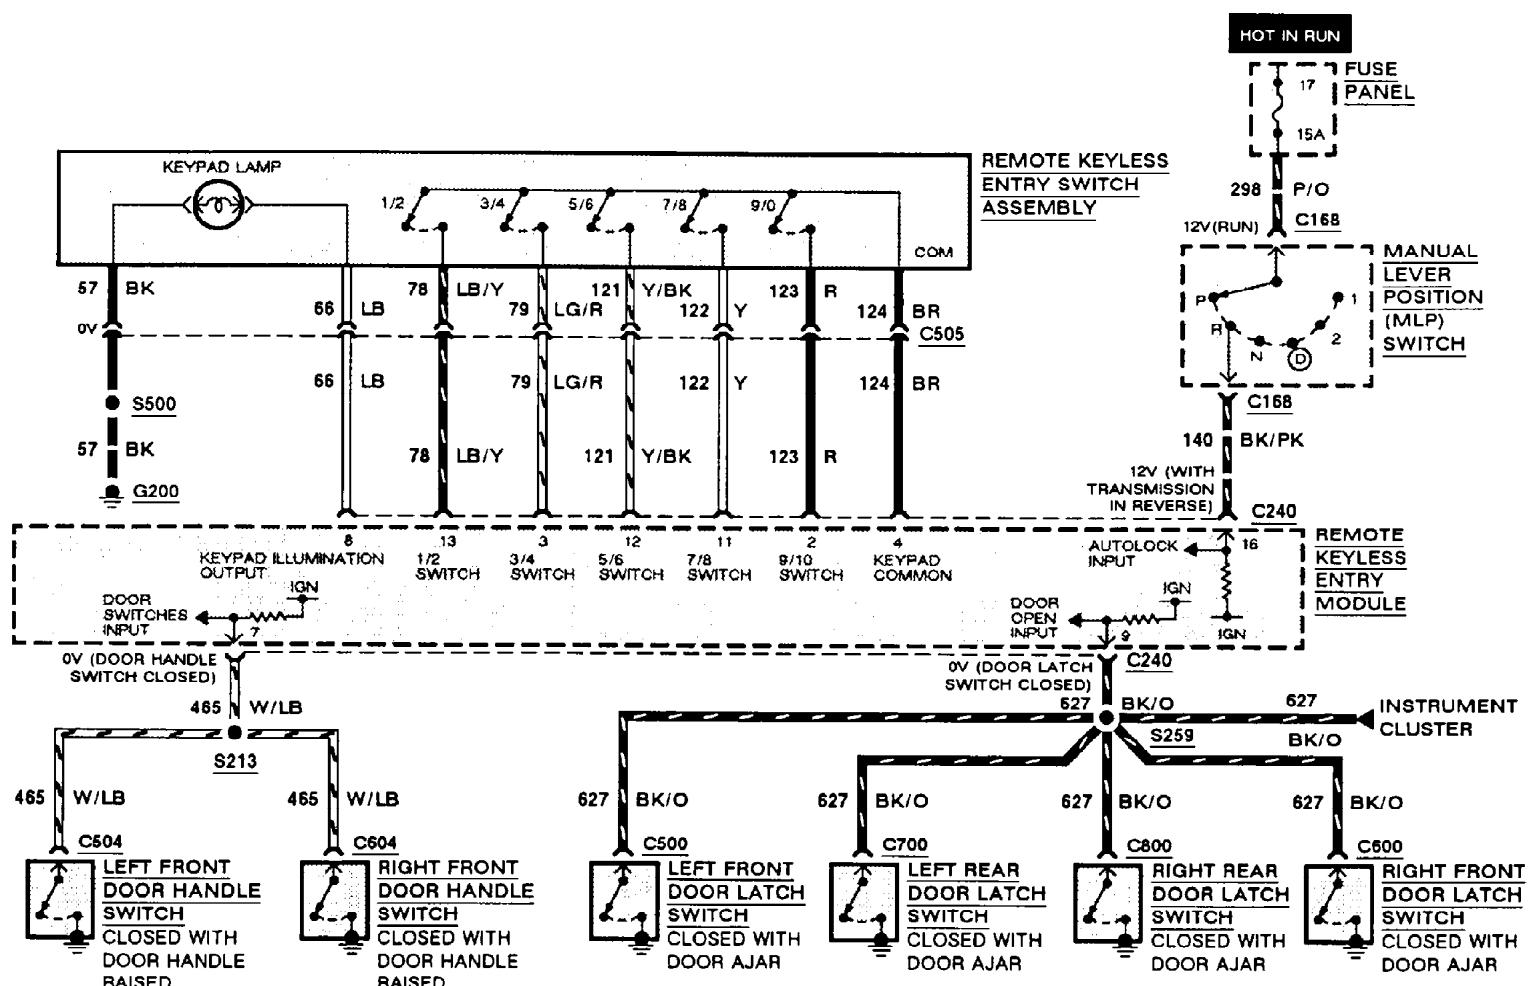


93E45918

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN


Fig. 68: Remote Keyless Entry Wiring Diagram (1 Of 5)
1993 Ford Taurus LX

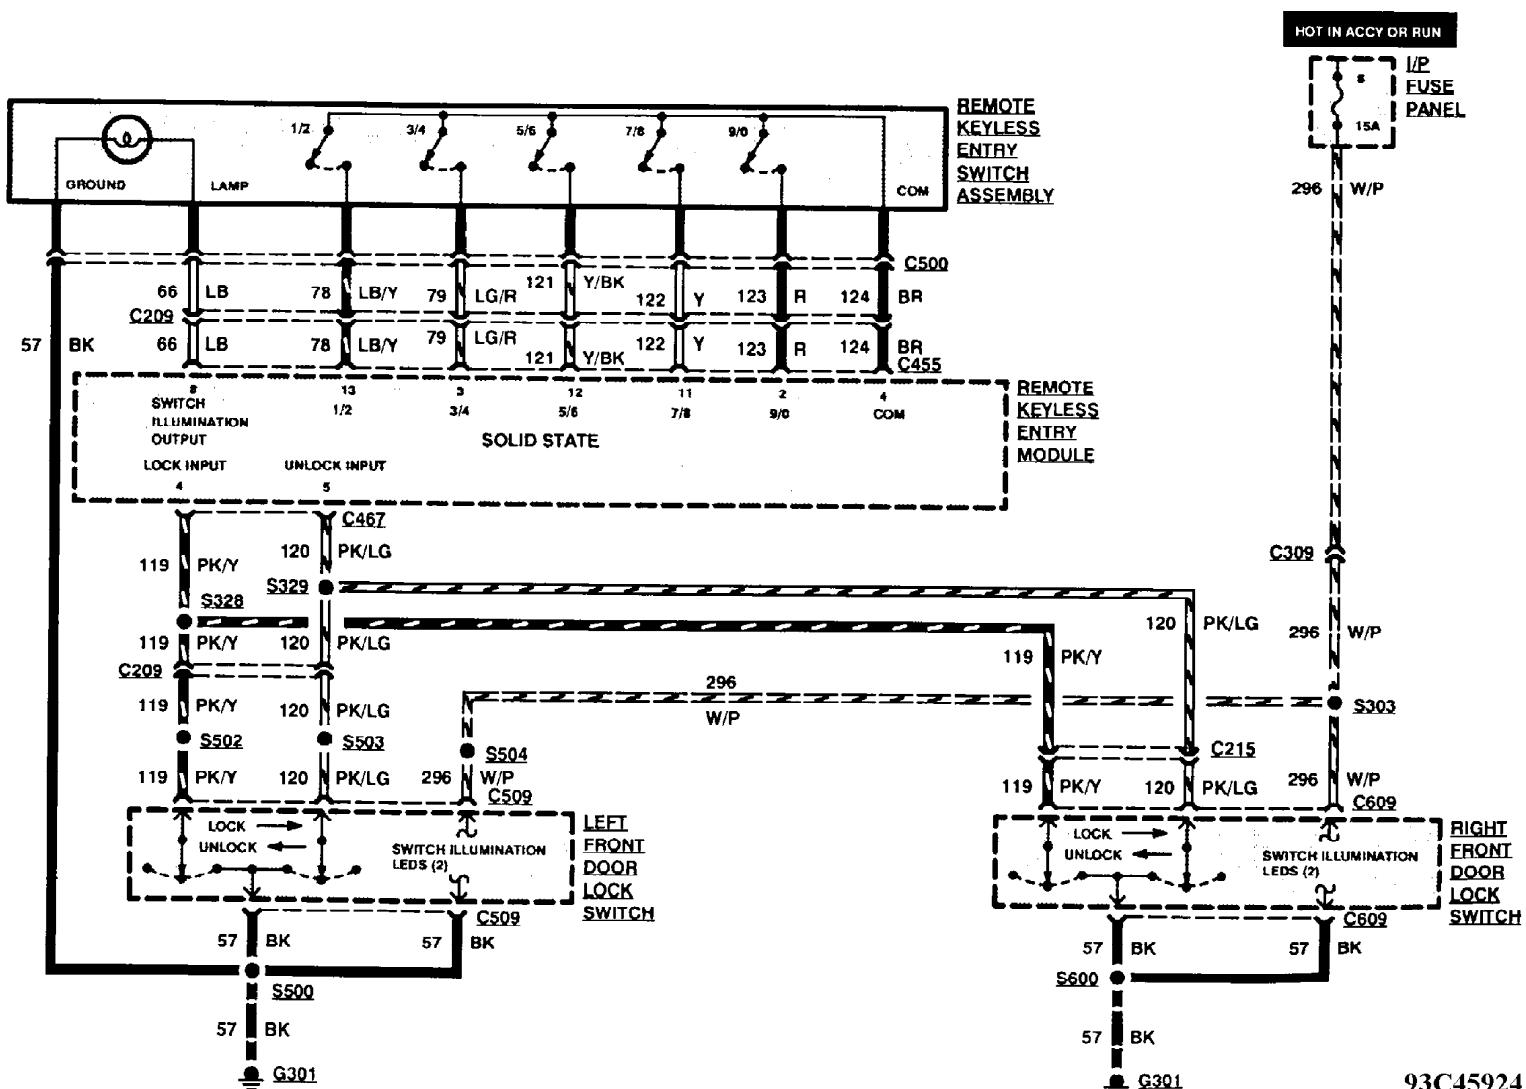

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 69: Remote Keyless Entry Wiring Diagram (2 Of 5)
1993 Ford Taurus LX

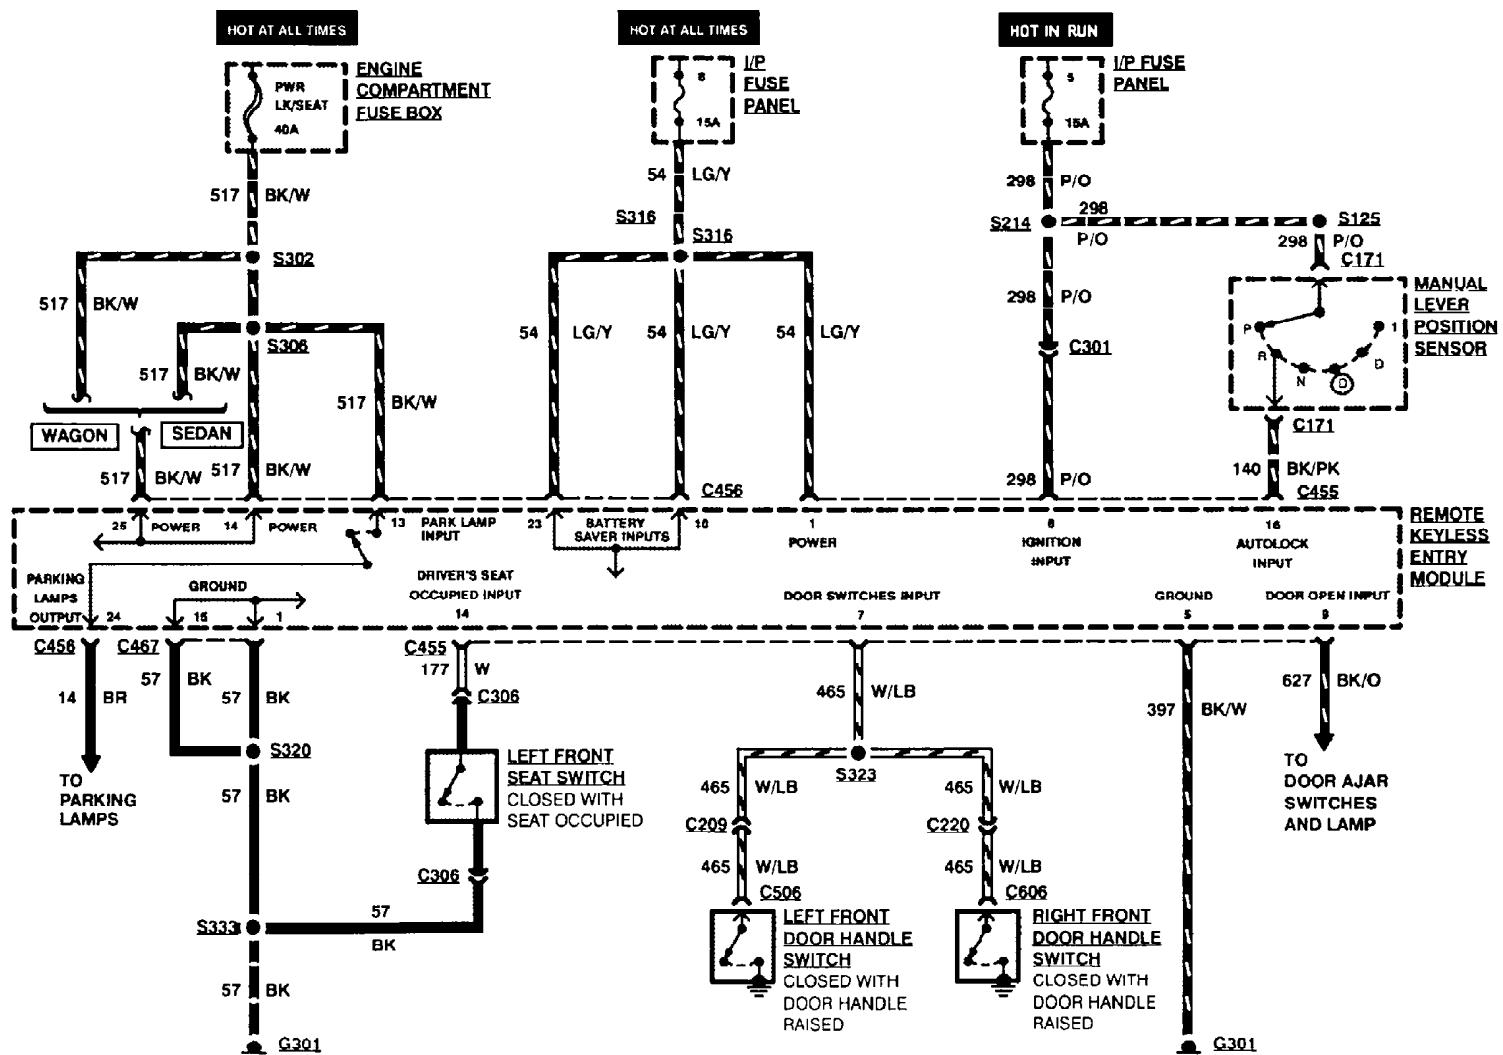


93D45925

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 70: Remote Keyless Entry Wiring Diagram (3 Of 5)
1993 Ford Taurus LX

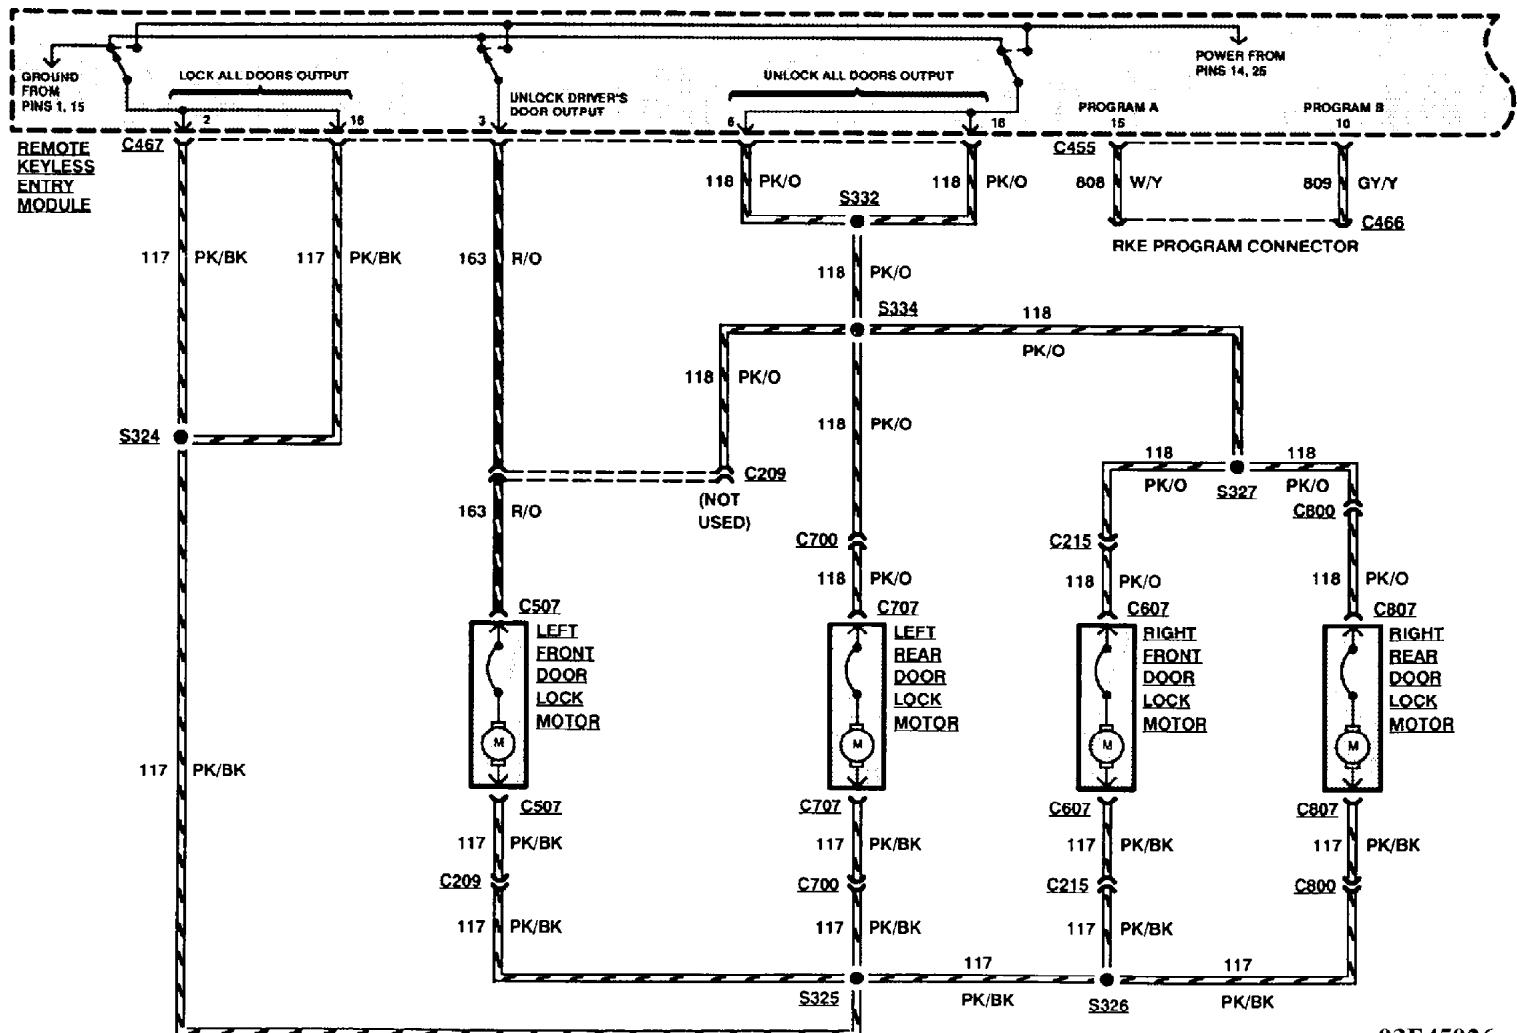


93E45926

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 71: Remote Keyless Entry Wiring Diagram (4 Of 5)
1993 Ford Taurus LX

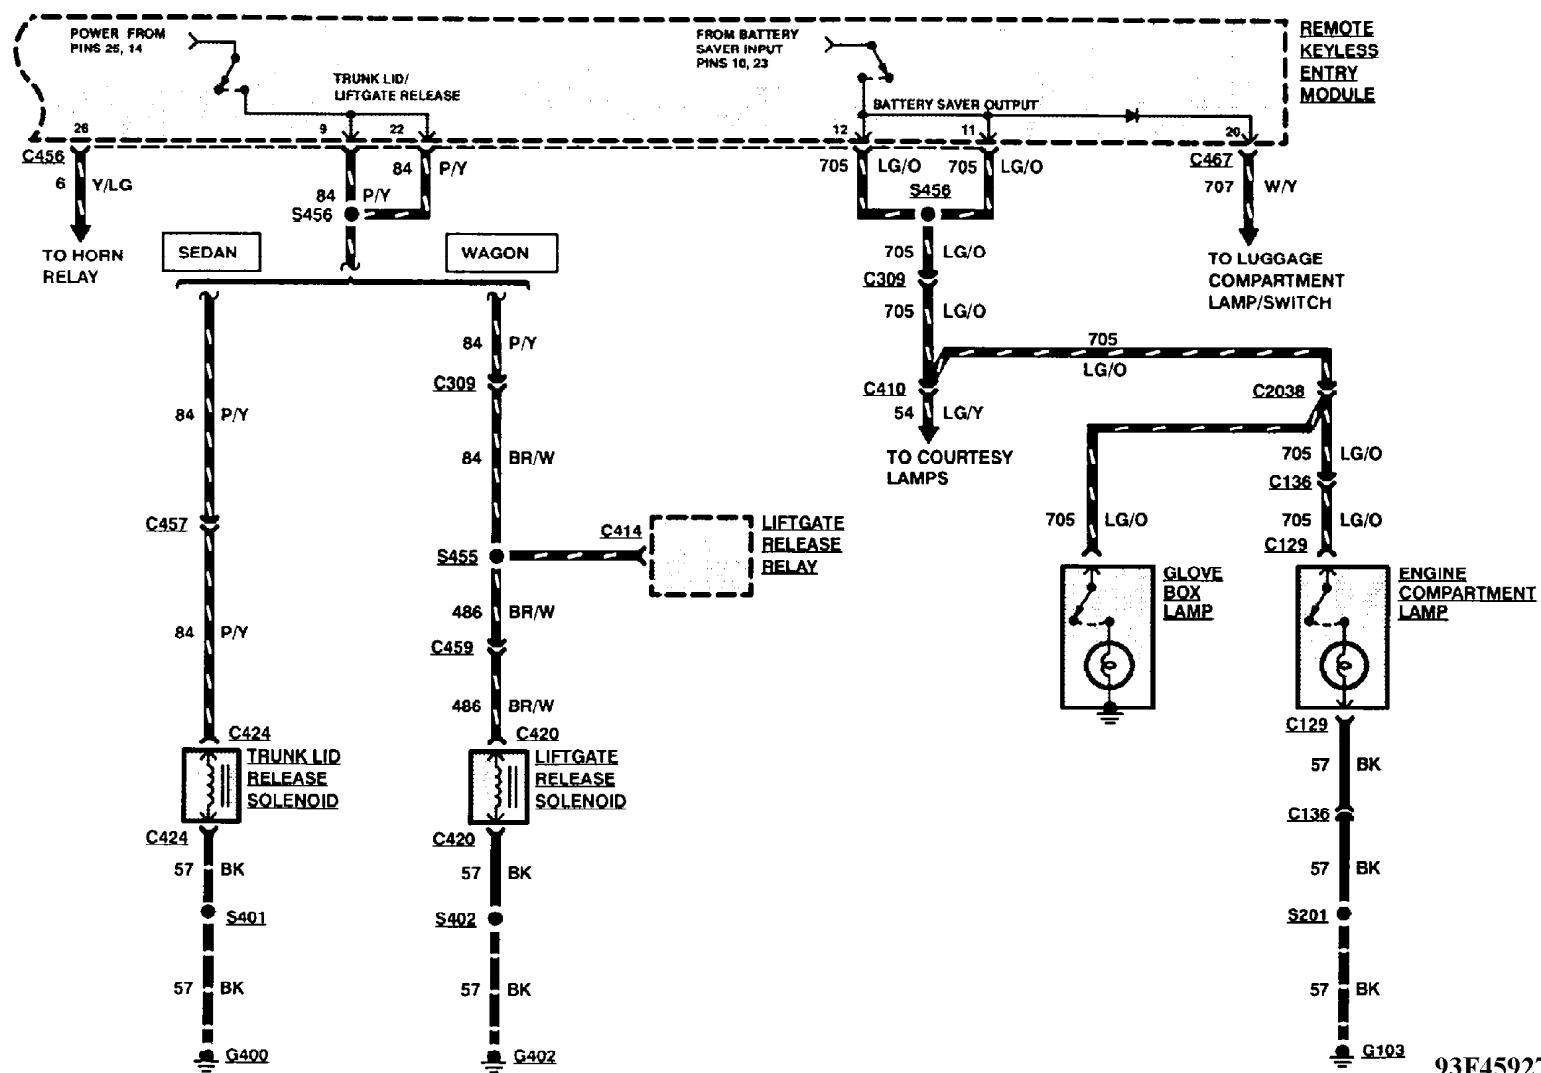


93F45927

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 72: Remote Keyless Entry Wiring Diagram (5 Of 5)
1993 Ford Taurus LX

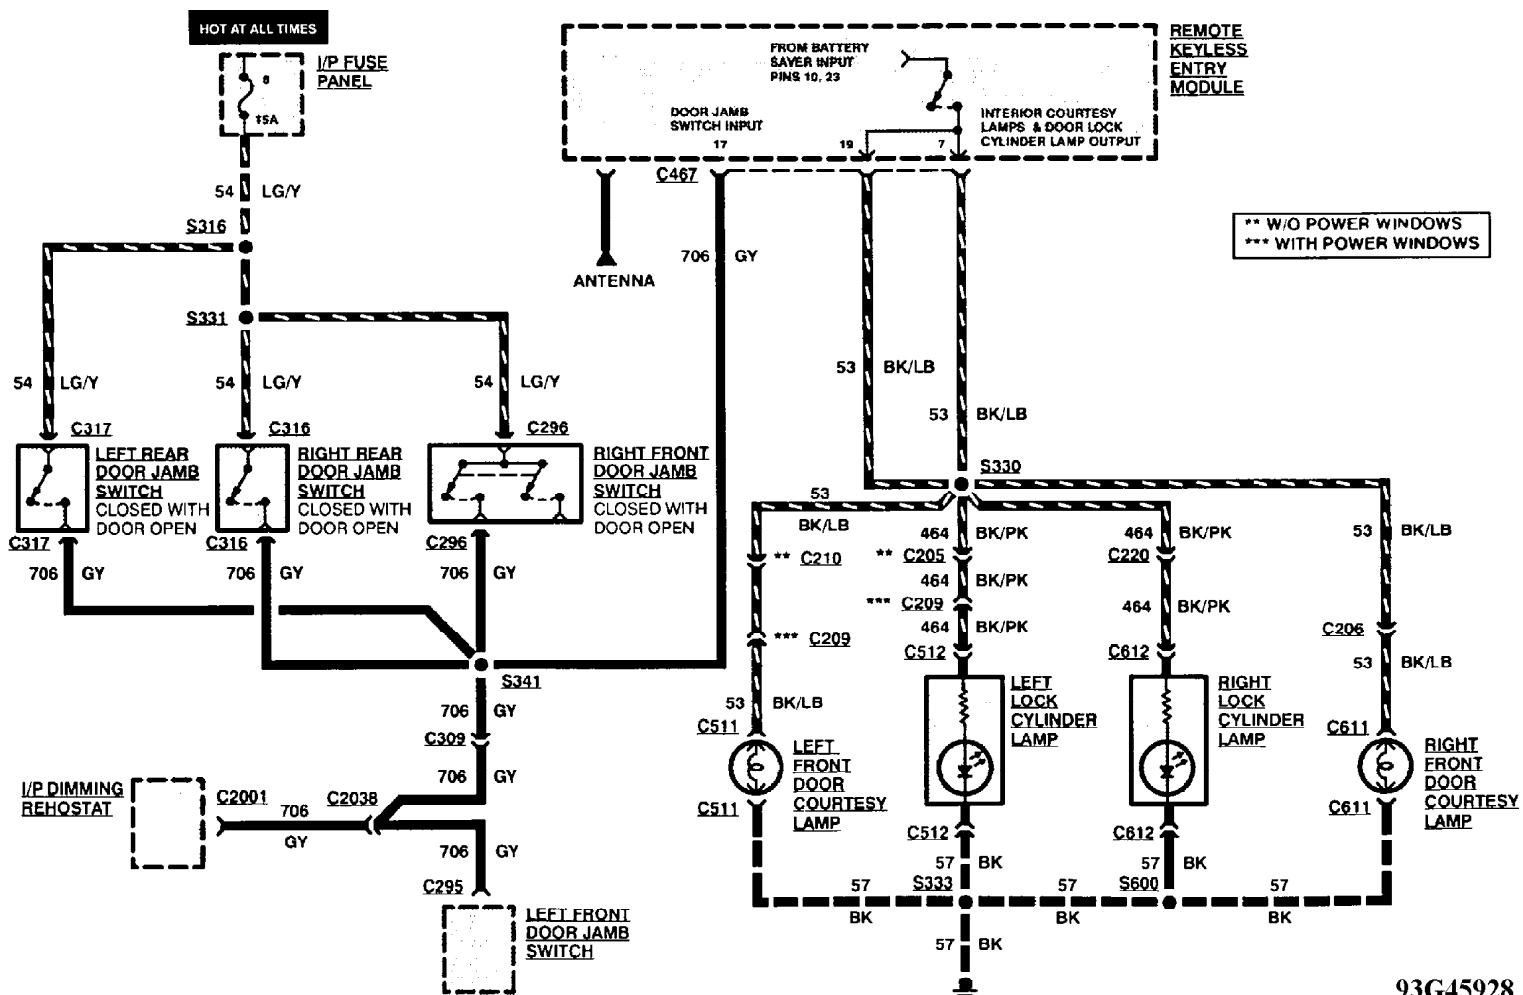


93G45928

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN


Fig. 73: Power Antenna Wiring Diagram
1993 Ford Taurus LX

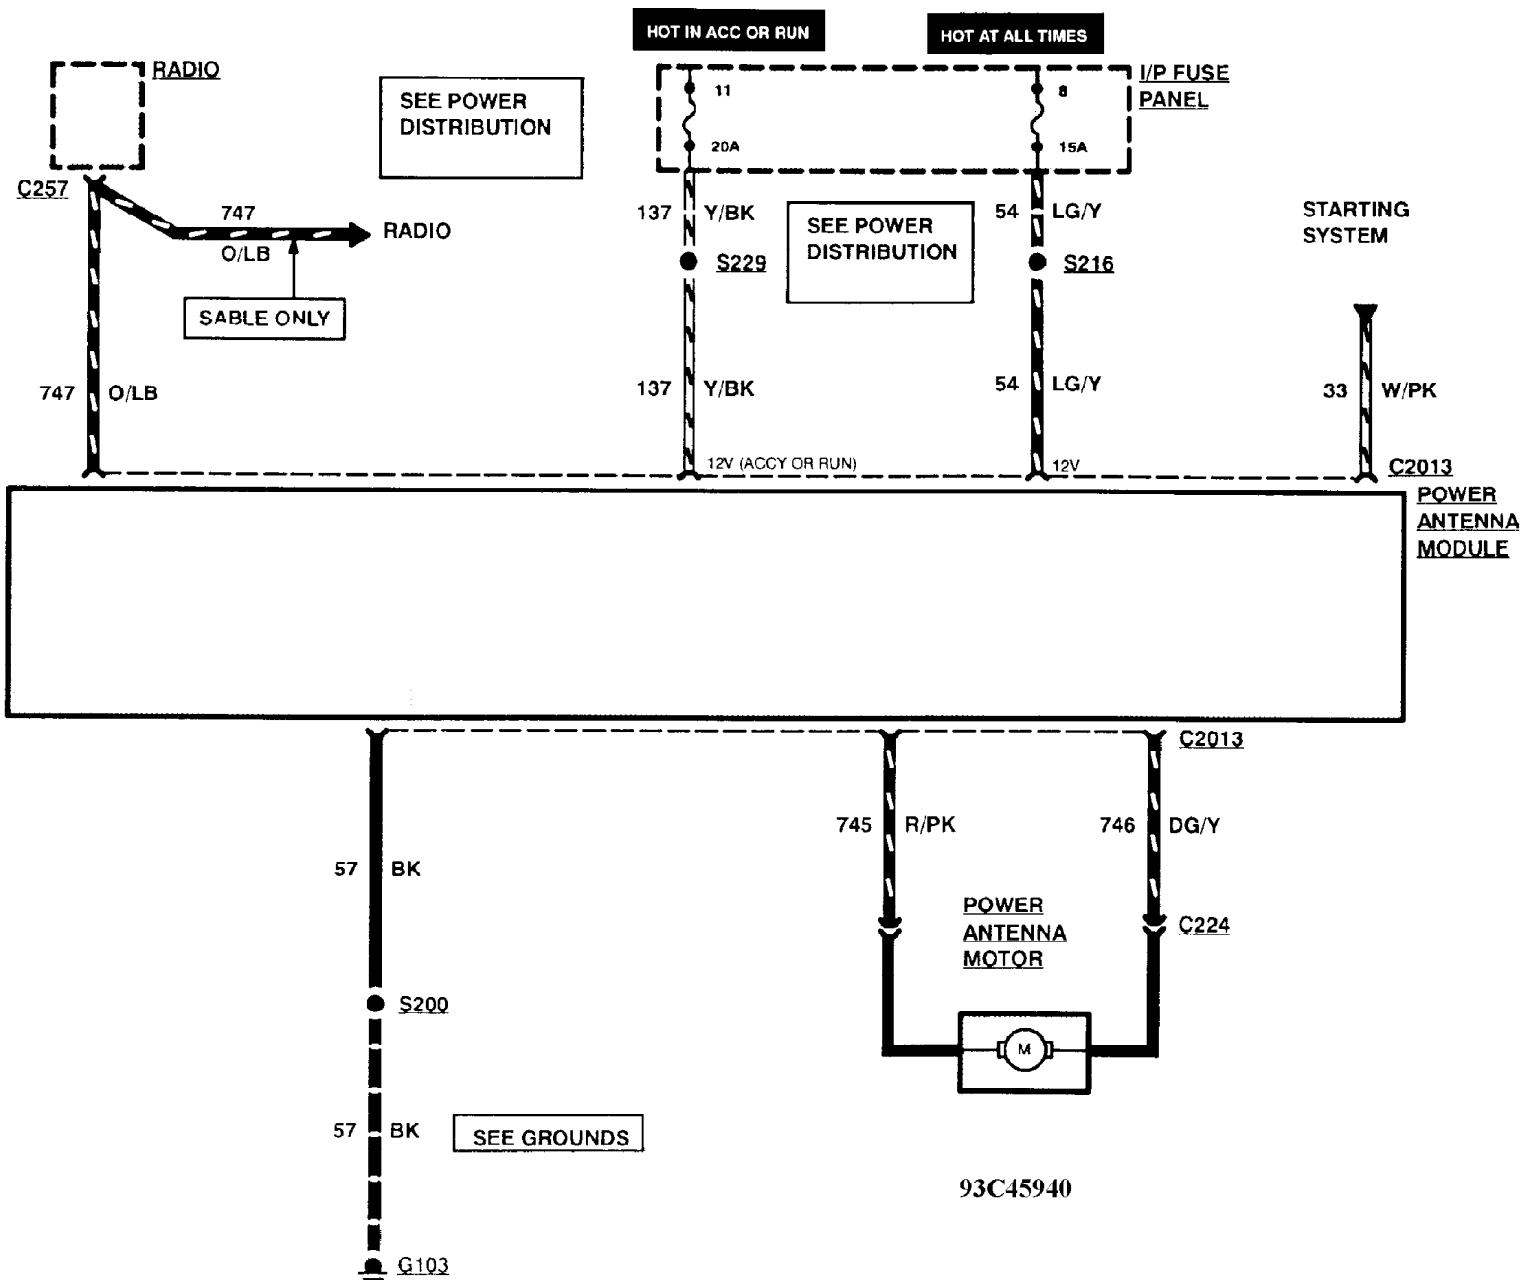

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN


Fig. 74: Power Door Locks Wiring Diagram (1 Of 2)
1993 Ford Taurus LX

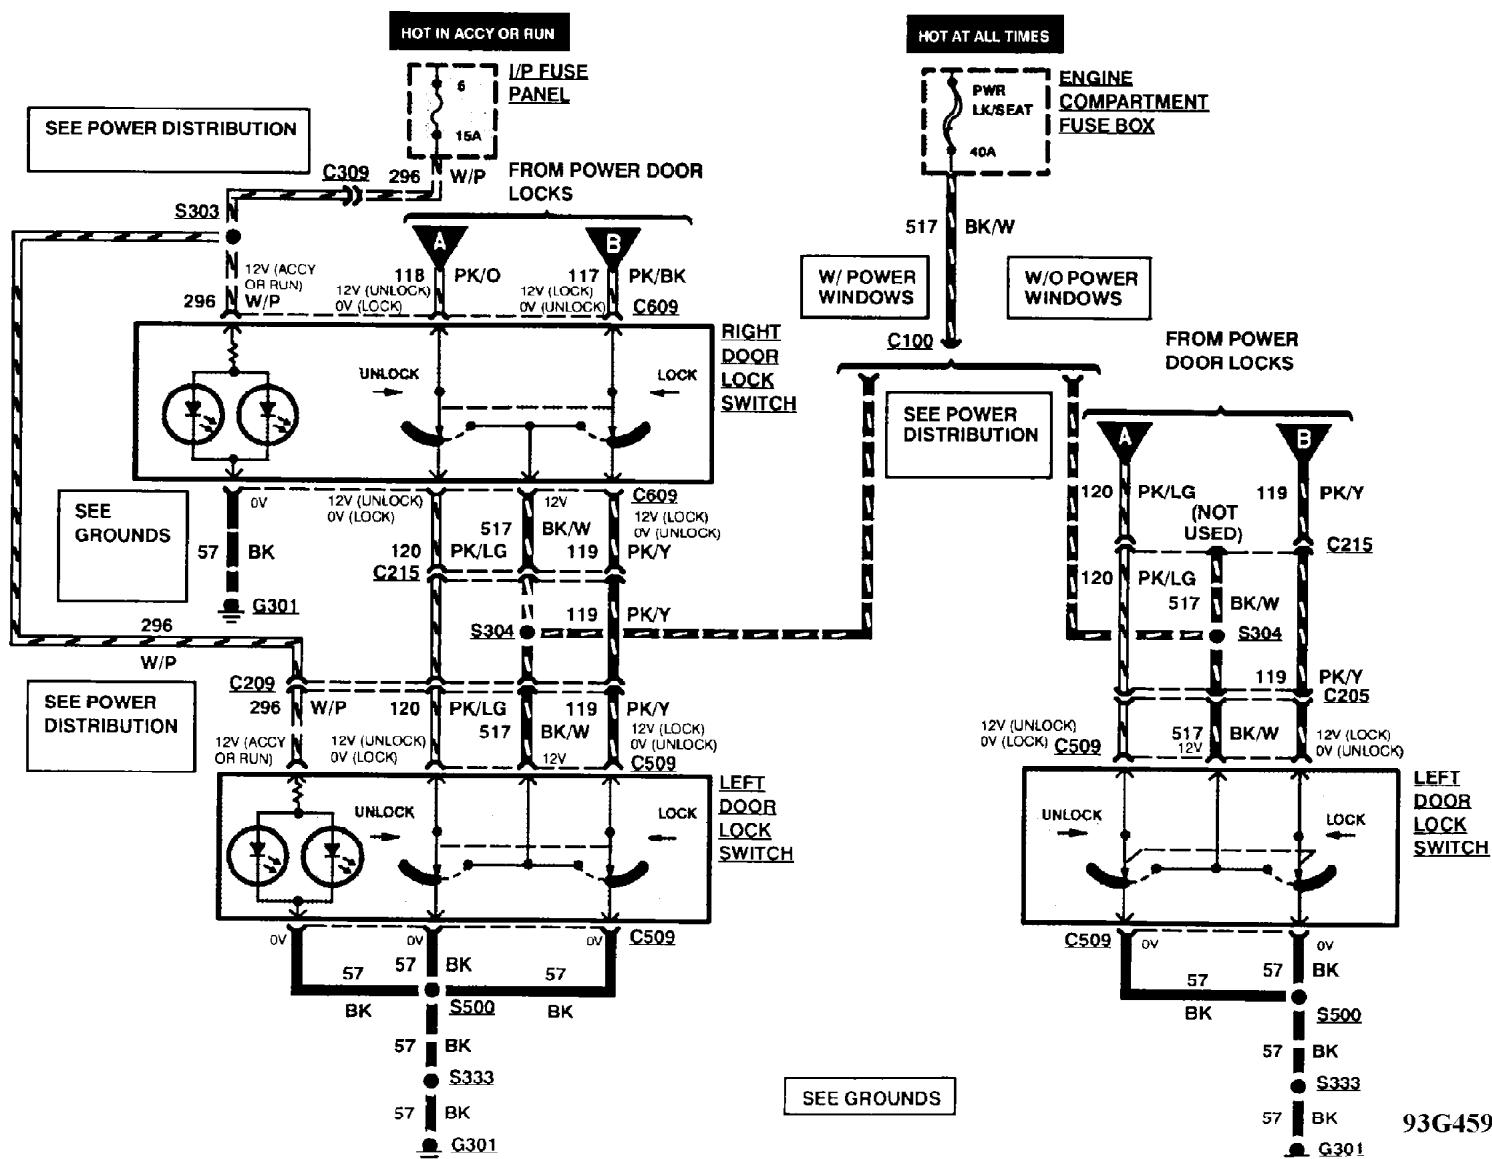

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN


Fig. 75: Power Door Locks Wiring Diagram (2 Of 2)
1993 Ford Taurus LX

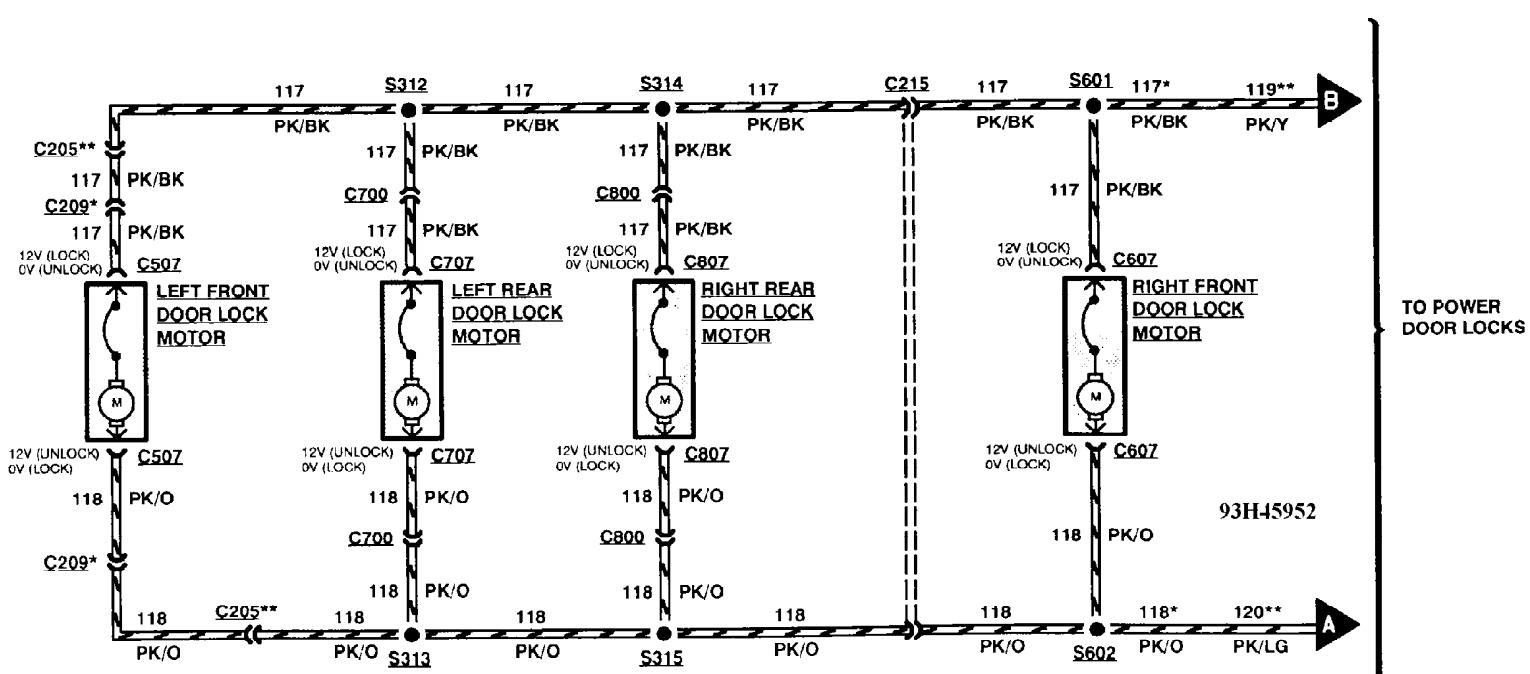

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 76: Power Mirror System Wiring Diagram
1993 Ford Taurus LX

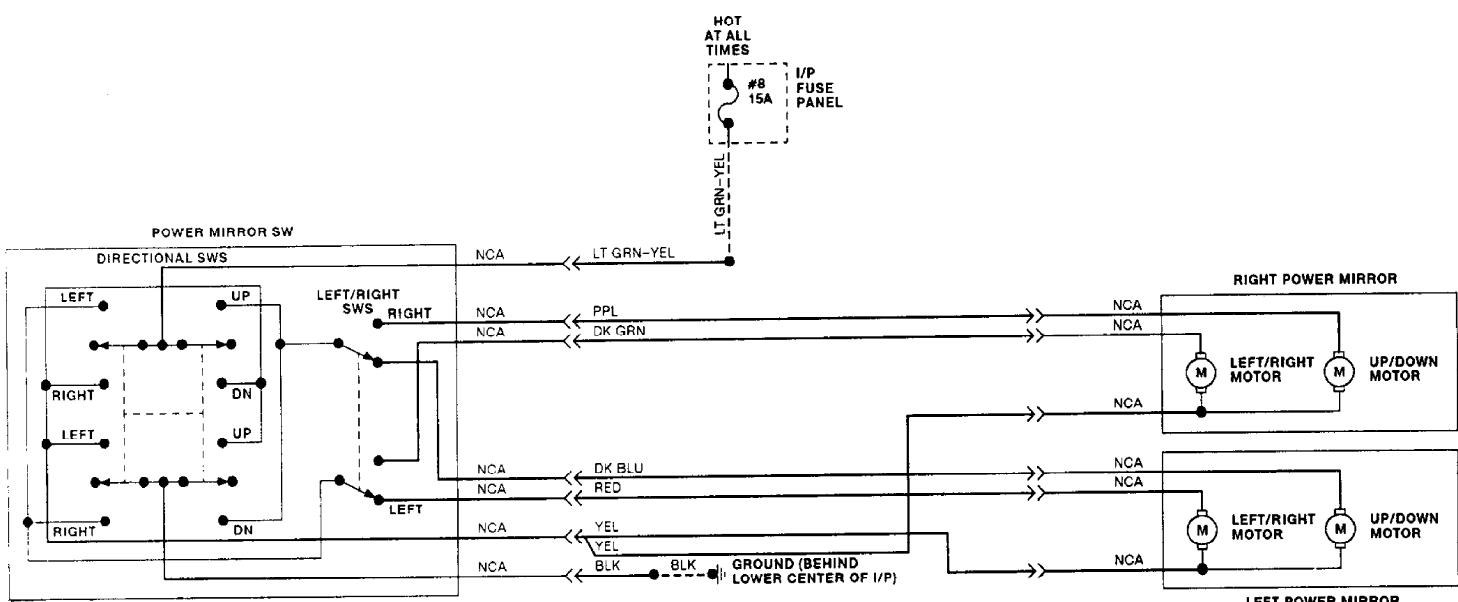


93B40940

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN


Fig. 77: Power Moon Roof Wiring Diagram
1993 Ford Taurus LX

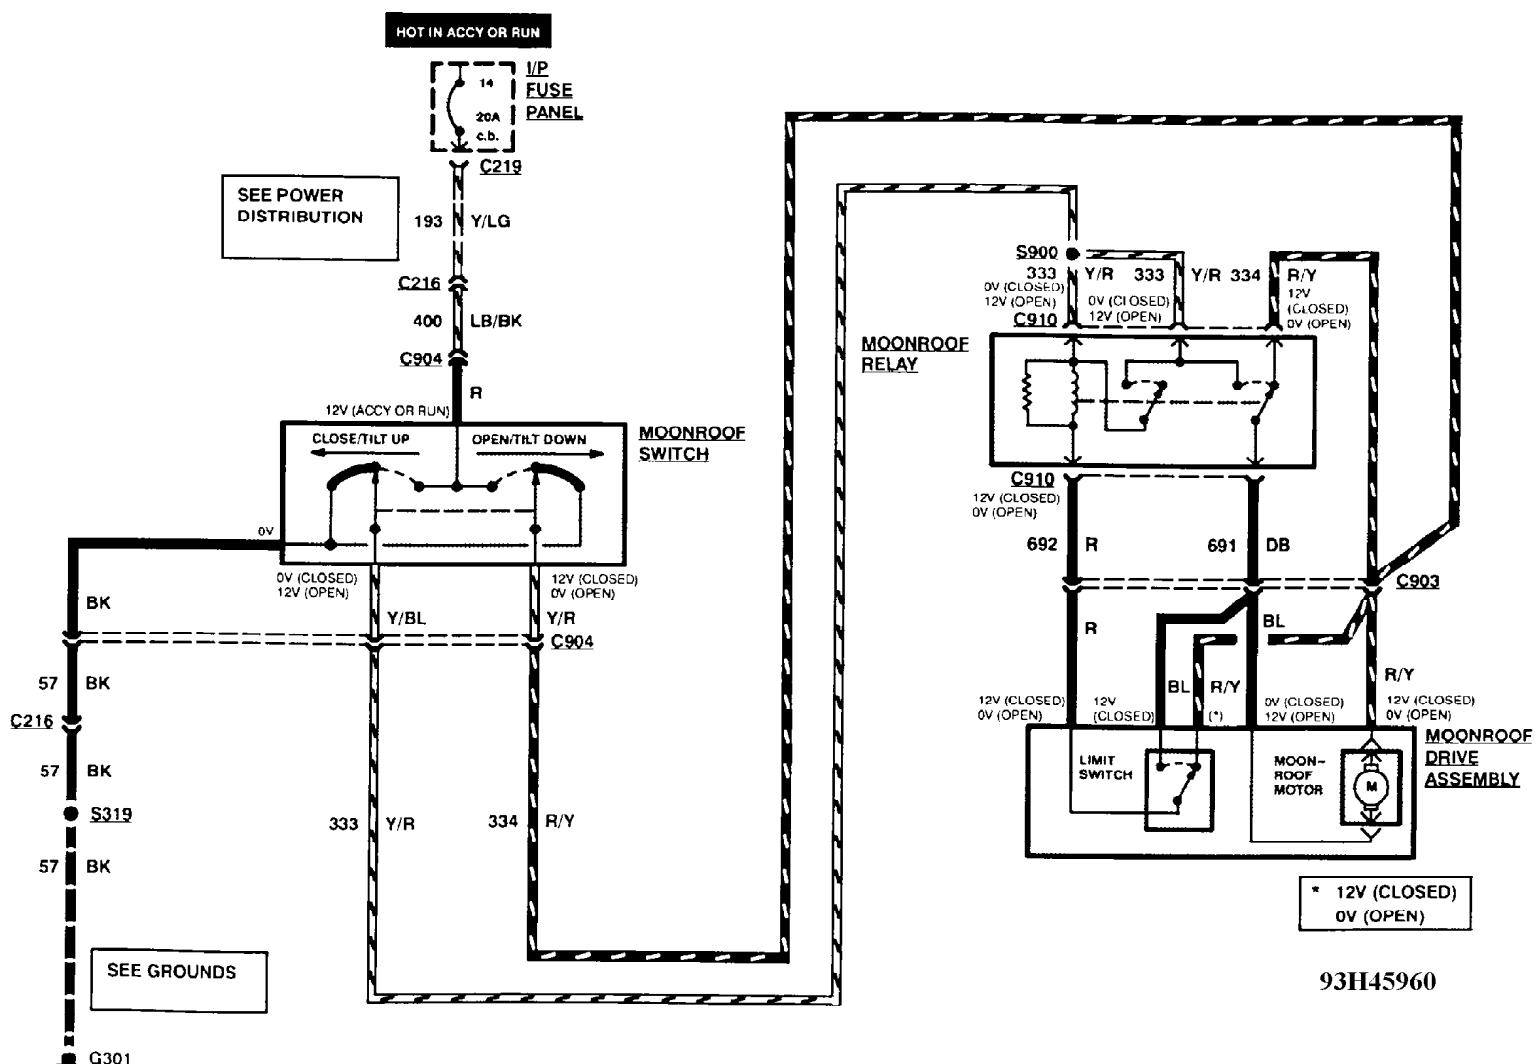

WIRING DIAGRAMS
Power & Ground Distribution

PAVLIN


Fig. 78: Lumbar Seat Wiring Diagram
1993 Ford Taurus LX

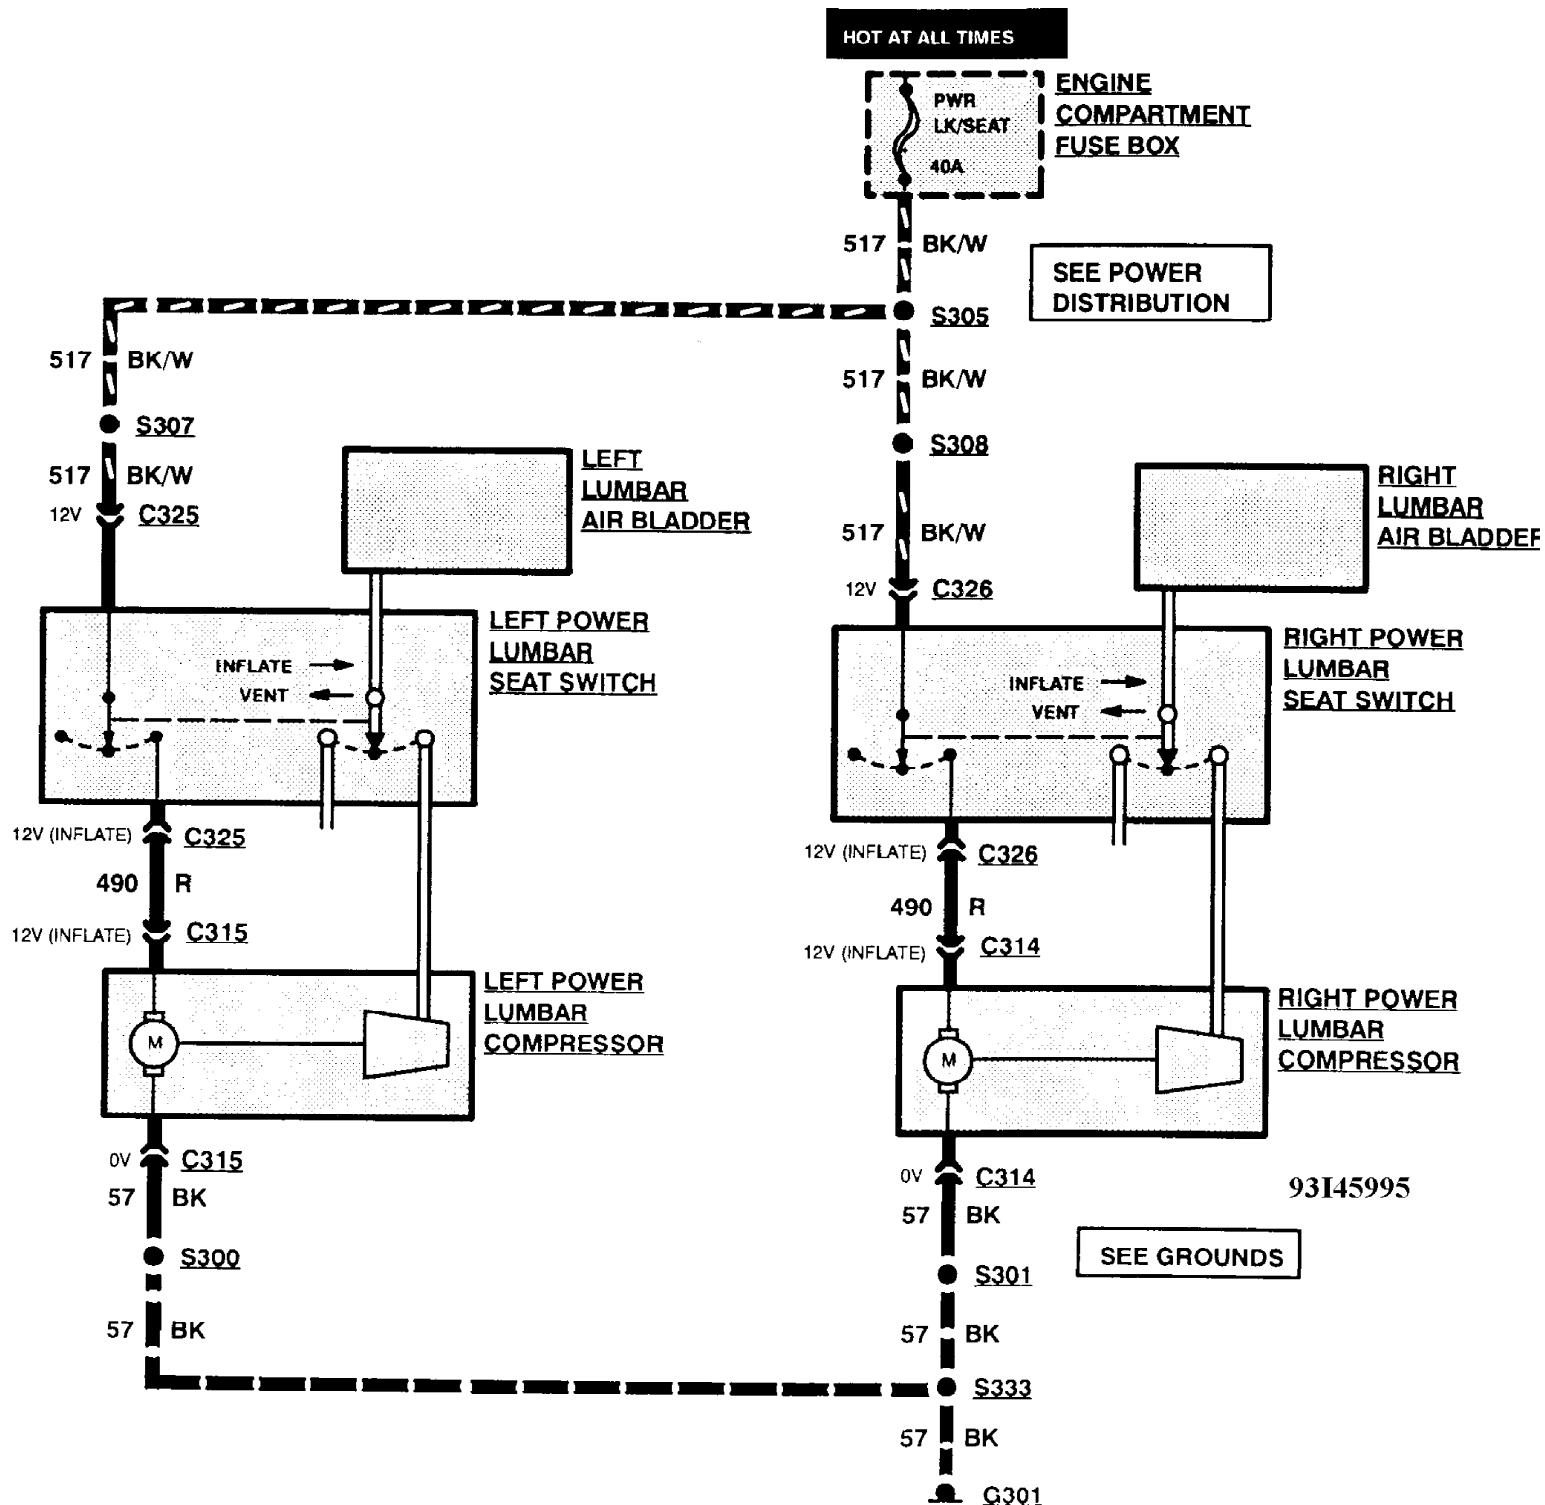

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 79: Power Seats (1 Of 2)
1993 Ford Taurus LX

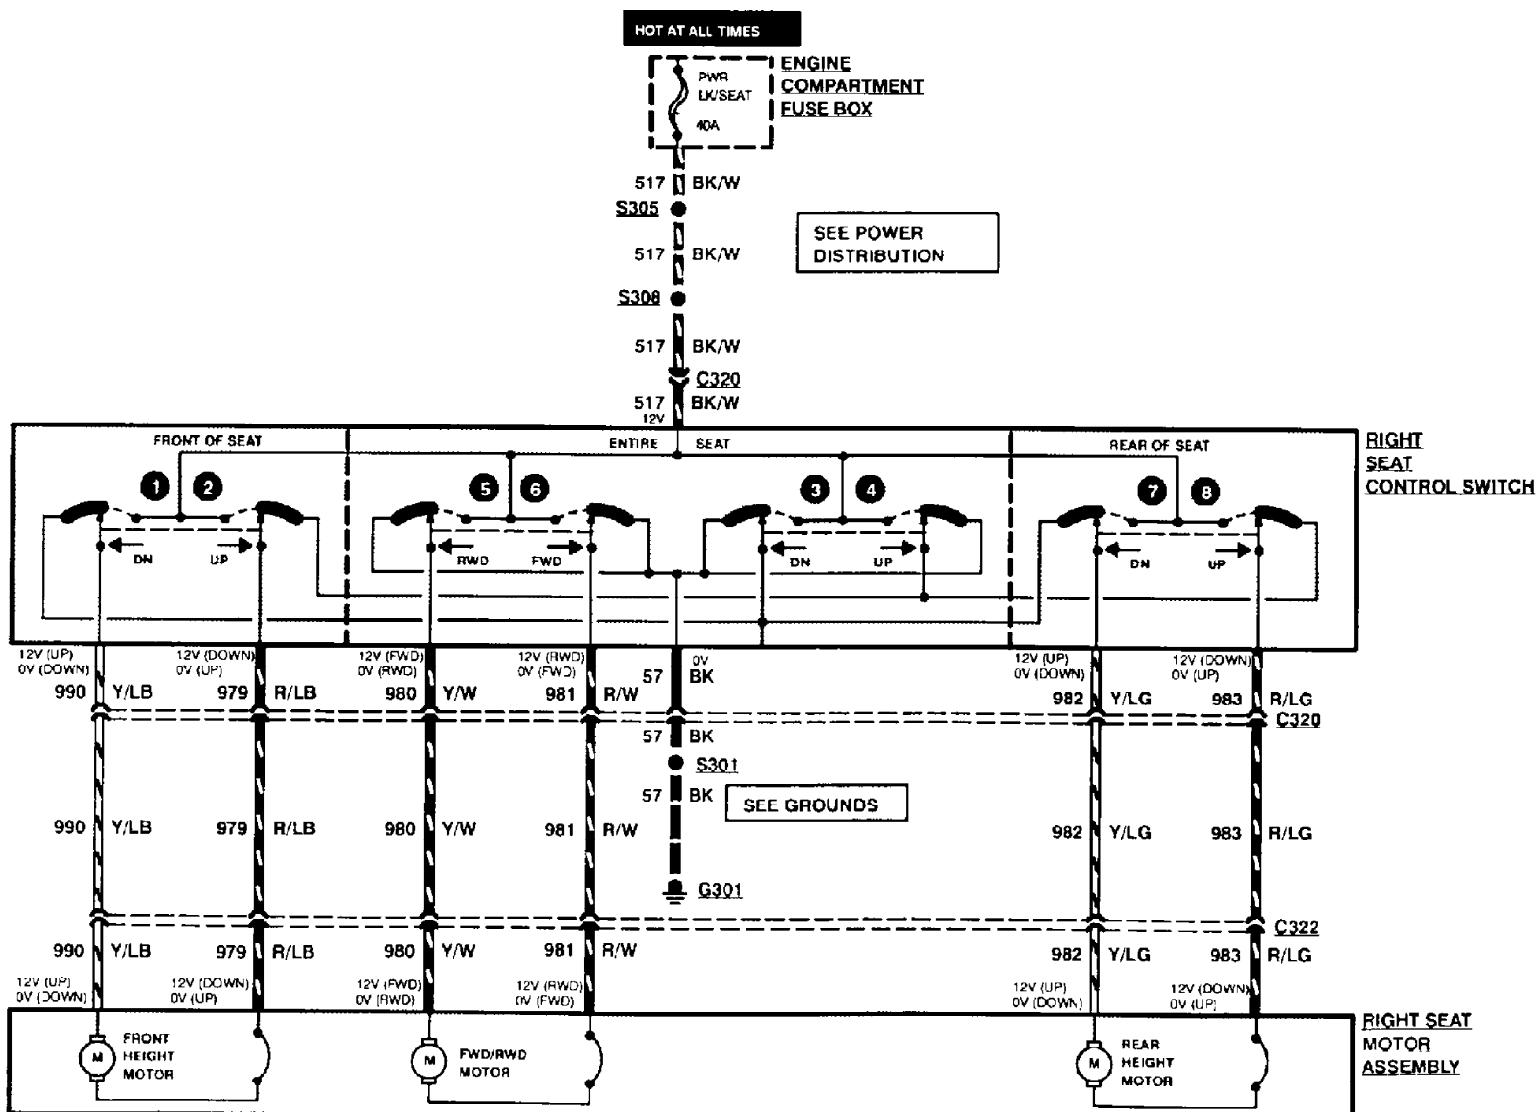


G93J45996

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 80: Power Seats (2 Of 2)
1993 Ford Taurus LX

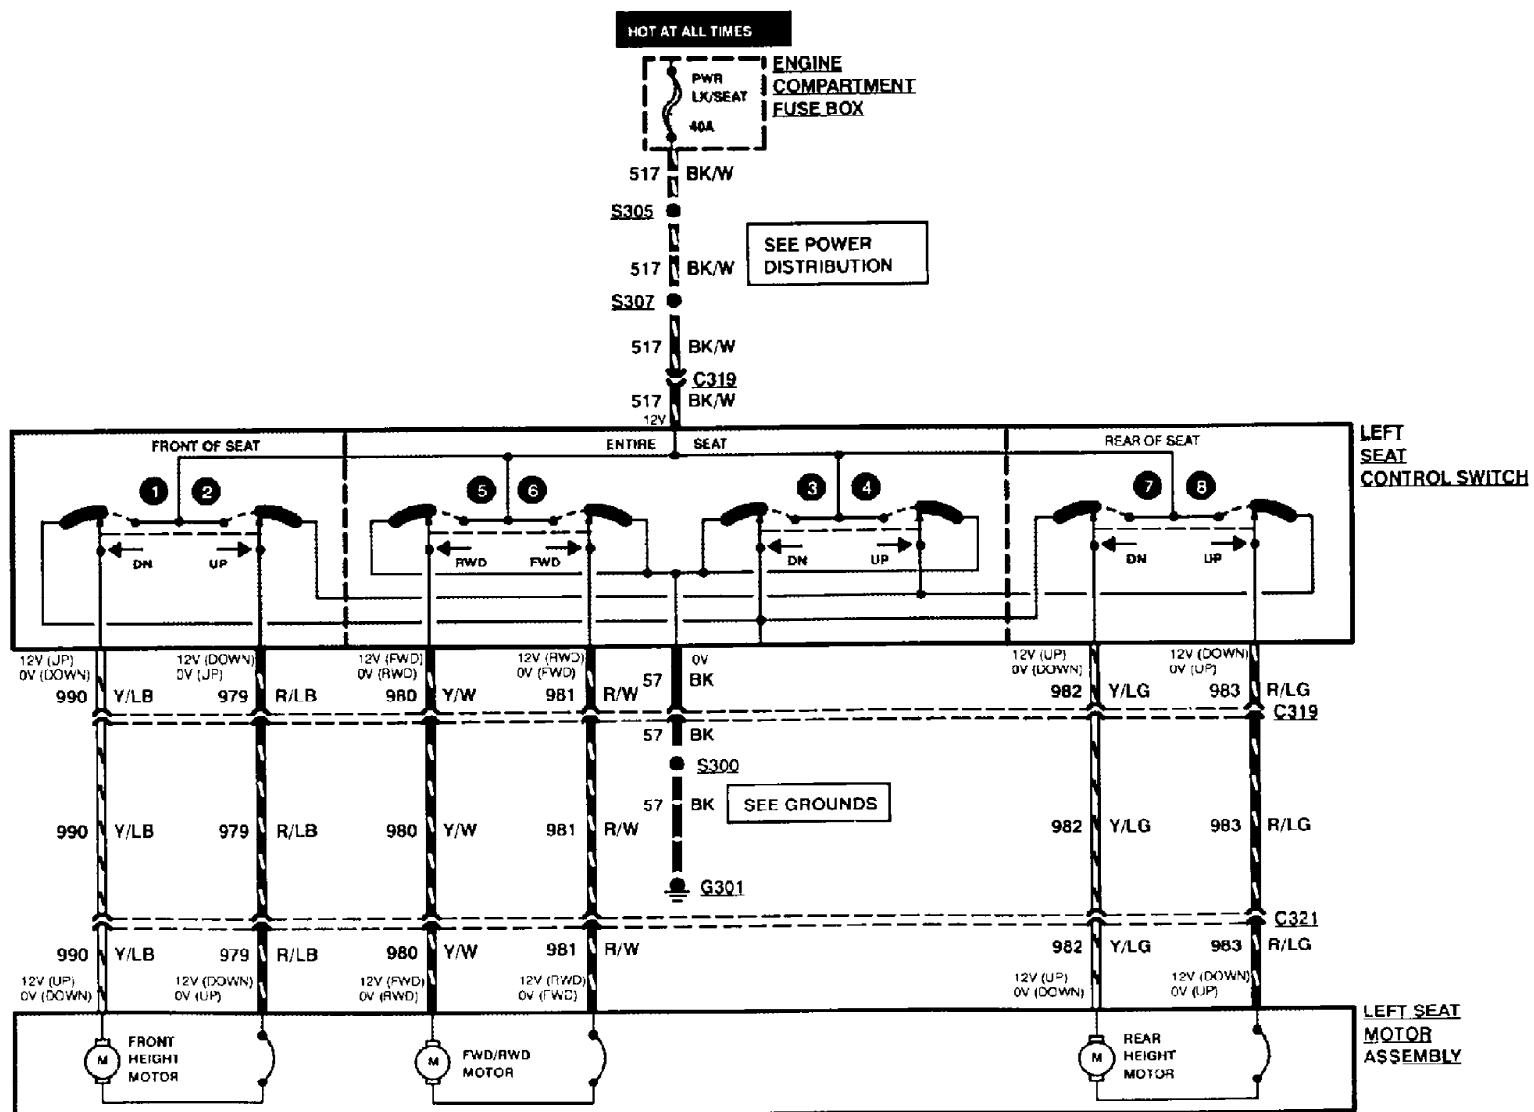


G93A45997

WIRING DIAGRAMS
Power & Ground Distribution

PAVLIN


**Fig. 81: Power Fuel Filler Door Release Wiring Diagram
(1 Of 2)**
1993 Ford Taurus LX

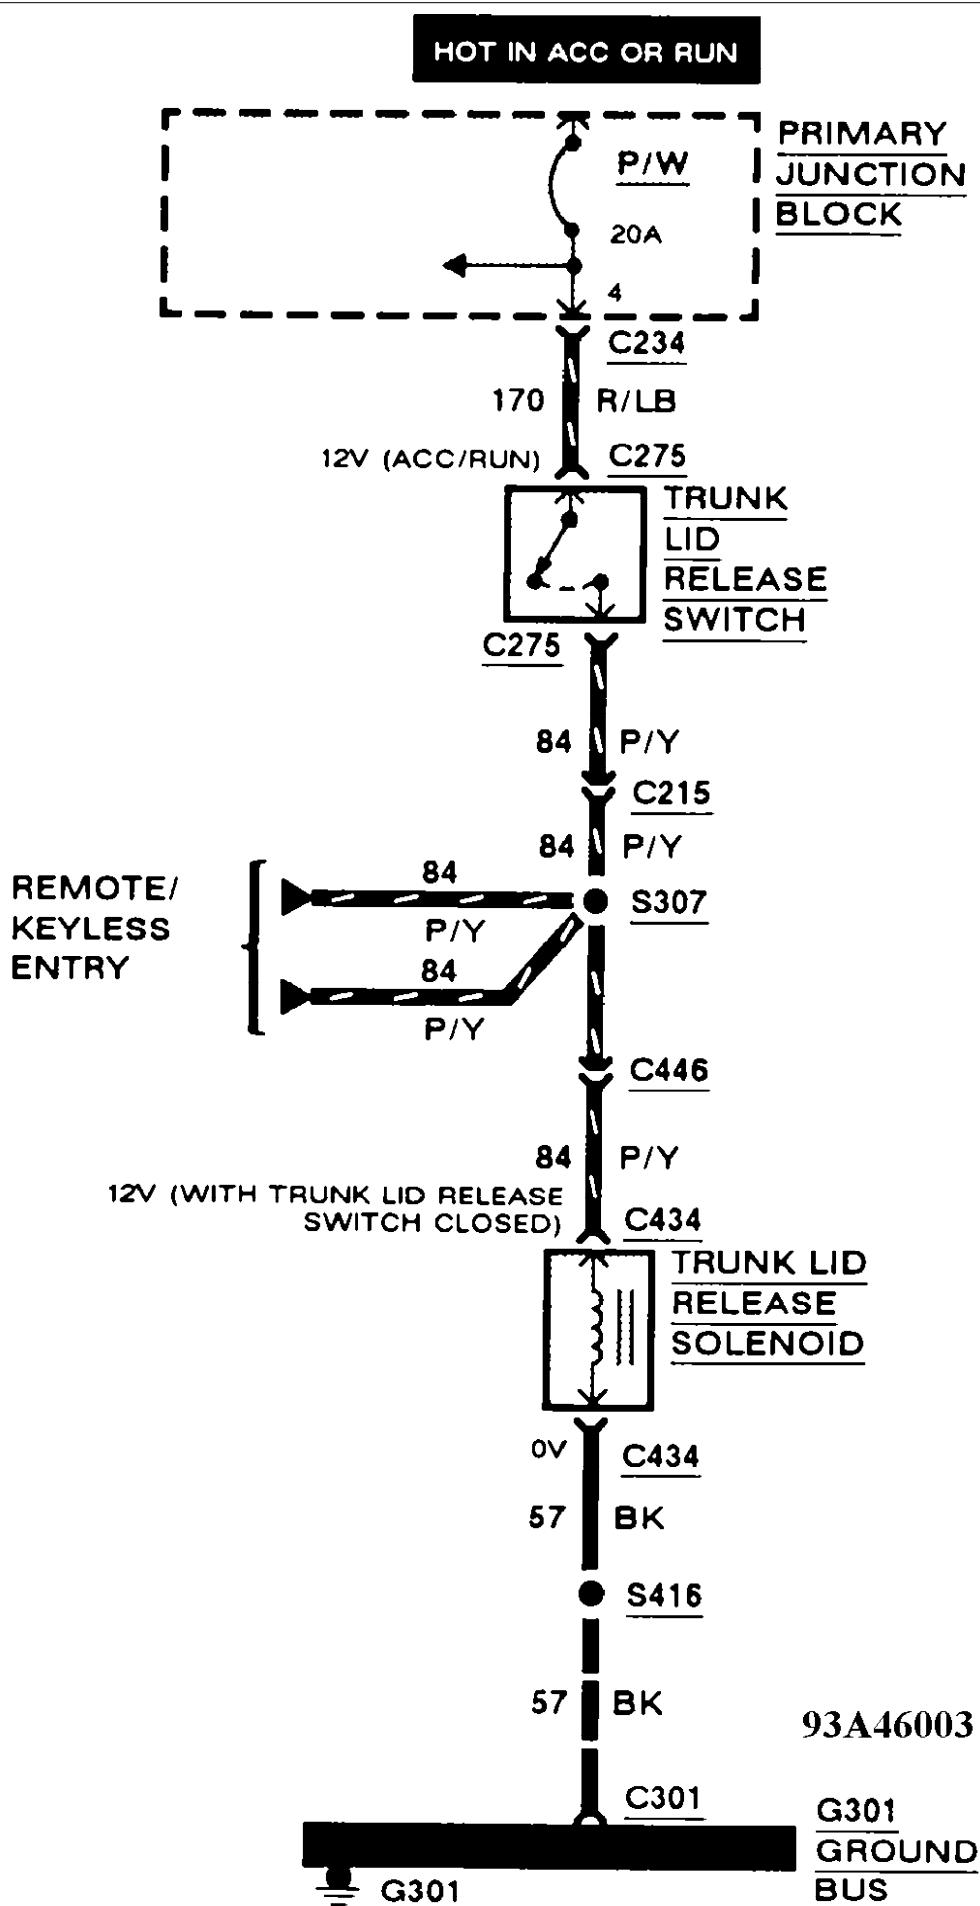

WIRING DIAGRAMS
Power & Ground Distribution

PAVLIN


**Fig. 82: Power Fuel Filler Door Release Wiring Diagram
(2 Of 2)**
1993 Ford Taurus LX

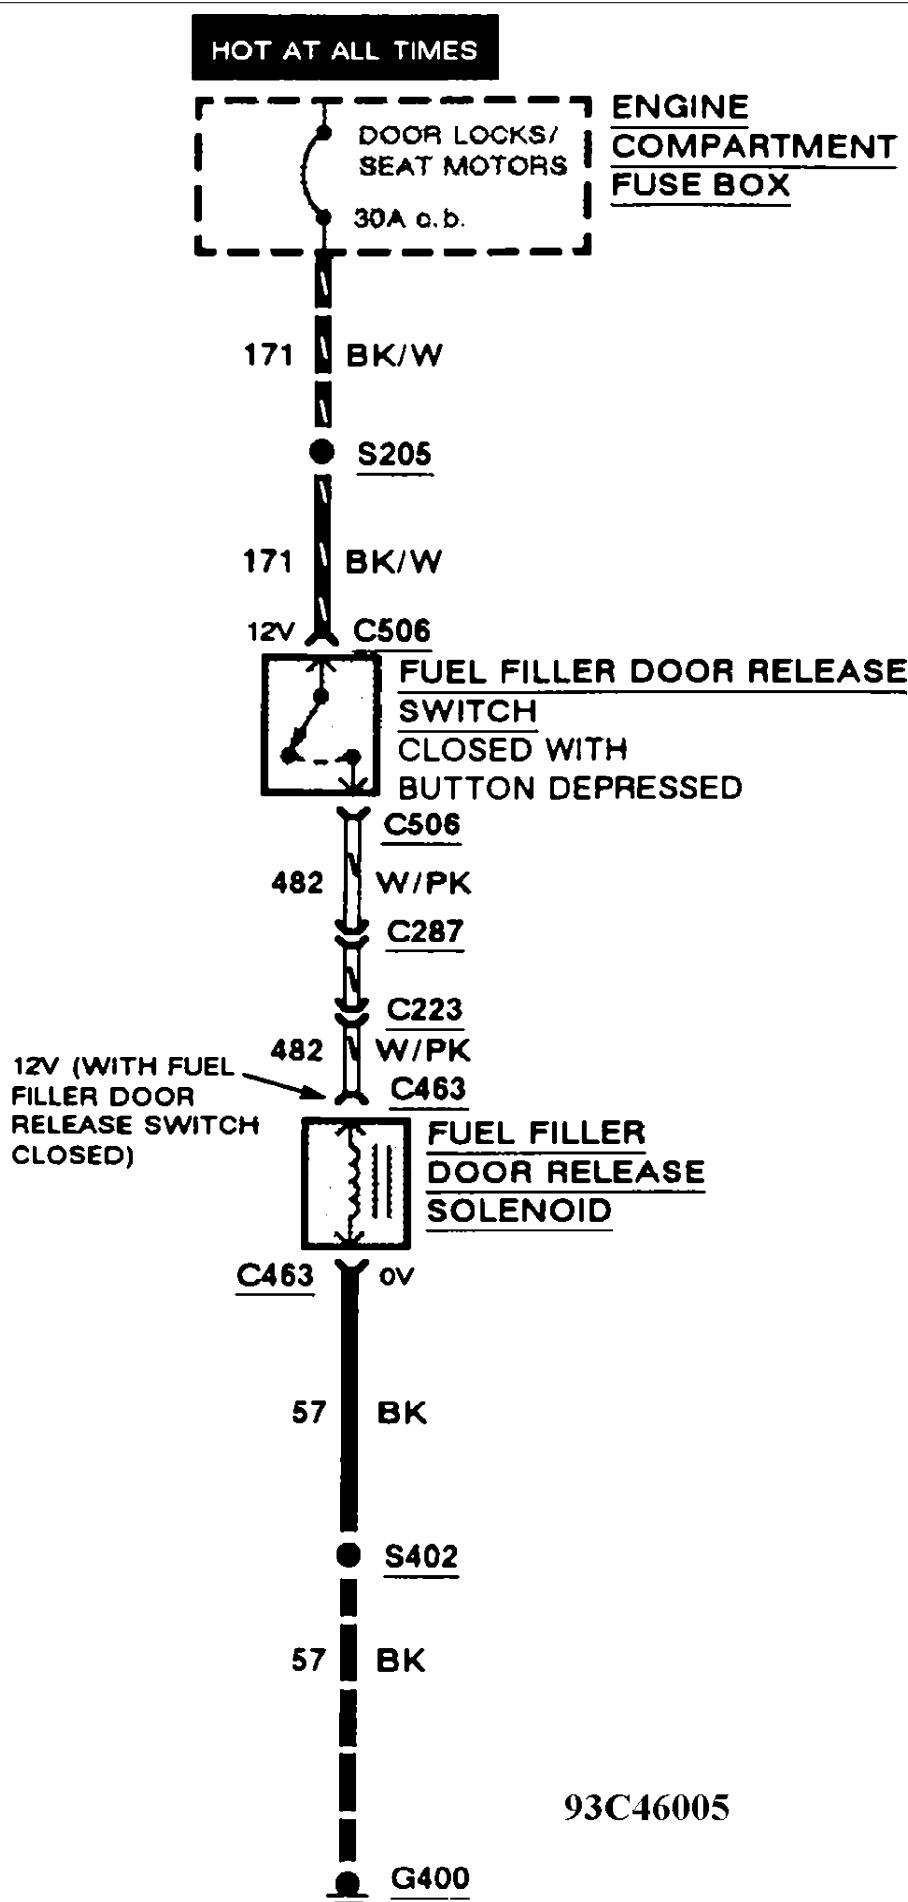

WIRING DIAGRAMS
Power & Ground Distribution

PAVLIN


Fig. 83: Power Trunk Release W/ Police Package Wiring Diagram
1993 Ford Taurus LX

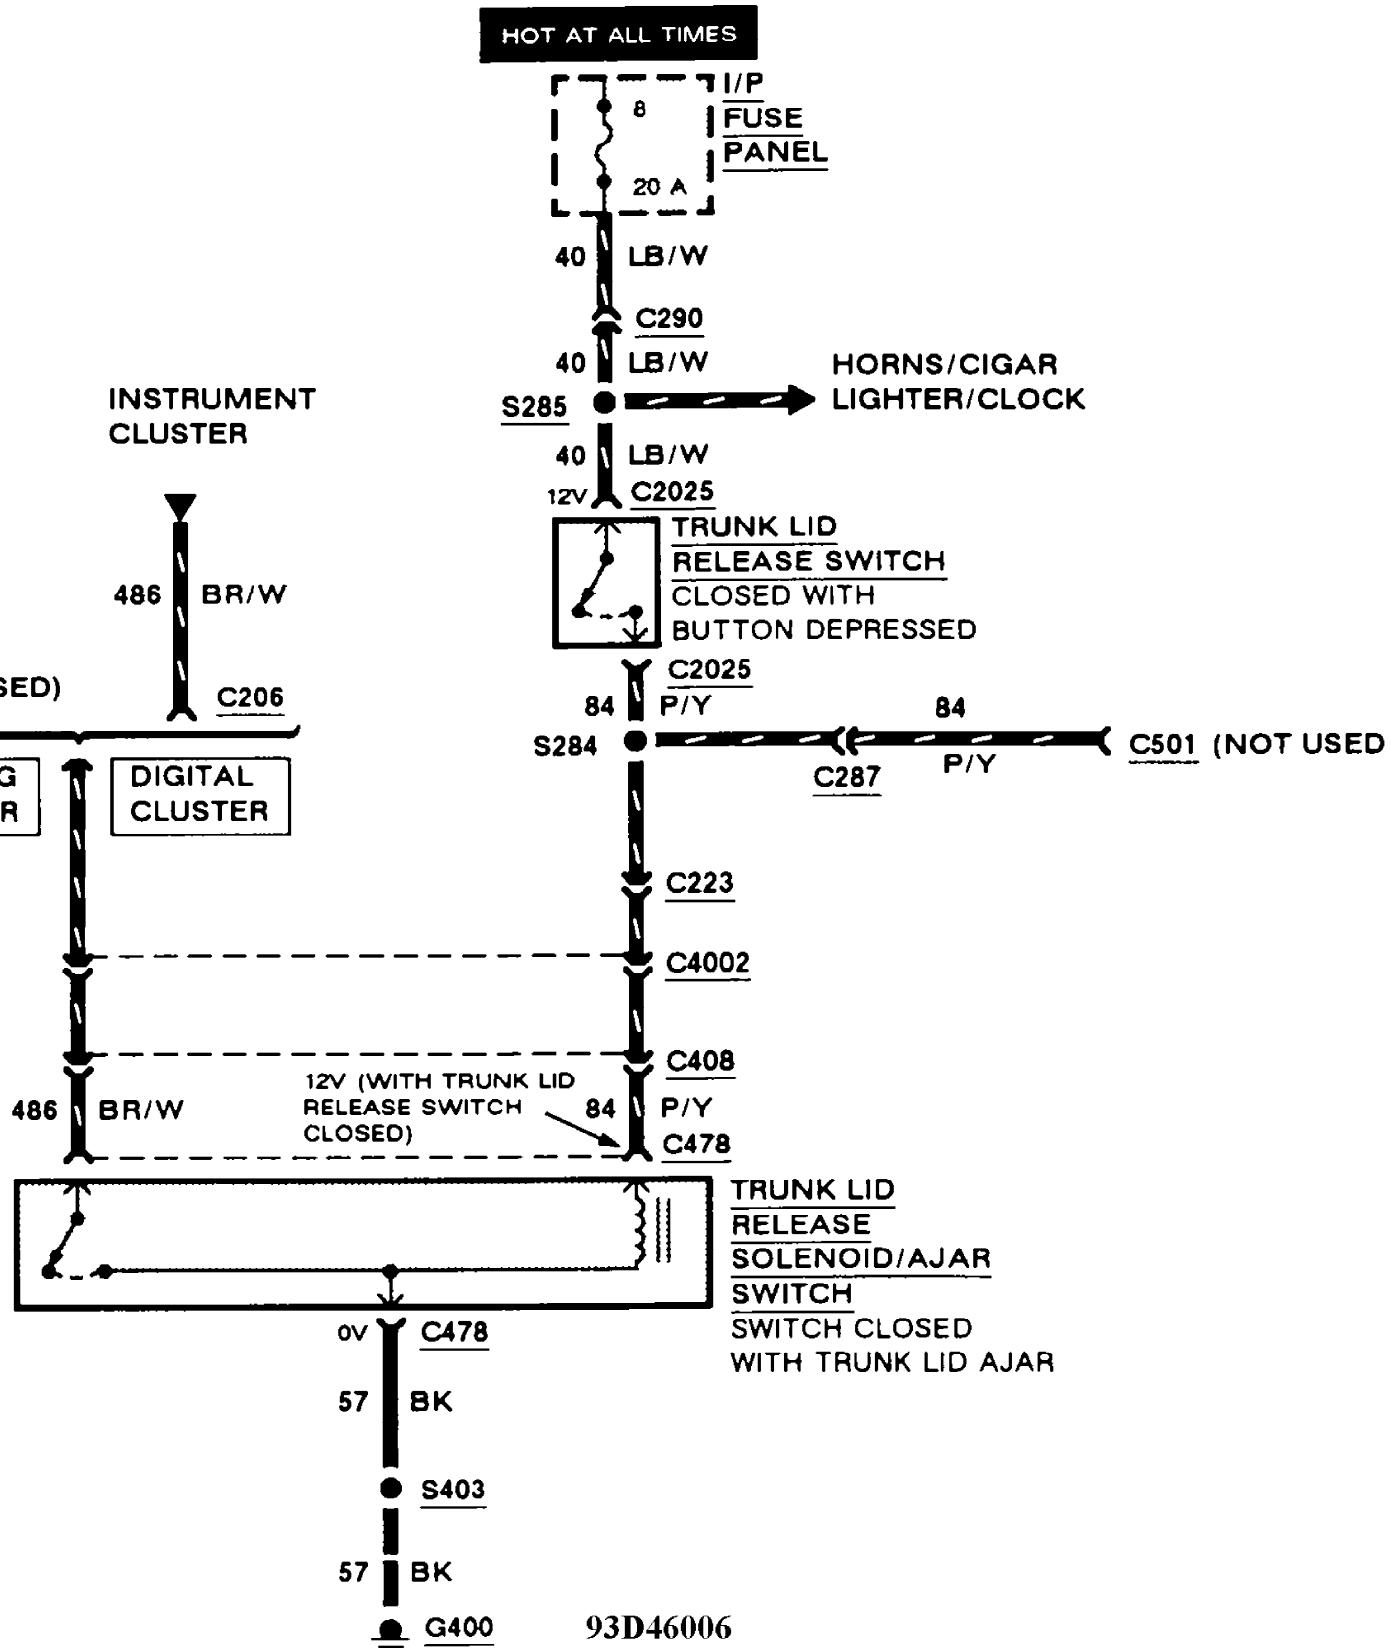

WIRING DIAGRAMS
Power & Ground Distribution

PAVLIN


Fig. 84: Power Trunk Release W/O Police Package Wiring Diagram
1993 Ford Taurus LX

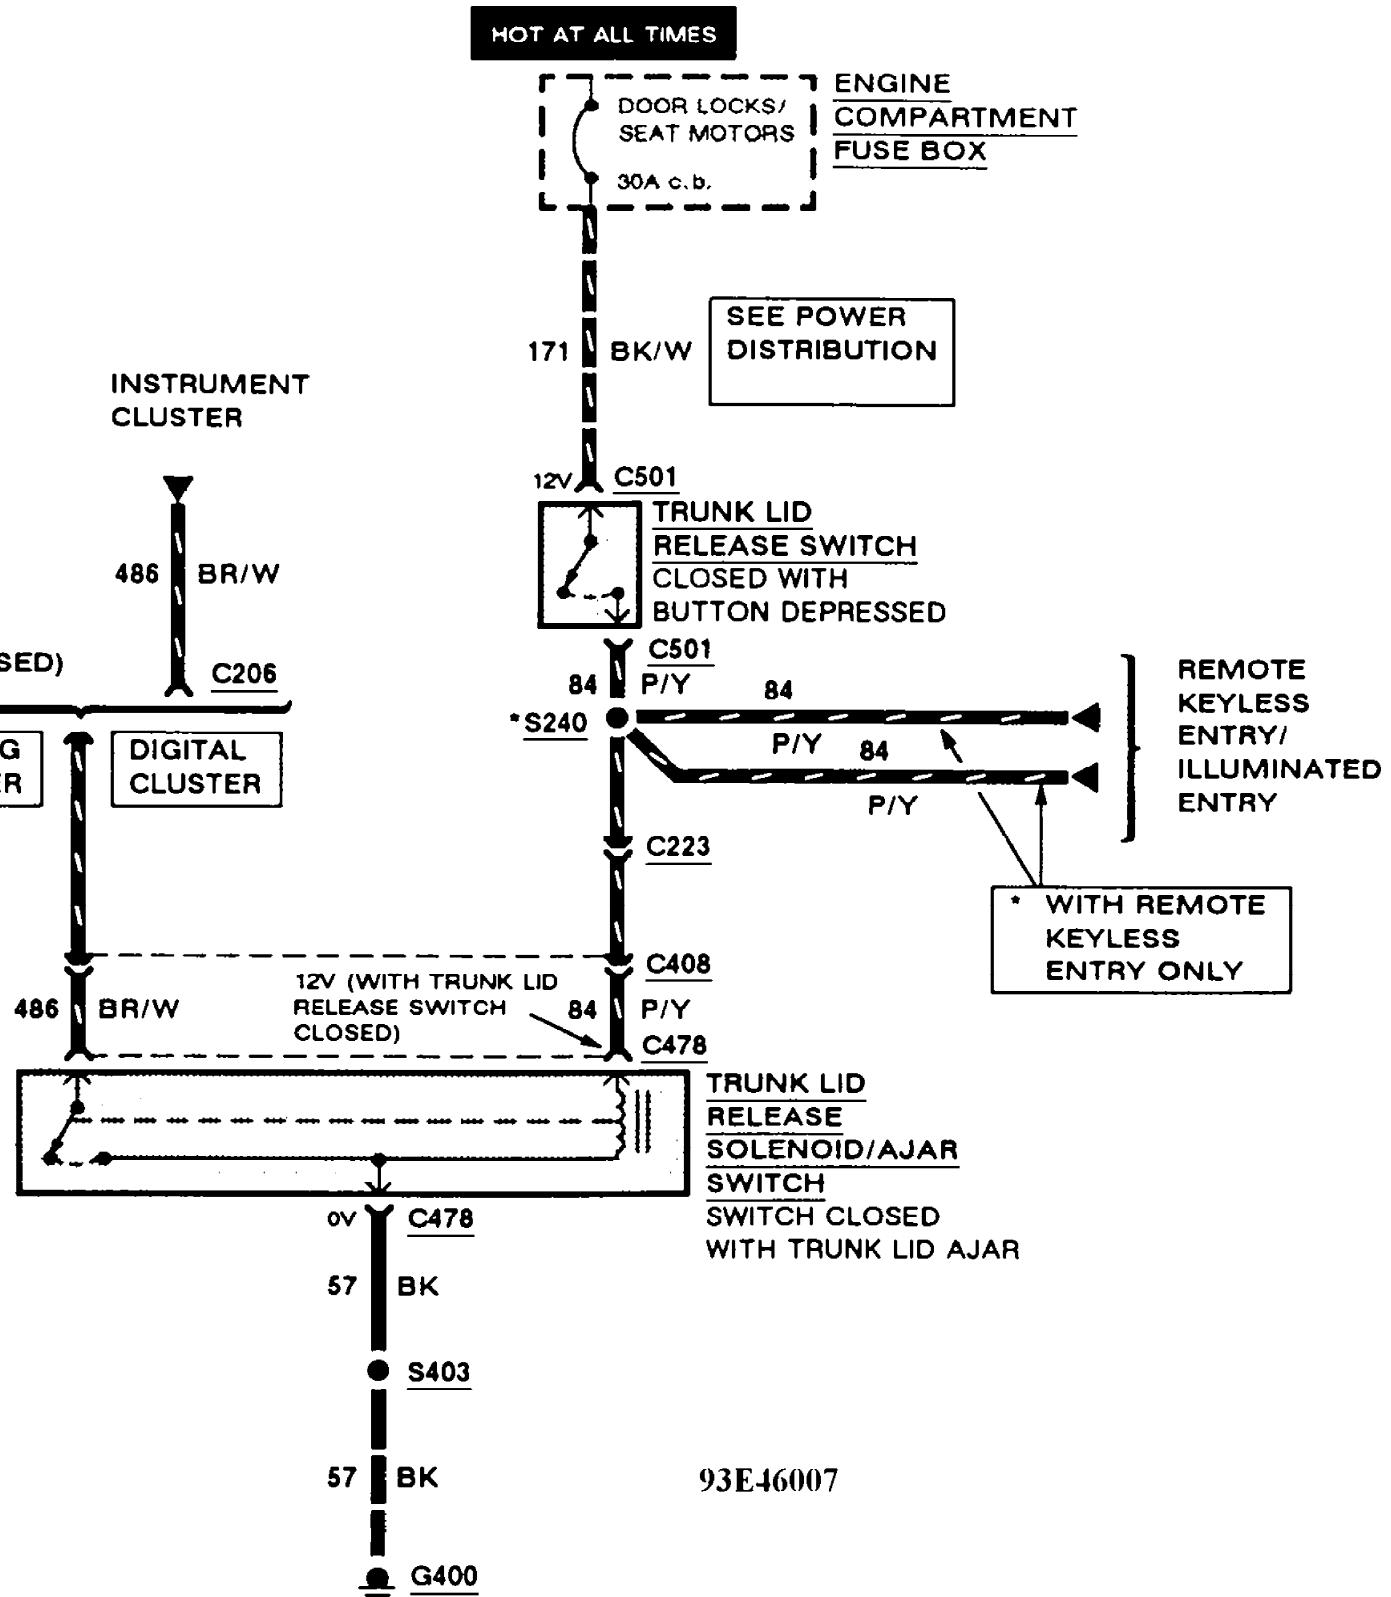

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN


Fig. 85: Power Liftgate Release Wiring Diagram
1993 Ford Taurus LX

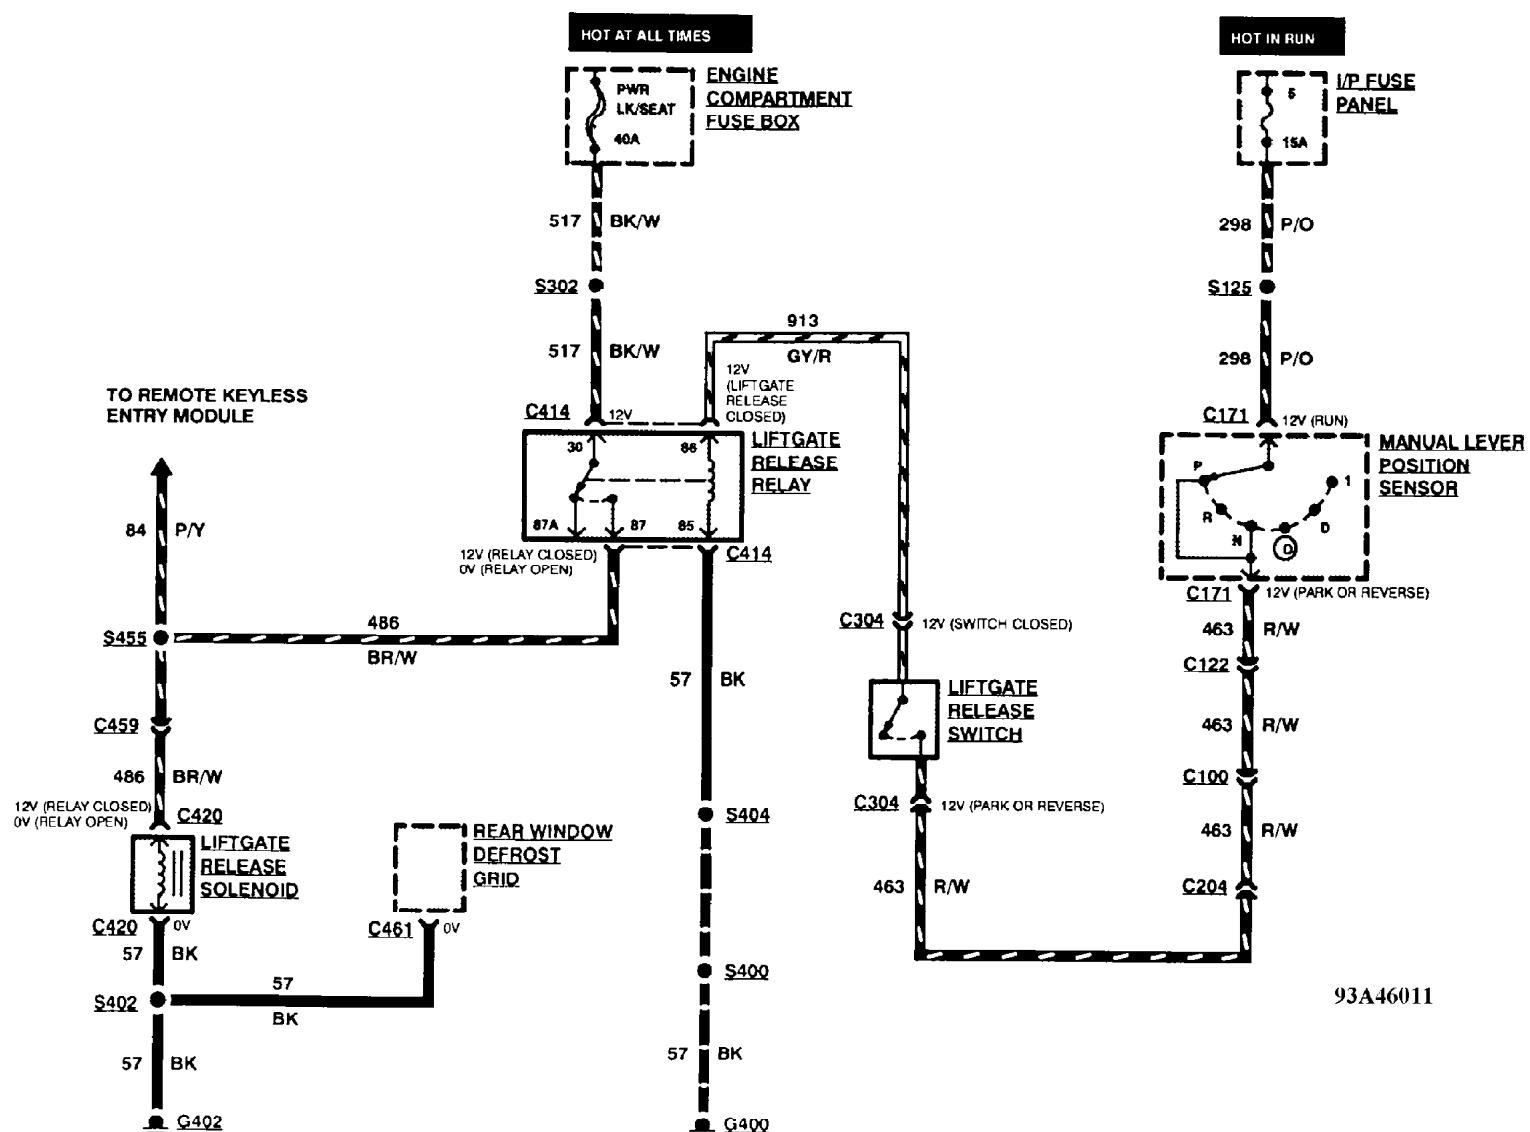

WIRING DIAGRAMS
Power & Ground Distribution

PAVLIN


Fig. 86: Power Fuel Filler Door Release Wiring Diagram
1993 Ford Taurus LX

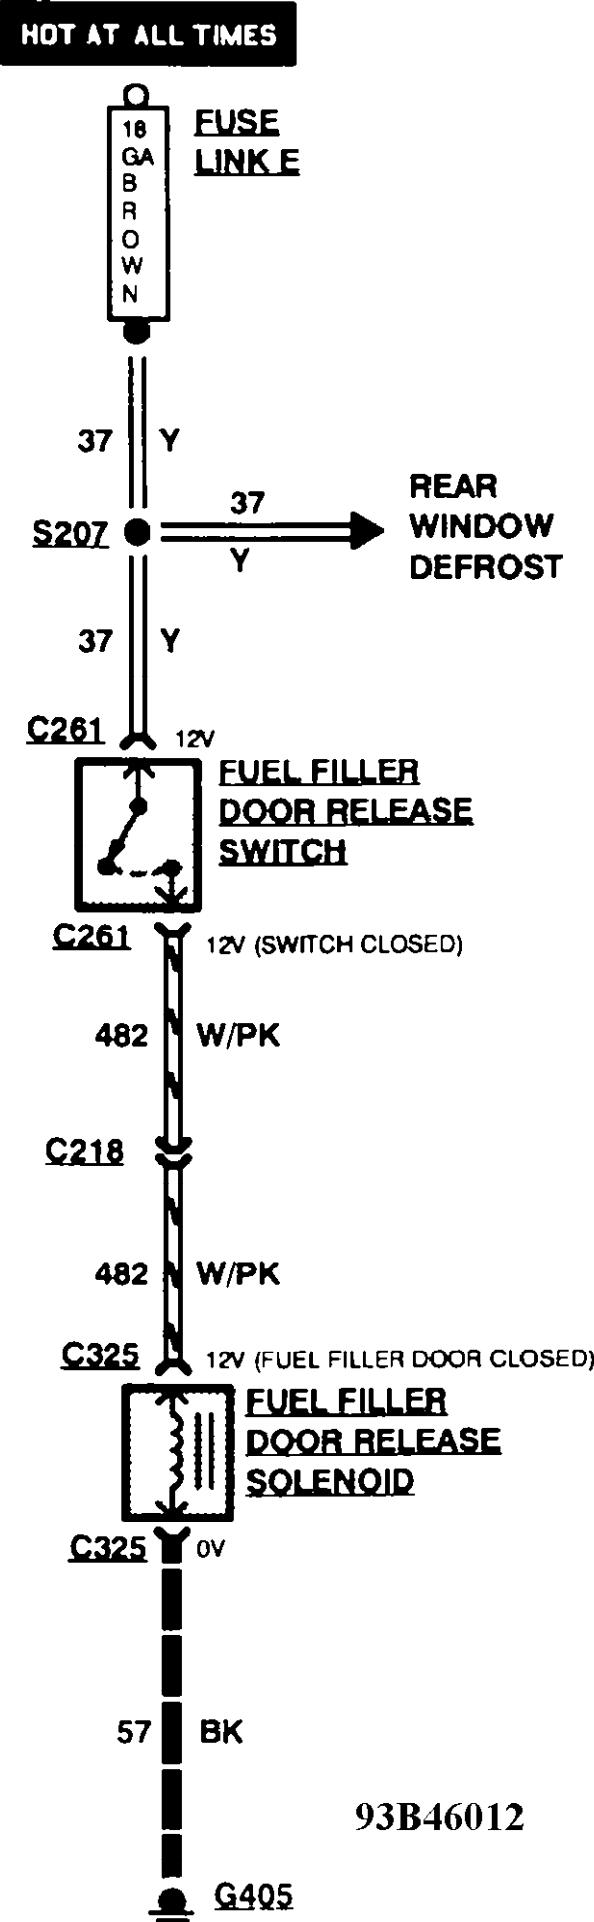

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN


Fig. 87: Power Windows (1 Of 2)
1993 Ford Taurus LX

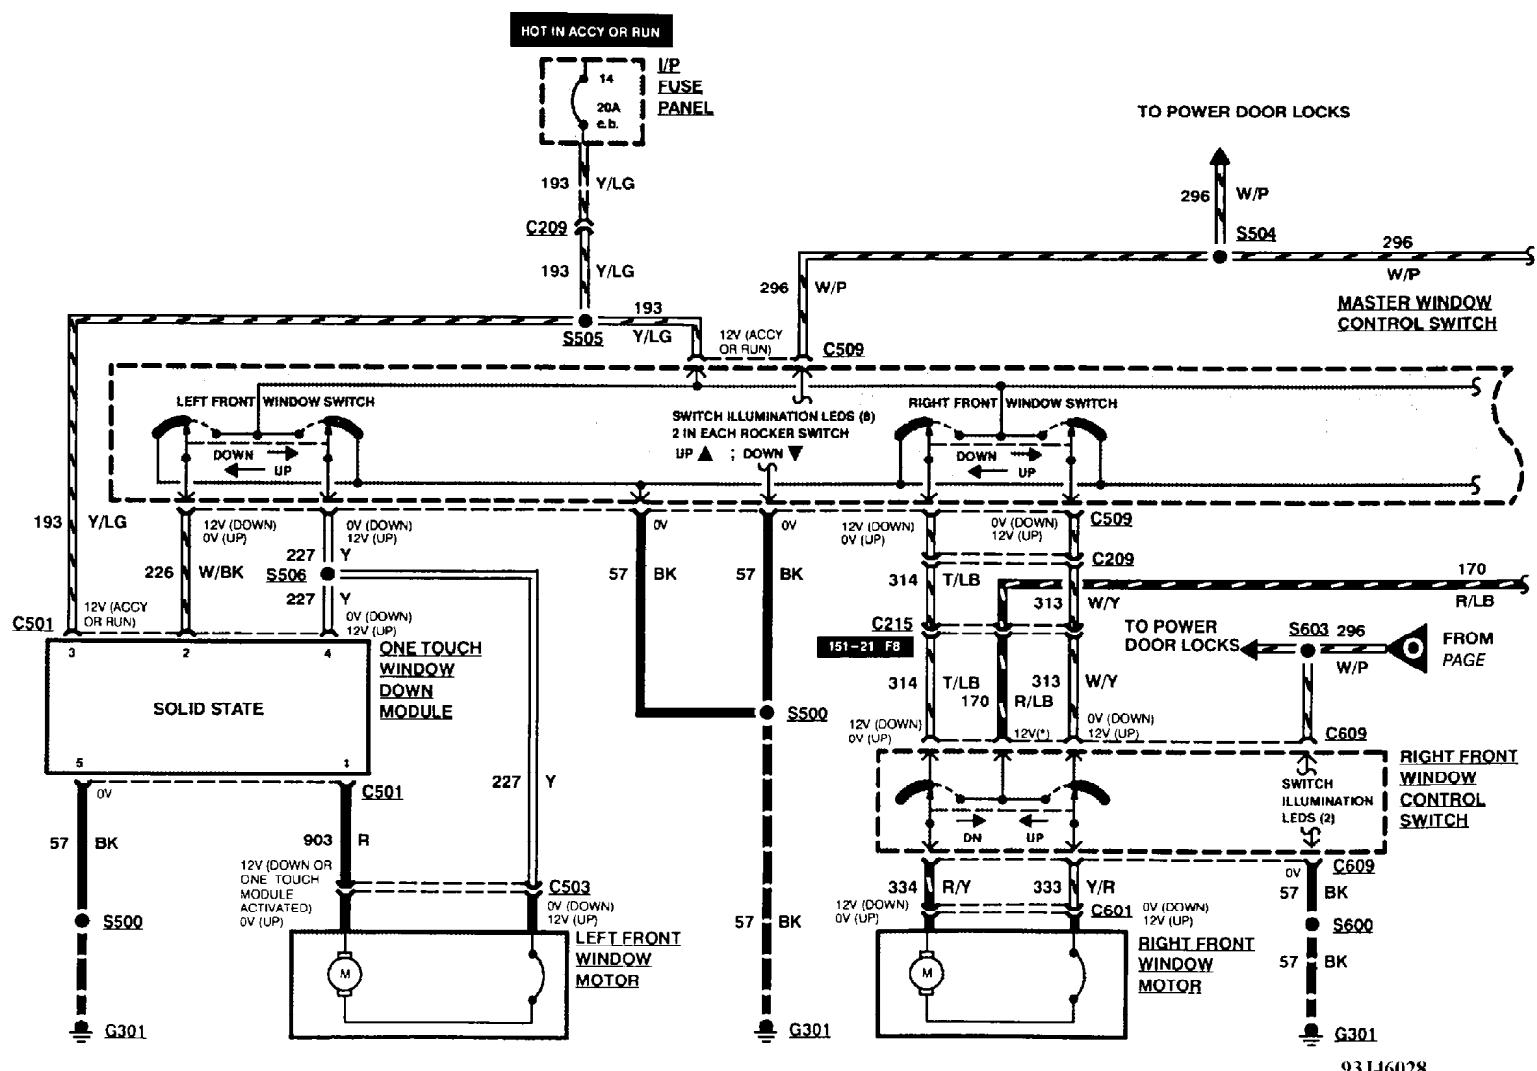

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN


Fig. 88: Power Windows (2 Of 2)
1993 Ford Taurus LX

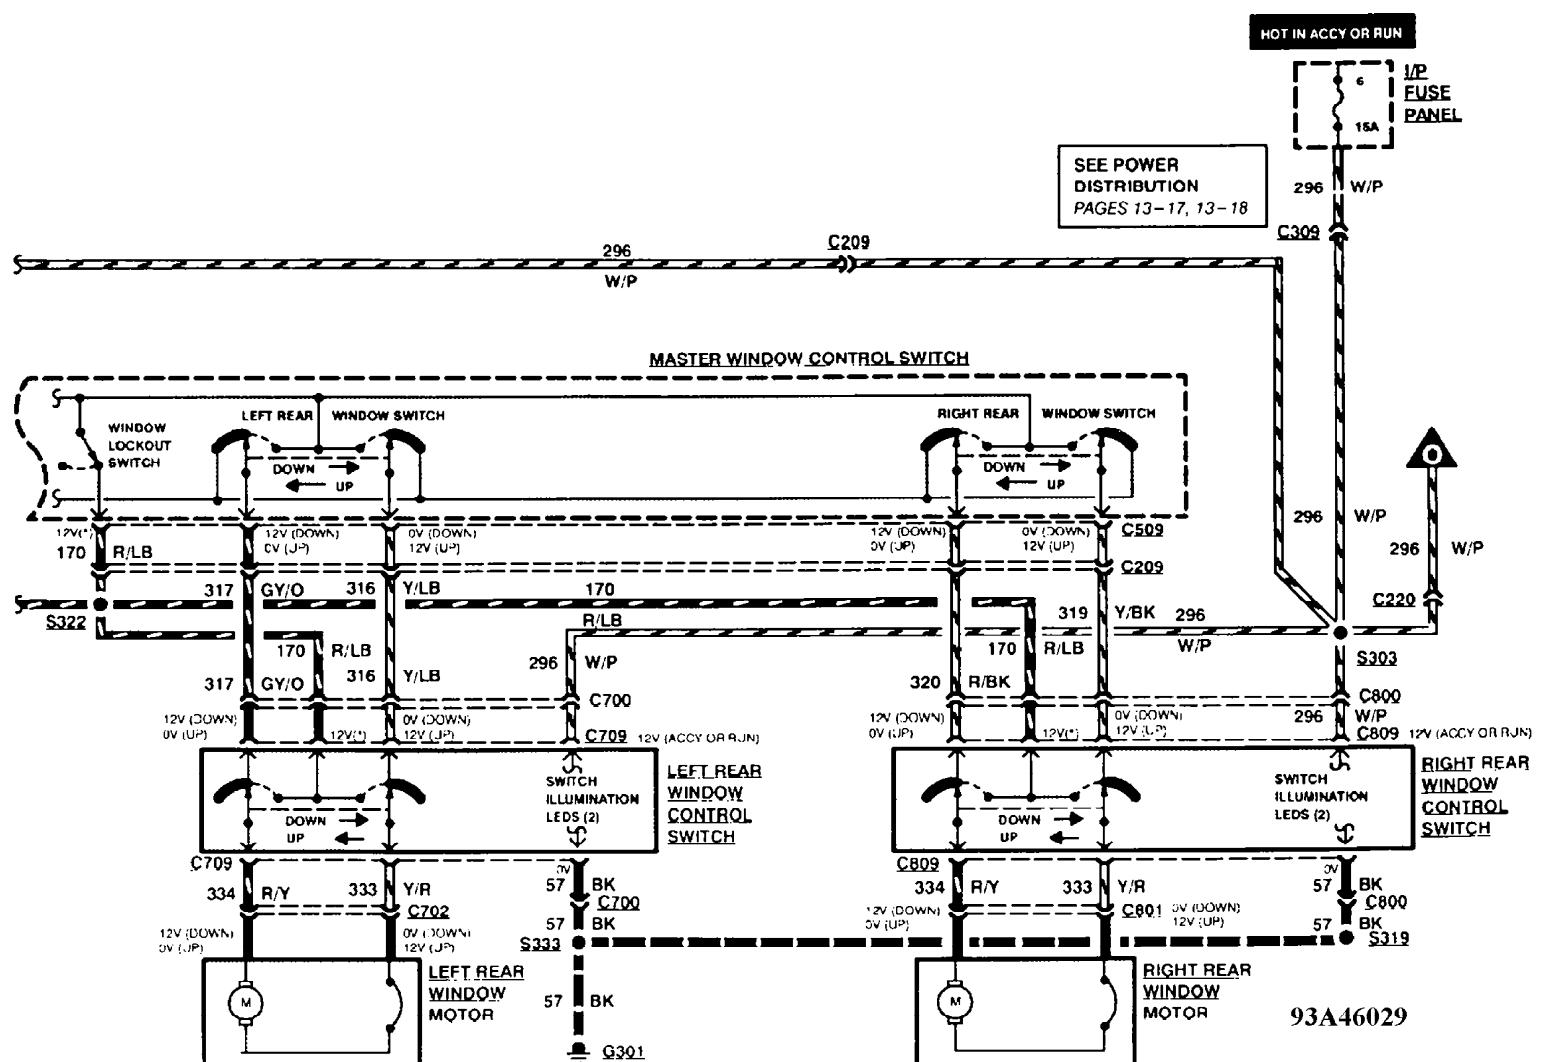

WIRING DIAGRAMS
Power & Ground Distribution

PAVLIN

Fig. 89: Rear Window Defogger Wiring Diagram
1993 Ford Taurus LX

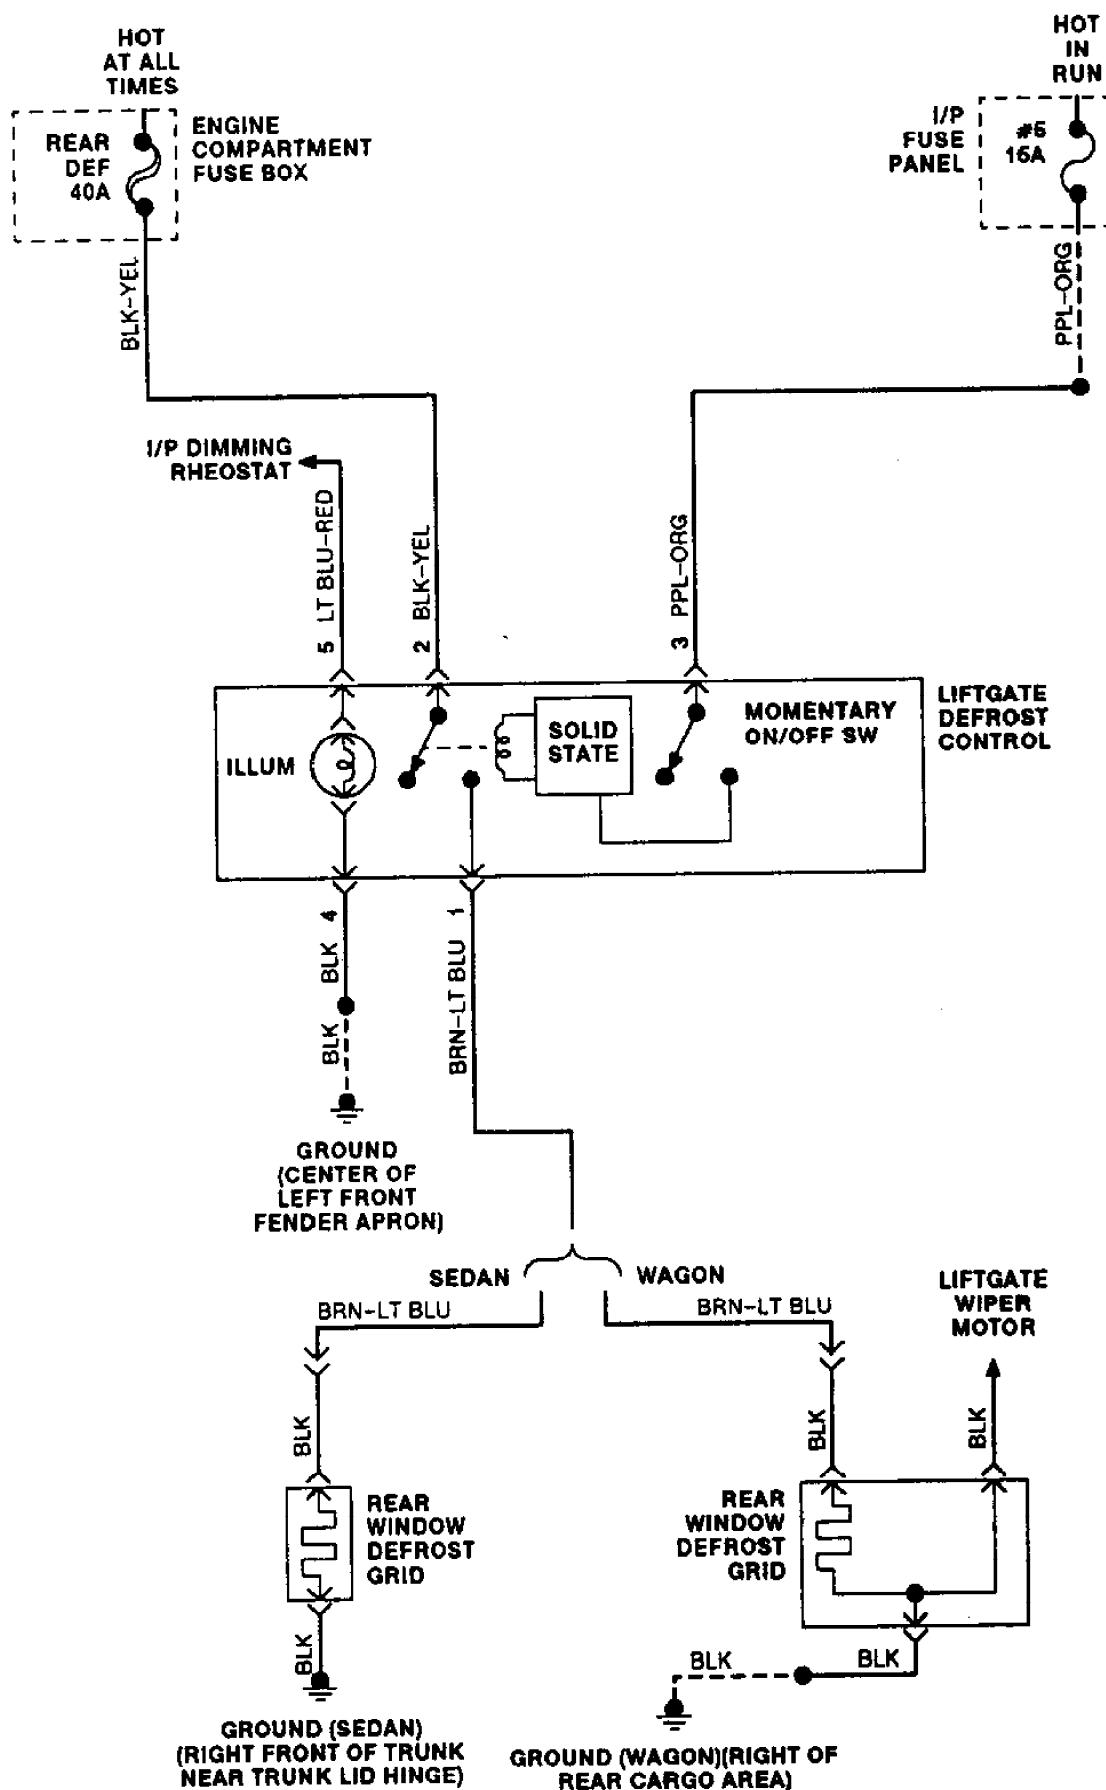


93D42435

WIRING DIAGRAMS
Power & Ground Distribution

PAVLIN

Fig. 90: Rear Wiper/Washer System Wiring Diagram
1993 Ford Taurus LX

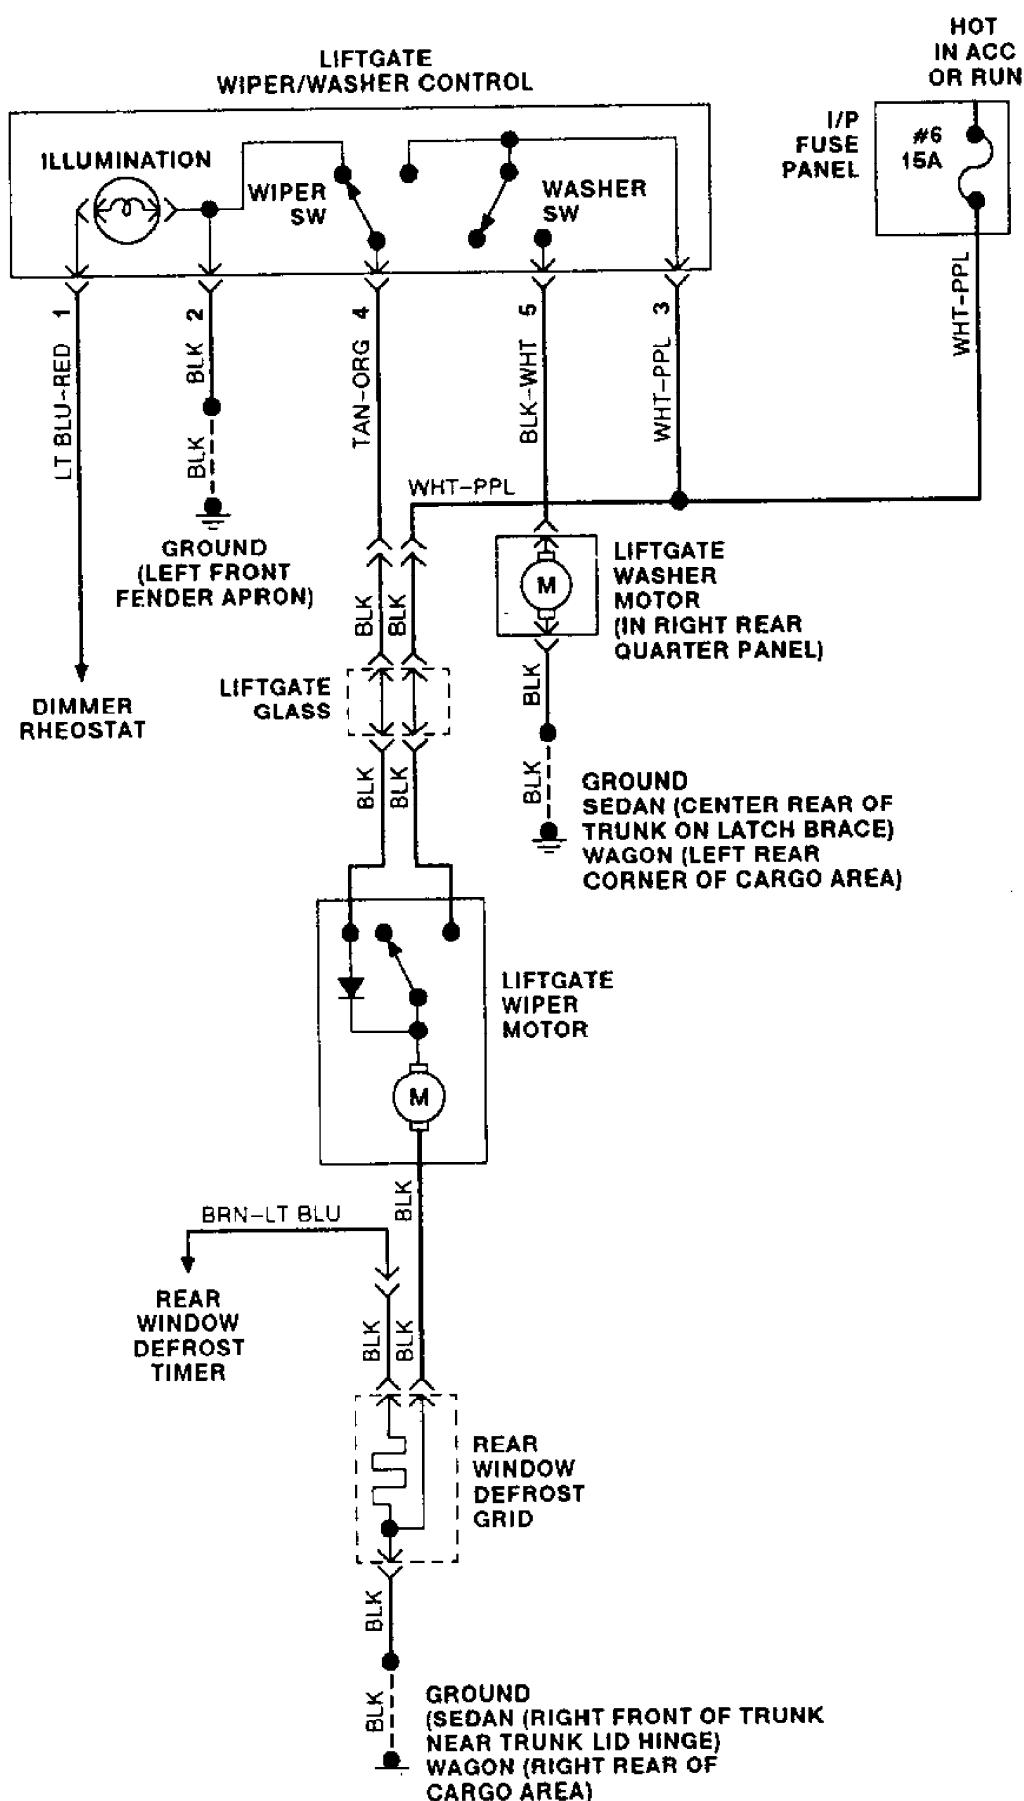


93F40001

WIRING DIAGRAMS
Power & Ground Distribution

PAVLIN


Fig. 91: Steering Column Switches & Horn Circuit Wiring Diagram
1993 Ford Taurus LX

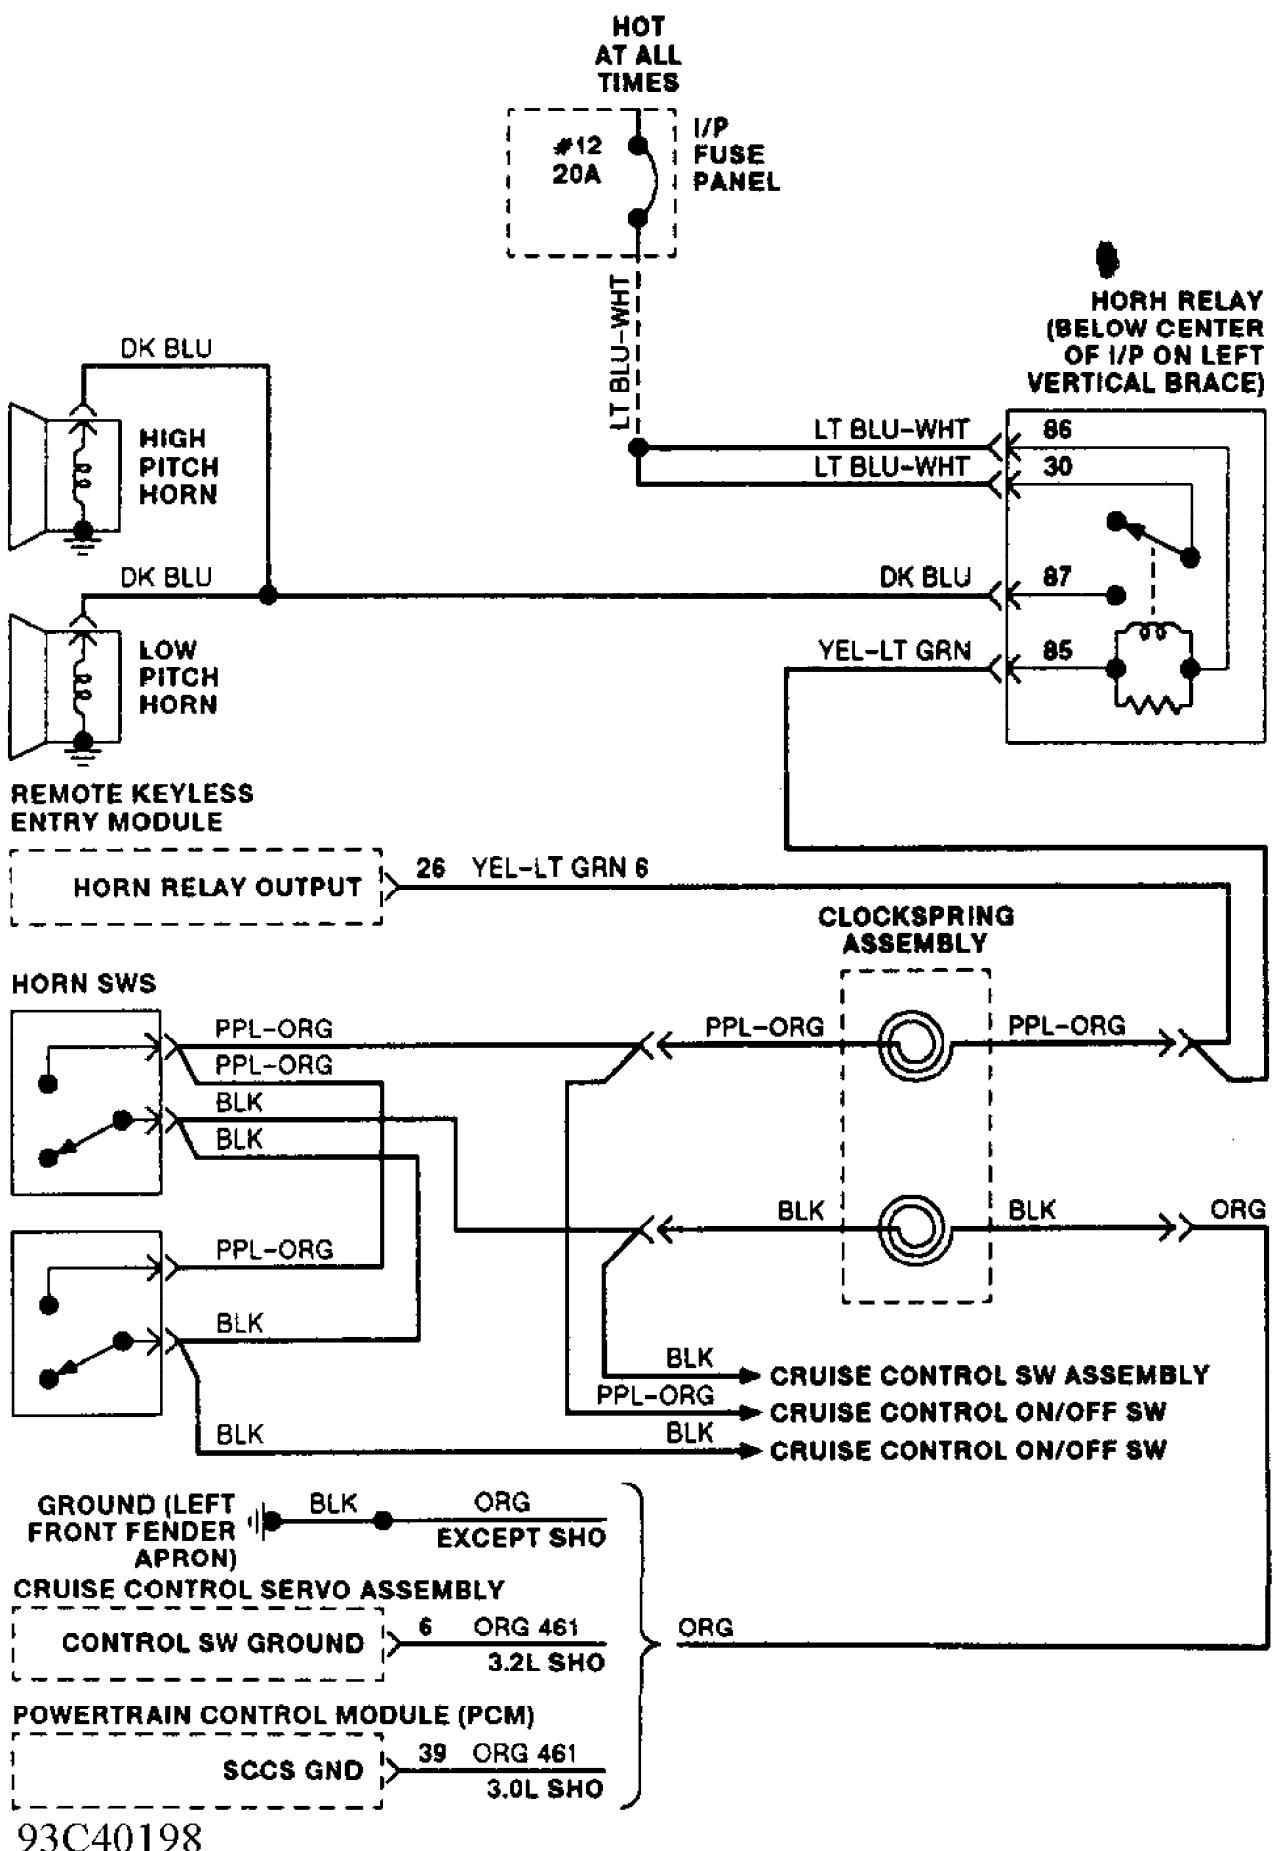

WIRING DIAGRAMS
Power & Ground Distribution

PAVLIN


Fig. 92: Wiper System Wiring Diagram
1993 Ford Taurus LX

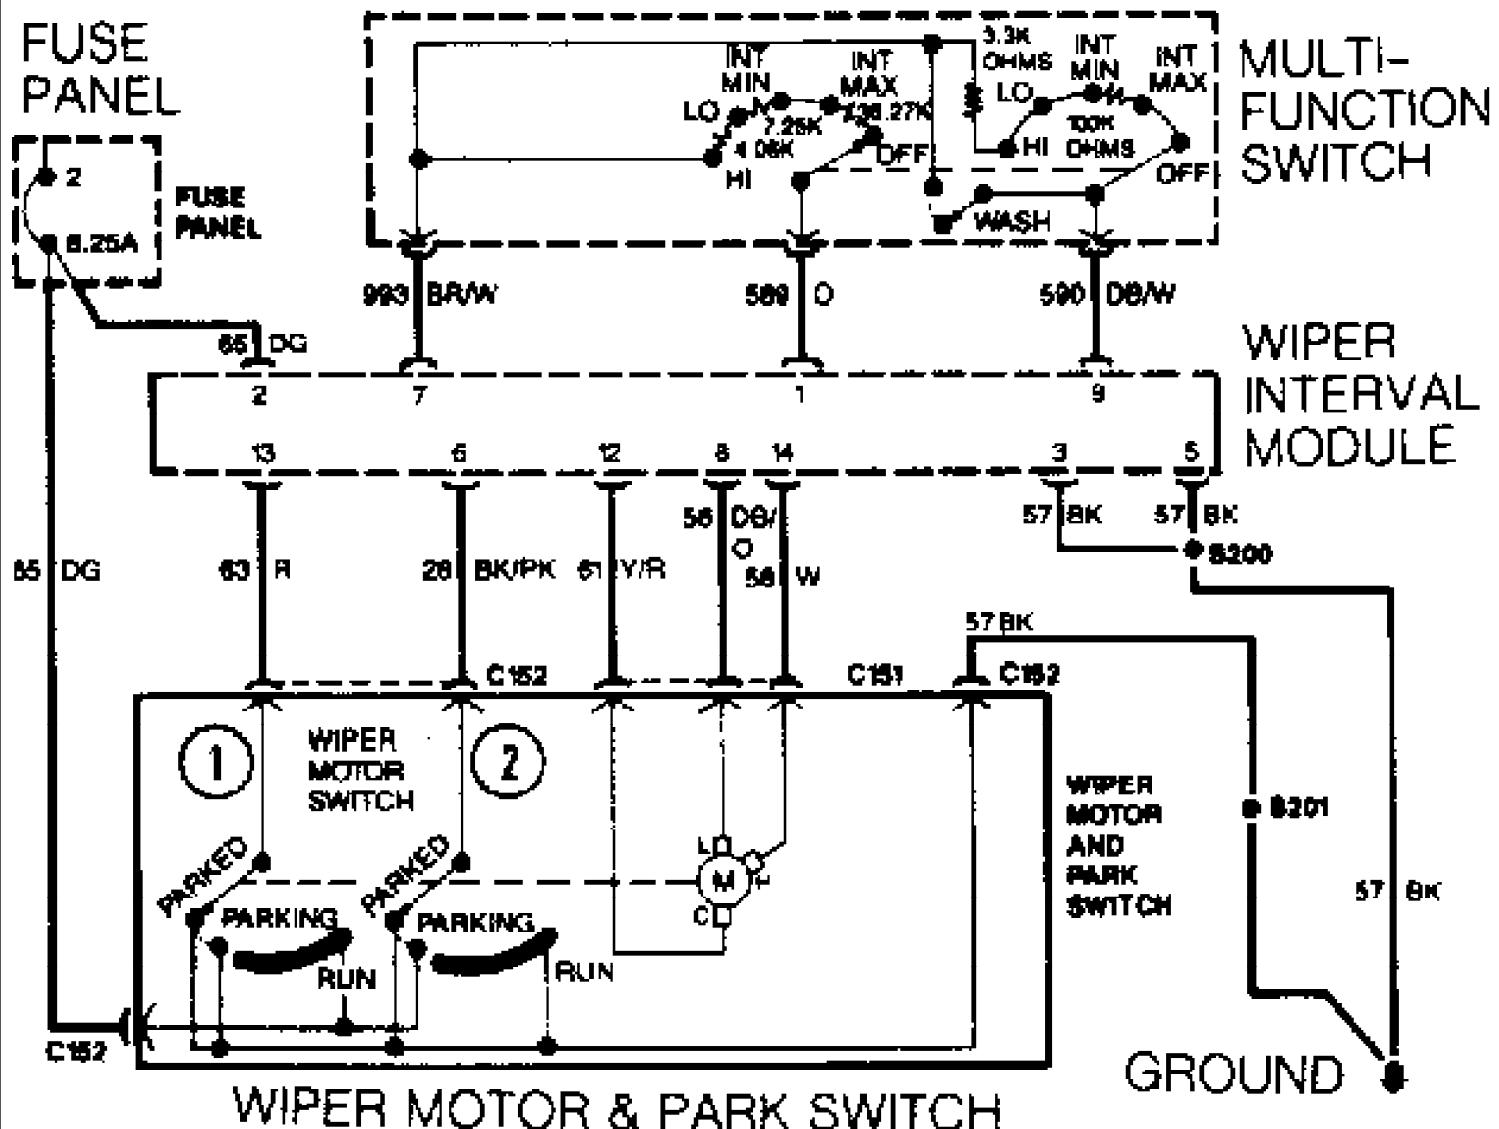

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 93: Front Wiper/Washer System Wiring Diagram
1993 Ford Taurus LX

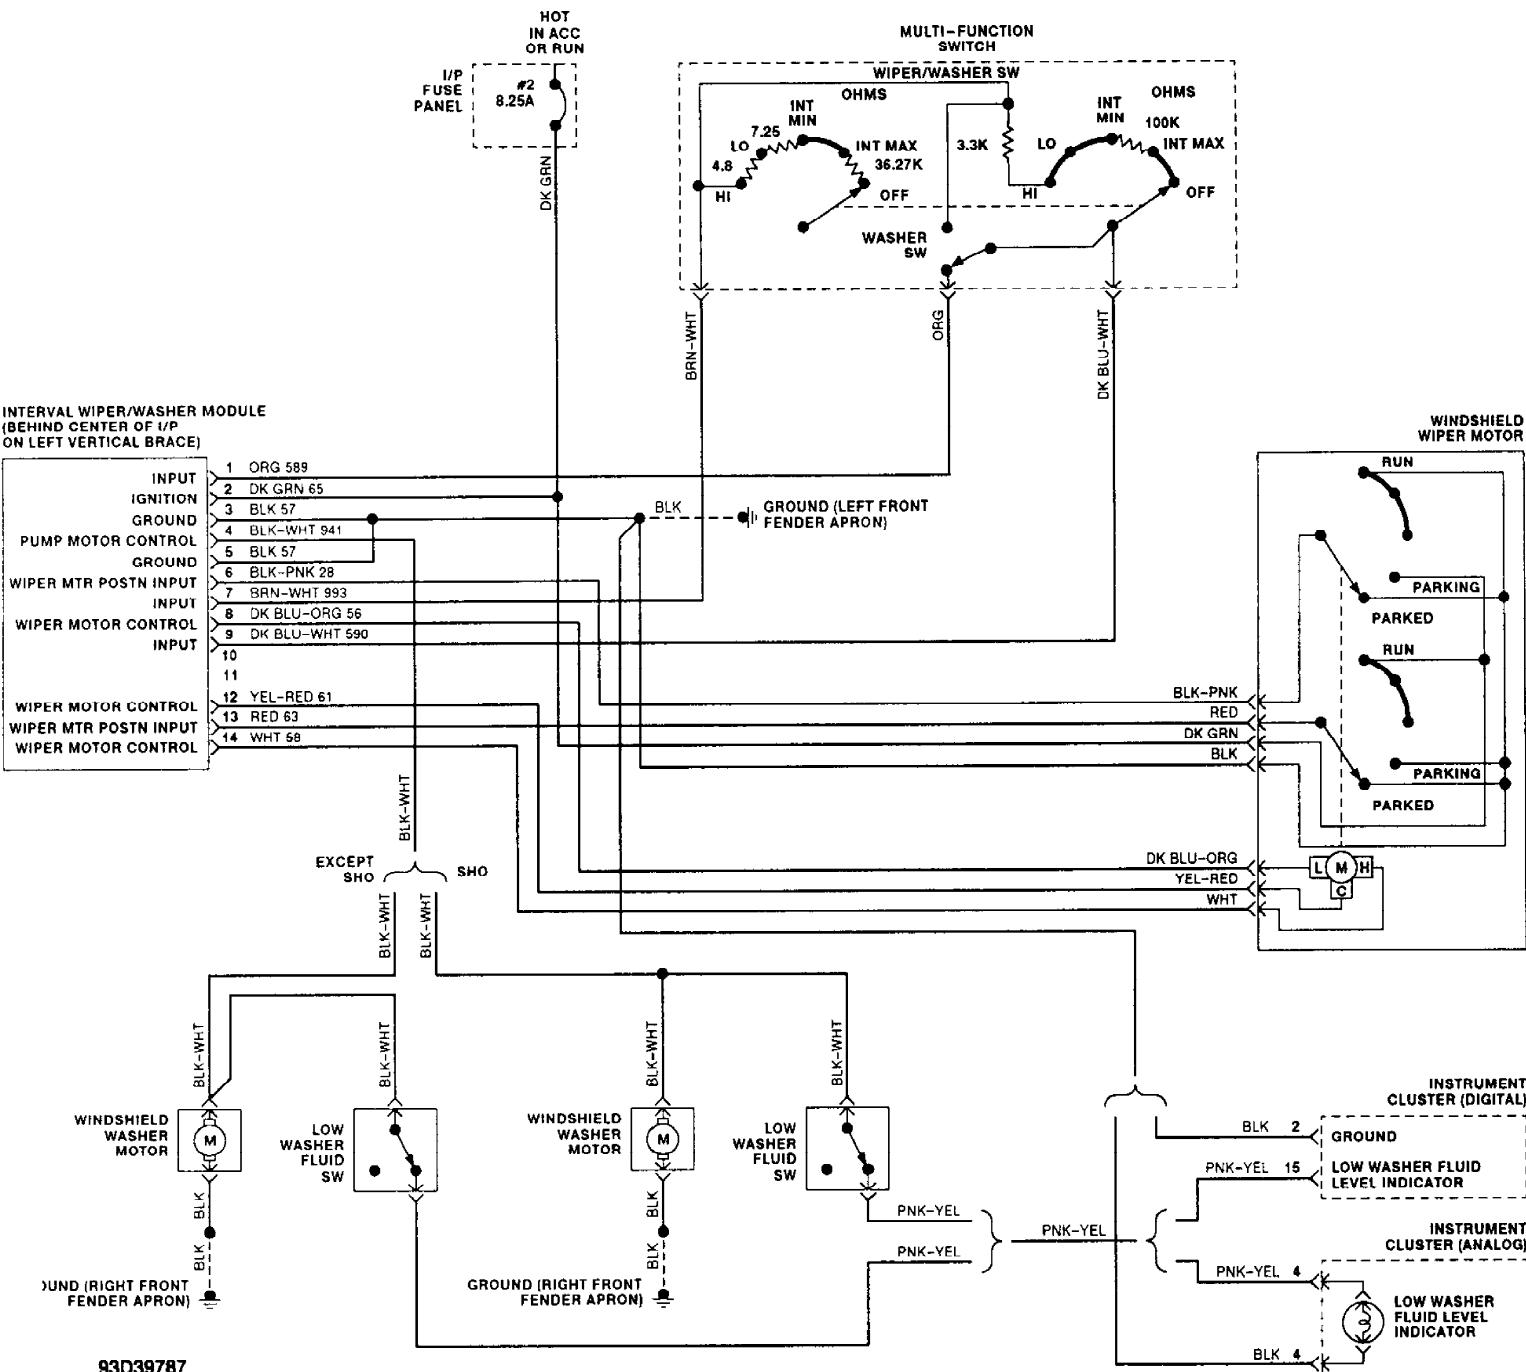


93D39787

WIRING DIAGRAMS

Power & Ground Distribution

PAVLIN

Fig. 94: Auto A/C-Heater Sys Wiring Diagram (1 Of 4)
1993 Ford Taurus LX

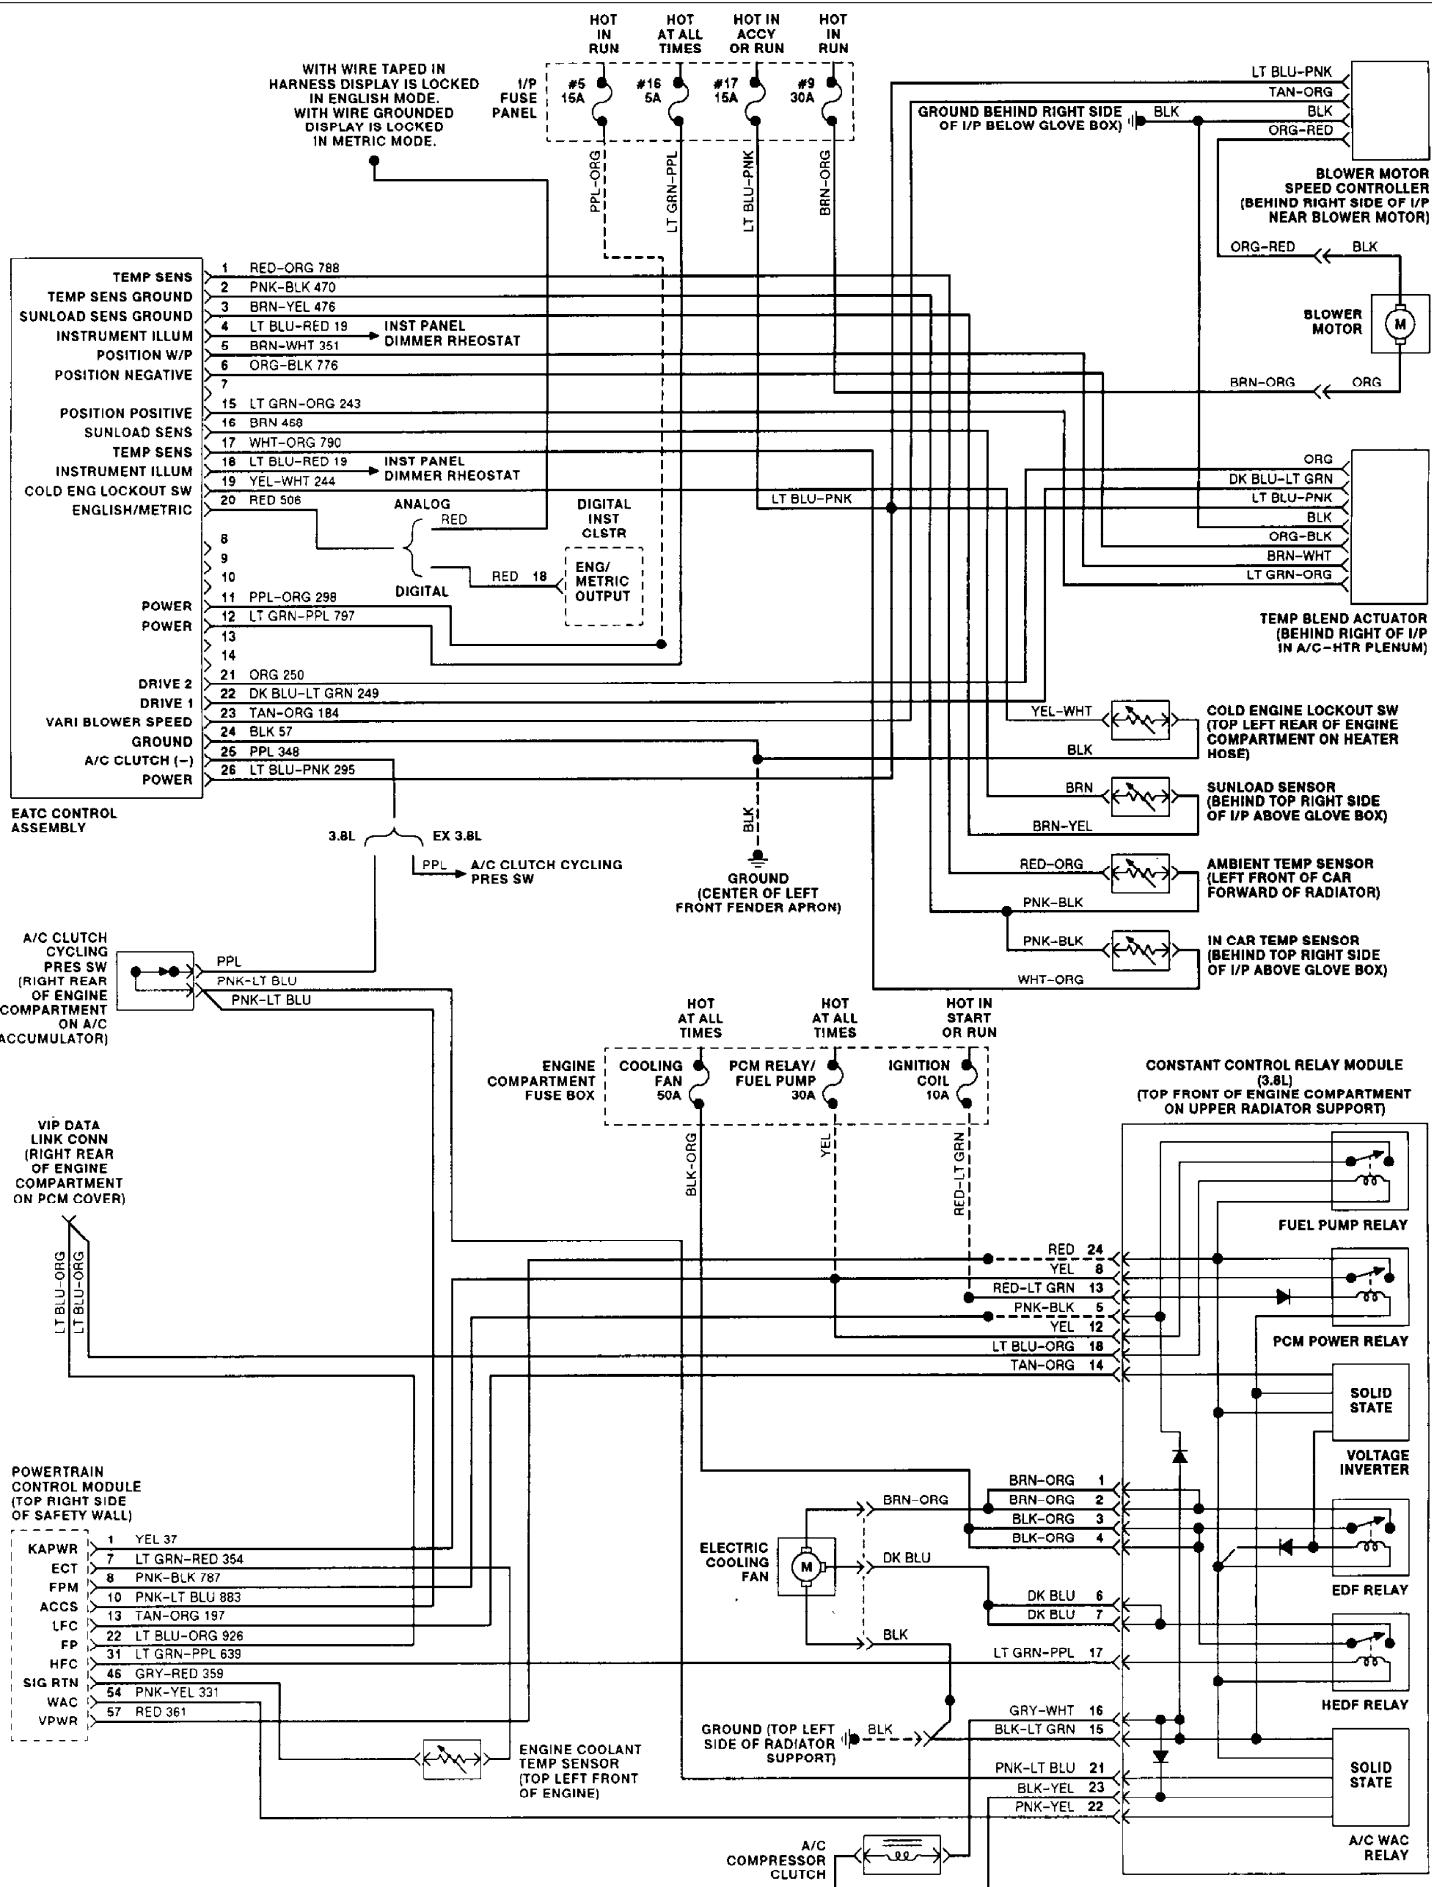


G93G29054

WIRING DIAGRAMS

P ower & Ground Distribution

PAVLIN


Fig. 95: Auto A/C-Heater Sys Wiring Diagram (2 Of 4)
1993 Ford Taurus LX

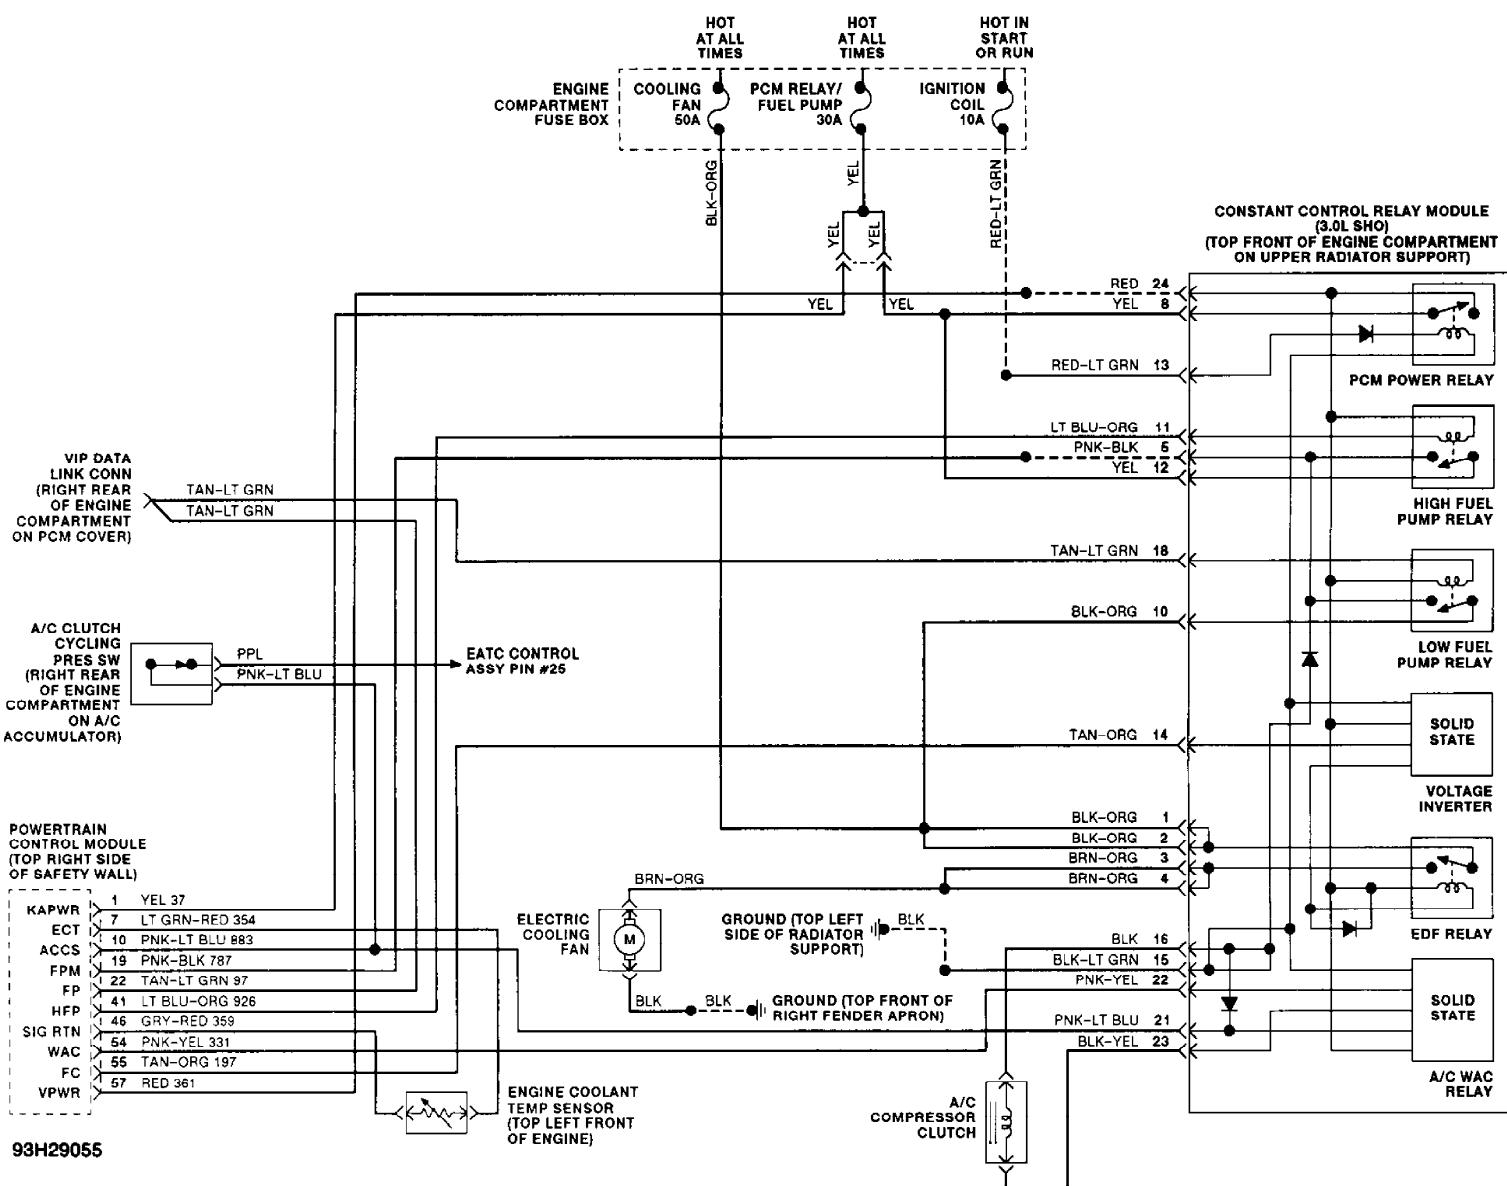

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 96: Auto A/C-Heater Sys Wiring Diagram (3 Of 4)
1993 Ford Taurus LX

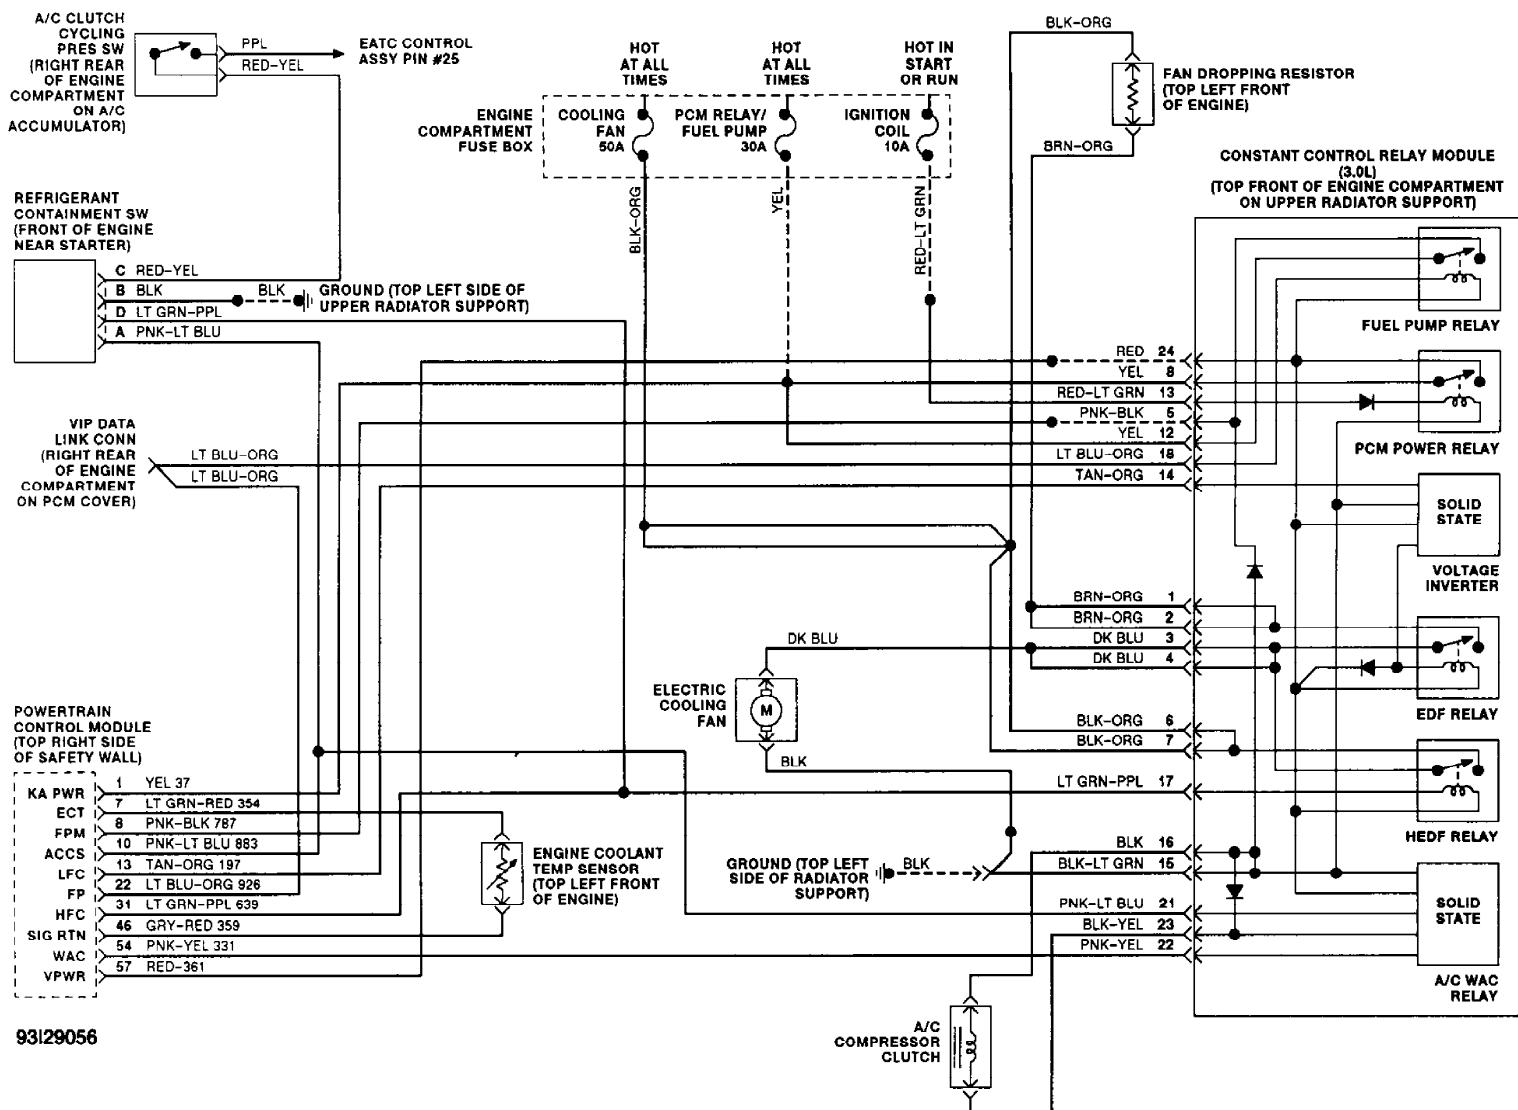


WIRING DIAGRAMS

P ower & Ground Distribution

PAVLIN


Fig. 97: Auto A/C-Heater Sys Wiring Diagram (4 Of 4)
1993 Ford Taurus LX

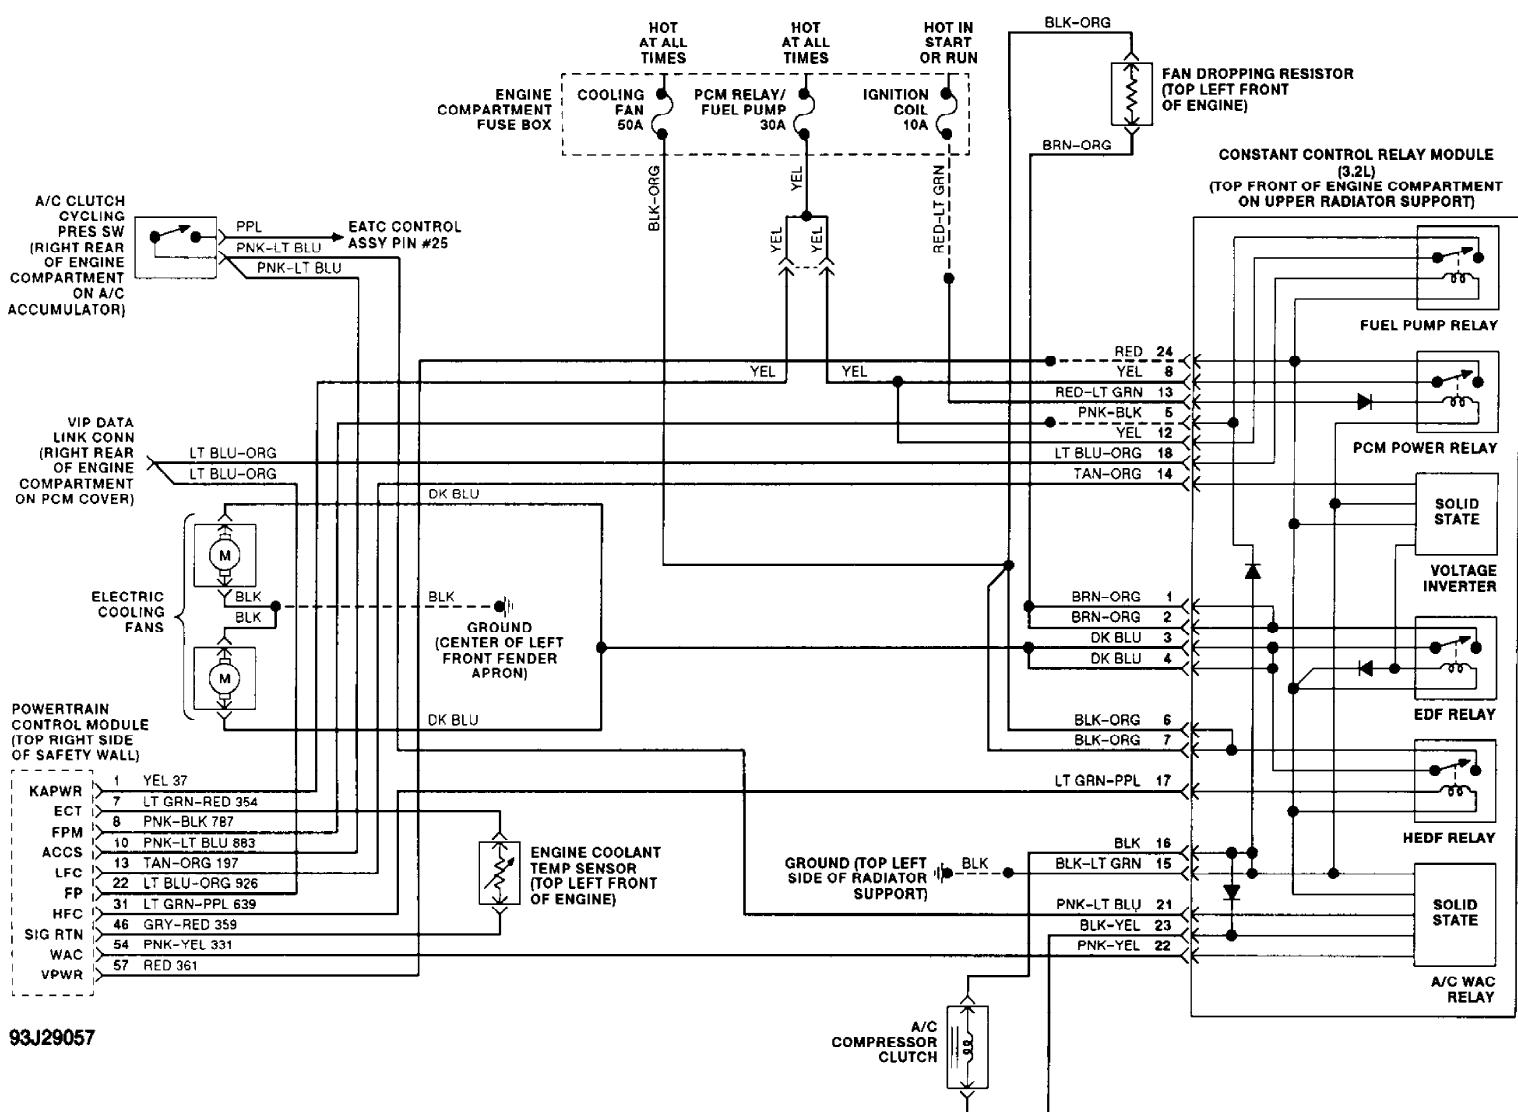

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 98: Heater System Wiring Diagram
1993 Ford Taurus LX

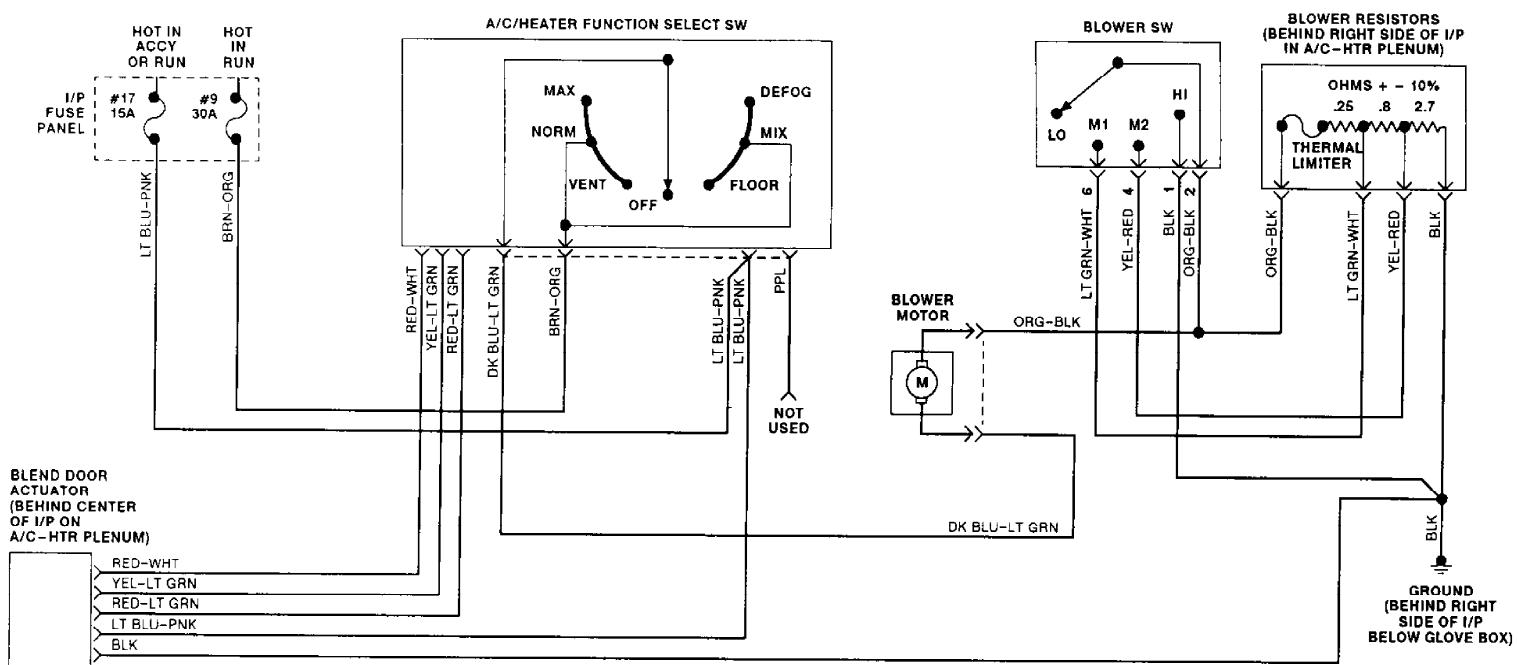


WIRING DIAGRAMS

Power & Ground Distribution

PAVLIN

Fig. 99: Man. A/C-Heater Sys. Wiring Diagram (1 Of 4)
1993 Ford Taurus LX

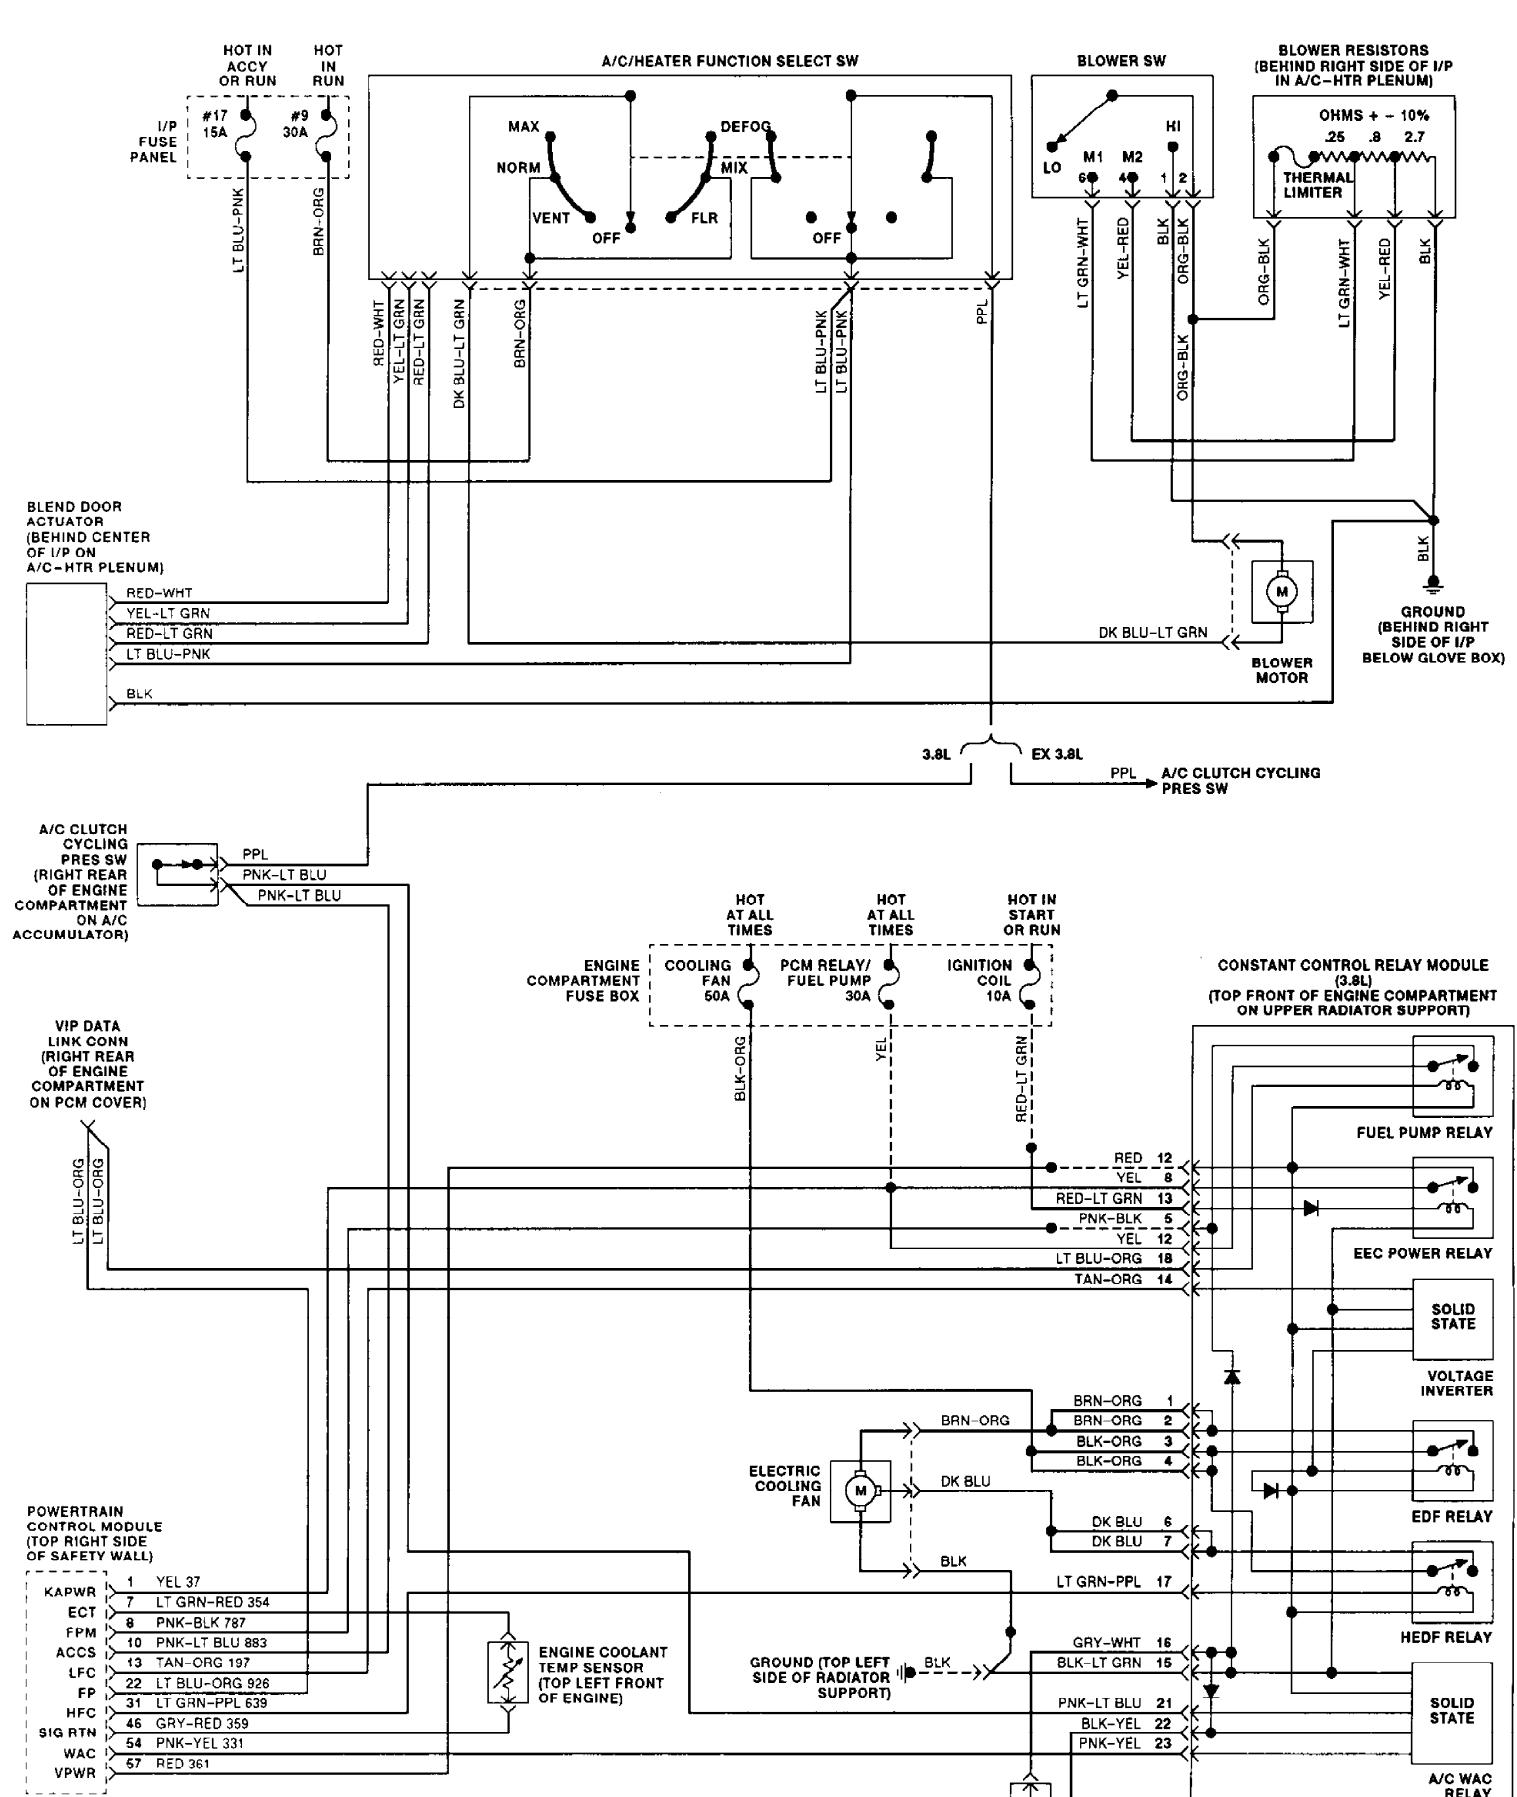


93G29047

WIRING DIAGRAMS

PAVLIN


Fig. 100: Man. A/C-Heater Sys. Wiring Diagram (2 Of 4)
1993 Ford Taurus LX

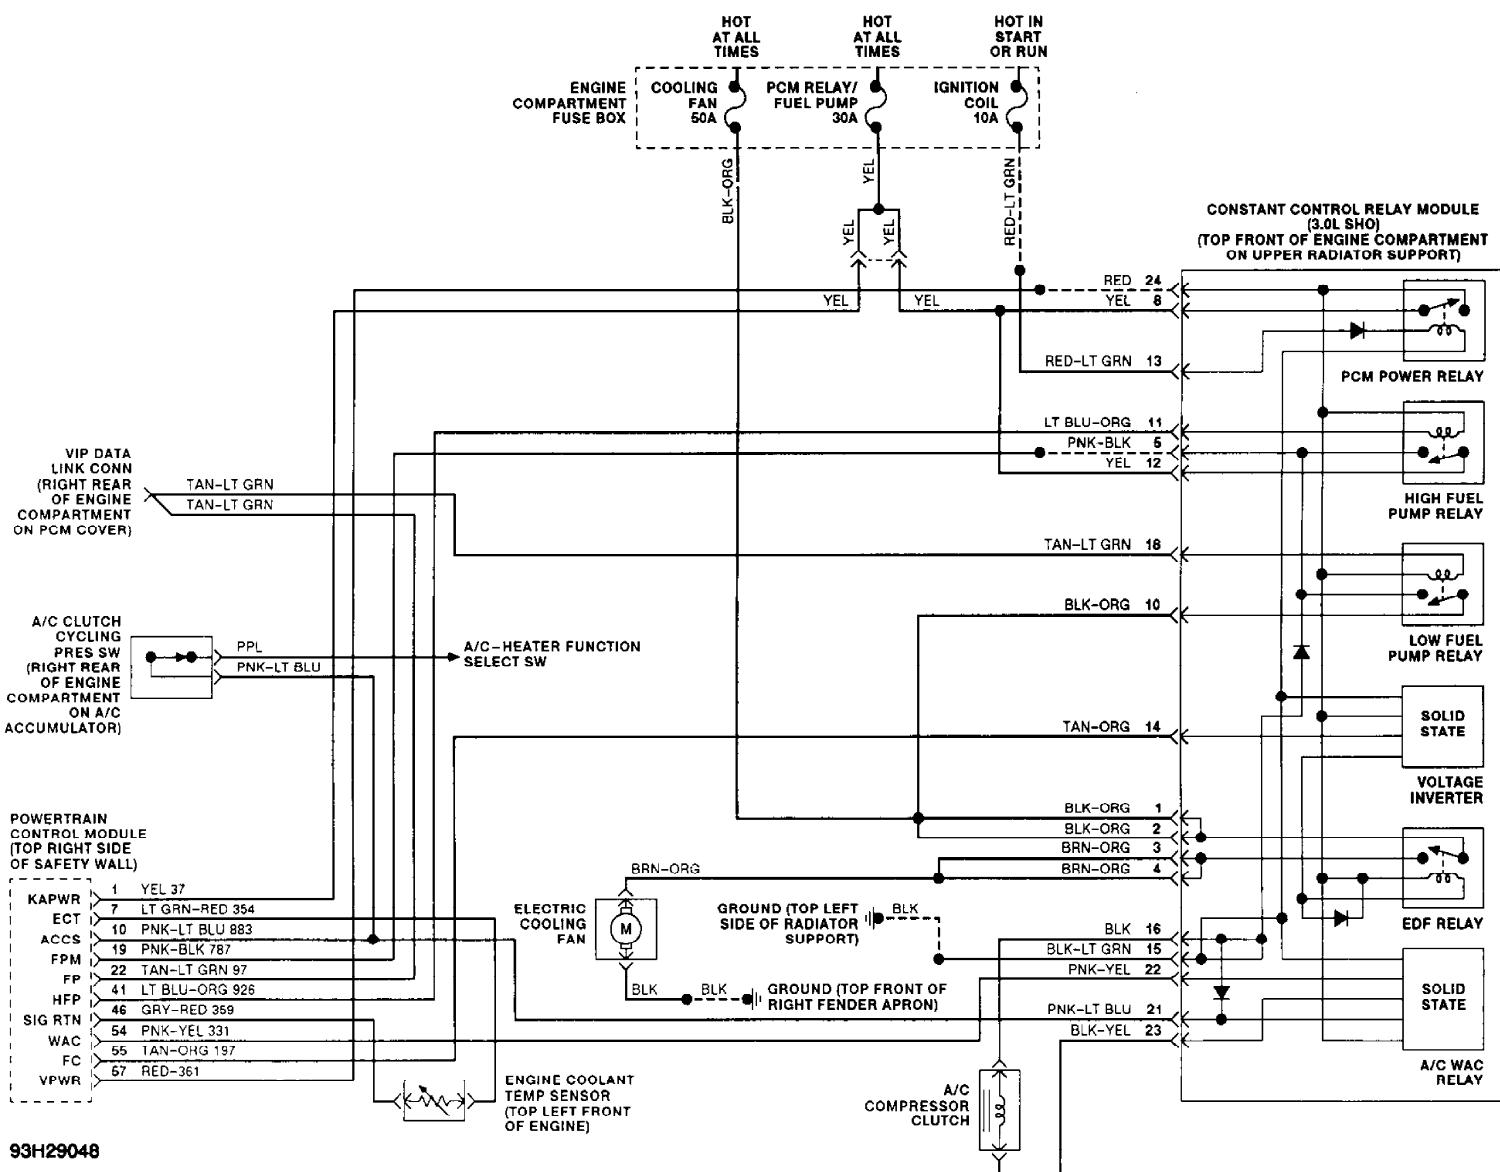

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 101: Man. A/C-Heater Sys. Wiring Diagram (3 Of 4)
1993 Ford Taurus LX

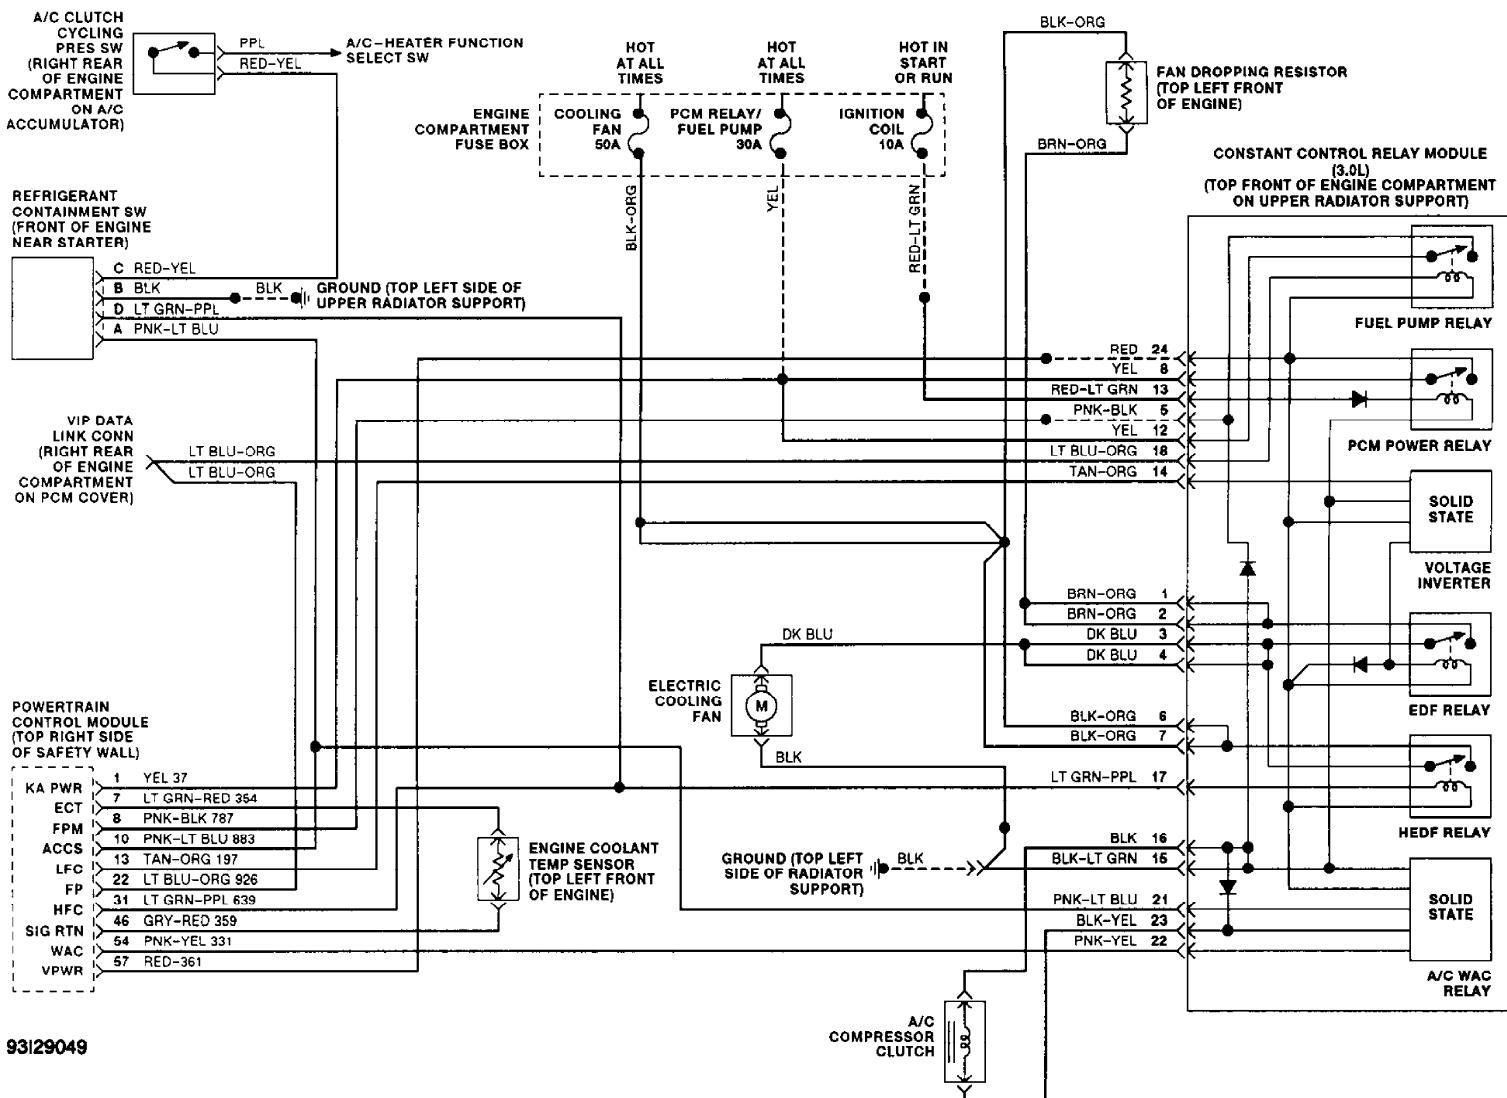


93129049

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 102: Man. A/C-Heater Sys. Wiring Diagram (4 Of 4)
1993 Ford Taurus LX

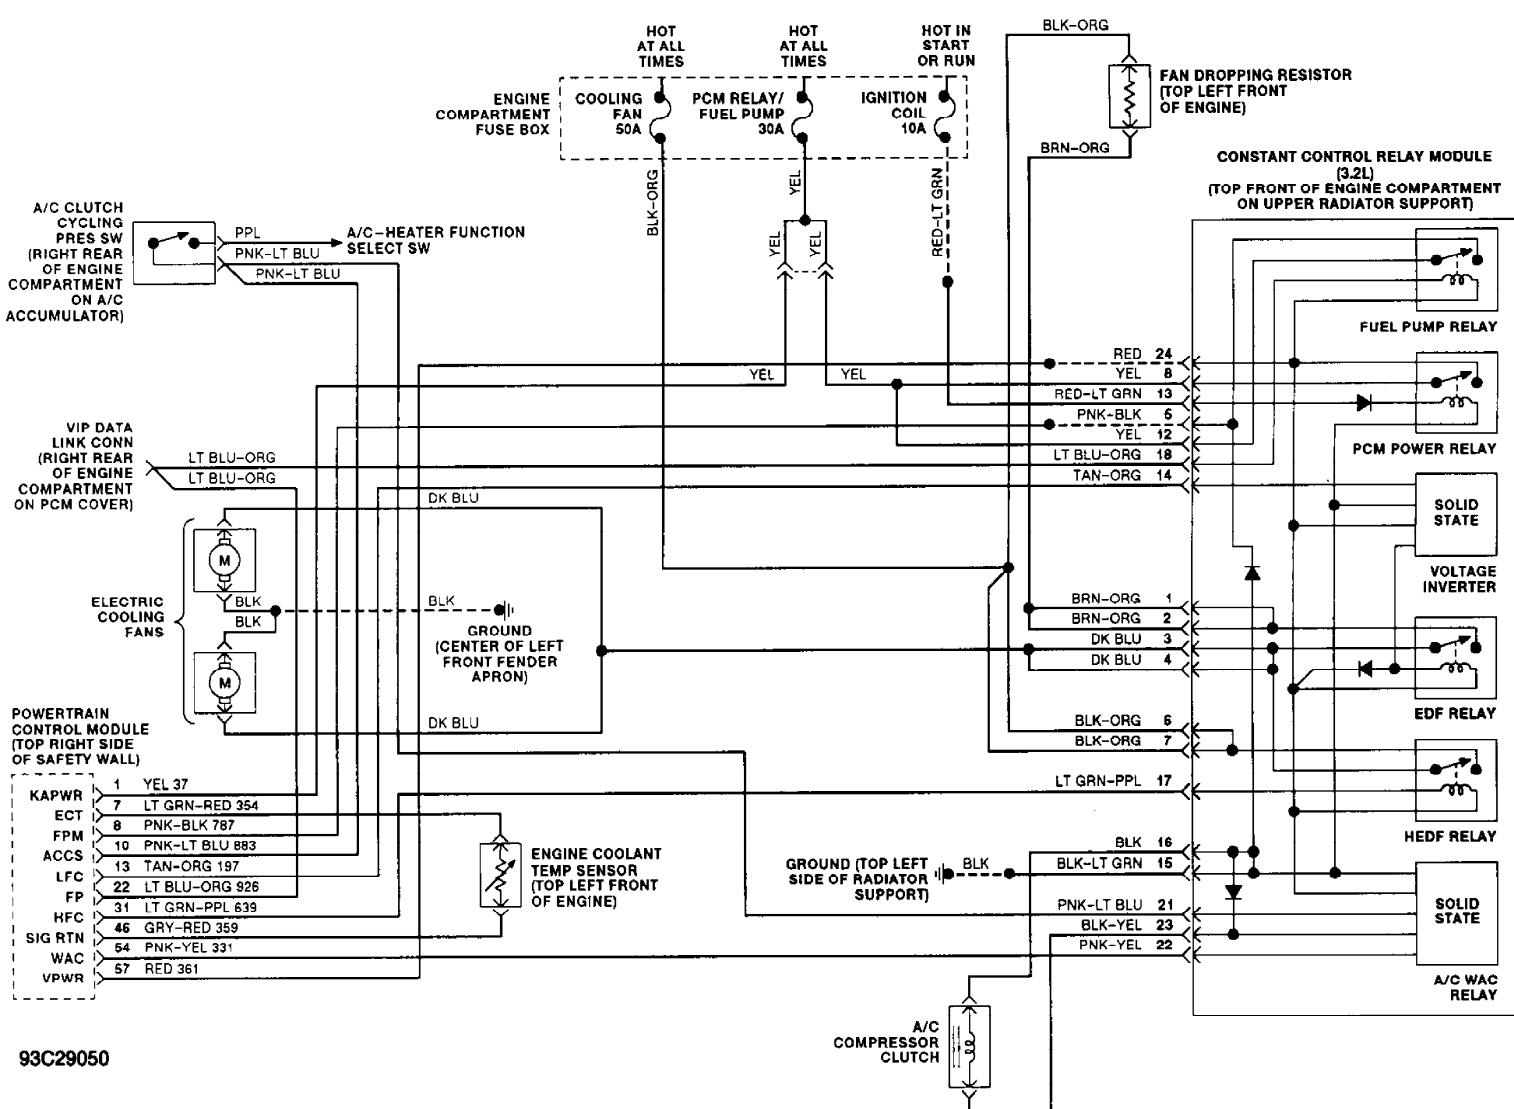


93C29050

WIRING DIAGRAMS

Power & Ground Distribution

PAVLIN

Fig. 103: Anti-Lock Brake Wiring Diagram (1 Of 2)
1993 Ford Taurus LX

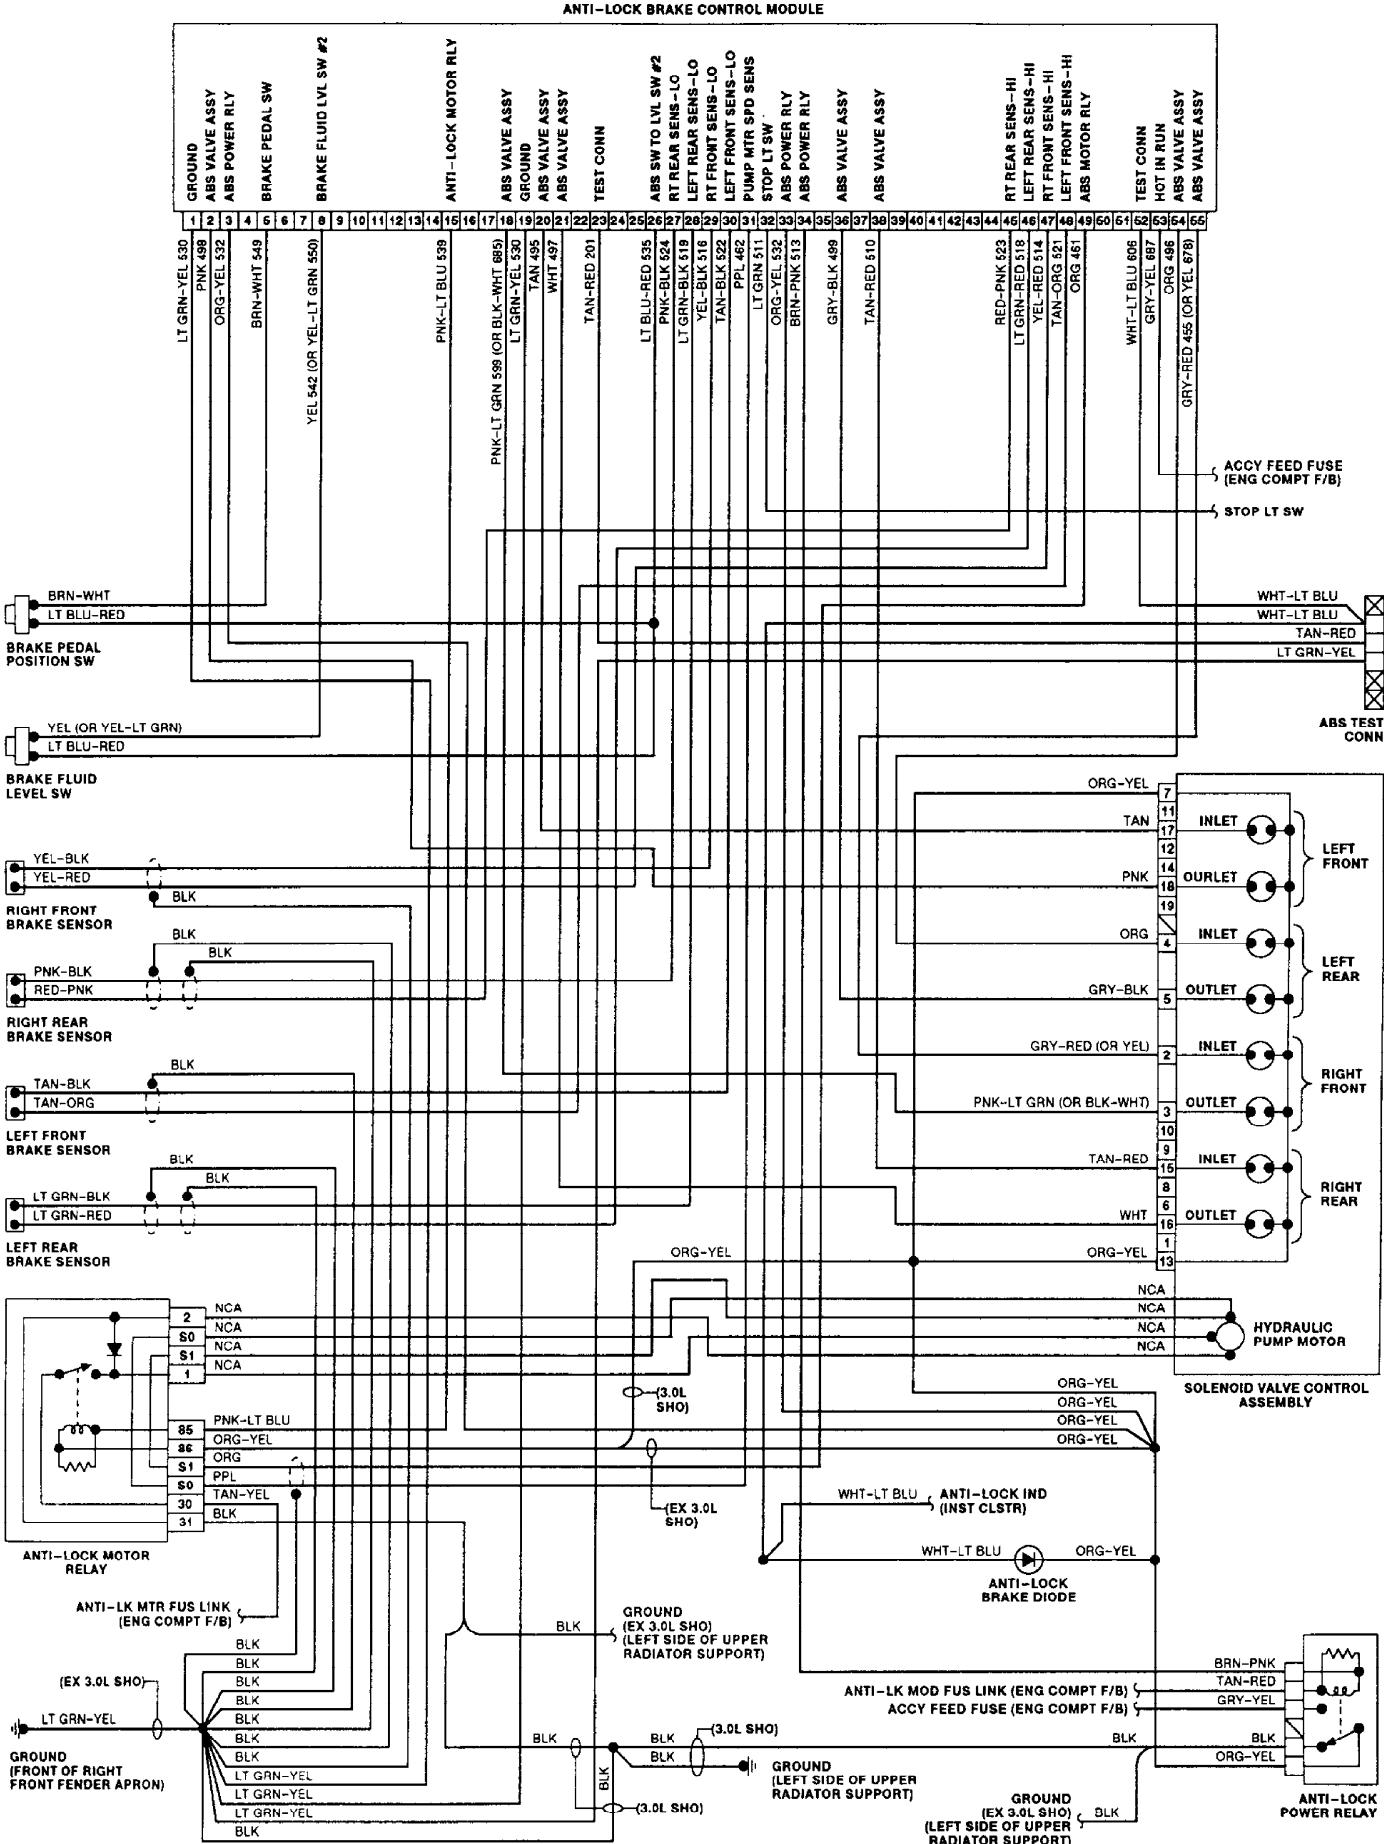


WIRING DIAGRAMS

Power & Ground Distribution

PAVLIN

Fig. 104: Anti-Lock Brake Wiring Diagram (2 Of 2)
1993 Ford Taurus LX

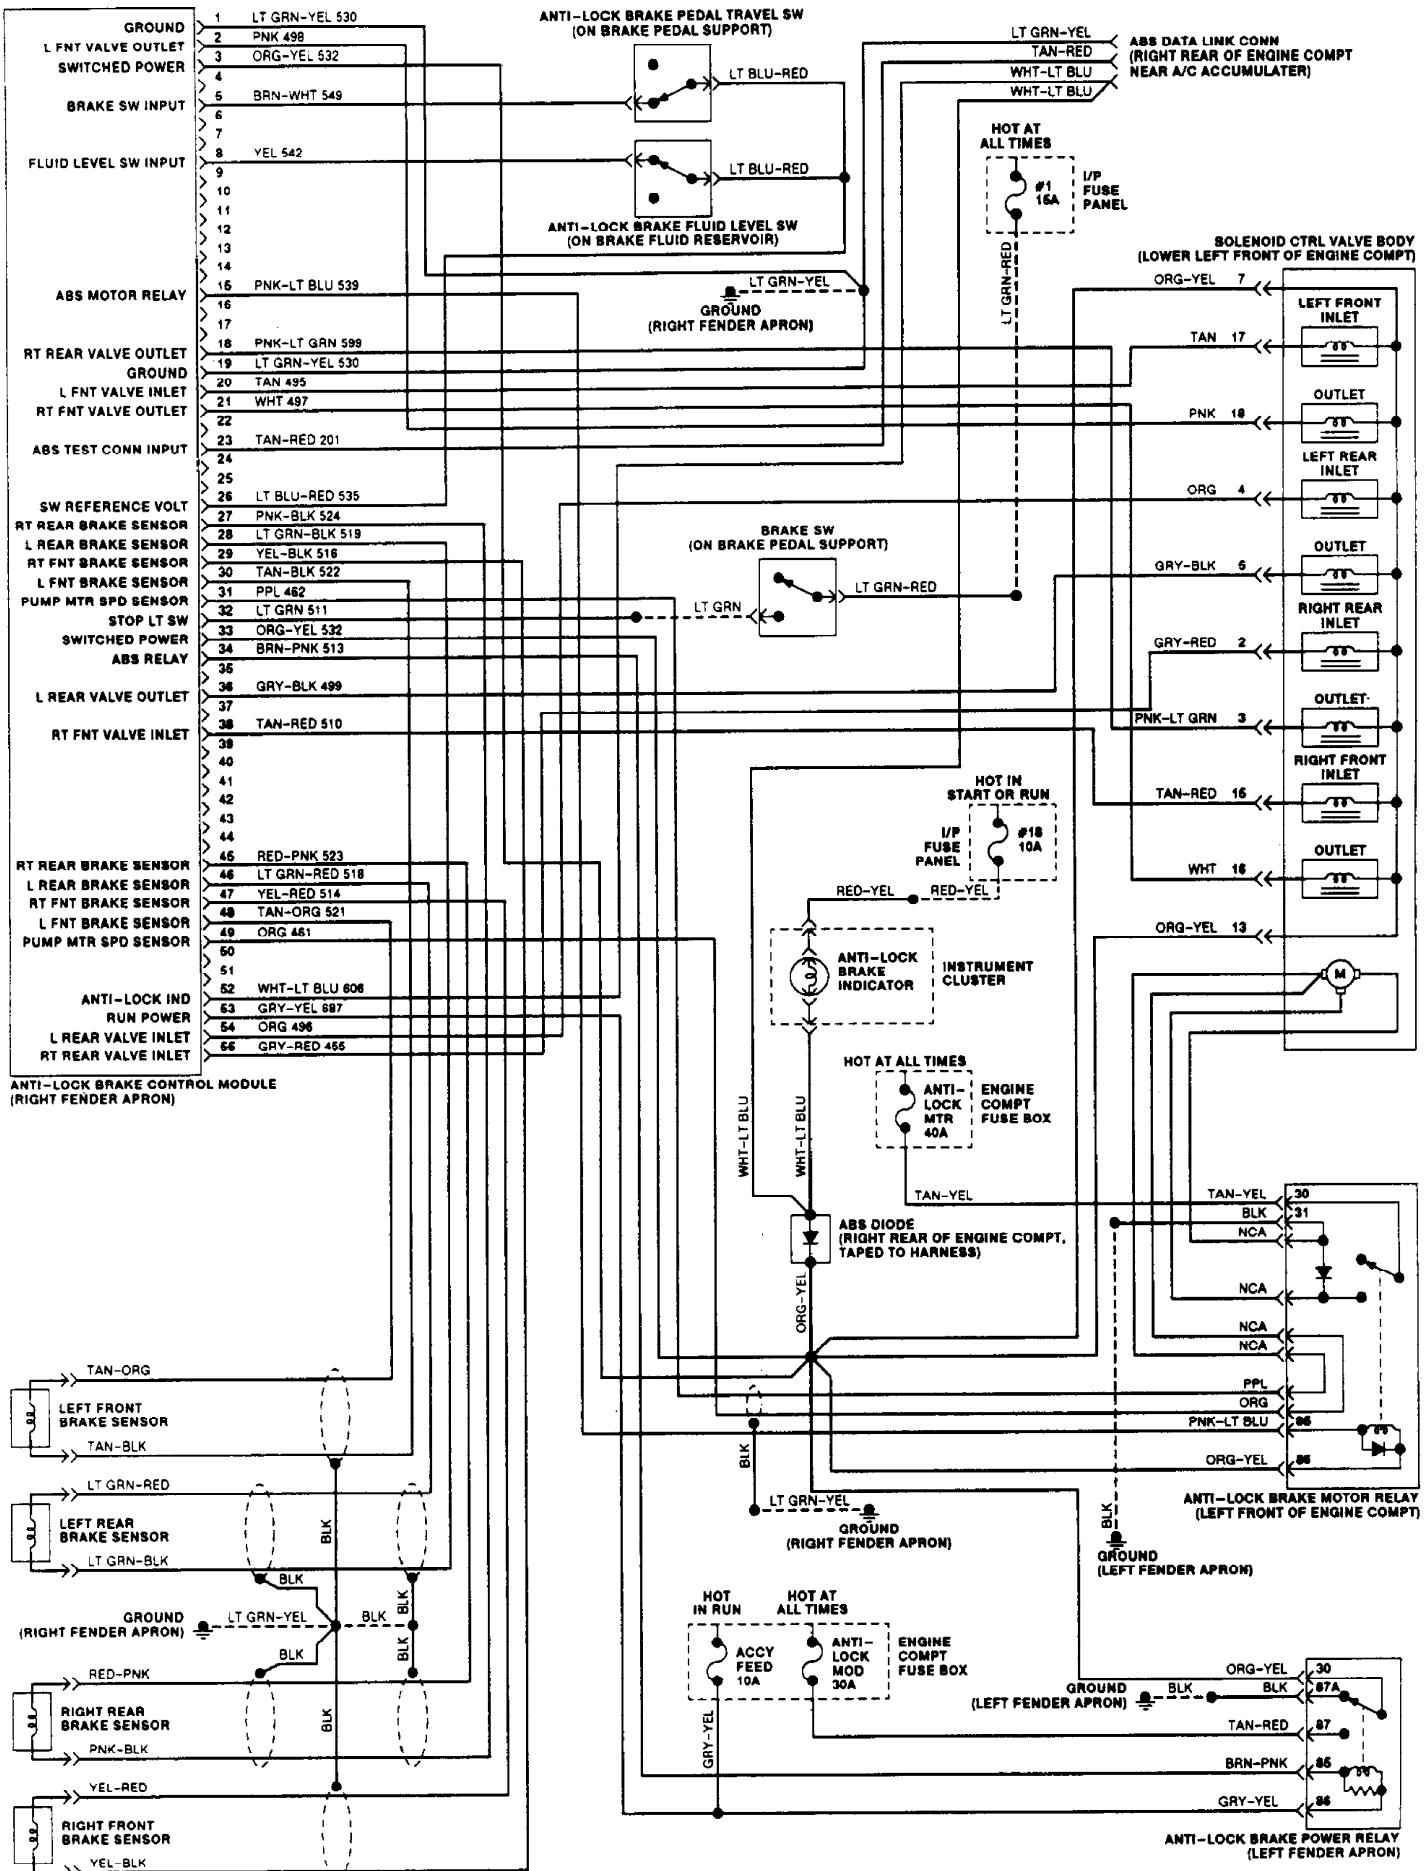


93F39482

WIRING DIAGRAMS

Power & Ground Distribution

PAVLIN

Fig. 105: Anti-Lock Brake Wiring Diagram (Taurus SHO)
1993 Ford Taurus LX

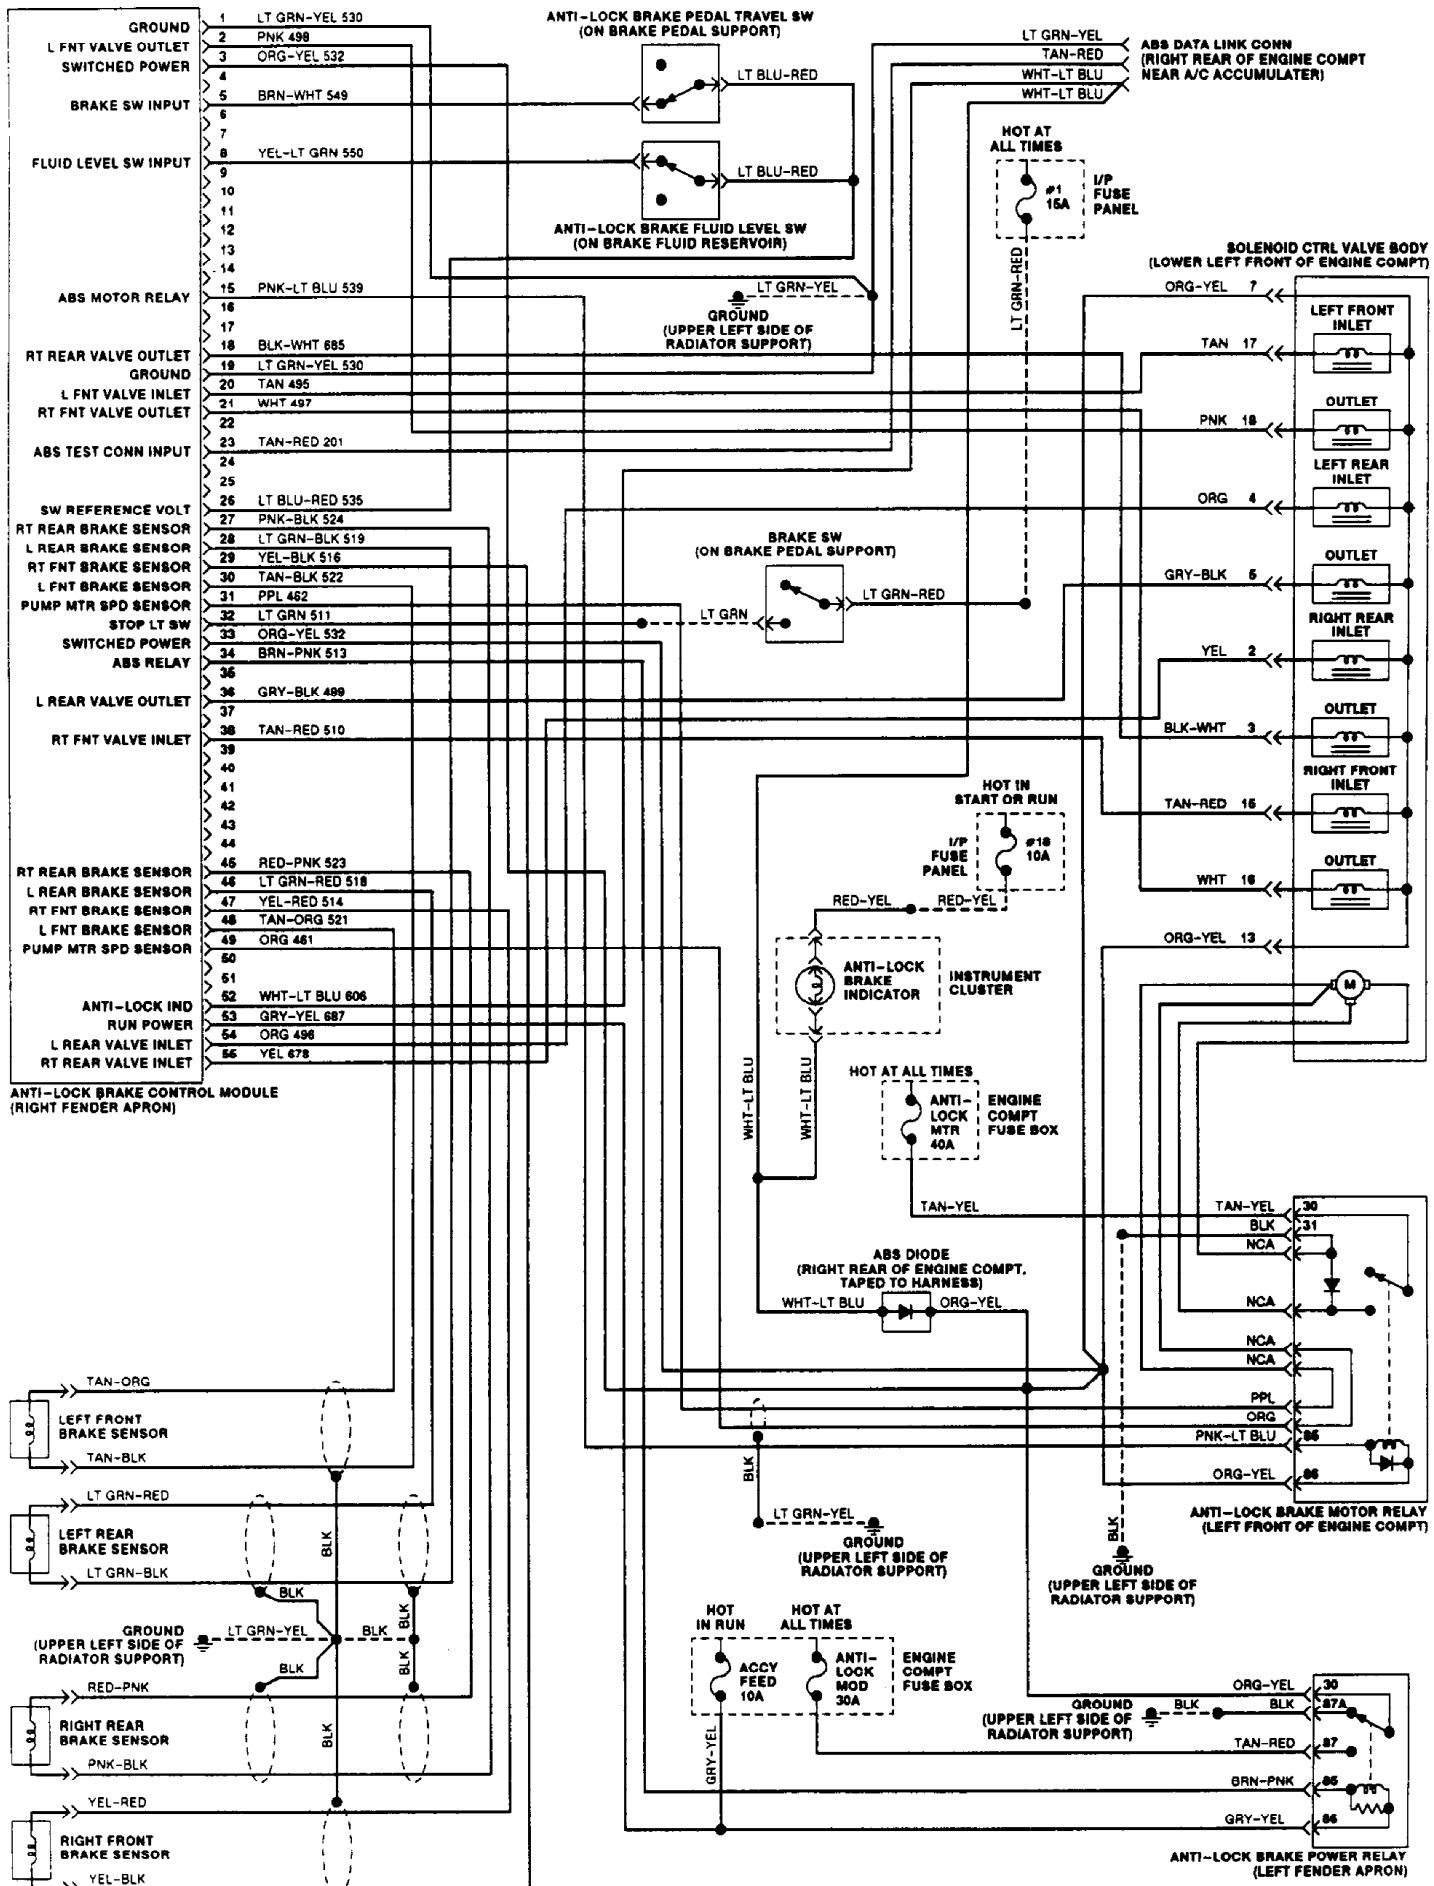


93H42207

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

**Fig. 106: Locating Regulator Wiring Plug Terminals
(Internal Fan)**
1993 Ford Taurus LX

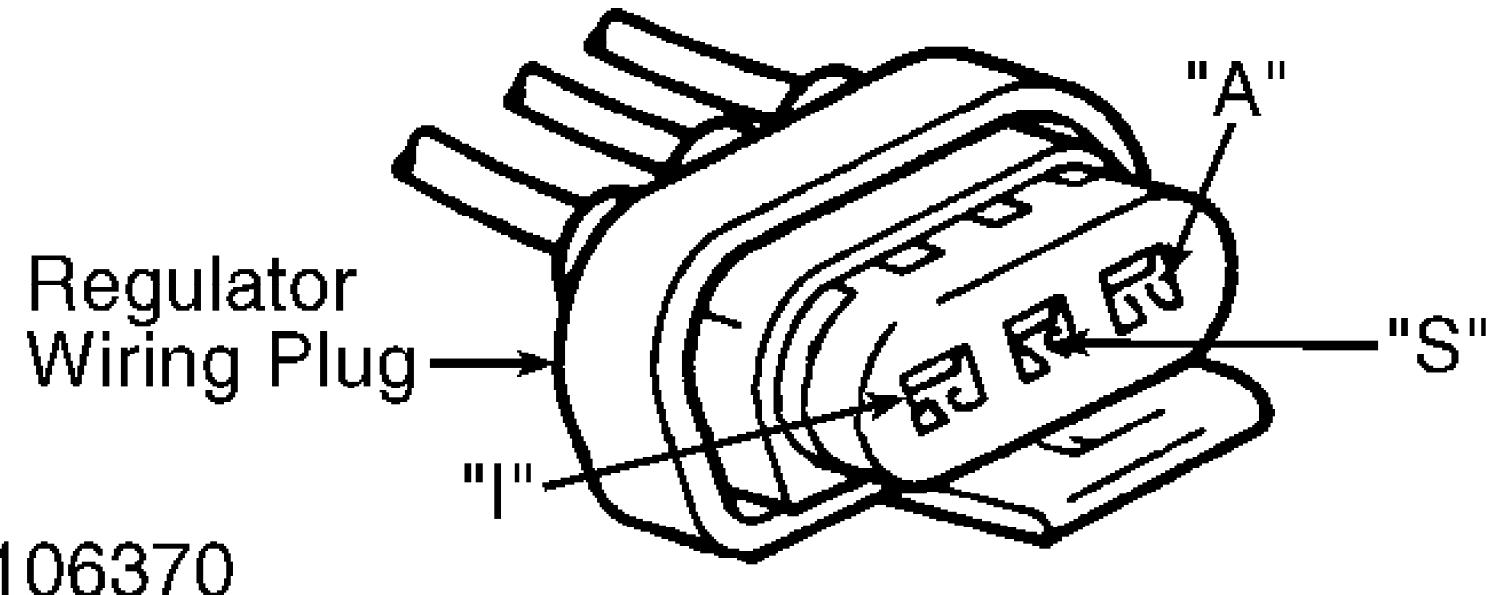


106370

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN


Fig. 107: Locating Alternator Wiring Plug "B+" (External Fan)
1993 Ford Taurus LX

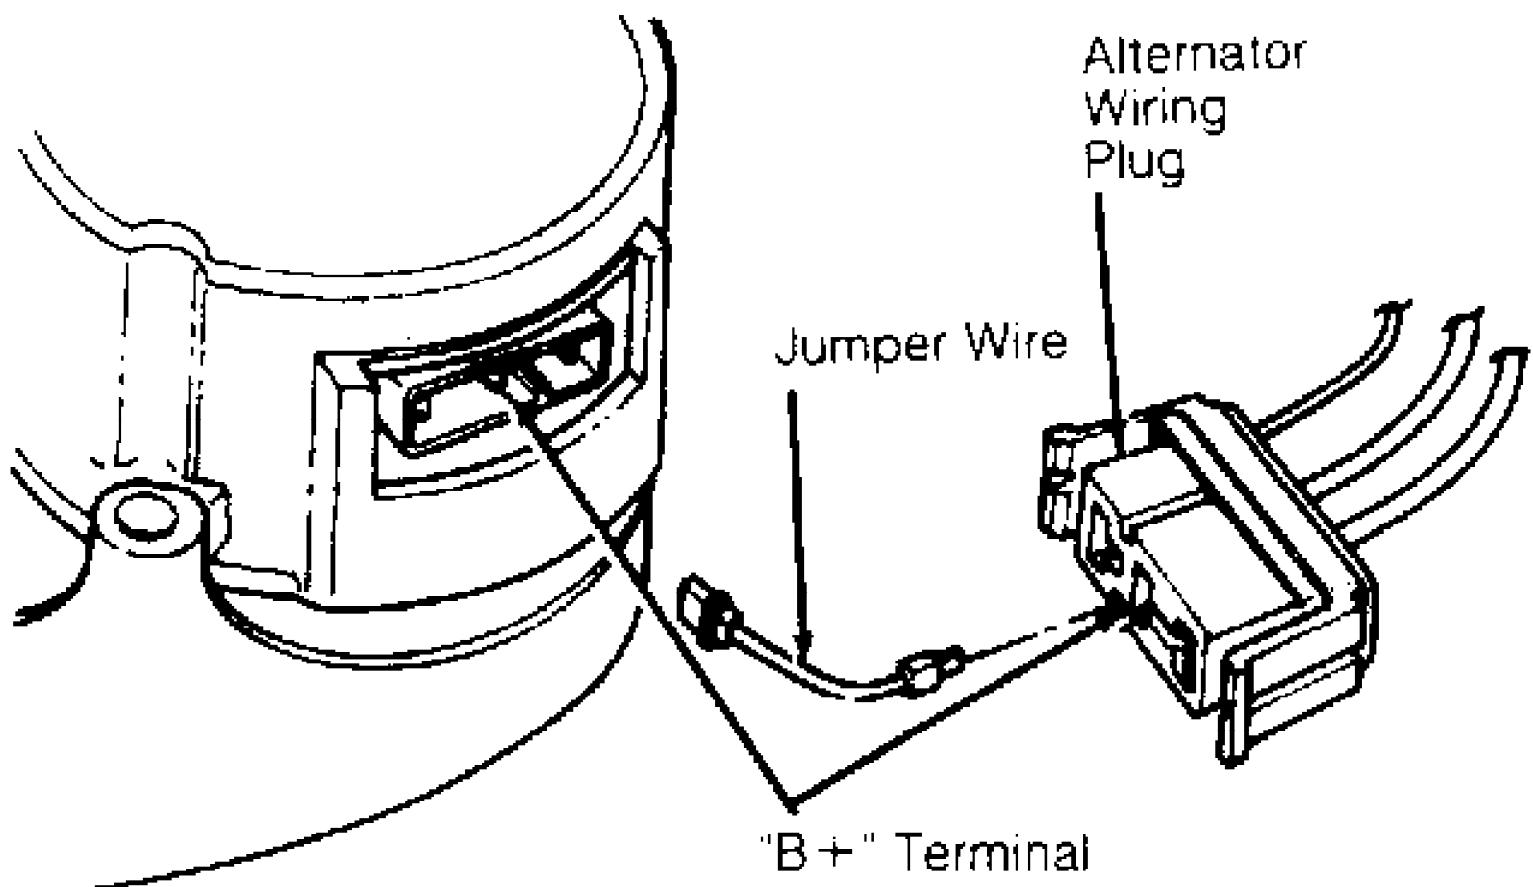

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 108: Starter System Wiring Diagram (Taurus SHO)
1993 Ford Taurus LX

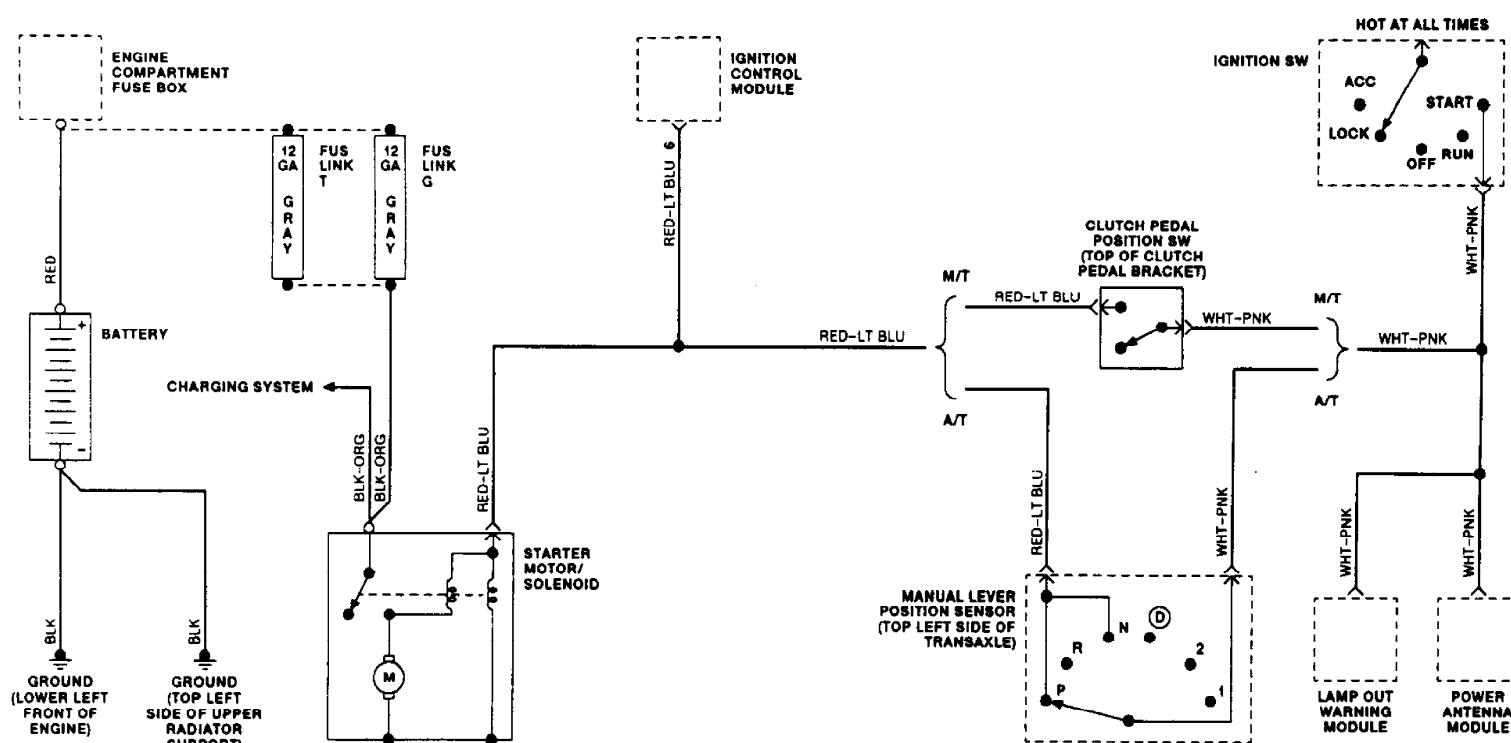


93D41320

WIRING DIAGRAMS
Power & Ground Distribution

PAVLIN

Fig. 109: Starter System Wiring Diagram (Exc SHO)
1993 Ford Taurus LX

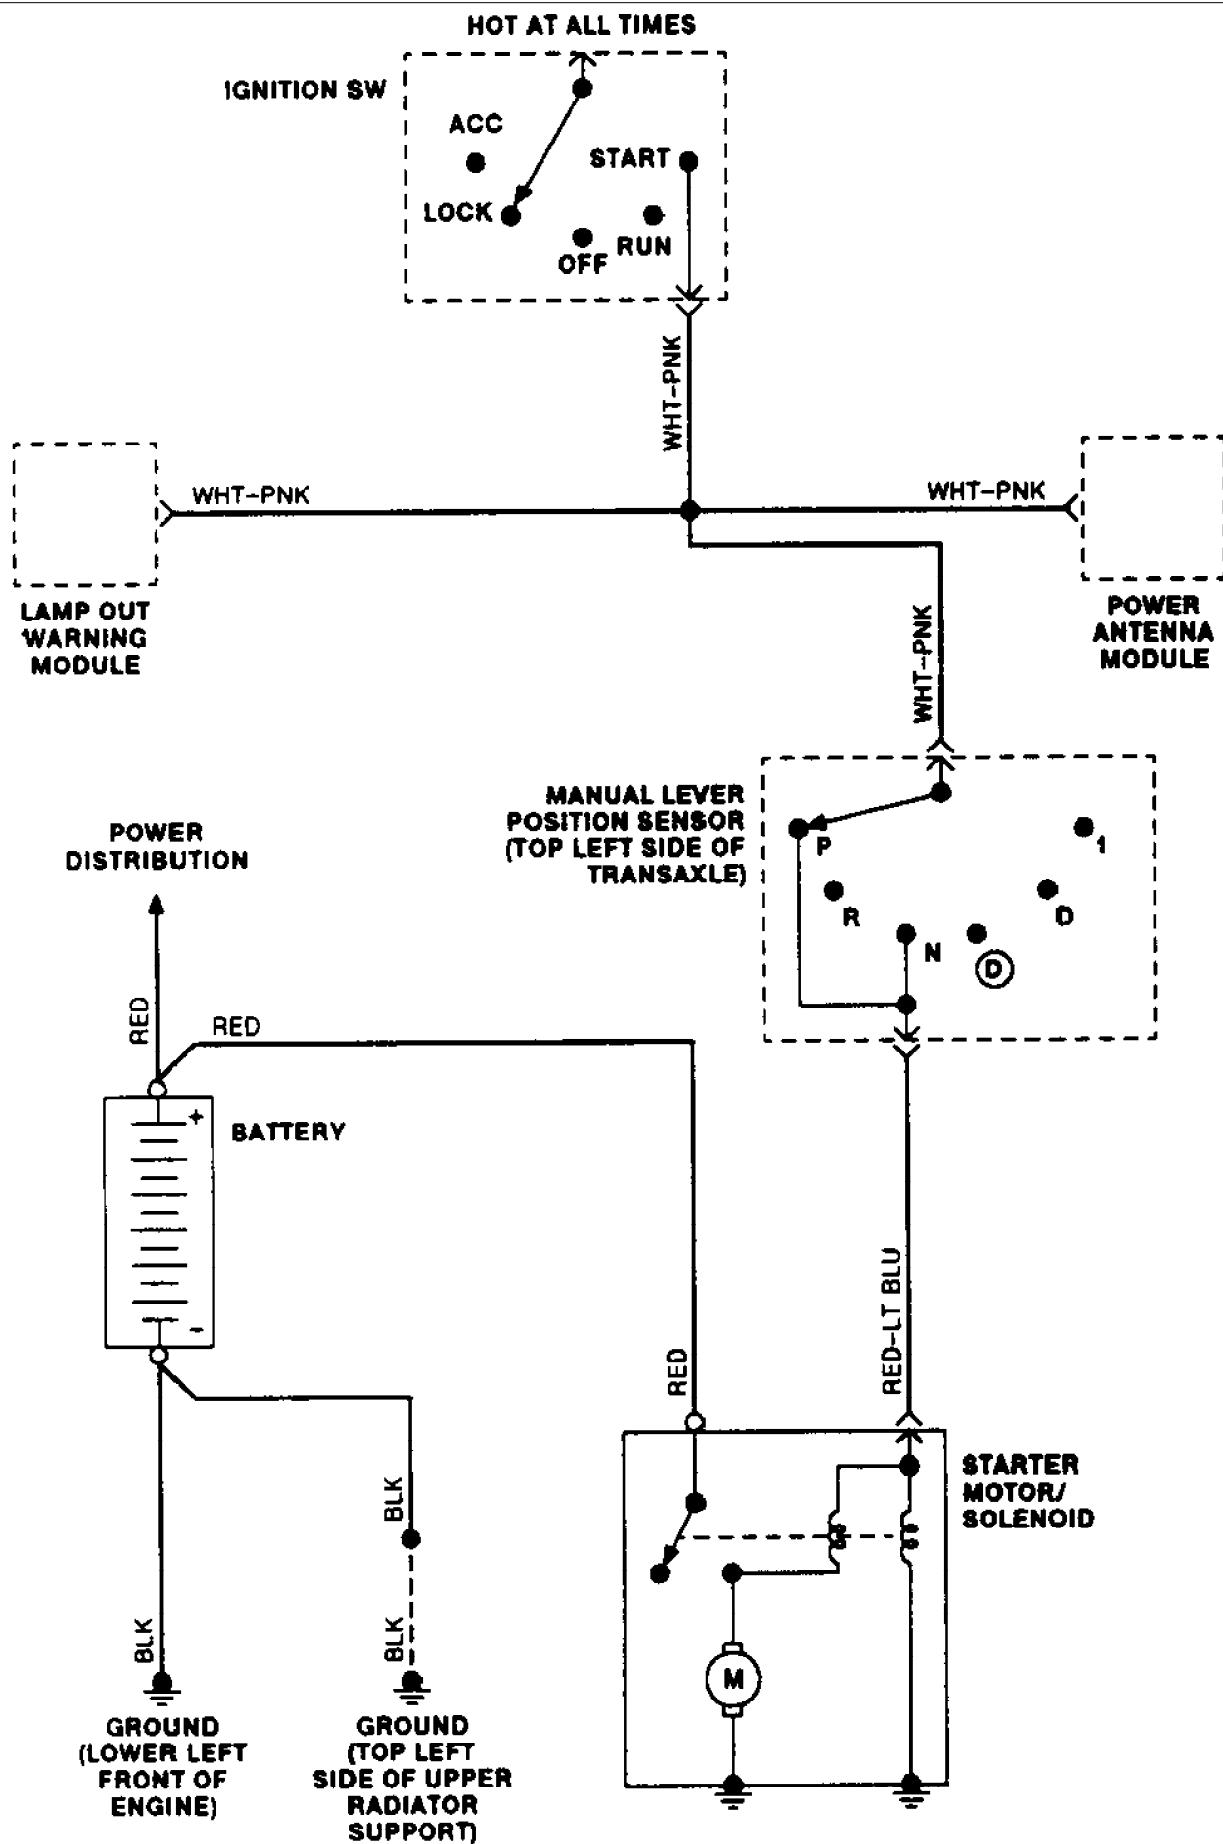


93G40010

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN


Fig. 110: Electric Cooling Fan Wiring Diagram (3.0L SHO)
1993 Ford Taurus LX

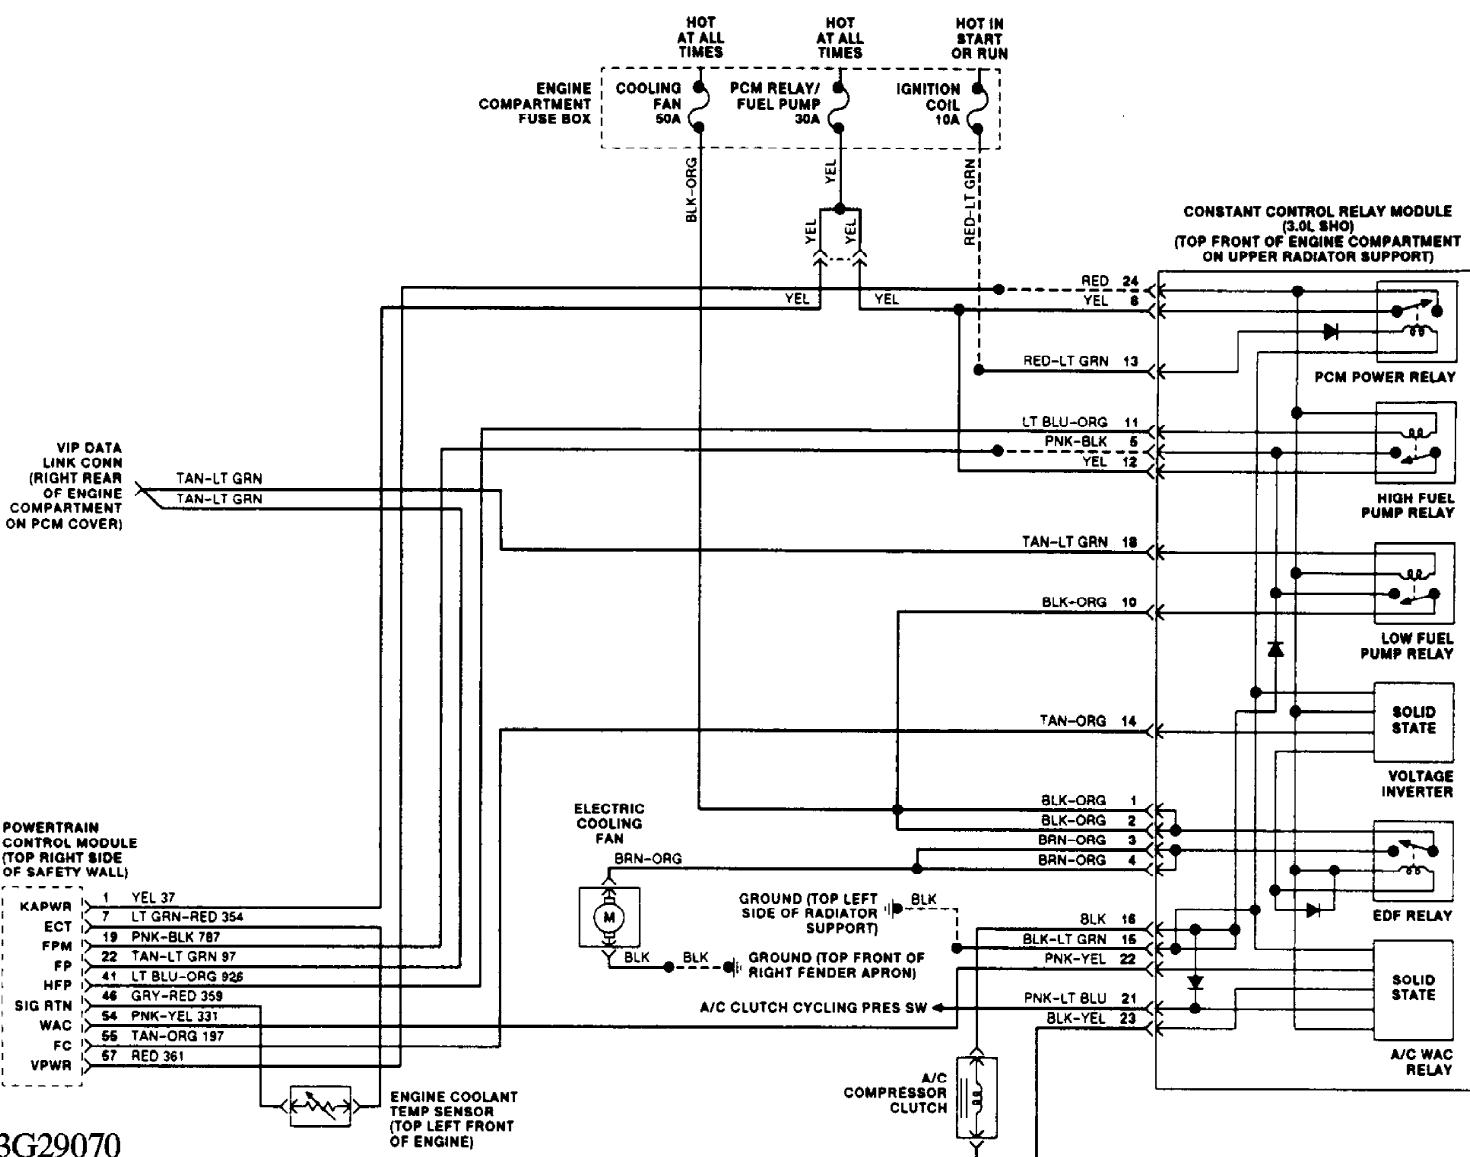

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN


Fig. 111: Electric Cooling Fan Wiring Diagram (3.2L SHO)
1993 Ford Taurus LX

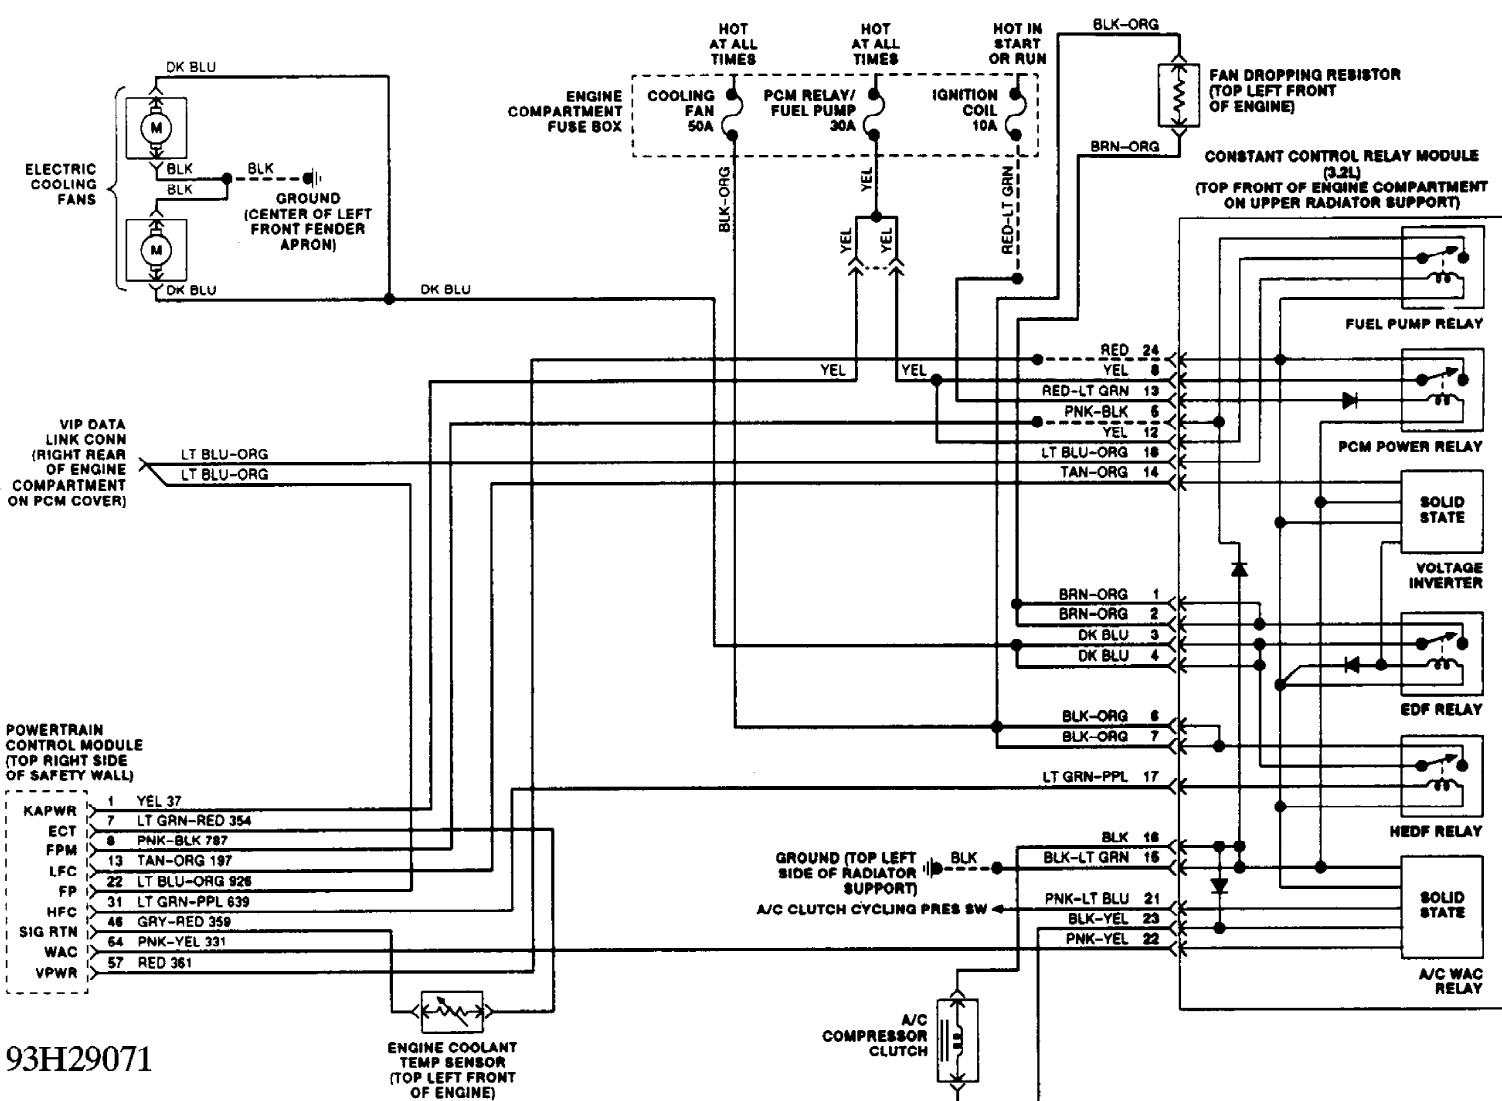

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 112: CID Wiring Harness Circuits (3.0L SHO)
1993 Ford Taurus LX

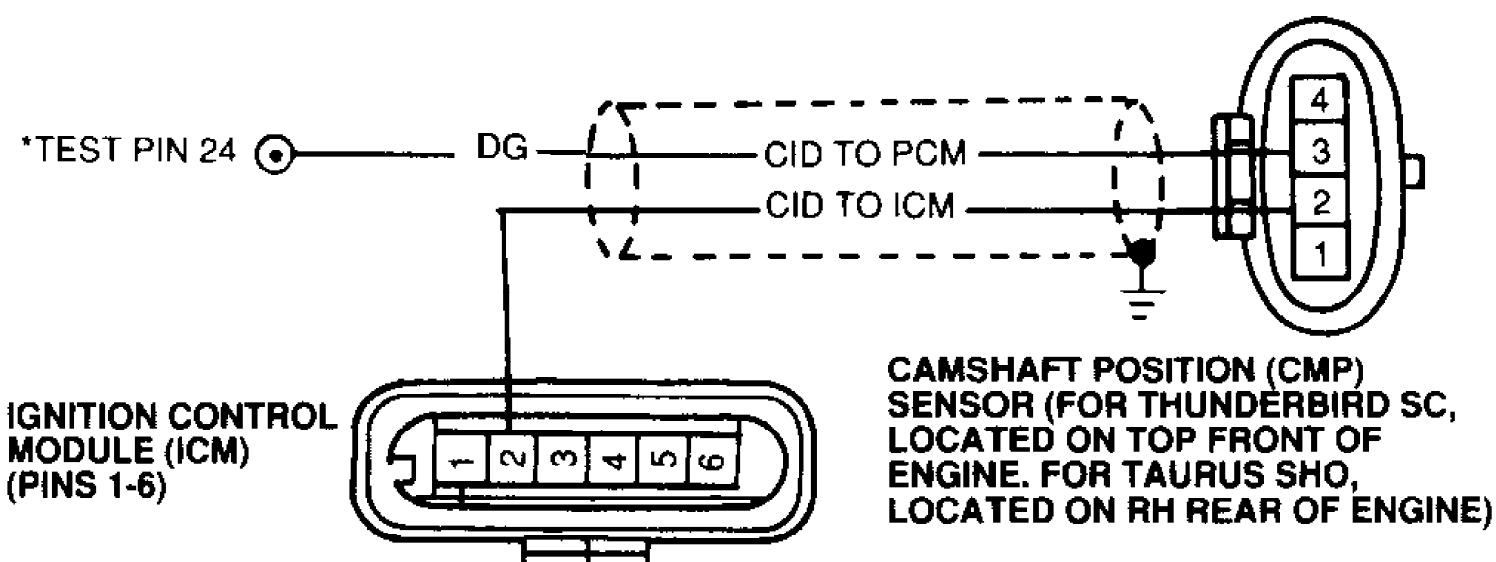


***TEST PINS LOCATED ON BREAKOUT BOX
ALL HARNESS CONNECTORS VIEWED IN MATING SURFACE**

93D40538

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN


Fig. 113: DIS Module Wiring Harness Connector
Terminals (3.0L SHO)
1993 Ford Taurus LX

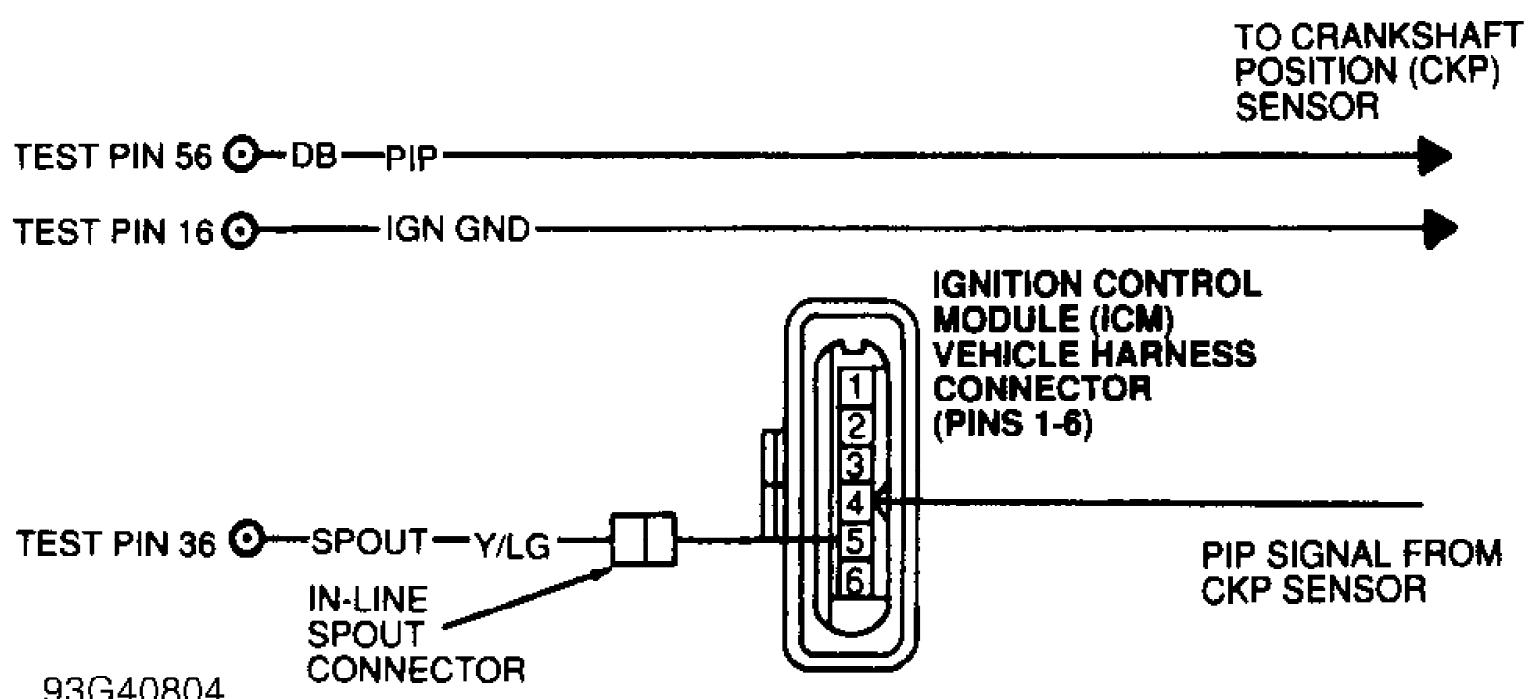

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 114: HO2S Sensor Wiring Harness Connector
1993 Ford Taurus LX

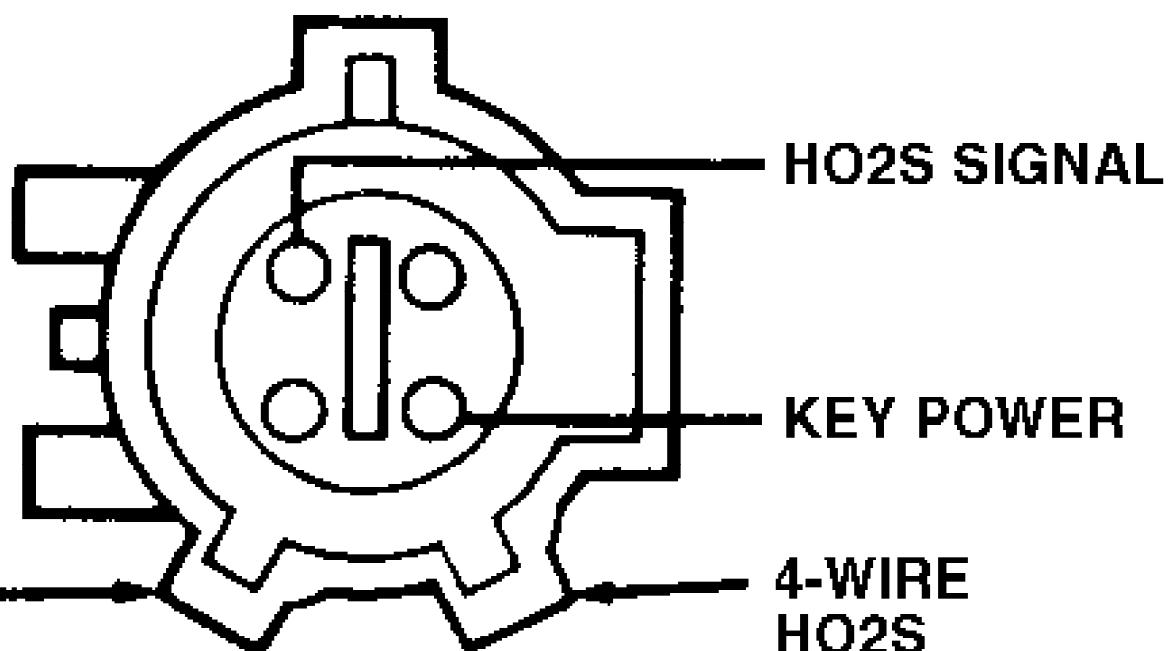


93B40619

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

**Fig. 115: Identifying A/C Relay Wiring Harness Connector
Terminals**
1993 Ford Taurus LX

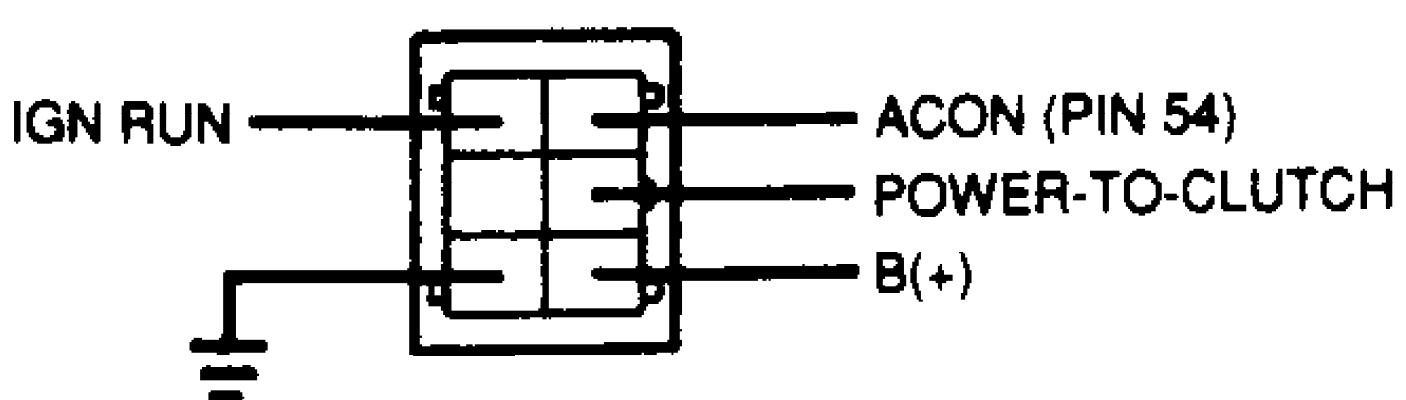


93G40754

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

**Fig. 116: Identifying HO2S Sensor Wiring Harness
Connector Terminals**
1993 Ford Taurus LX

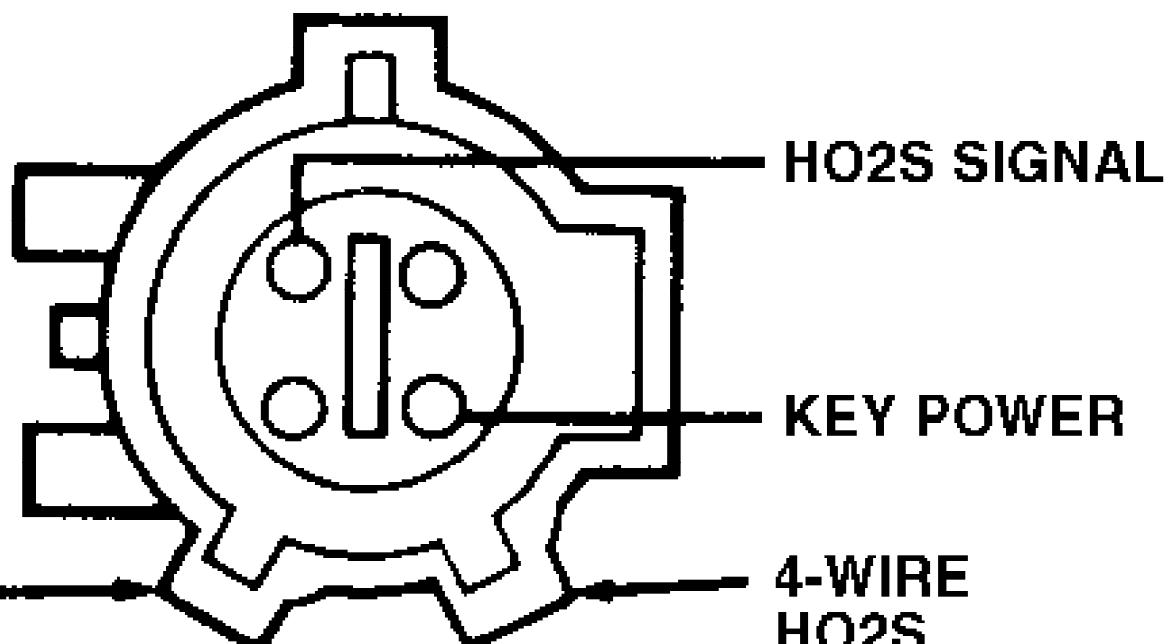


93B40619

WIRING DIAGRAMS

Power & Ground Distribution

PAVLIN

Fig. 117: EEC-IV Wiring Diagram (3.0L SHO - 1 of 2)
1993 Ford Taurus LX

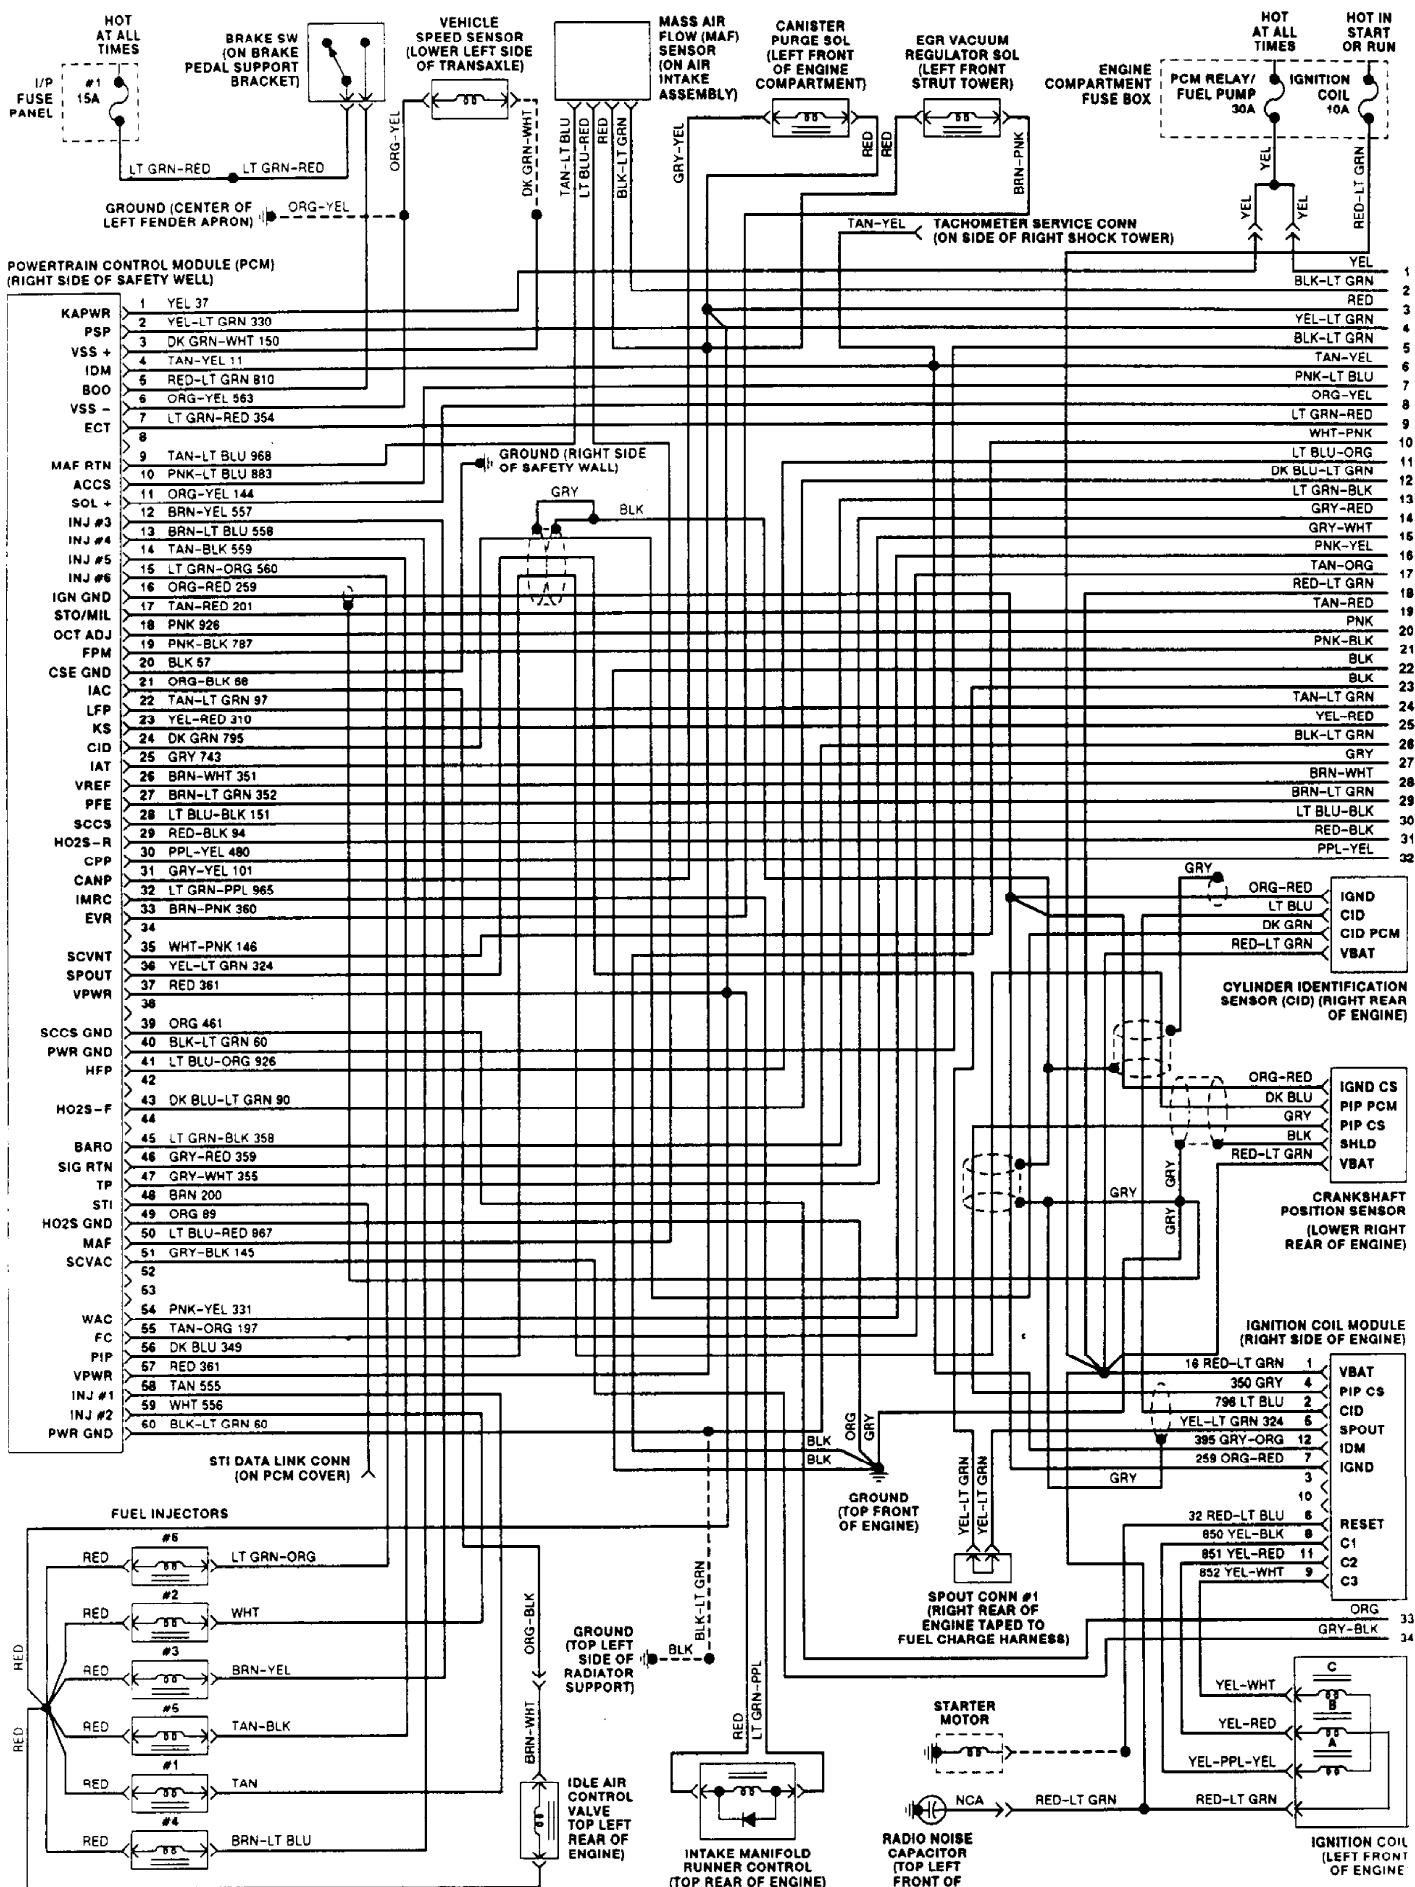


93H40684

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 118: EEC-IV Wiring Diagram (3.0L SHO - 2 of 2)
1993 Ford Taurus LX

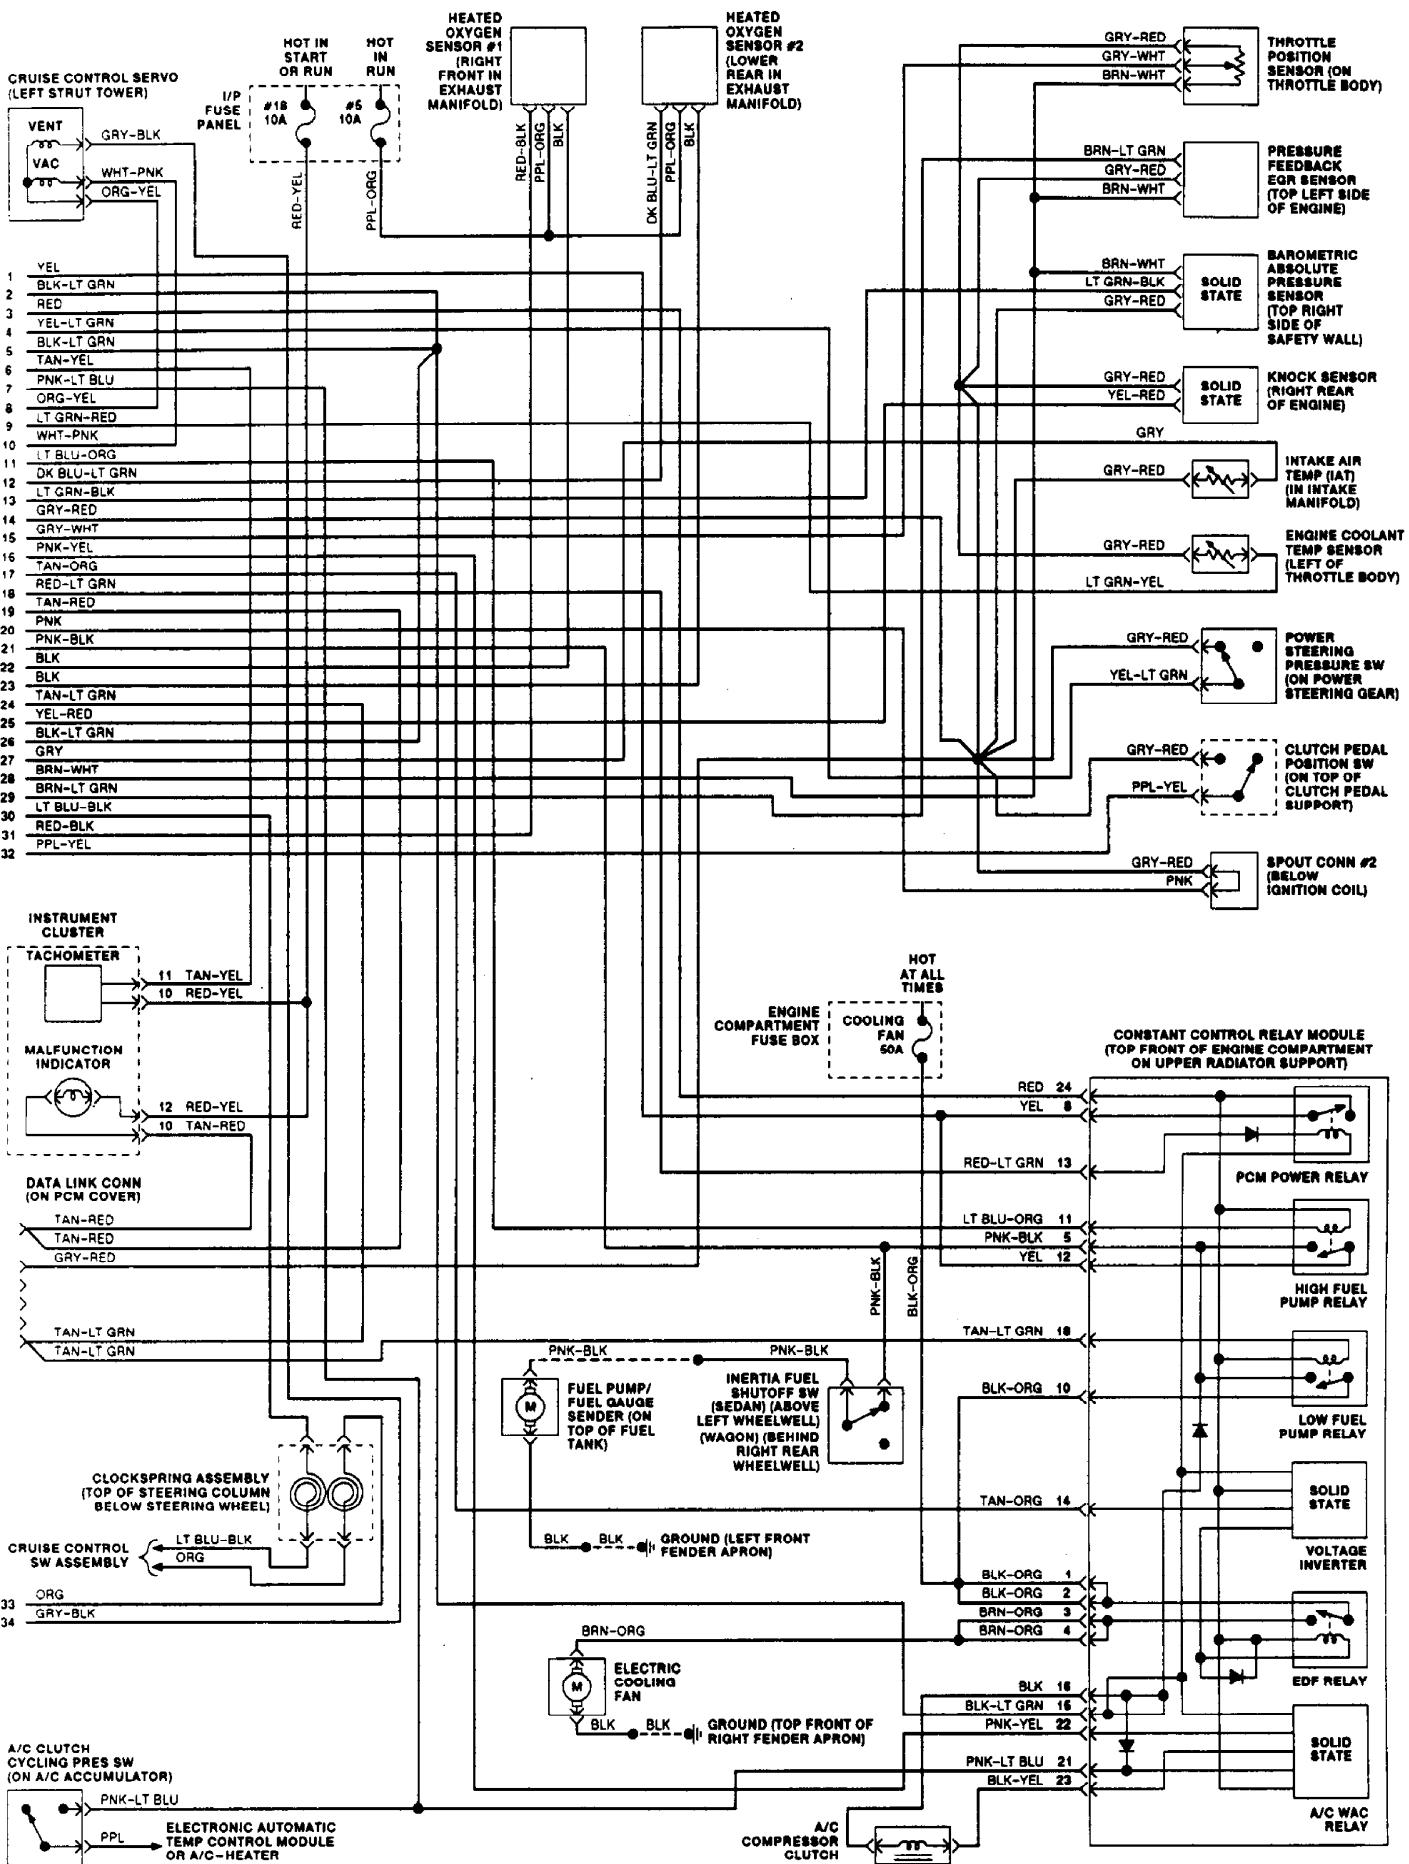


93140665

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

**Fig. 119: Identifying HO2S Sensor Wiring Harness
Connector Terminals**
1993 Ford Taurus LX

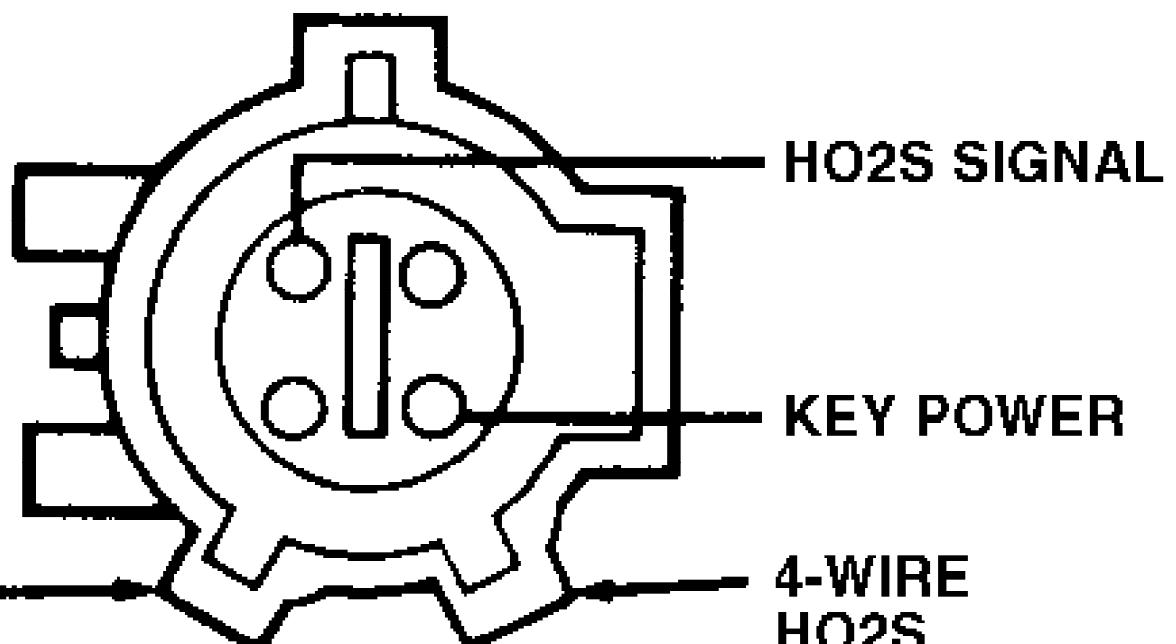

93B40619


WIRING DIAGRAMS

P ower & Ground Distribution

PAVLIN

Fig. 120: EEC-IV Wiring Diagram (3.0L Except SHO 1 of 2)

1993 Ford Taurus LX

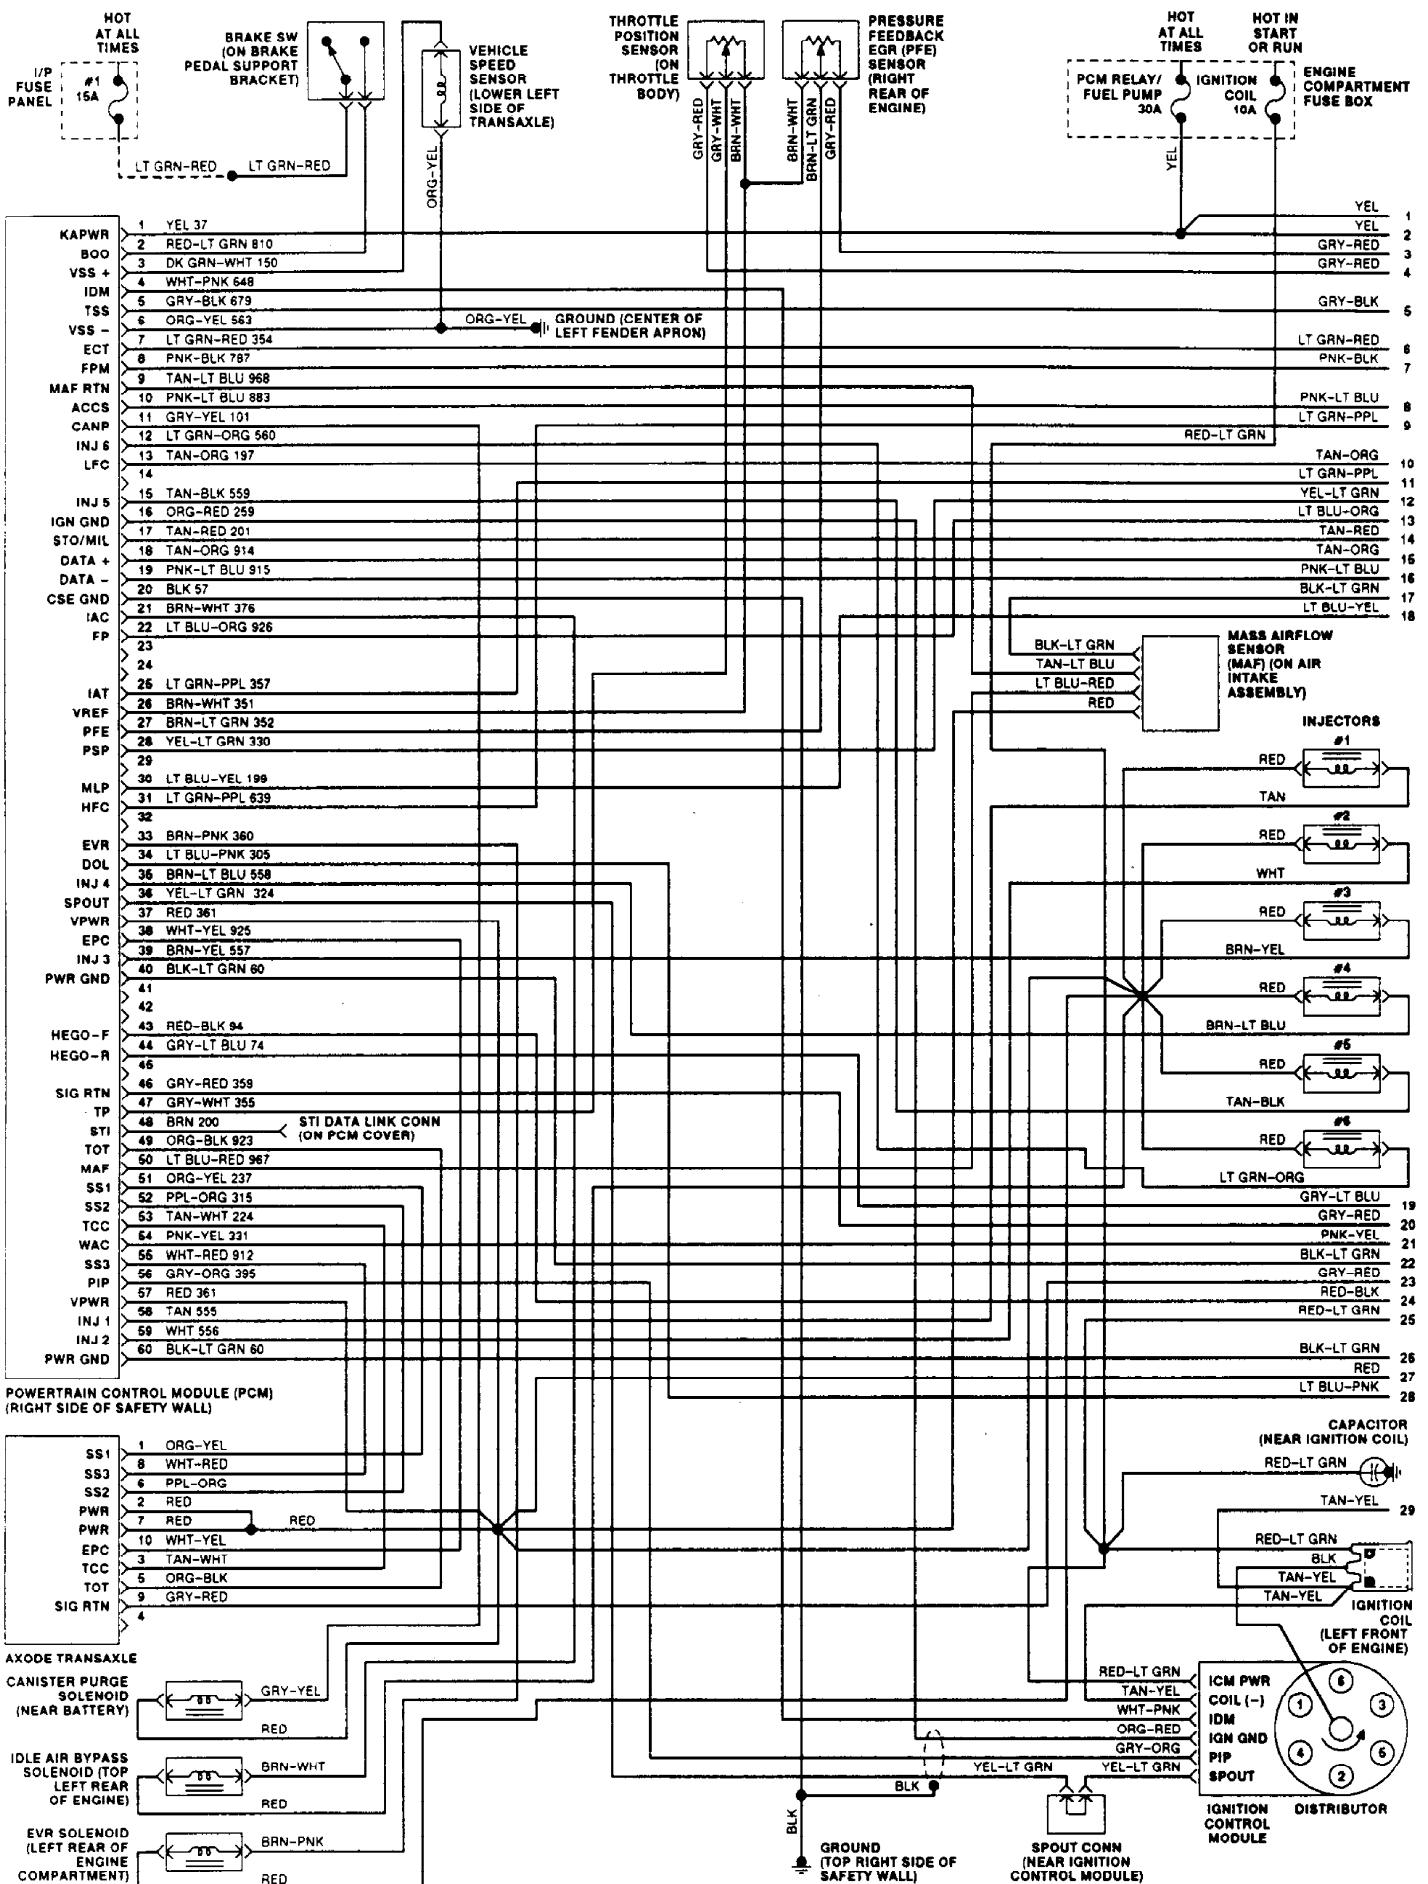


WIRING DIAGRAMS

Power & Ground Distribution

PAVLIN

Fig. 121: EEC-IV Wiring Diagram (3.0L Except SHO 2 of 2)
1993 Ford Taurus LX

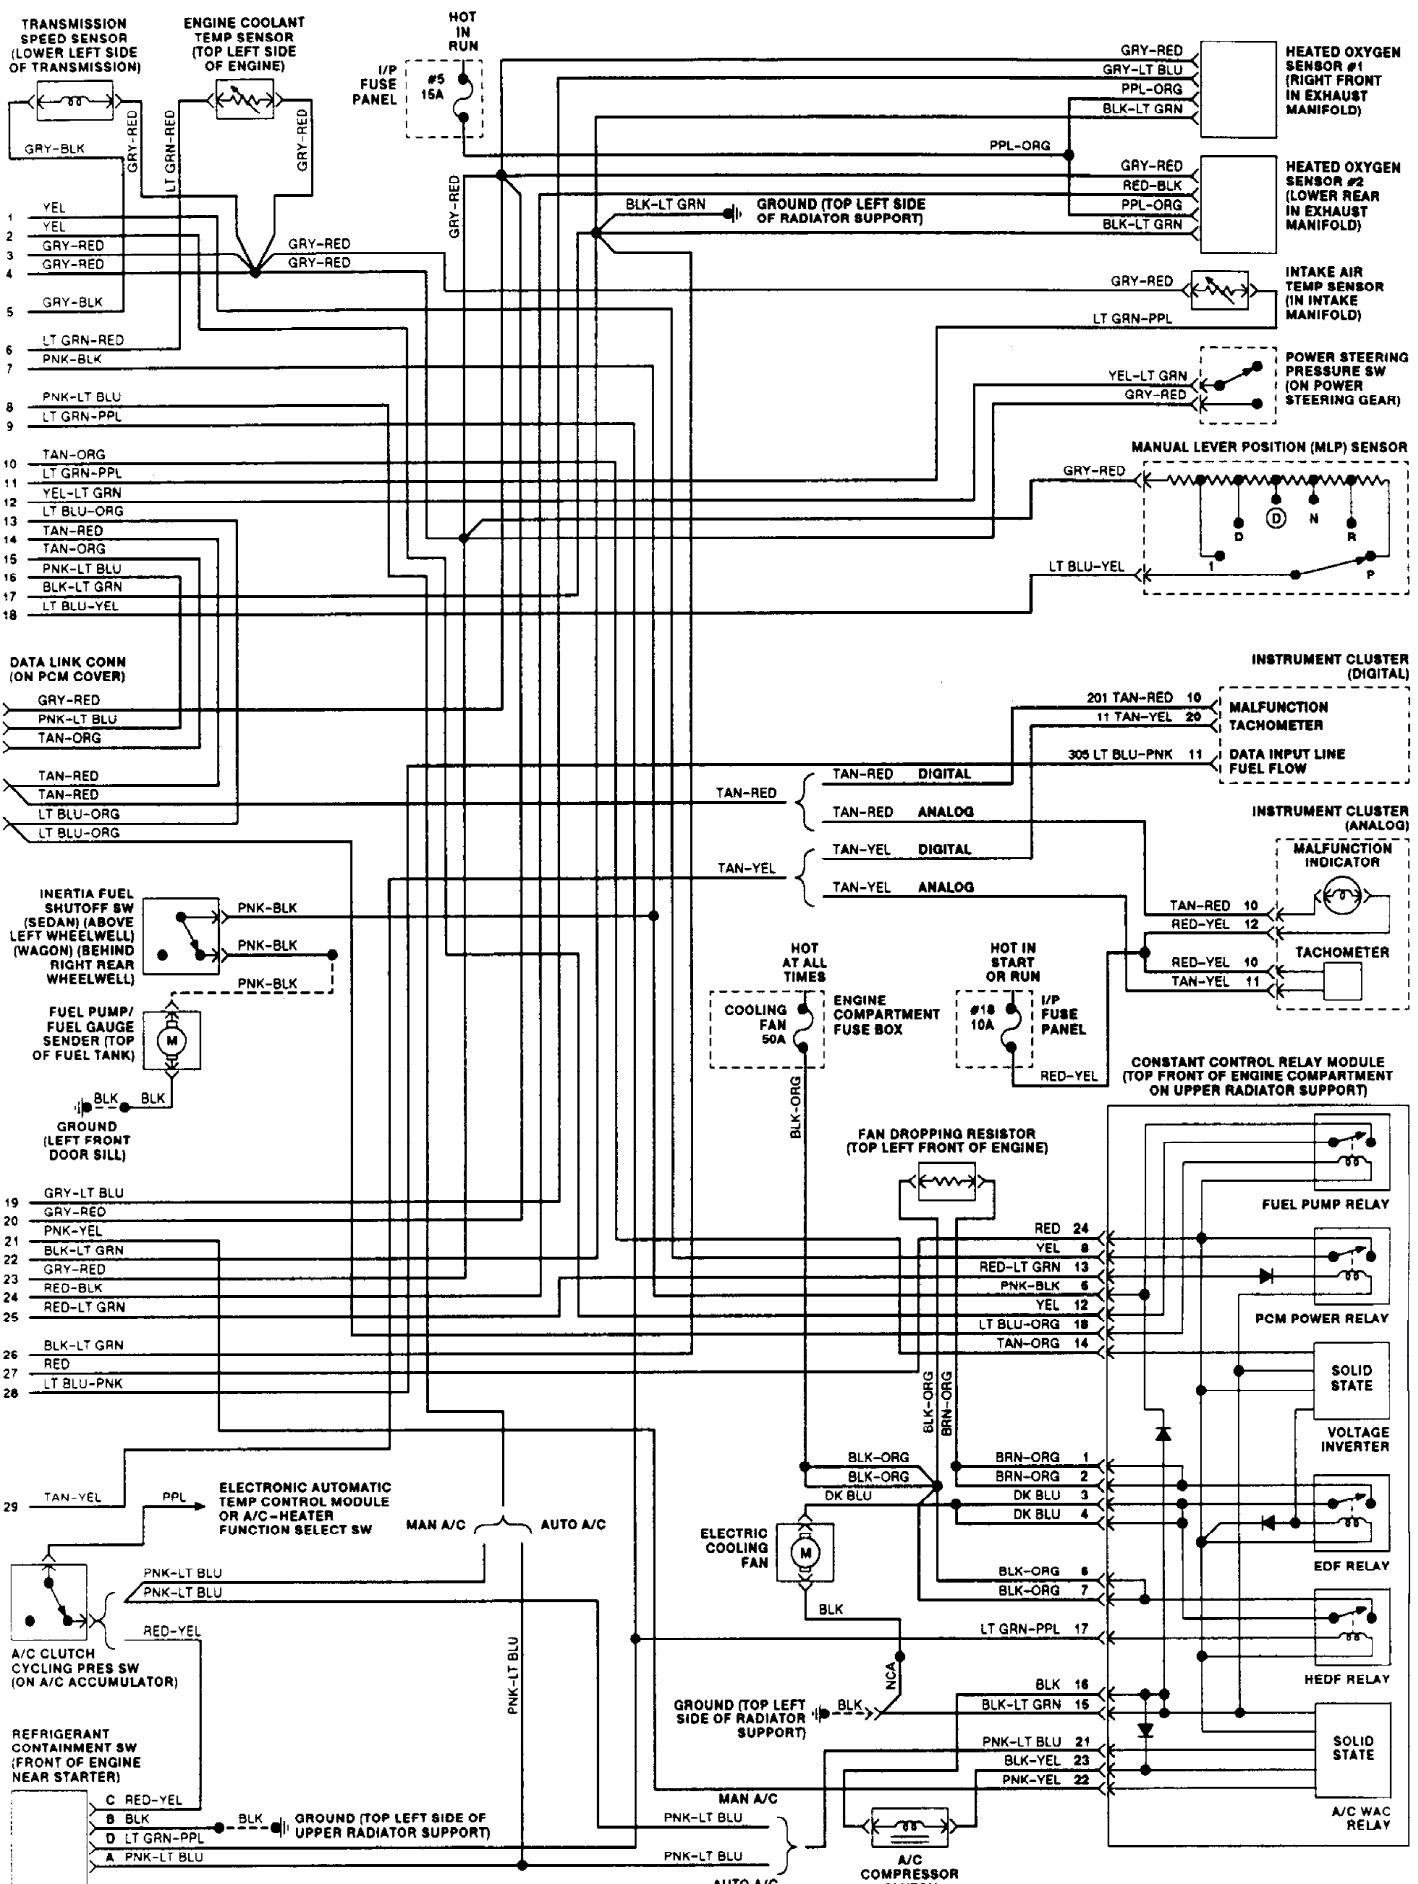


93A40659

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN


Fig. 122: EEC-IV Wiring Diagram (3.8L - 1 of 2)
1993 Ford Taurus LX

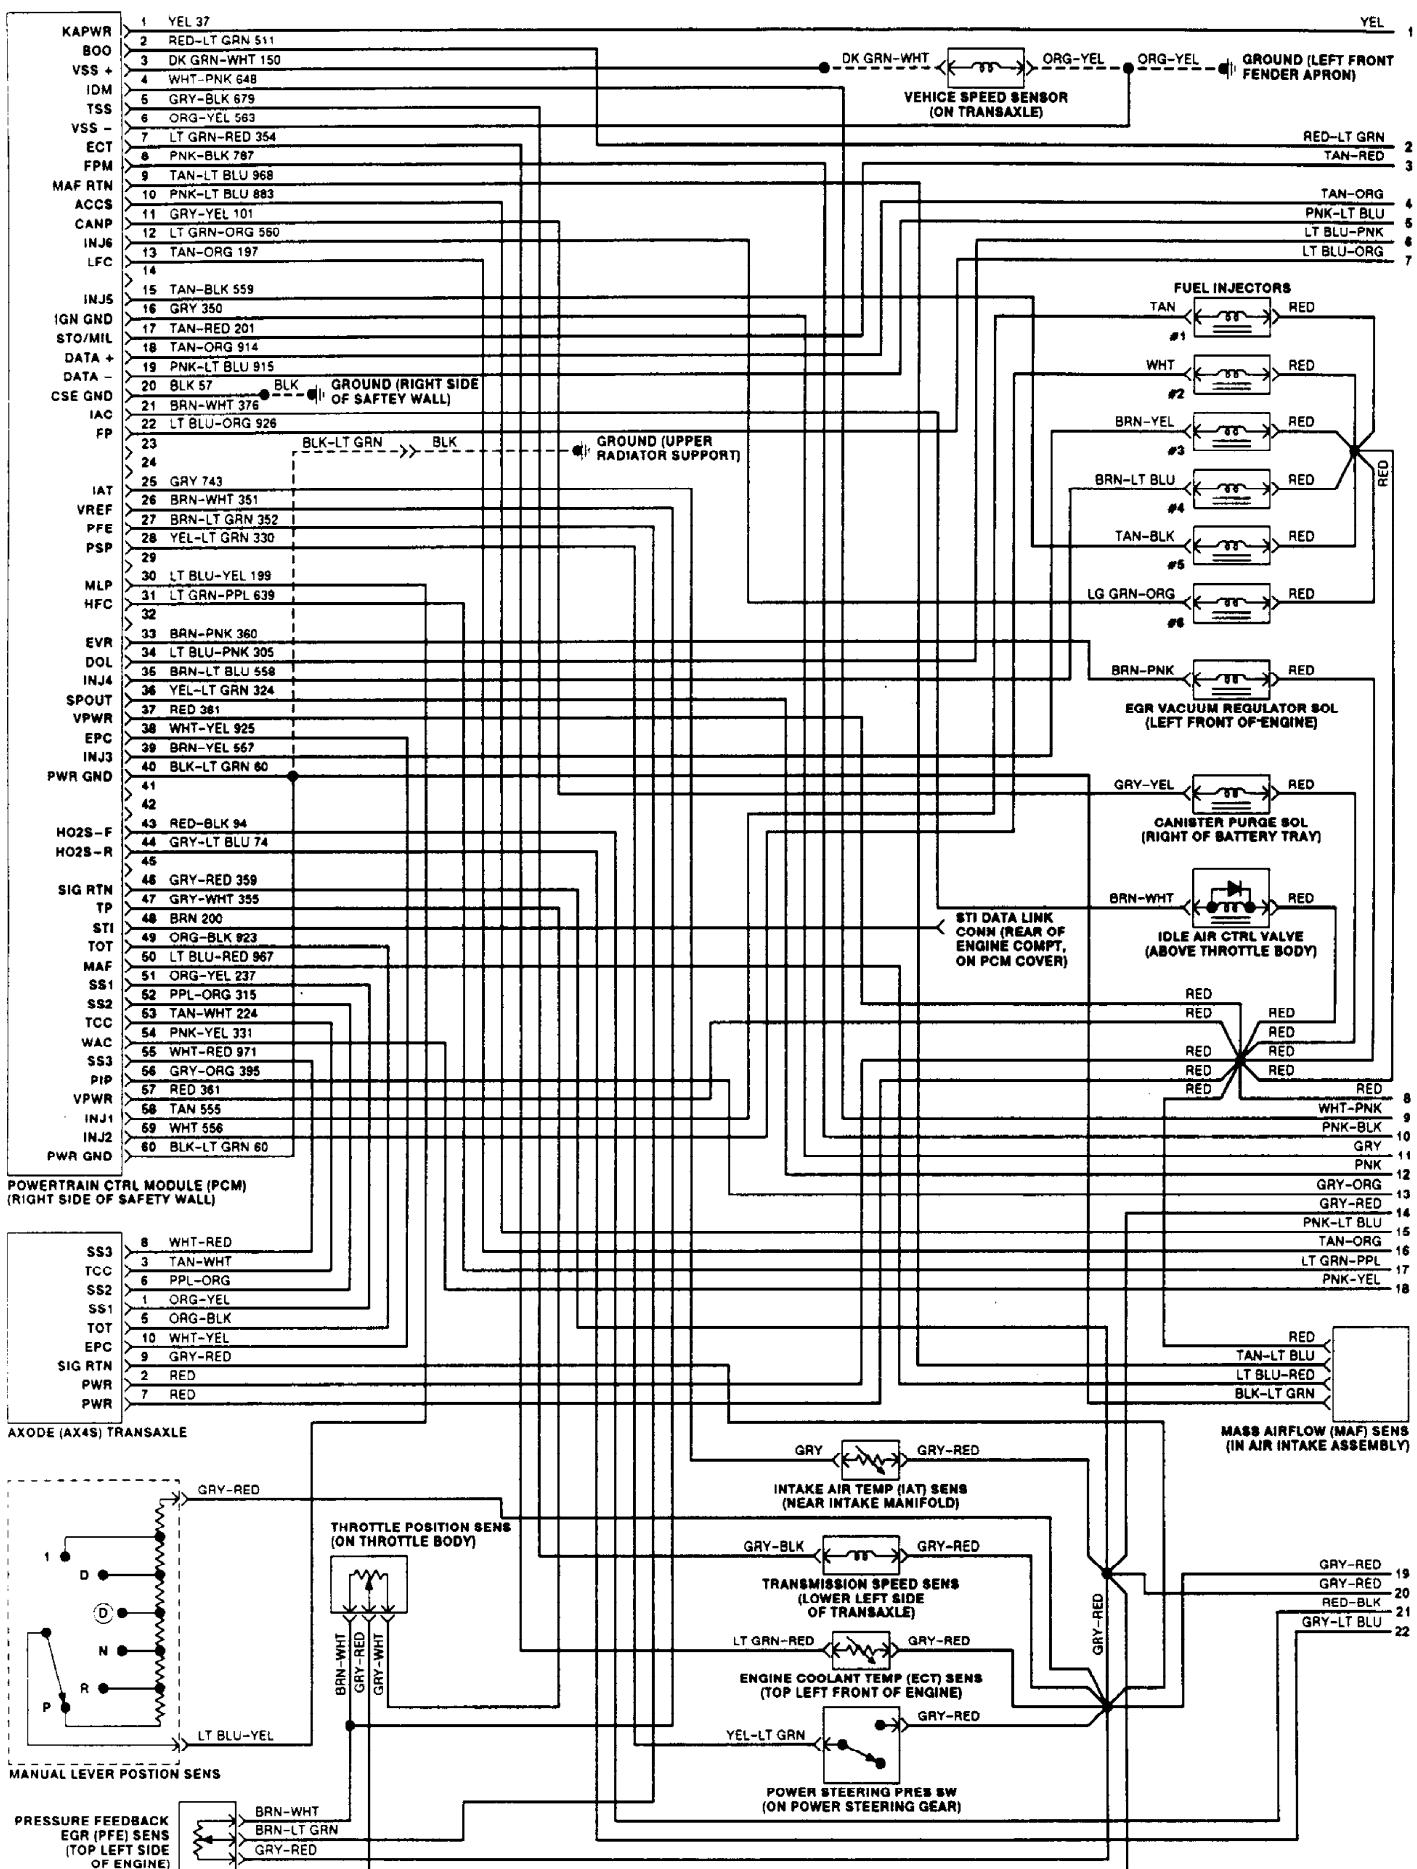

WIRING DIAGRAMS

PAVLIN


Fig. 123: EEC-IV Wiring Diagram (3.8L - 2 of 2)
1993 Ford Taurus LX

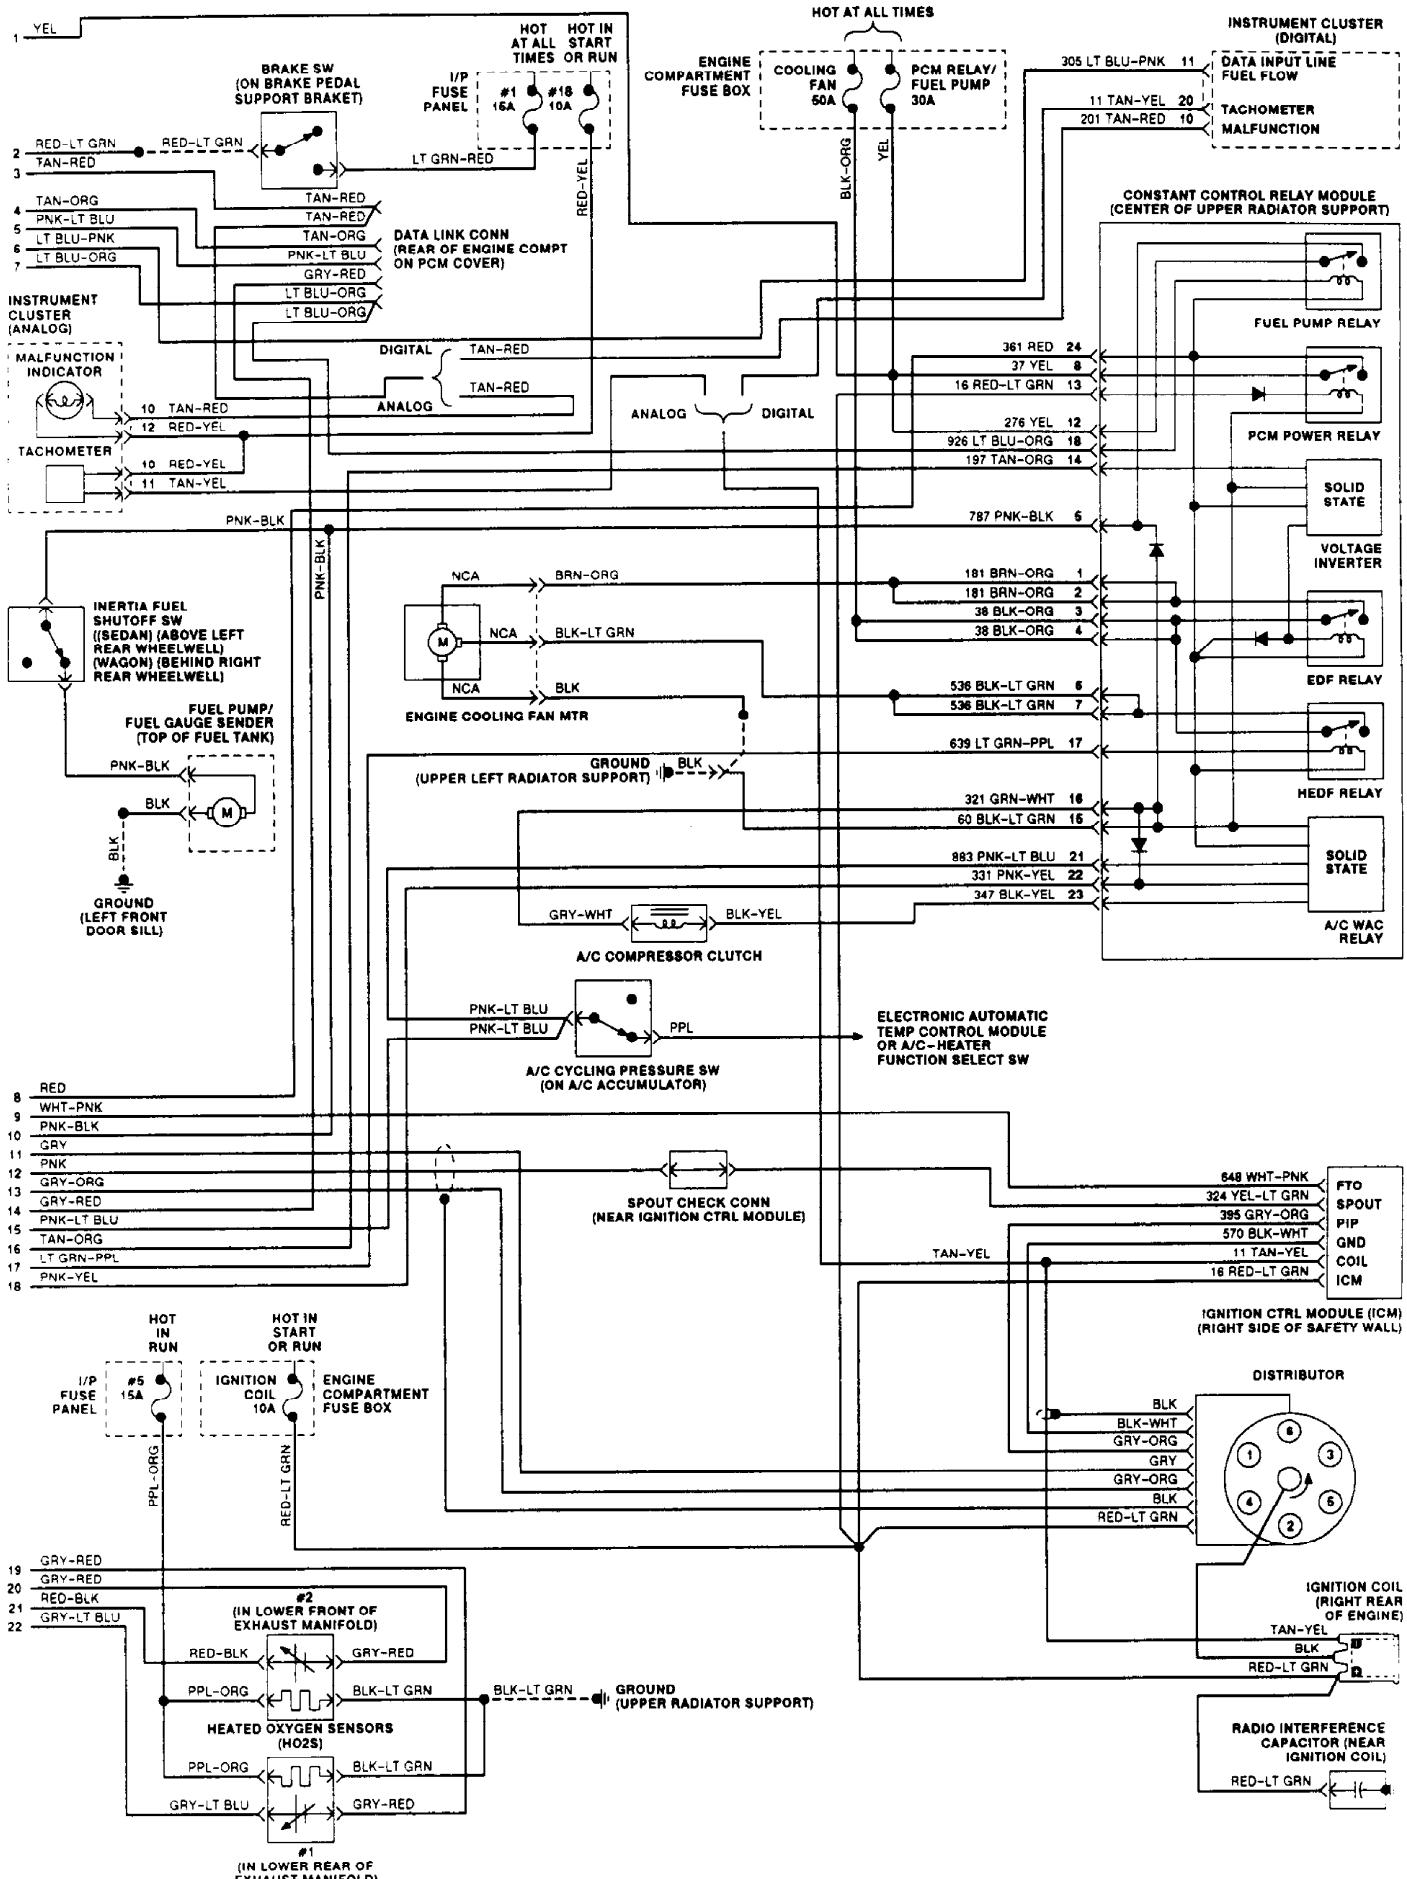

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 124: EEC-IV Wiring Diagram (3.0L Flex Fuel - 1 of 2)
1993 Ford Taurus LX

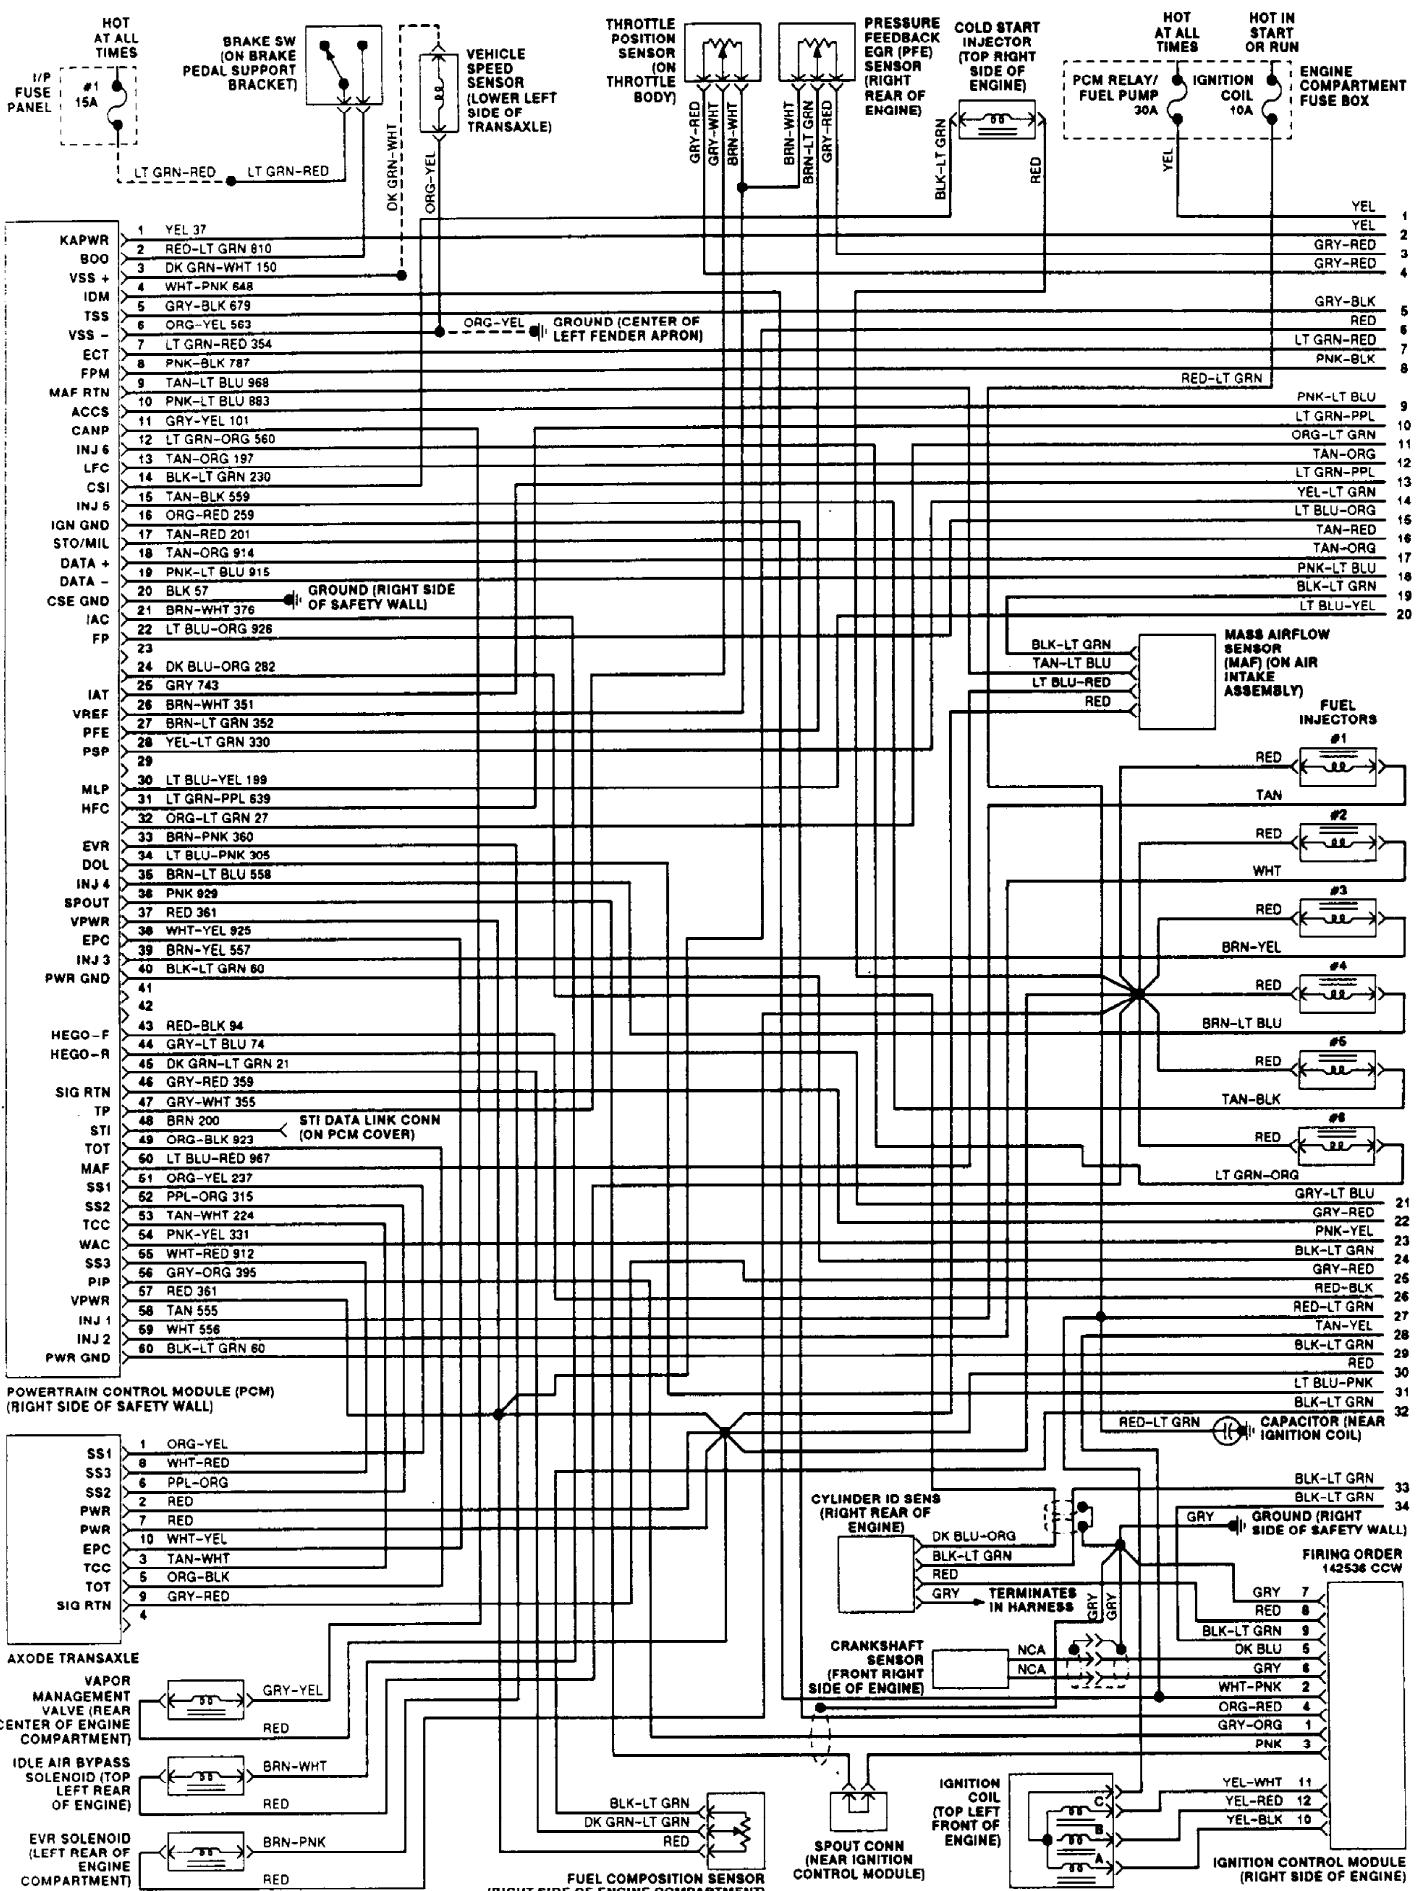


93F40862

WIRING DIAGRAMS

Power & Ground Distribution

PAVLIN

Fig. 125: EEC-IV Wiring Diagram (3.0L Flex Fuel - 2 of 2)
1993 Ford Taurus LX

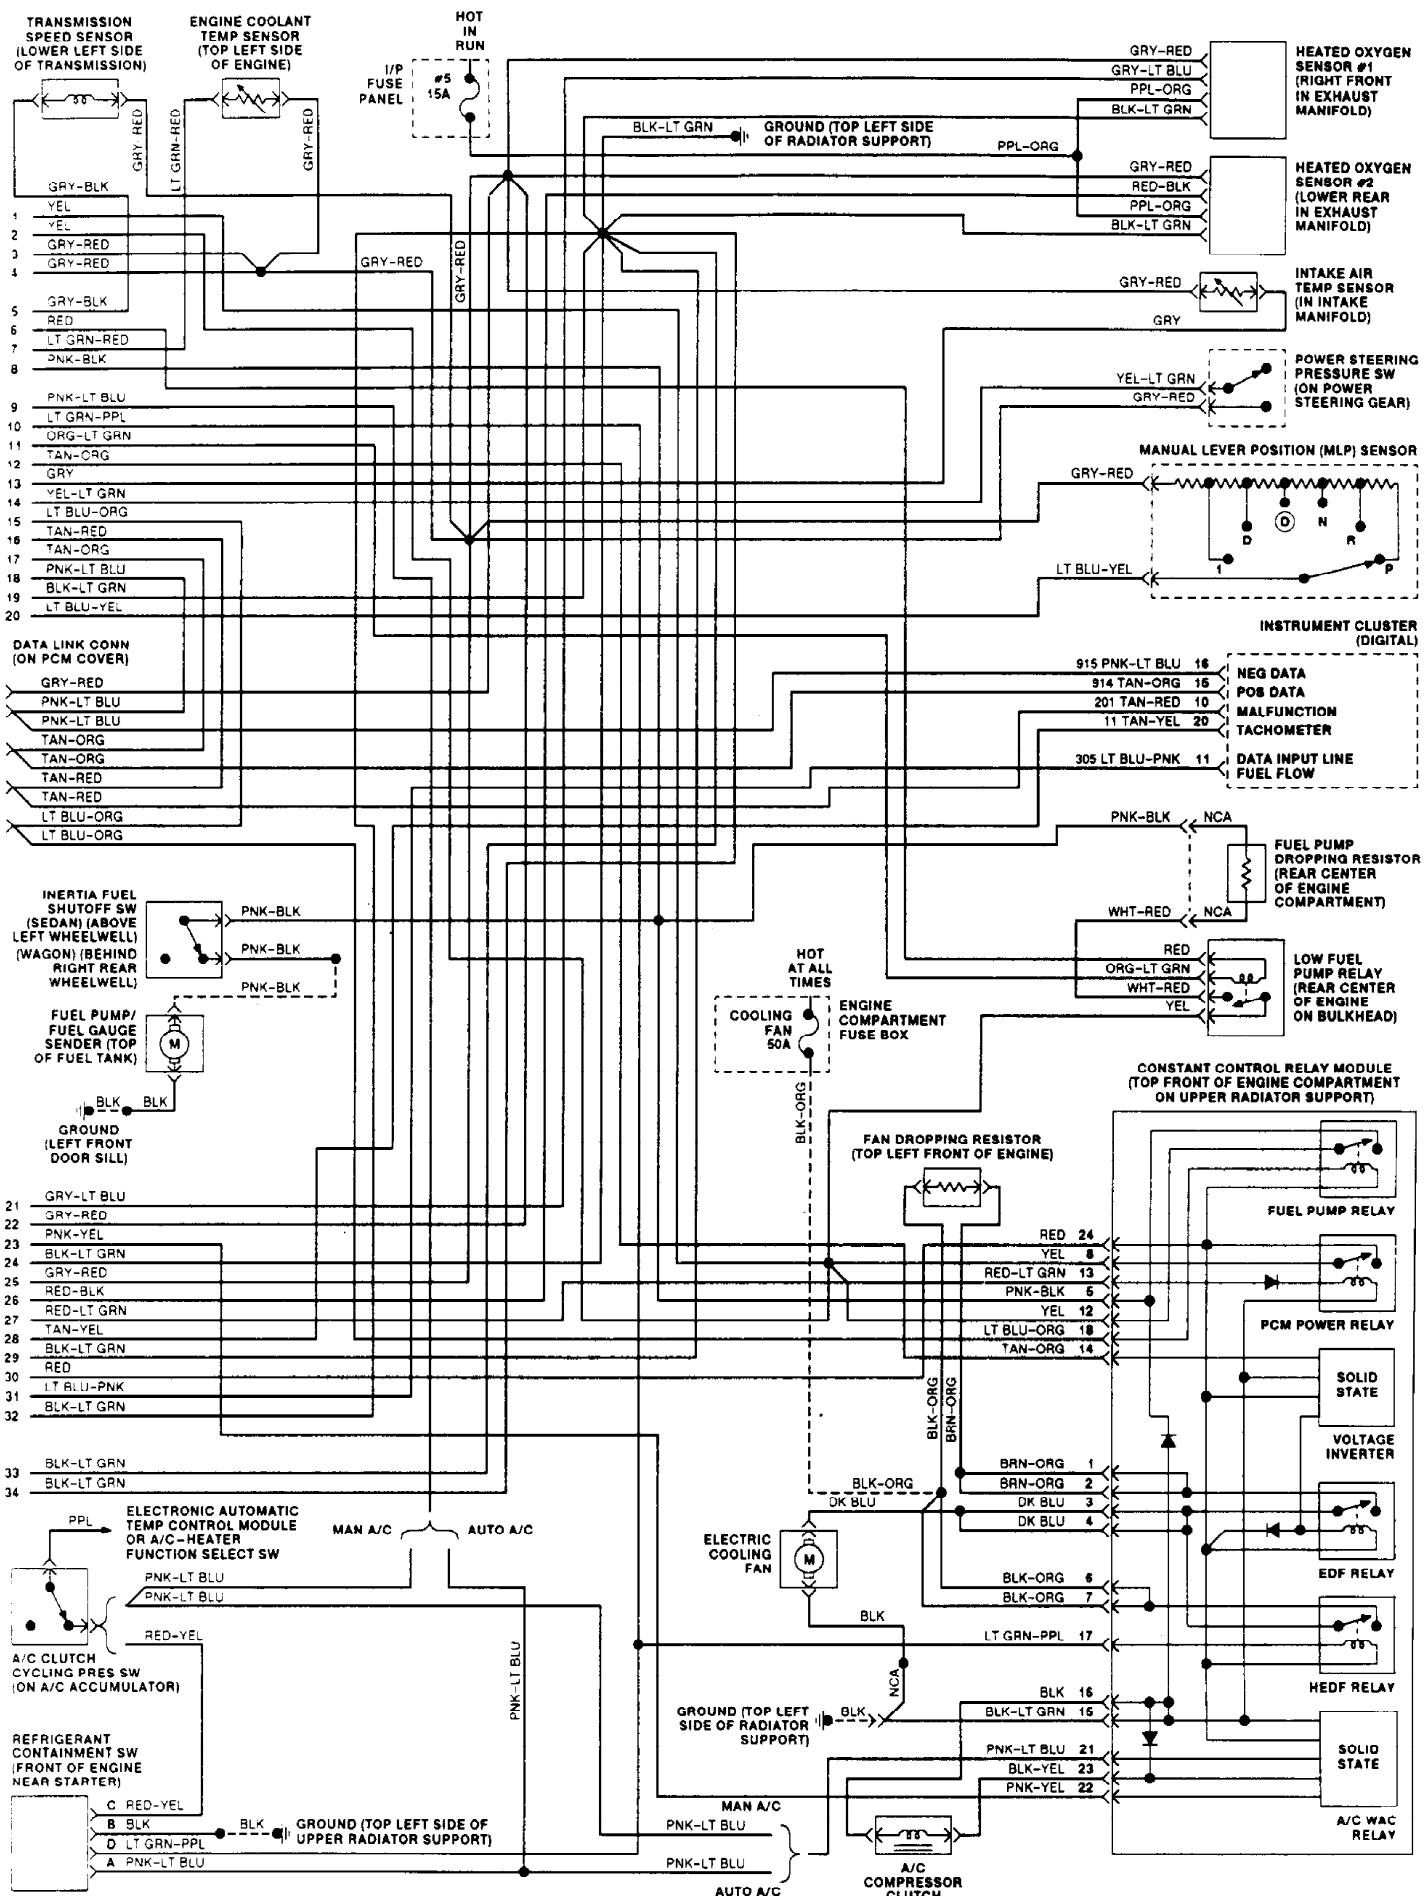


93G40663

WIRING DIAGRAMS

PAVI IN

Fig. 126: EEC-IV Wiring Diagram (3.2L SHO - 1 of 2)
1993 Ford Taurus LX

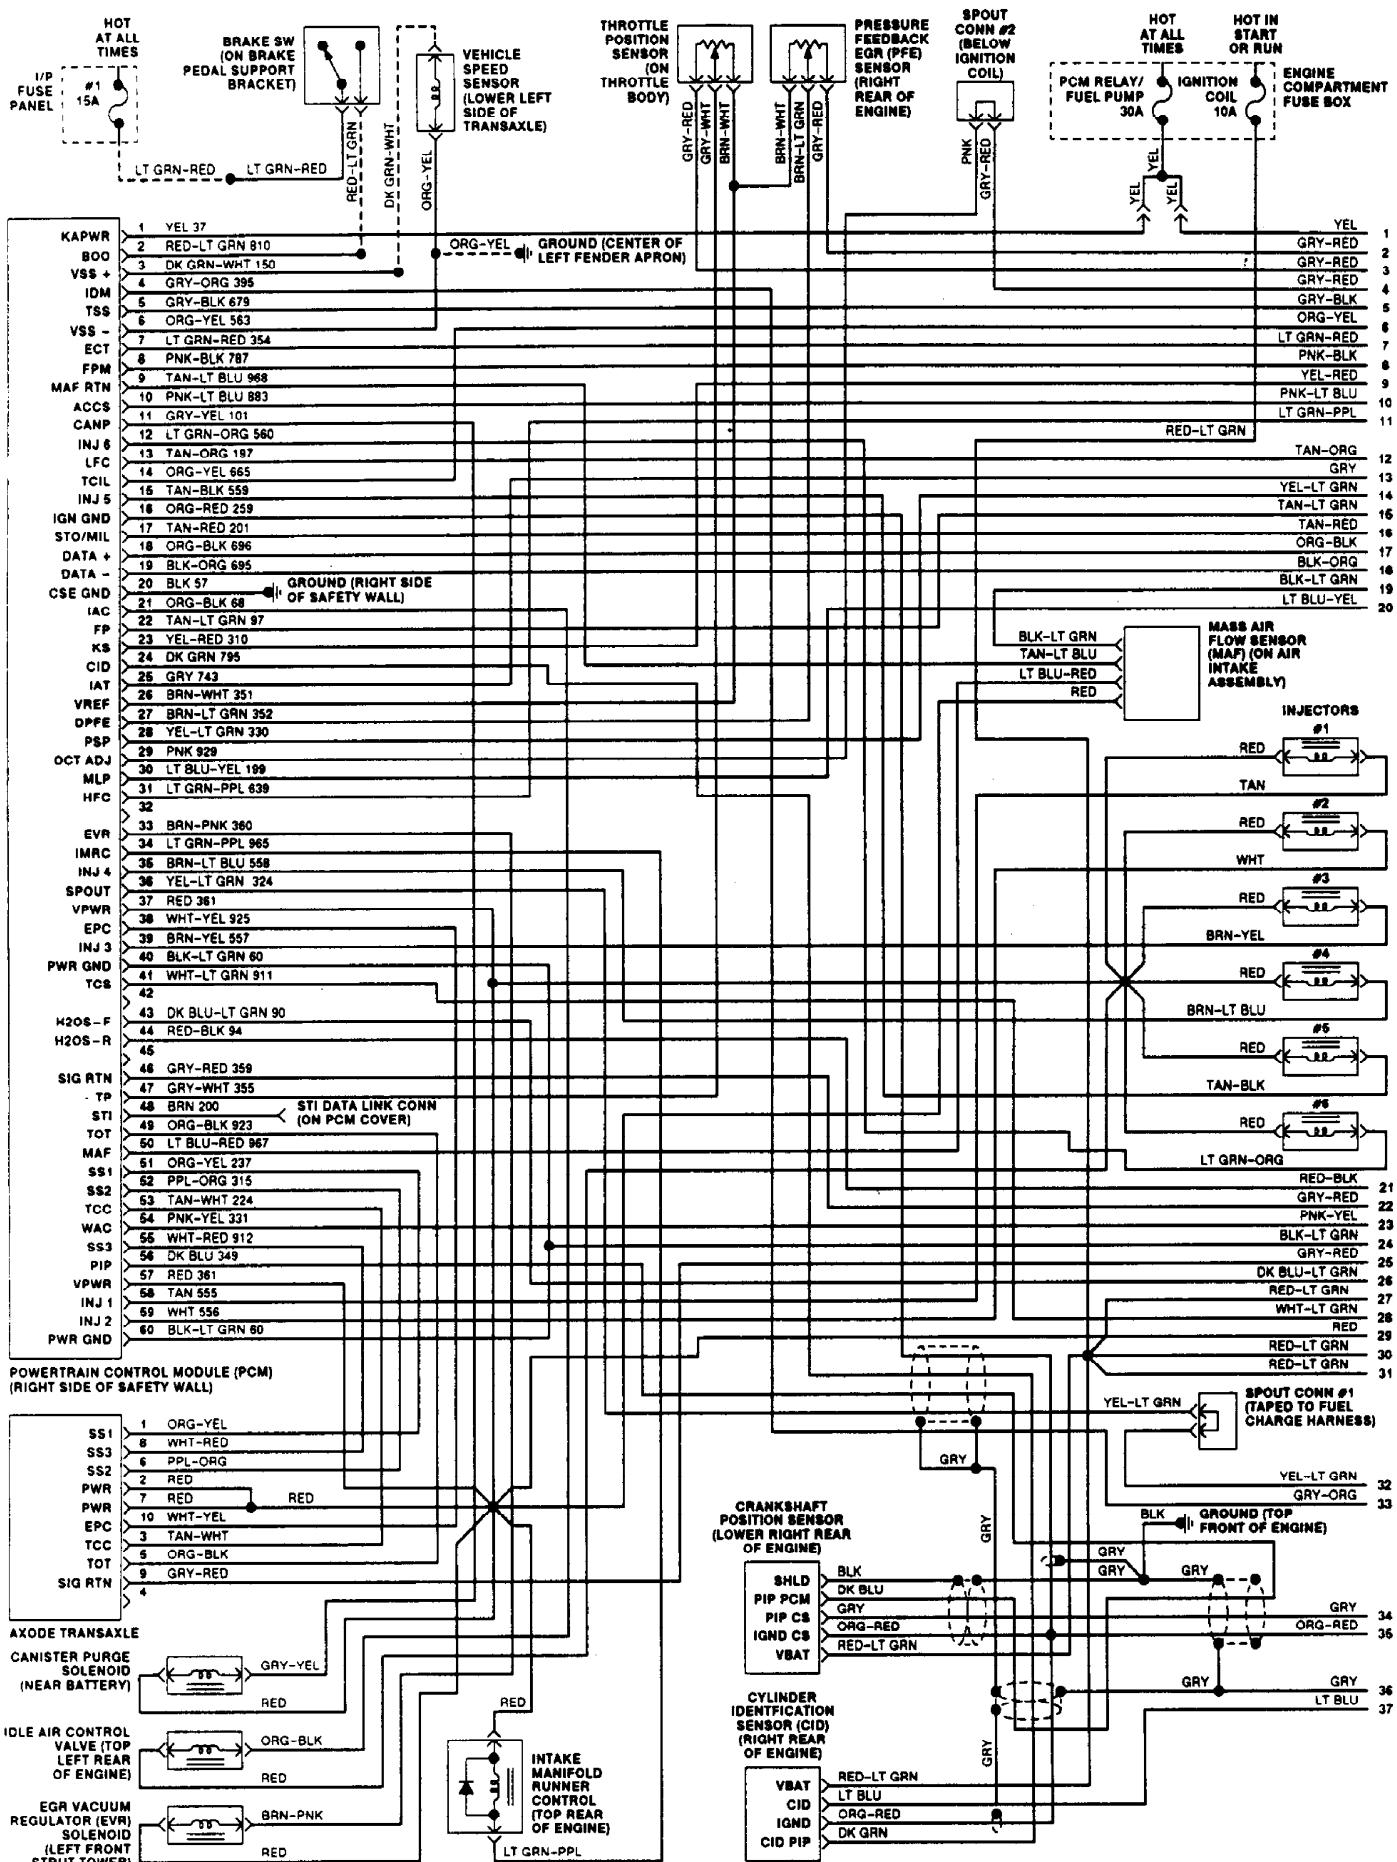


93J40666

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 127: EEC-IV Wiring Diagram (3.2L SHO - 2 of 2)
1993 Ford Taurus LX

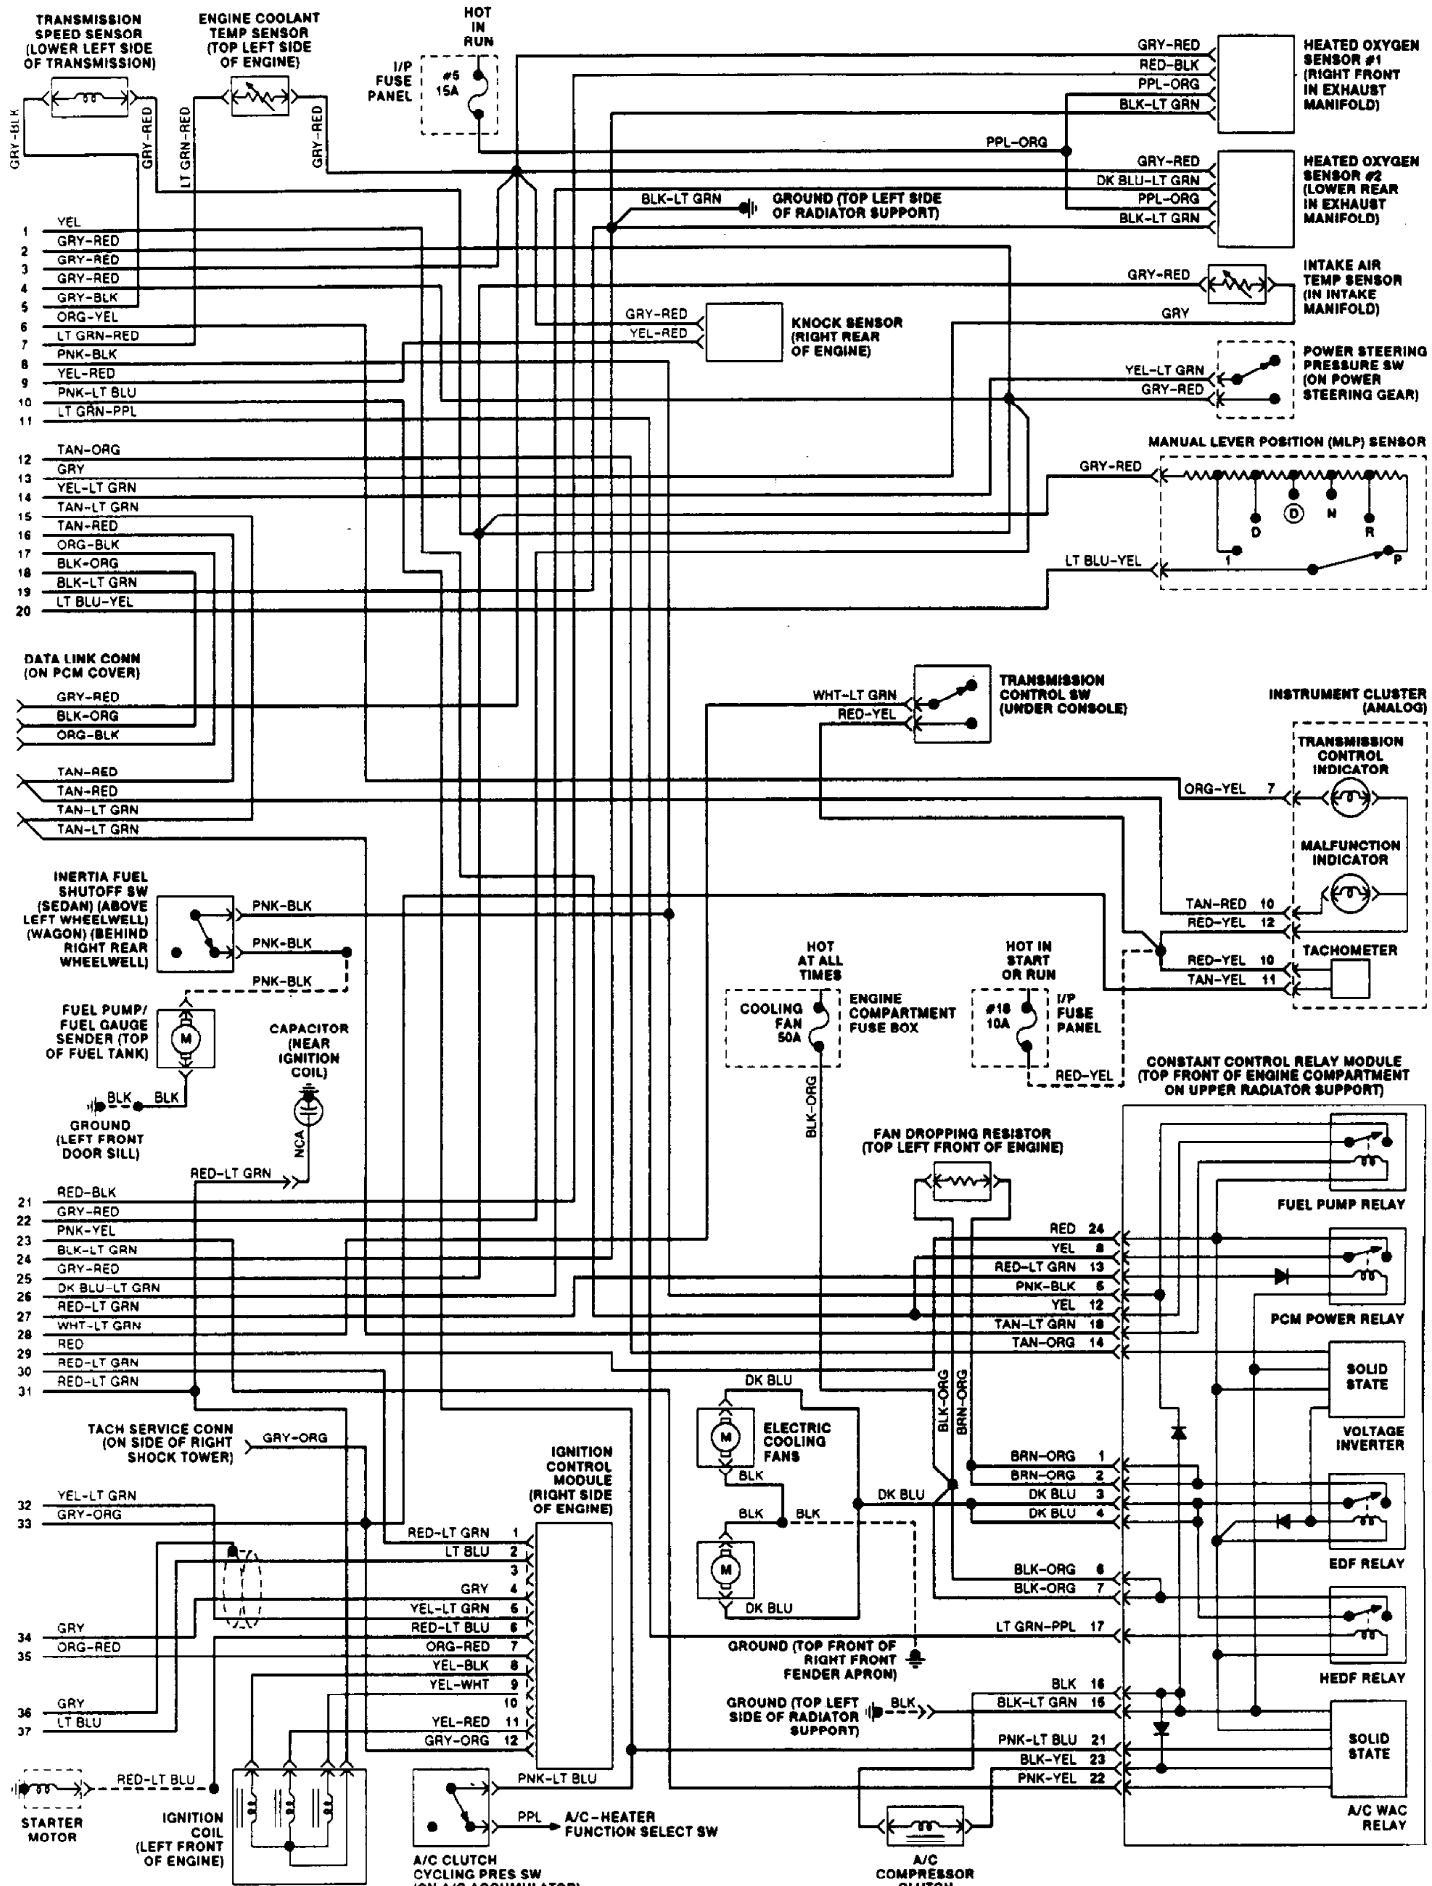


93A40667

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 128: CID Wiring Harness Circuits (3.0L Flexible Fuel)
1993 Ford Taurus LX

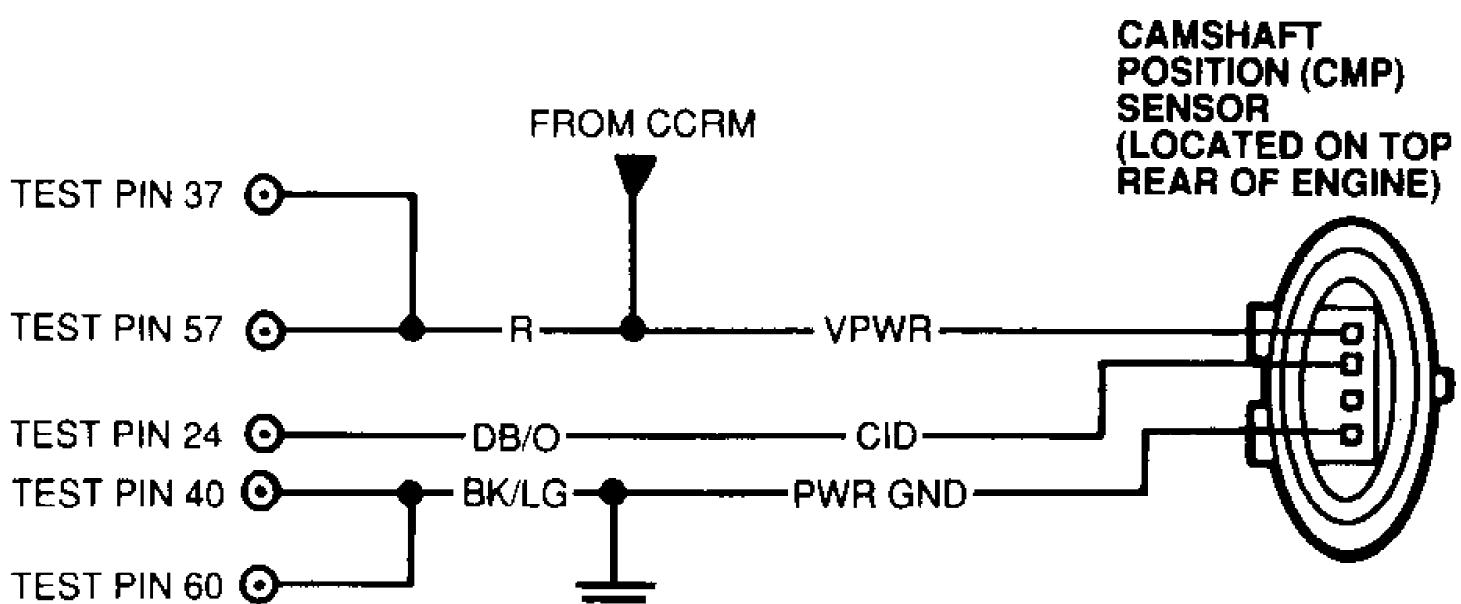


***TEST PINS LOCATED ON BREAKOUT BOX.
ALL HARNESS CONNECTORS VIEWED IN MATING SURFACE.**

93A40535

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 129: HO2S Sensor Wiring Harness Connector
1993 Ford Taurus LX

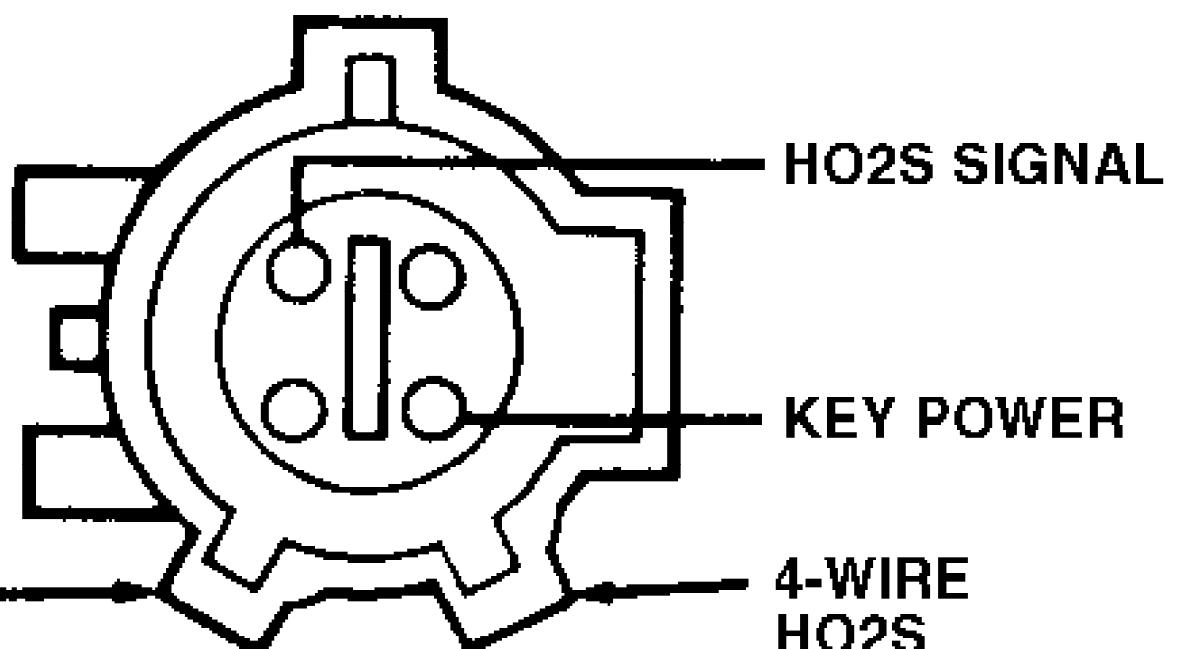


93B40619

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

**Fig. 130: Identifying A/C Relay Wiring Harness Connector
Terminals**
1993 Ford Taurus LX

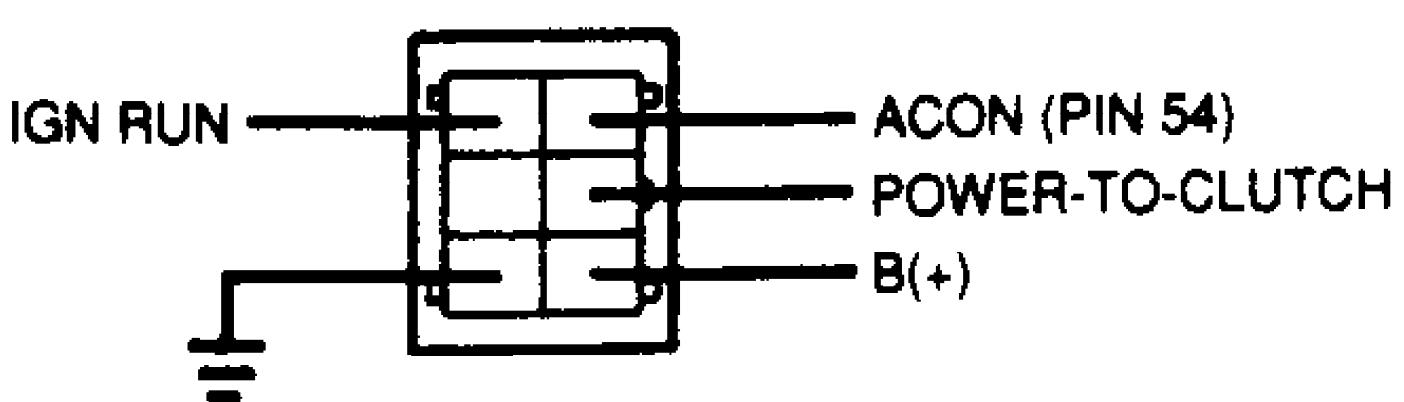


93G40754

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN


**Fig. 131: DIS Module Wiring Harness Connector
Terminals (3.2L SHO)**
1993 Ford Taurus LX

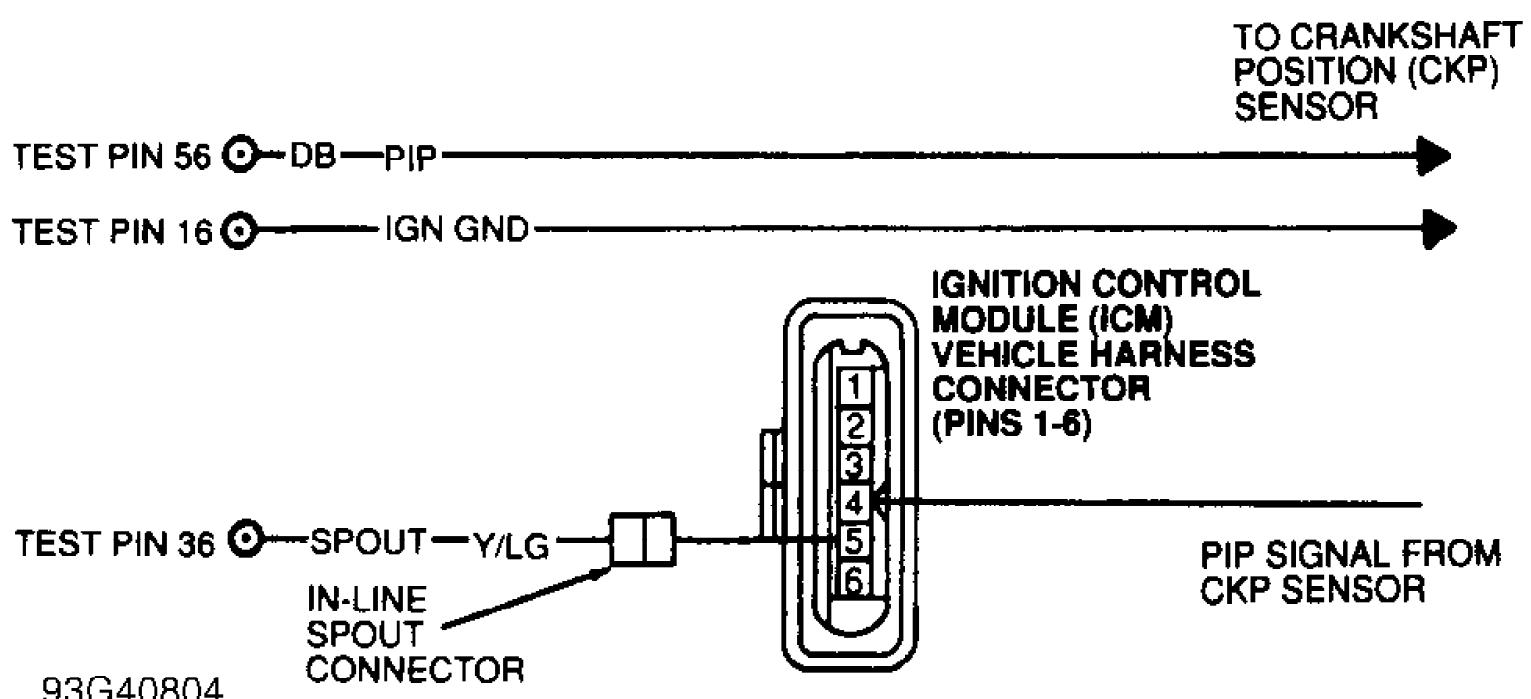


WIRING DIAGRAMS
Power & Ground Distribution

PAVLIN

Fig. 132: EI Wiring Diagram (3.0L Flexible Fuel)
1993 Ford Taurus LX

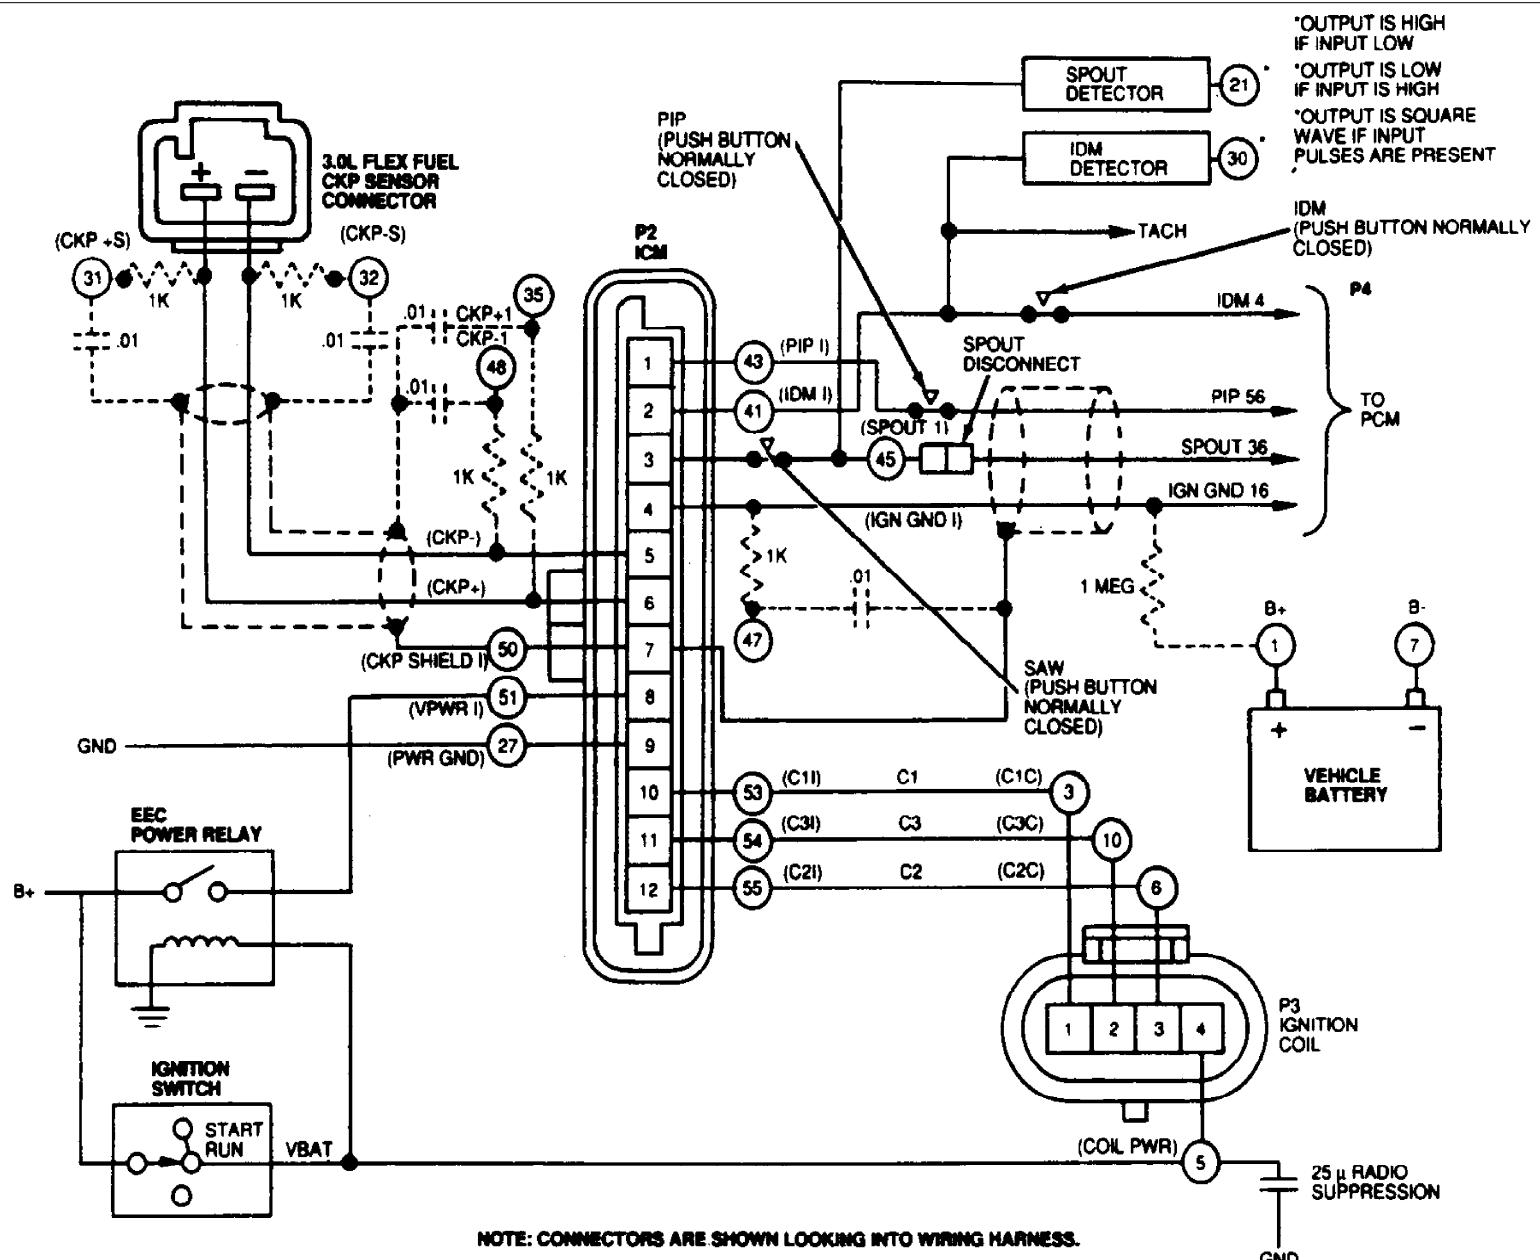

PIN No.	3.0L Flexible Fuel
1	PIP I
2	IDM I
3	SPOUT I
4	IGN GND I
5	CKP-I
6	CKP+I
7	CKP Shield
8	VPWR I
9	PWR GND I
10	Coil 1 (CYL 1 and 5) I
11	Coil 3 (CYL 2 and 6) I
12	Coil 2 (CYL 3 and 4) I

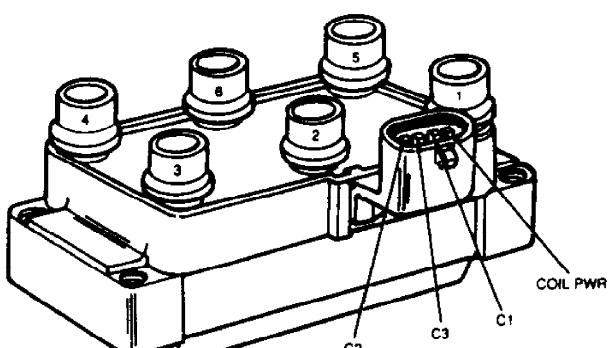


93I41481

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 133: EEC-IV Wiring Diagram (3.0L Except SHO 1 of 2)
1993 Ford Taurus LX

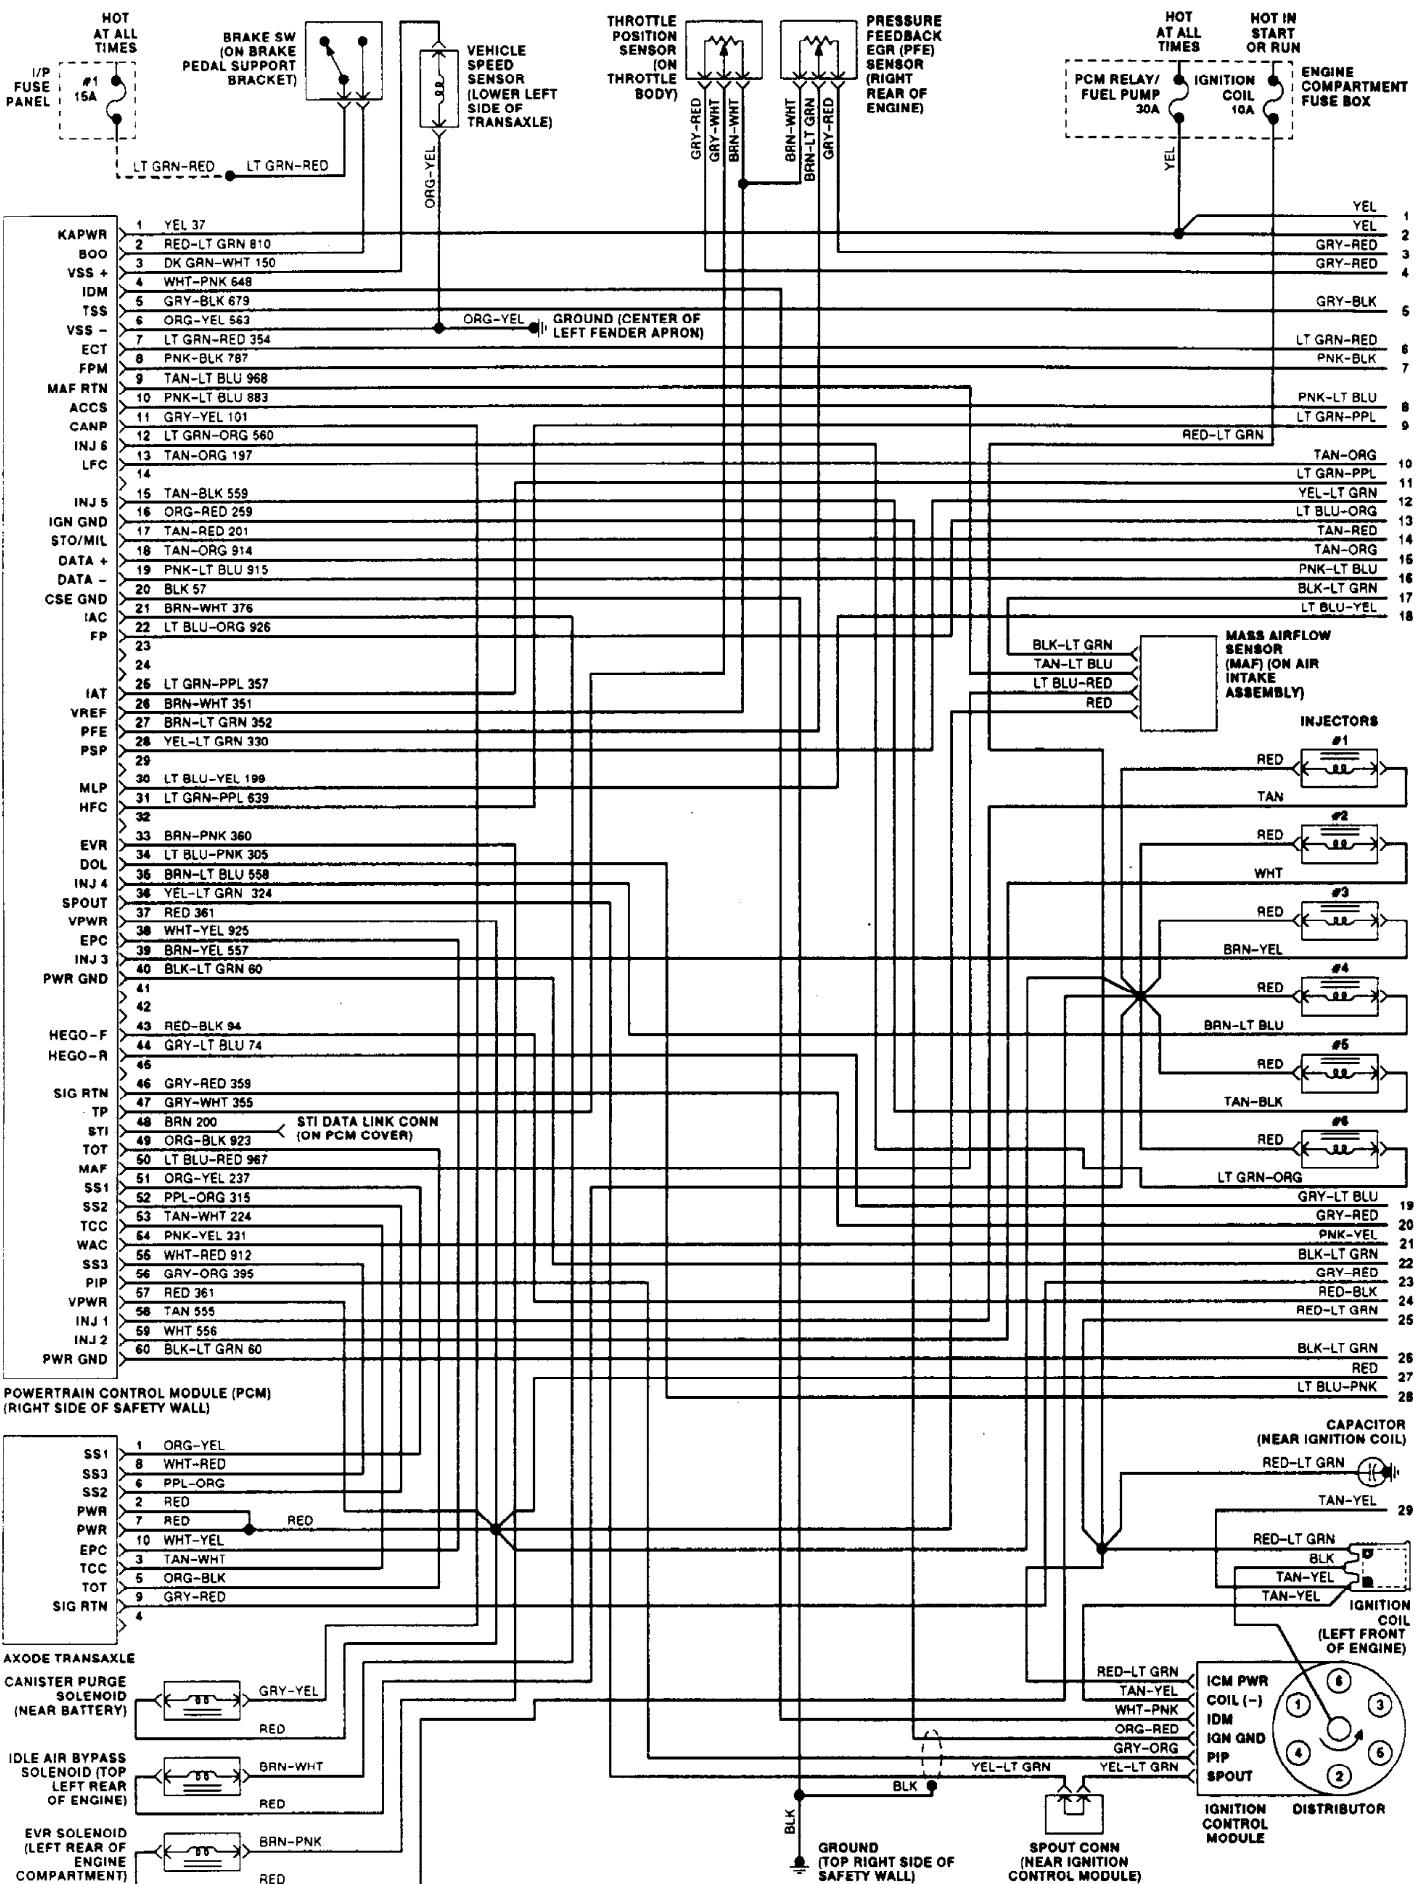


WIRING DIAGRAMS

Power & Ground Distribution

PAVLIN

Fig. 134: EEC-IV Wiring Diagram (3.0L Except SHO 2 of 2)
1993 Ford Taurus LX

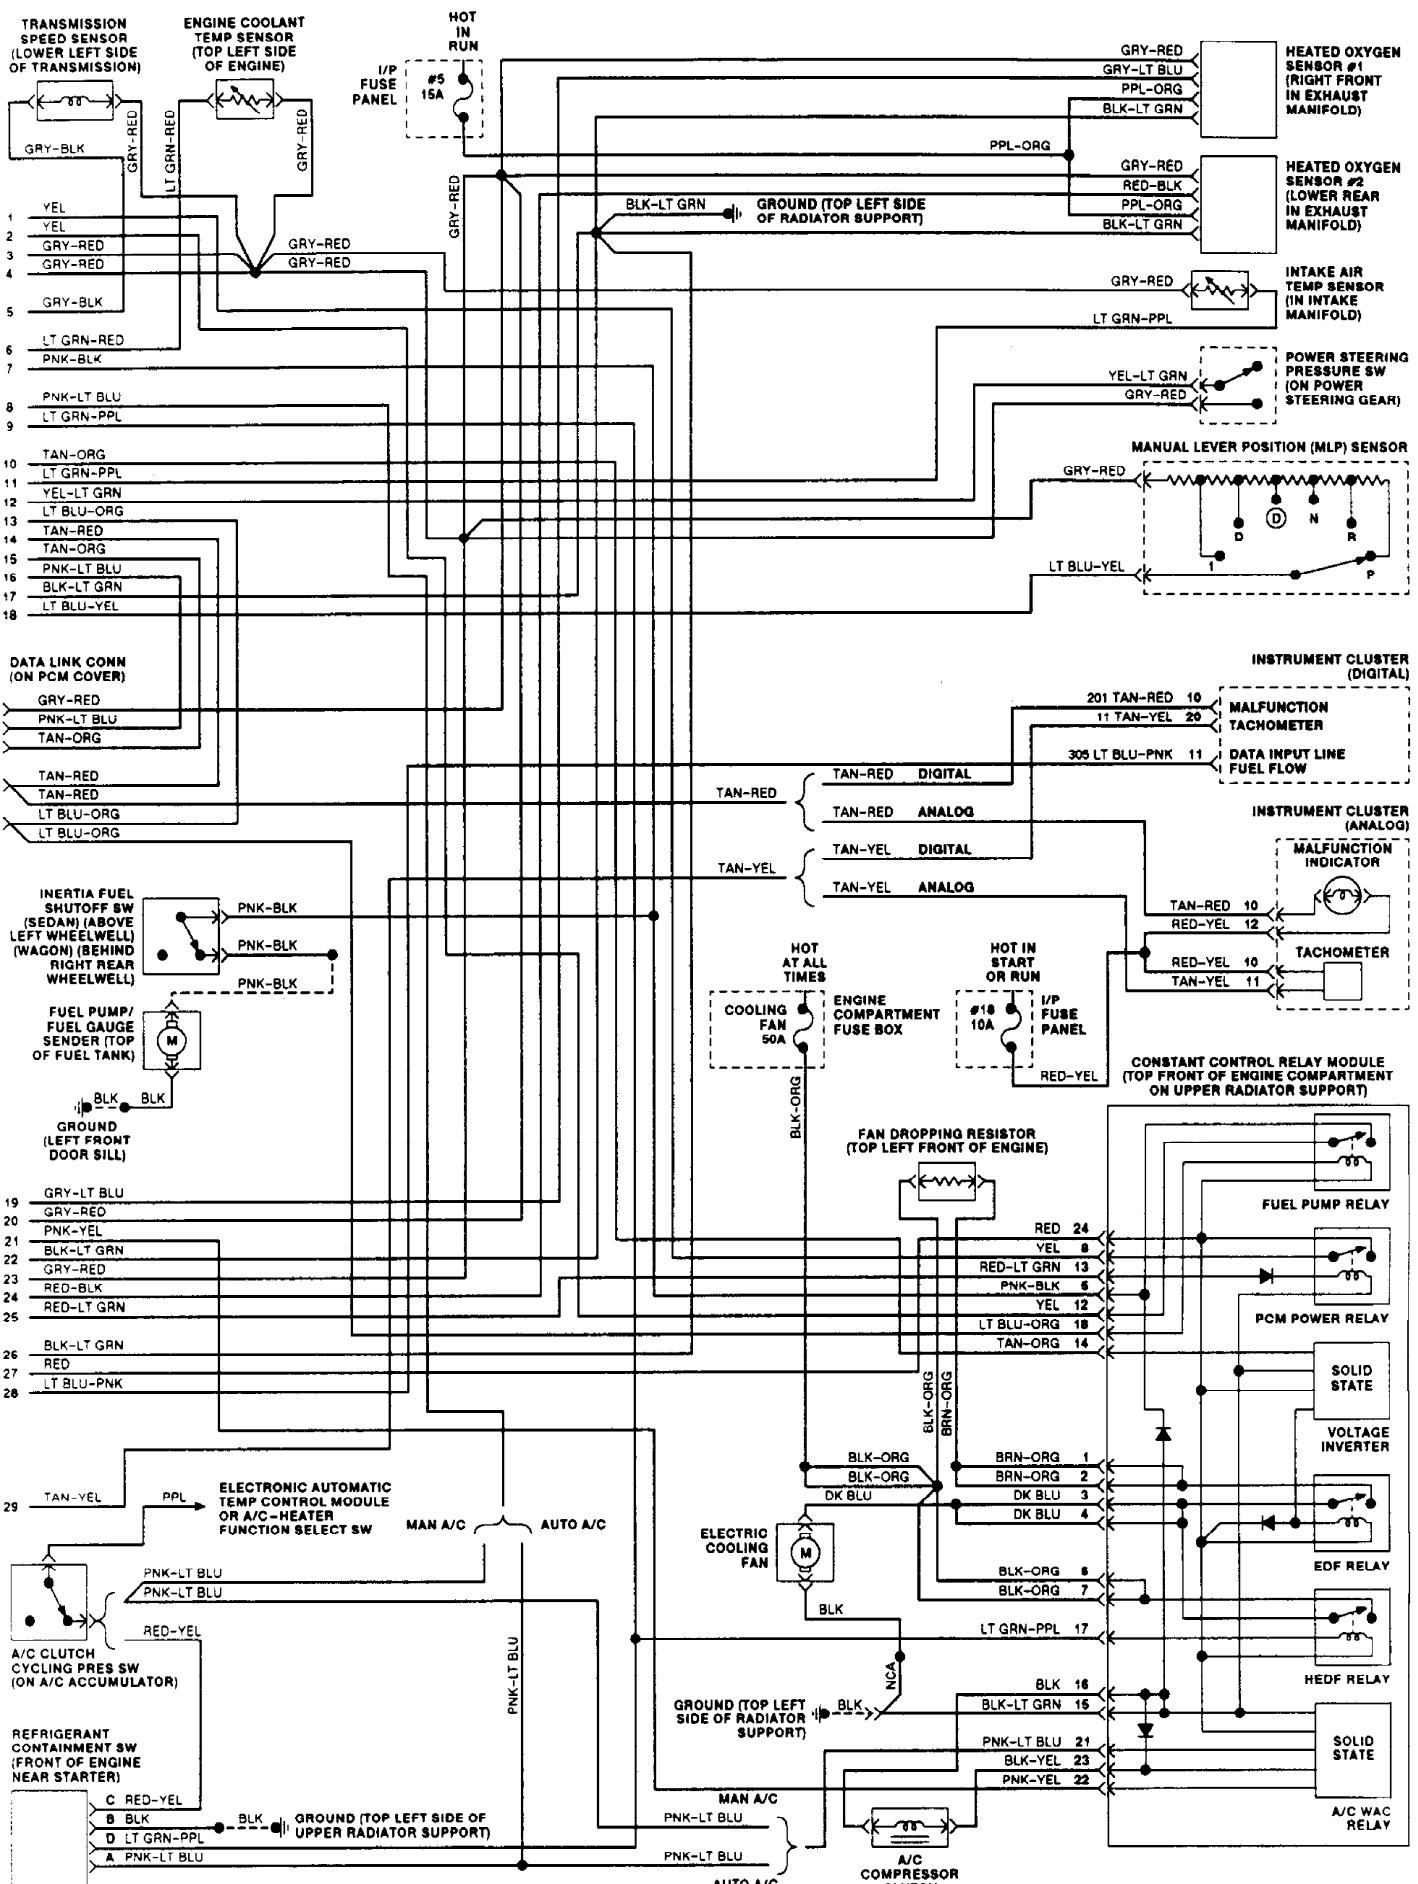


93A40659

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 135: EEC-IV Wiring Diagram (3.8L - 1 of 2)
1993 Ford Taurus LX

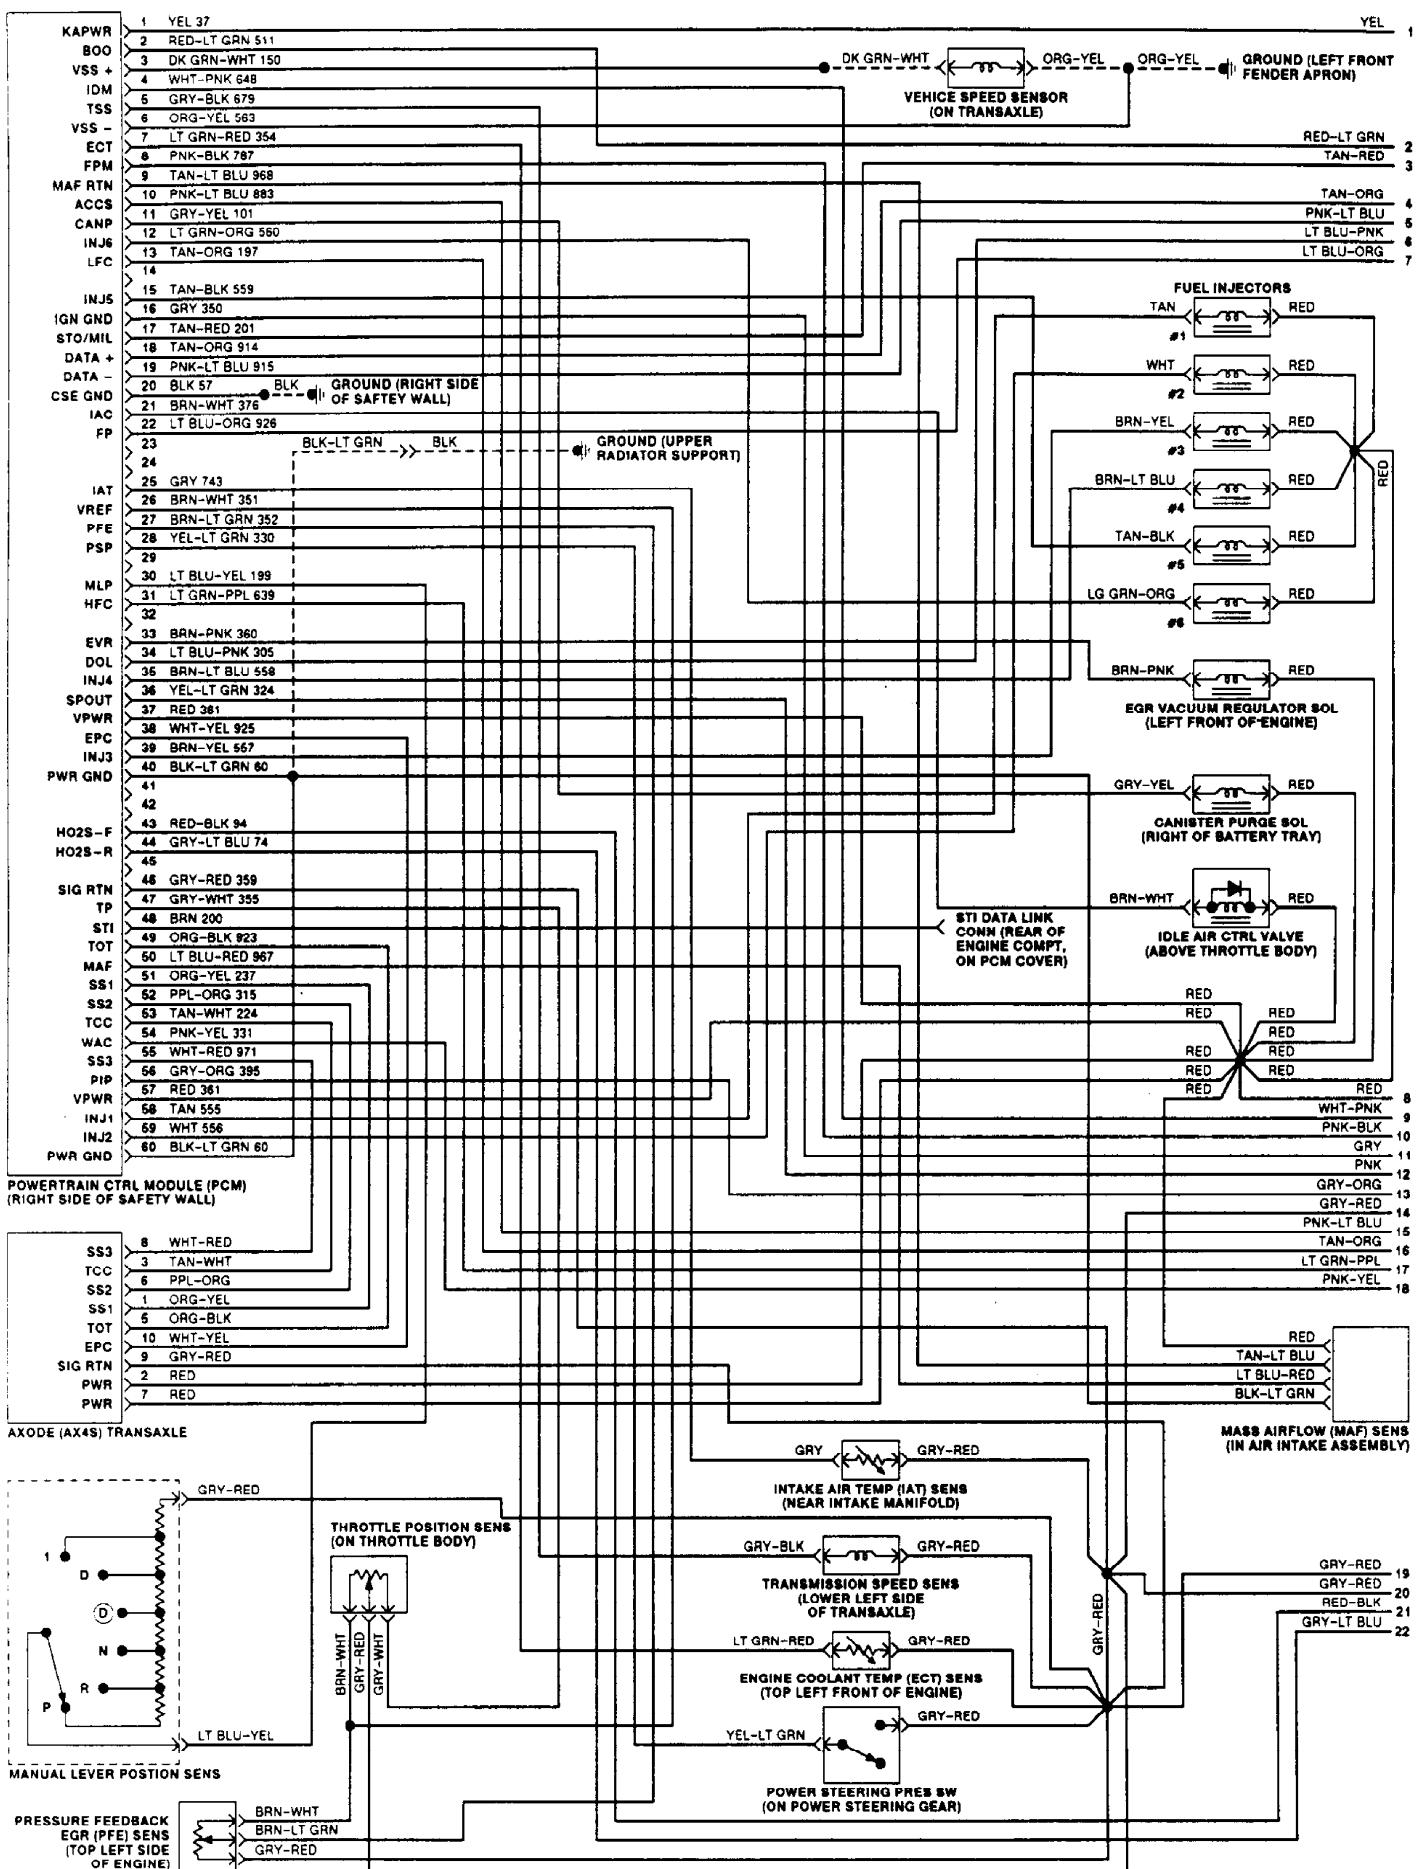


93D40660

WIRING DIAGRAMS

Power & Ground Distribution

PAVLIN


Fig. 136: EEC-IV Wiring Diagram (3.8L - 2 of 2)
1993 Ford Taurus LX

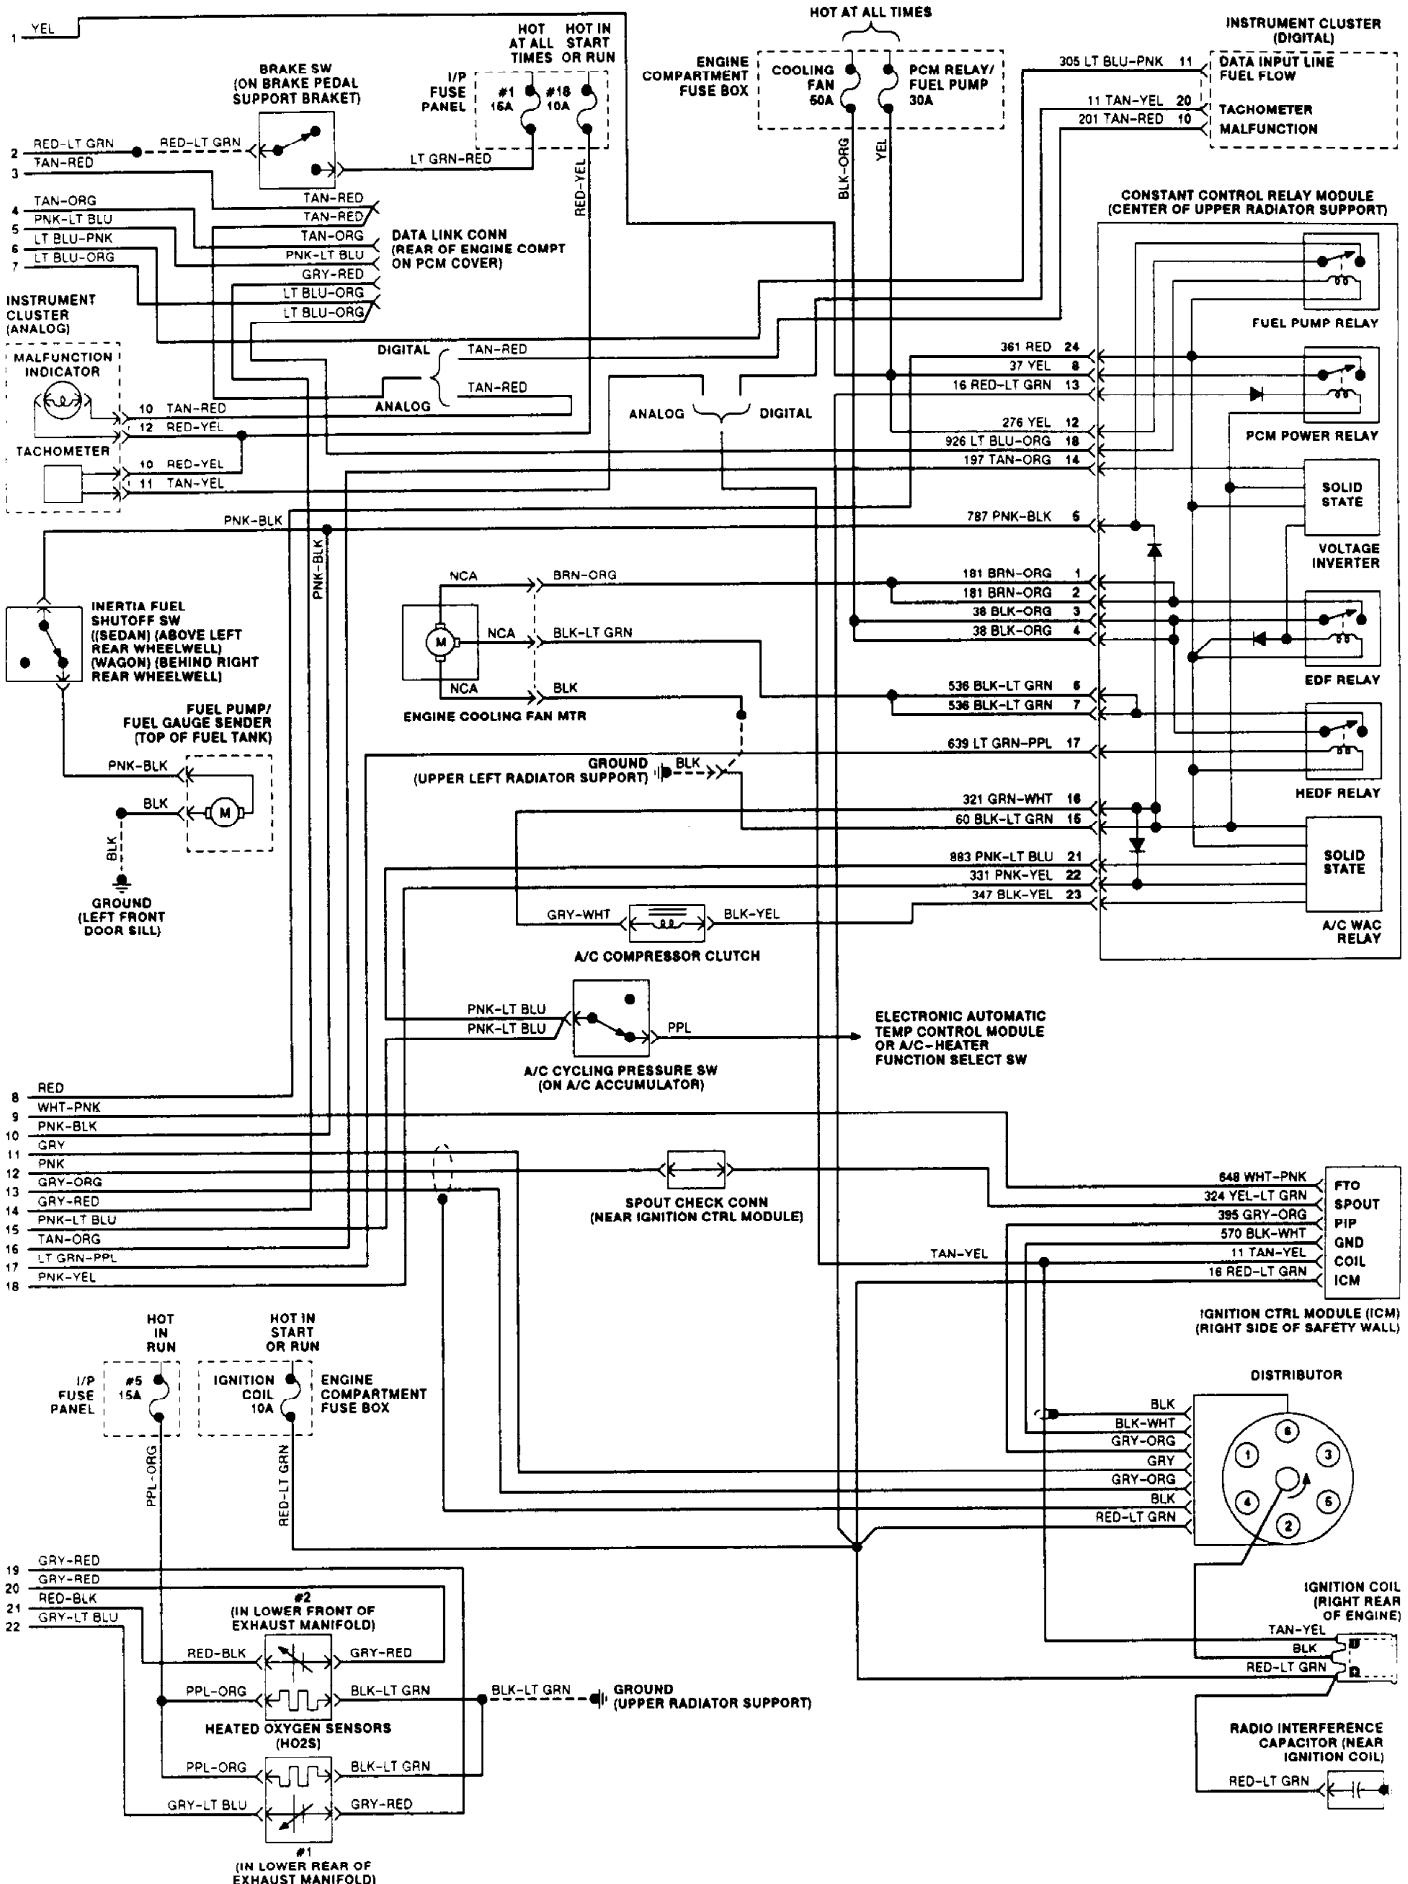

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 137: EEC-IV Wiring Diagram (3.0L Flex Fuel - 1 of 2)
1993 Ford Taurus LX

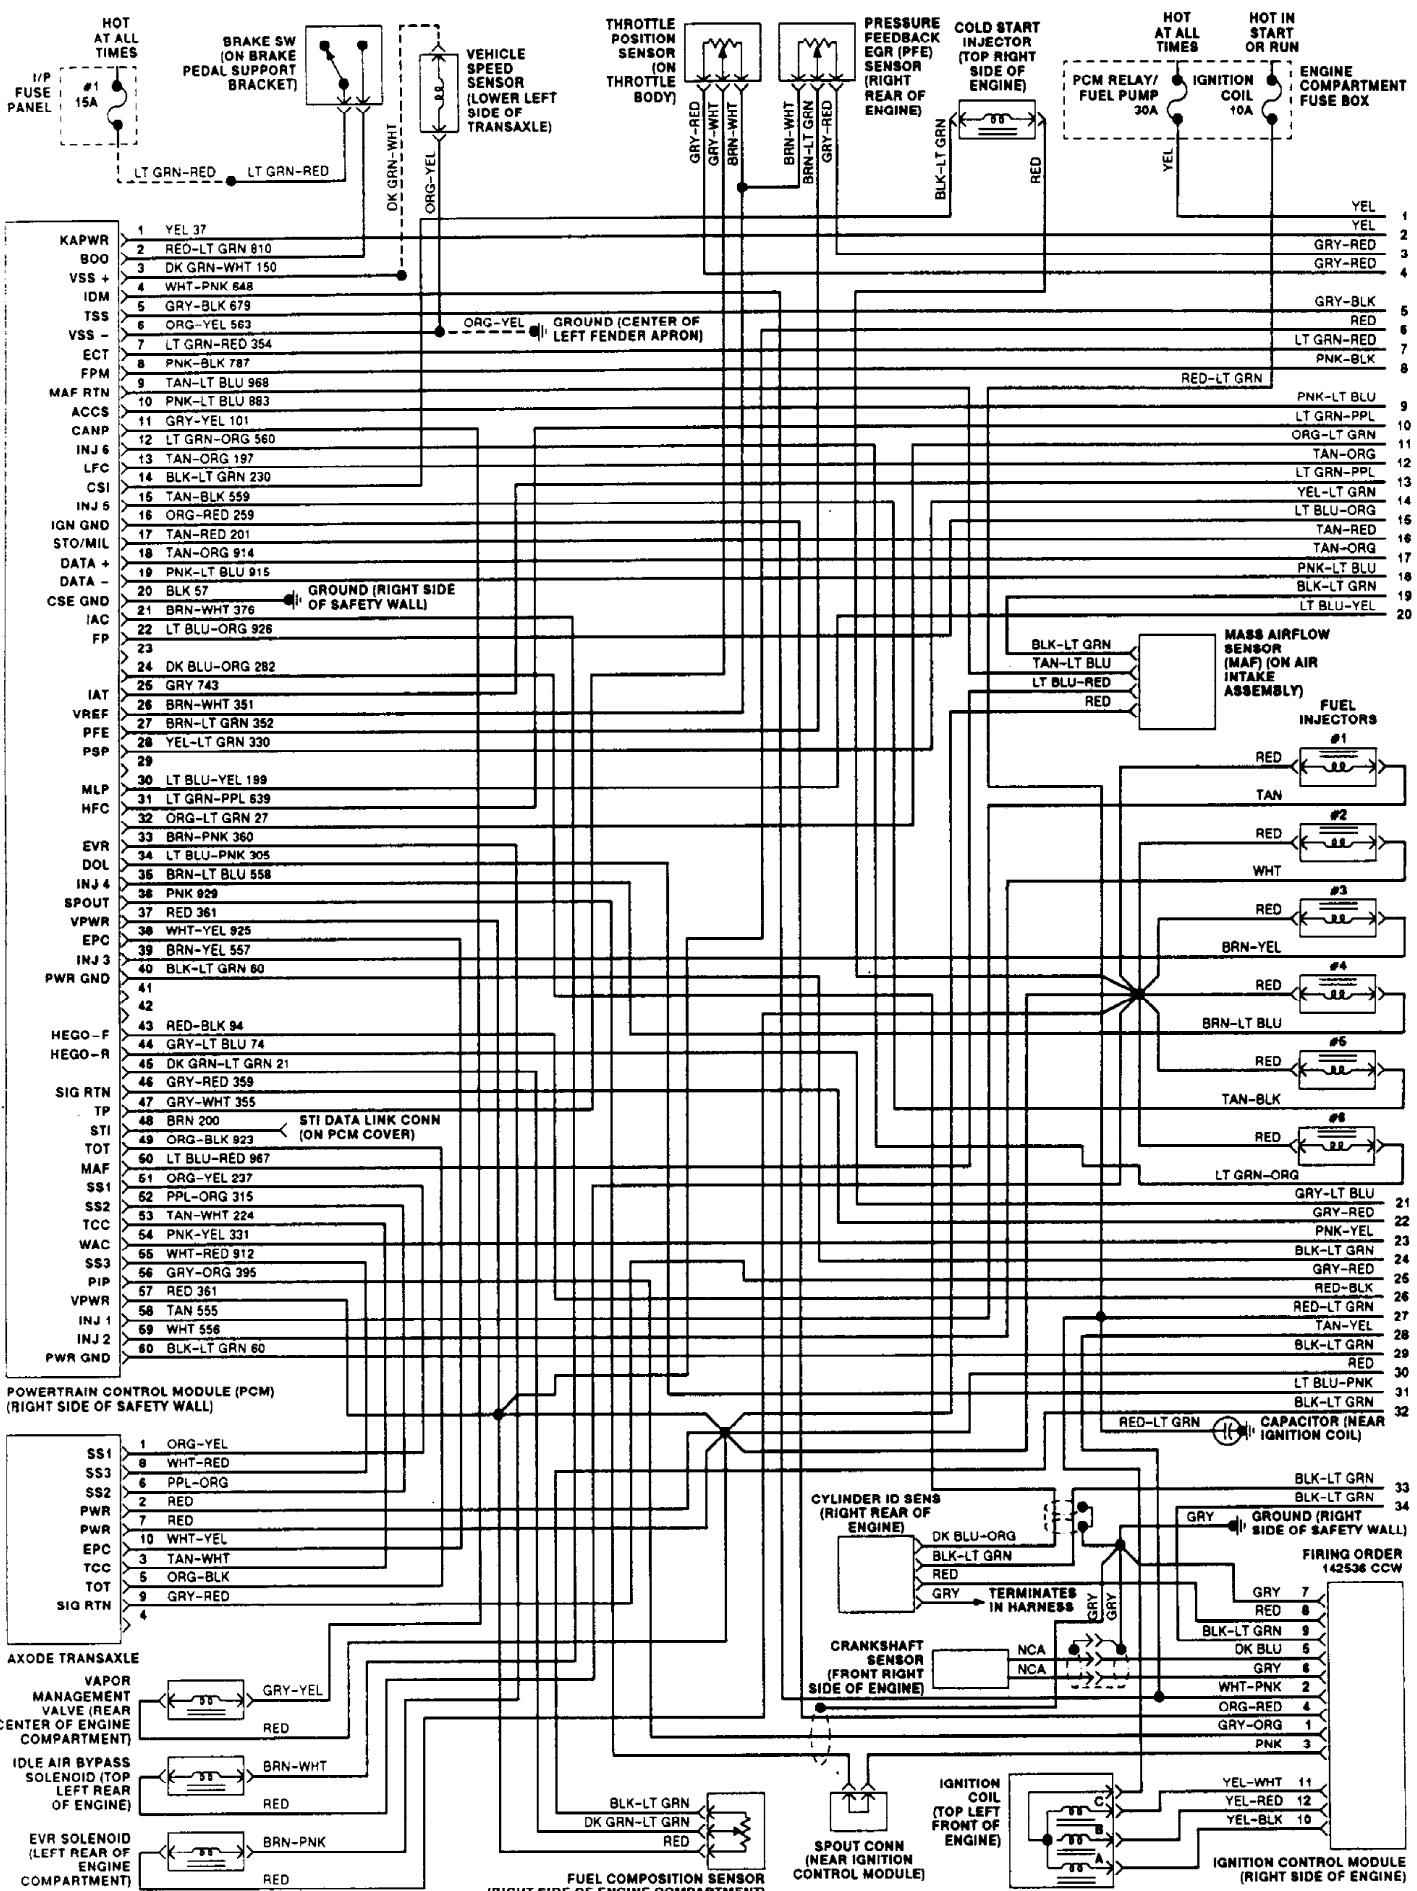


93F40862

WIRING DIAGRAMS

Power & Ground Distribution

PAVLIN

Fig. 138: EEC-IV Wiring Diagram (3.0L Flex Fuel - 2 of 2)
1993 Ford Taurus LX

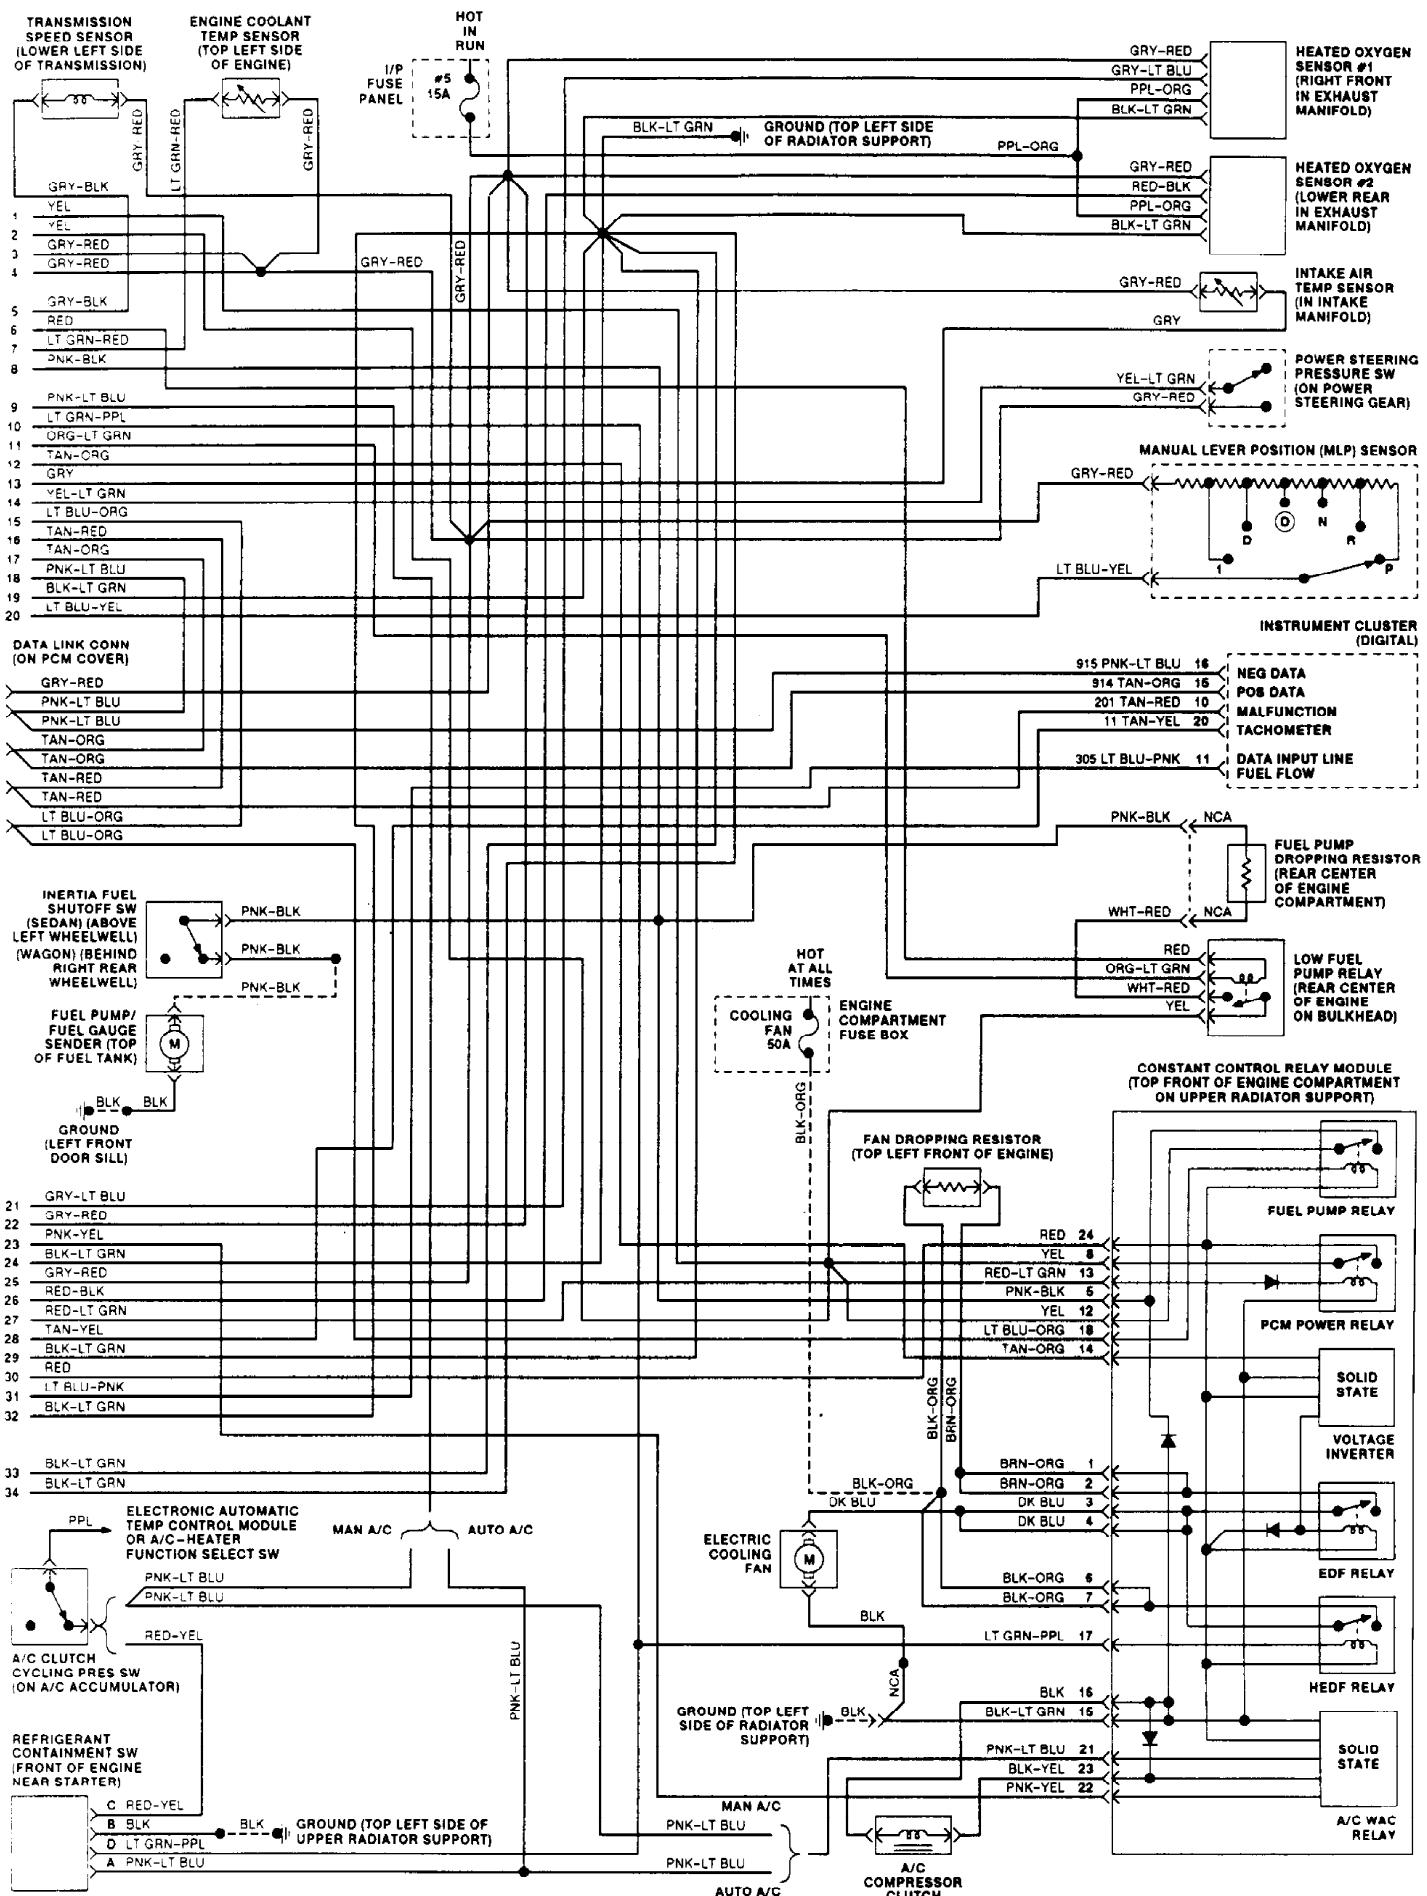


93G40663

WIRING DIAGRAMS

Power & Ground Distribution

PAVLIN

Fig. 139: EEC-IV Wiring Diagram (3.0L SHO - 1 of 2)
1993 Ford Taurus LX

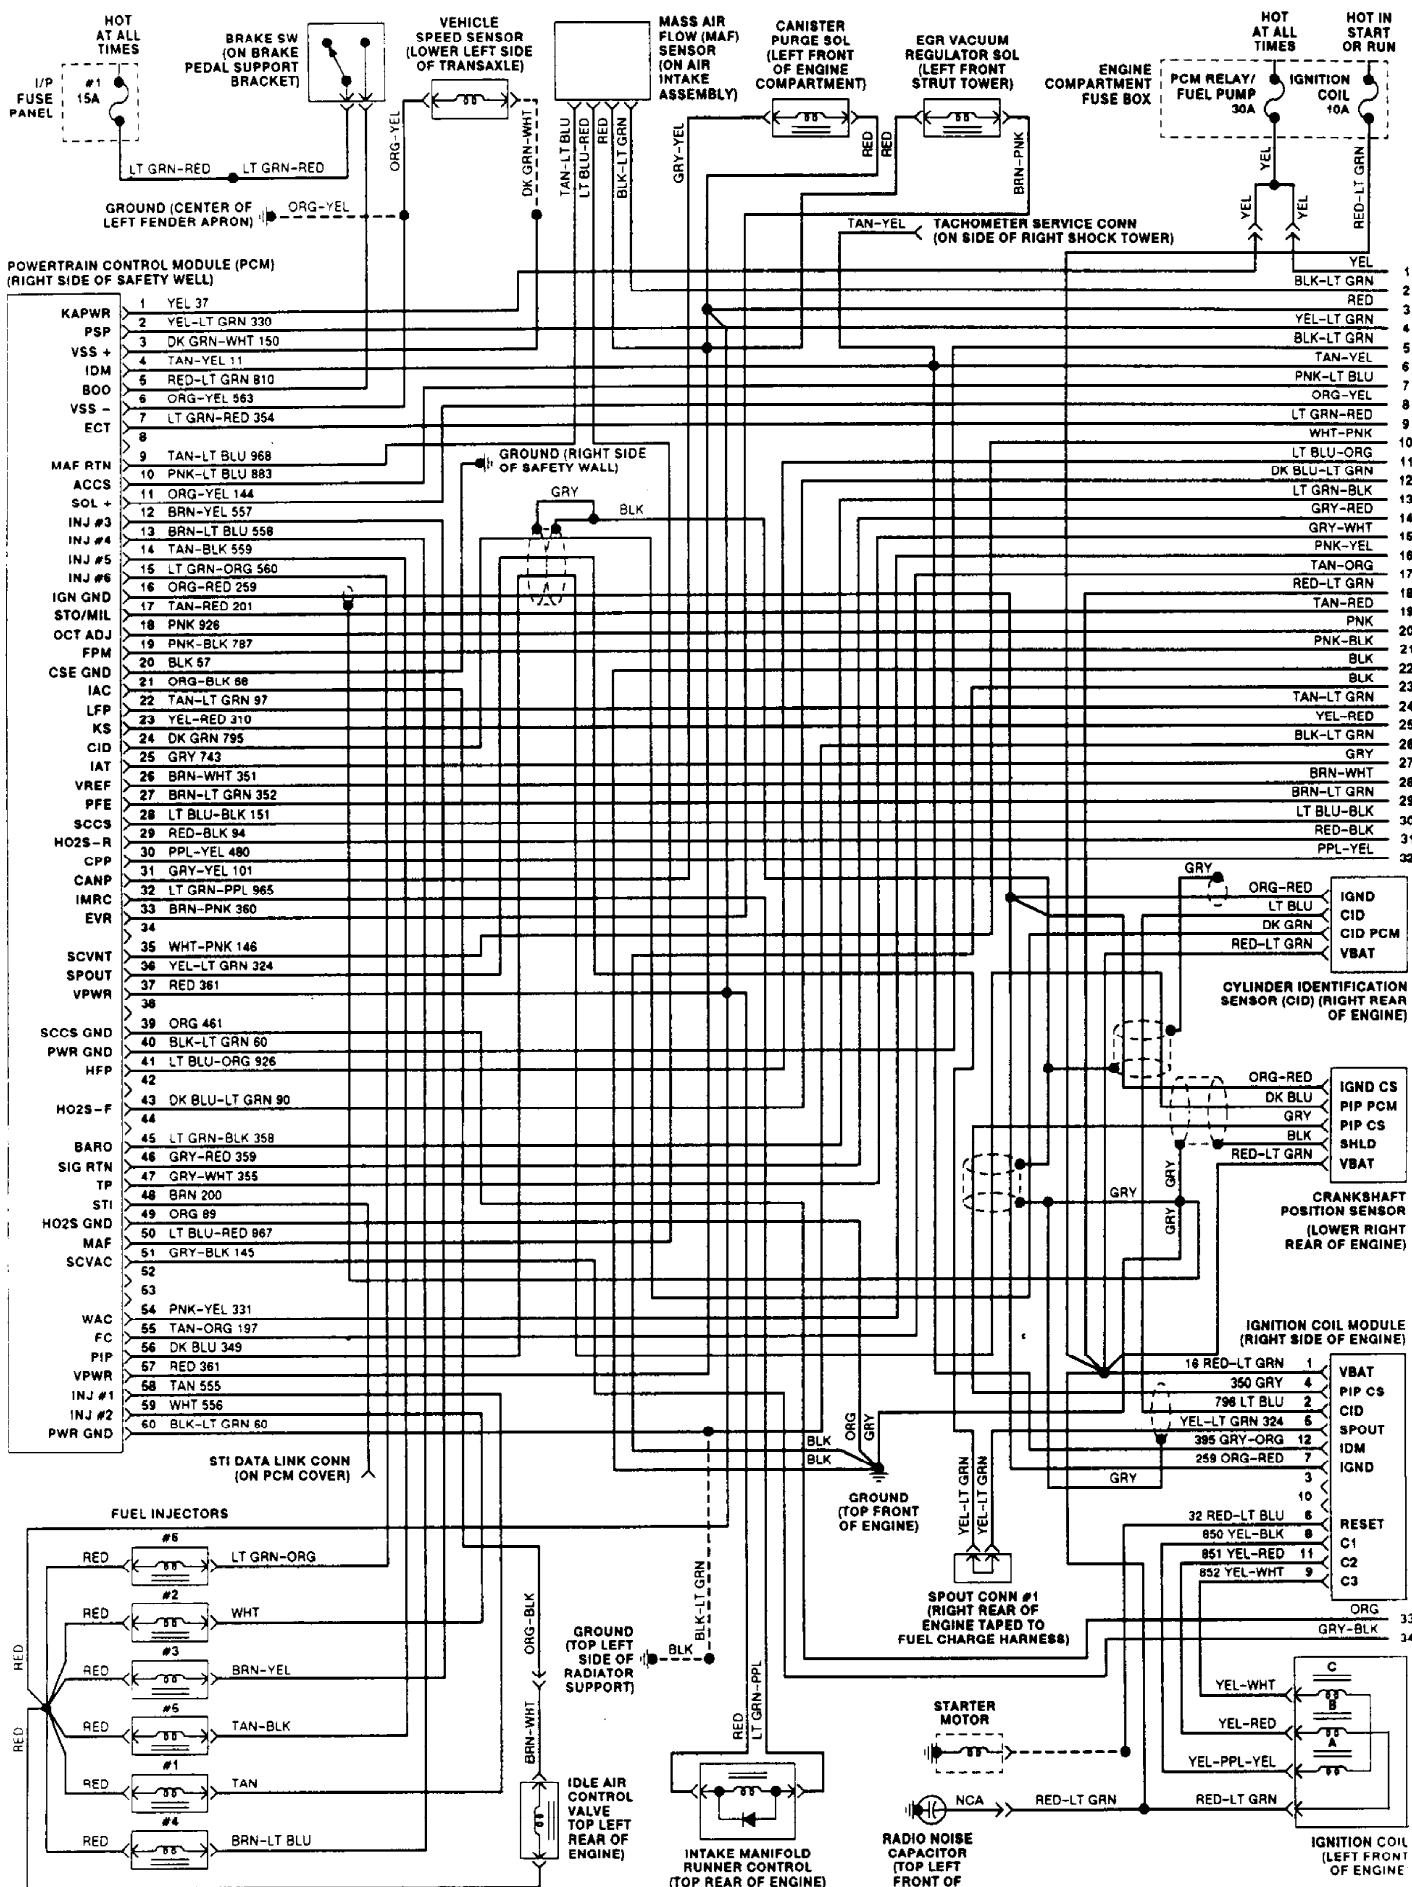


93H40684

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 140: EEC-IV Wiring Diagram (3.0L SHO - 2 of 2)
1993 Ford Taurus LX

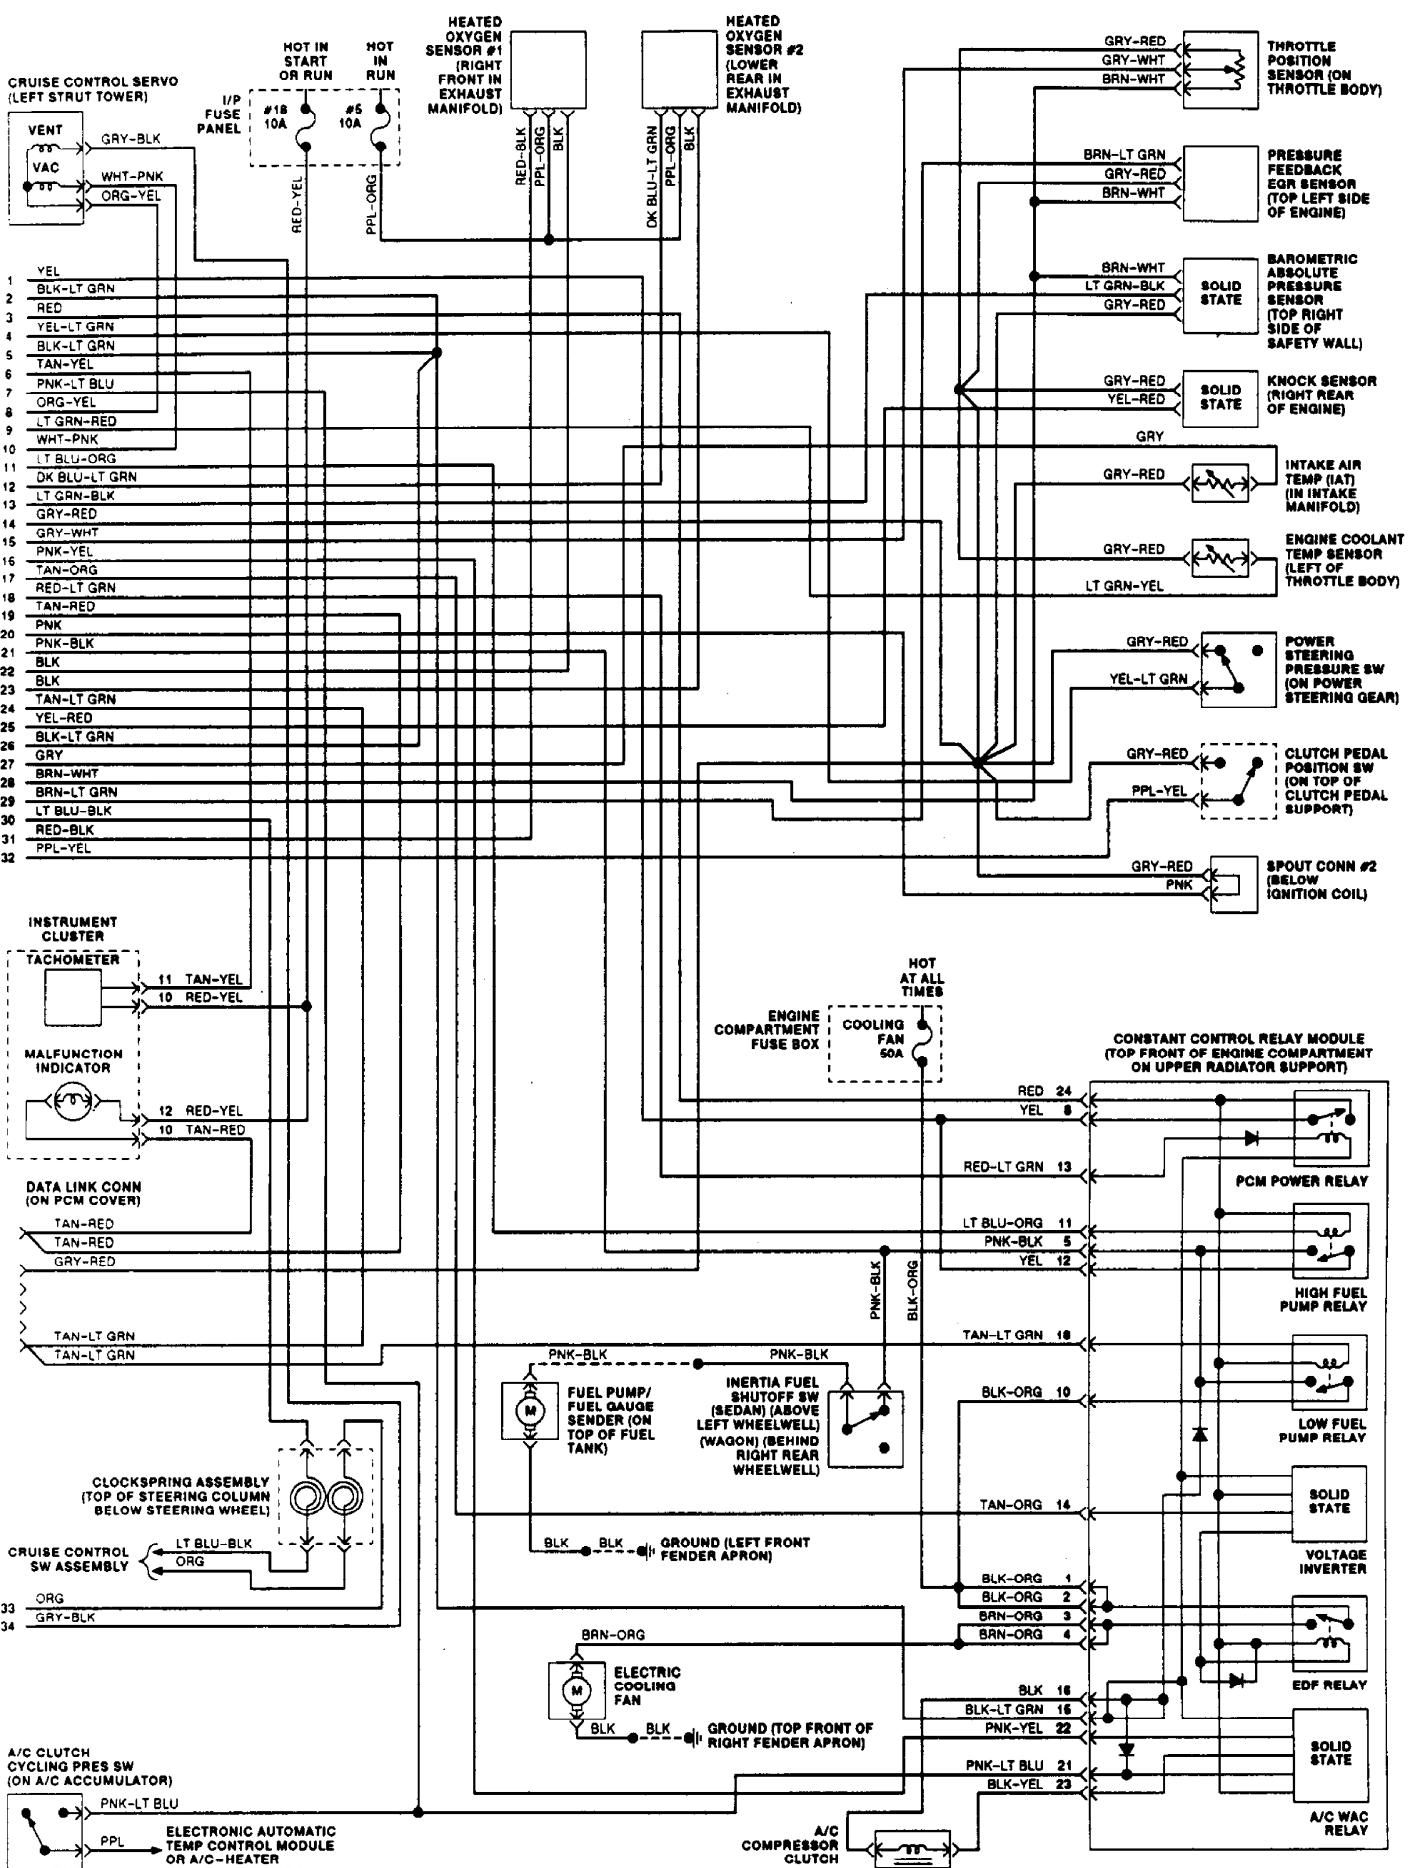


93I40665

WIRING DIAGRAMS
P ower & Ground Distribution

PAVLIN

Fig. 141: EEC-IV Wiring Diagram (3.2L SHO - 1 of 2)
1993 Ford Taurus LX

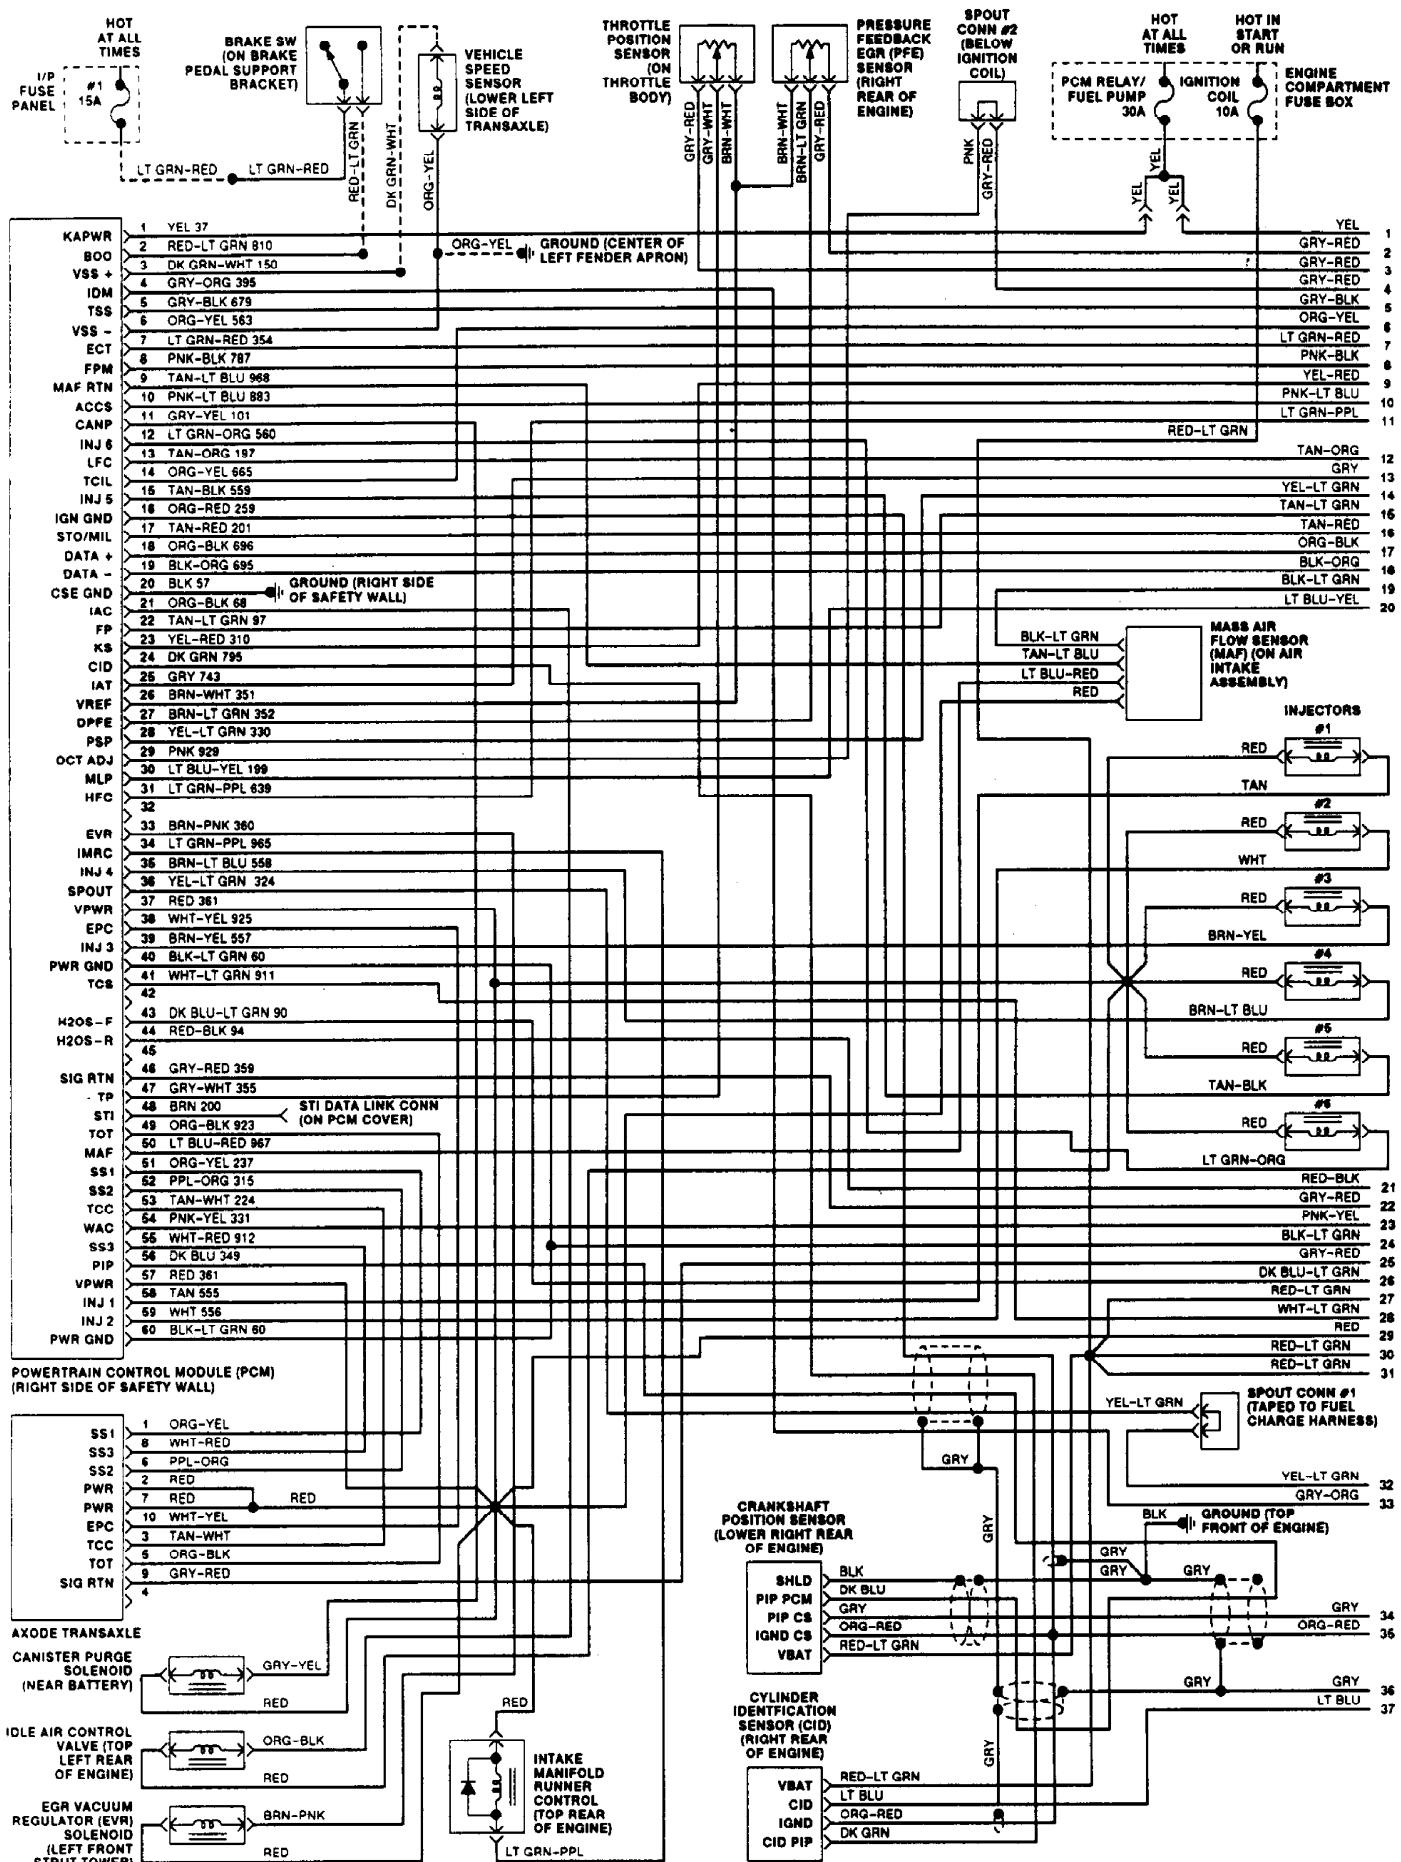


93J40666

WIRING DIAGRAMS

Power & Ground Distribution

PAVLIN

Fig. 142: EEC-IV Wiring Diagram (3.2L SHO - 2 of 2)
1993 Ford Taurus LX

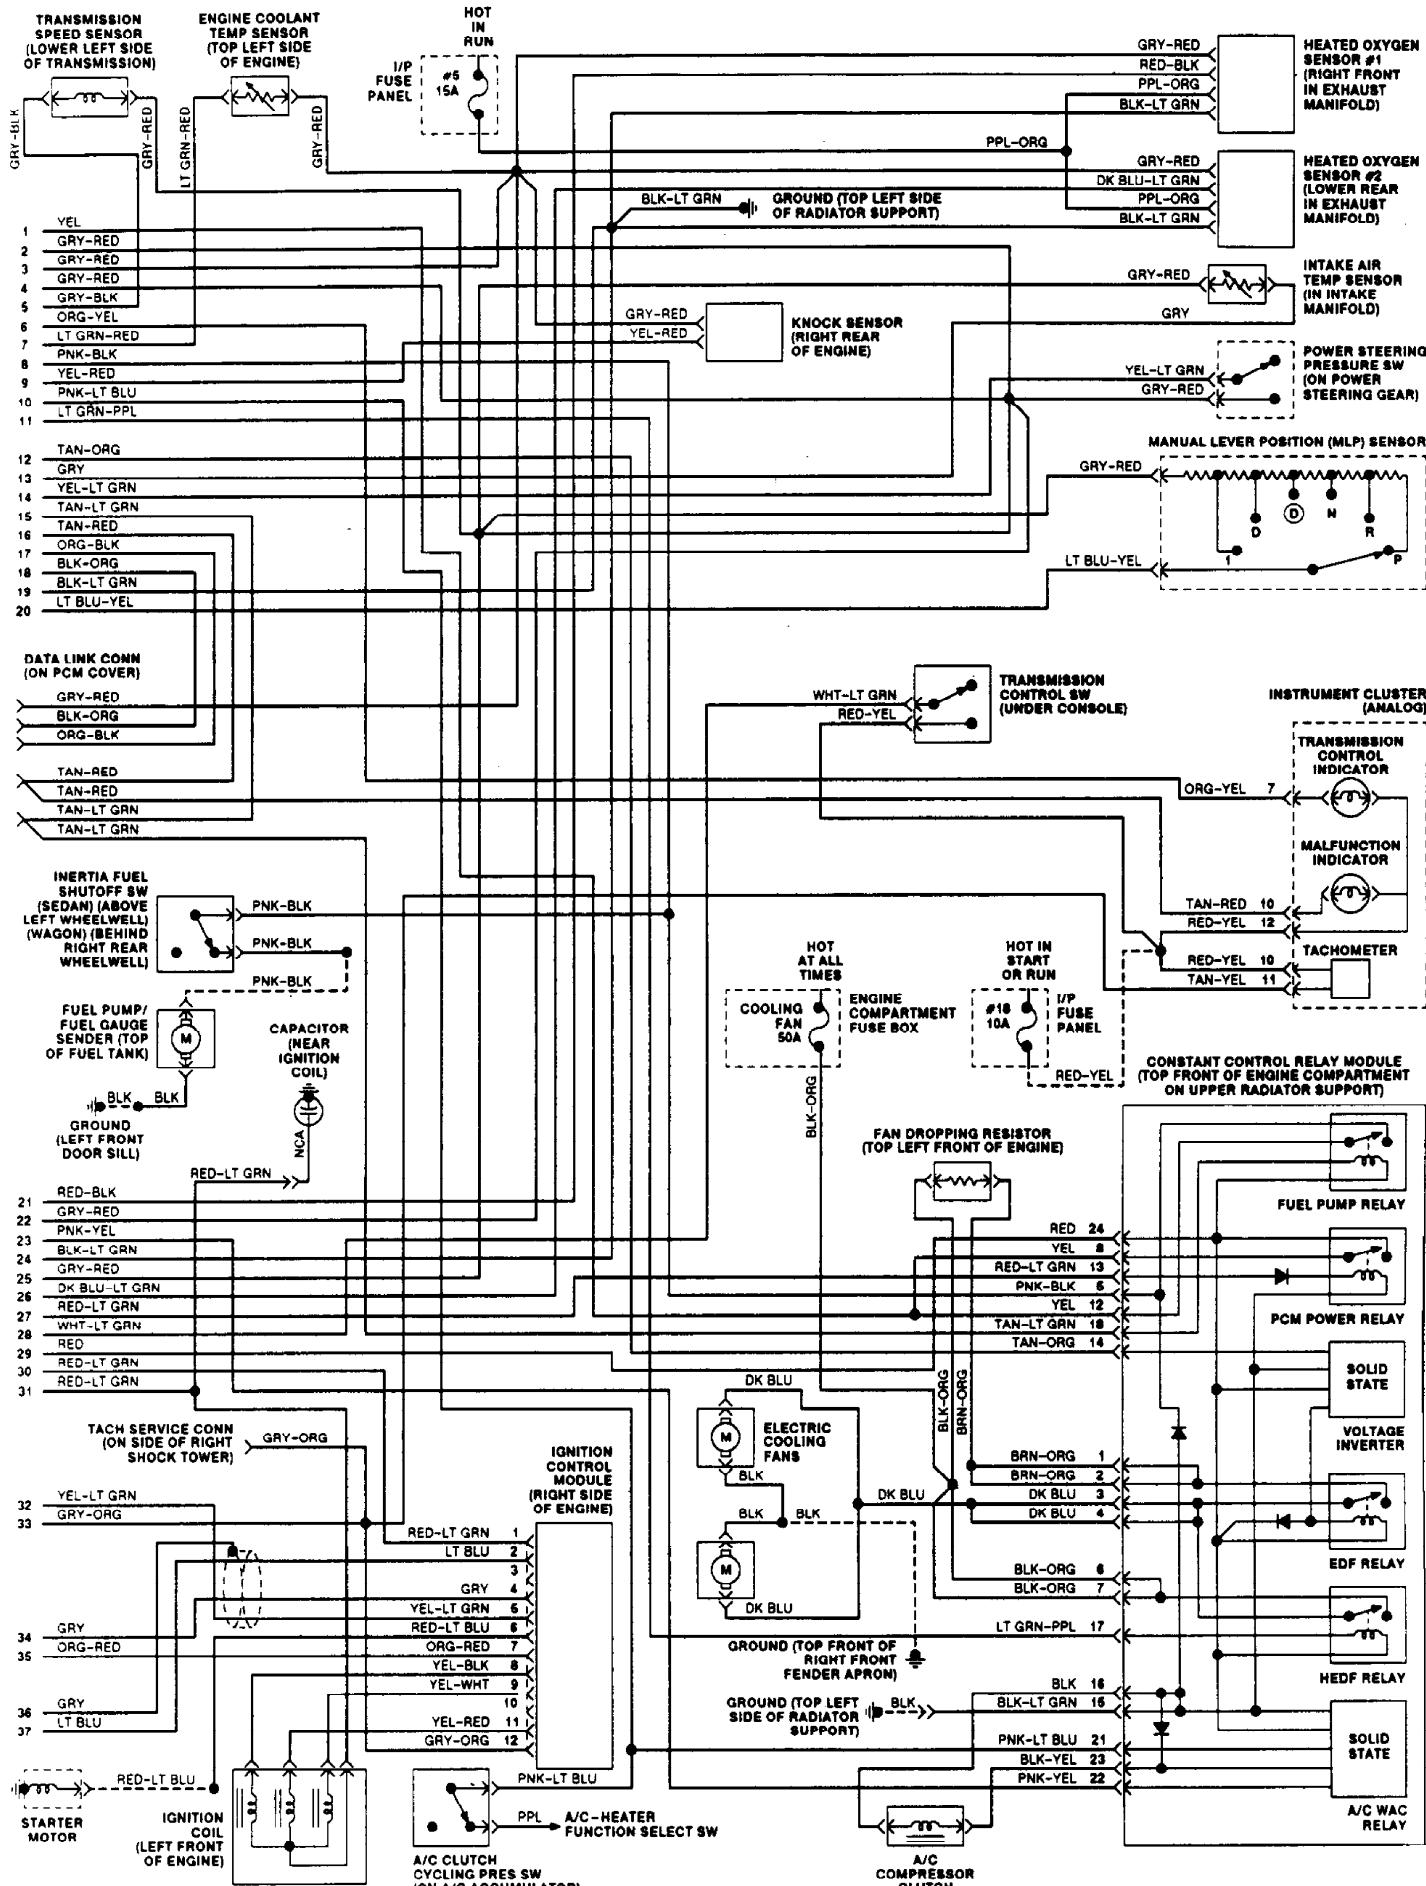


93A40667

WIRING DIAGRAMS
Power & Ground Distribution

PAVLIN

Fig. 143: Power Steering Module Wiring Diagram (SHO)
1993 Ford Taurus LX

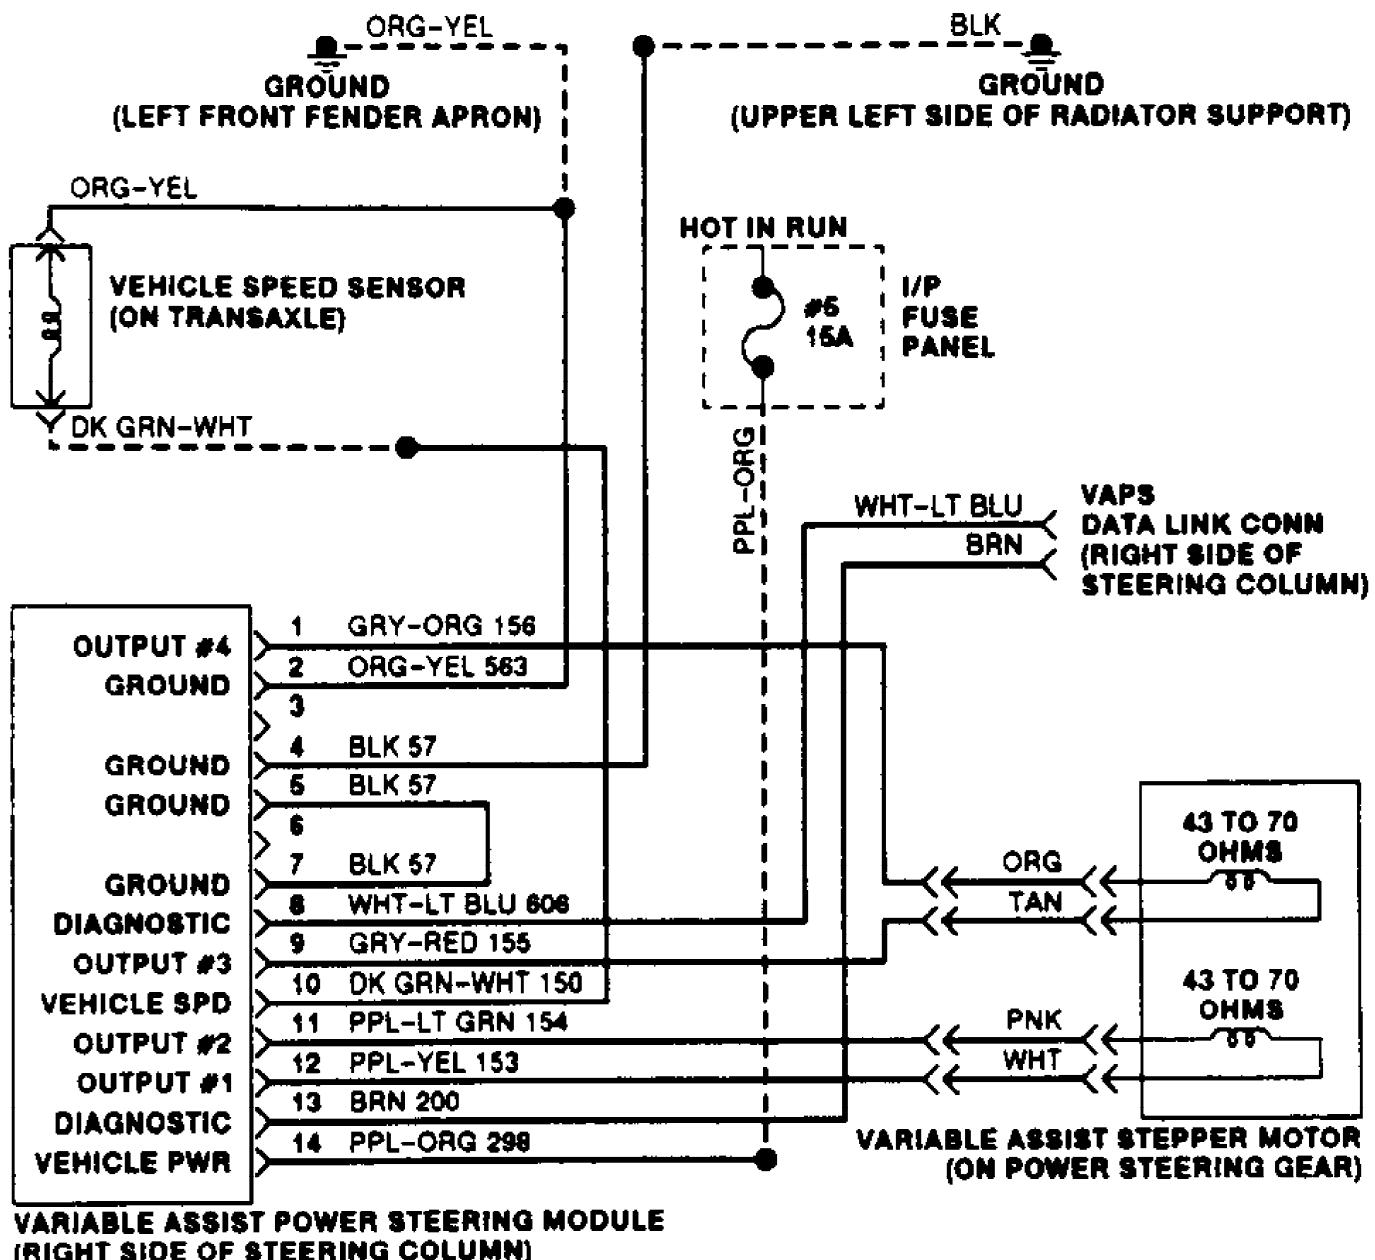

93J42209